AXE-7420GWA

User's Manual

4U Short-depth AI GPU Server with Intel® Xeon® 600 Processors for Workstations



Manual Rev.: 0.2 Preliminary
Revision Date: June 15, 2026
Part Number: 50M-22811-1000

LEADING EDGE AI COMPUTING

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Preface

Copyright


Copyright 2026 ADLINK Technology, Inc. This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

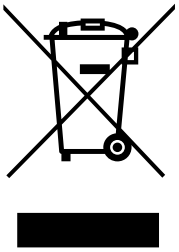

Battery Labels (for products with battery)



California Proposition 65 Warning

WARNING: This product can expose you to chemicals including acrylamide, arsenic, benzene, cadmium, Tris(1,3-dichloro-2-propyl)phosphate (TDCPP), 1,4-Dioxane, formaldehyde, lead, DEHP, styrene, DINP, BBP, PVC, and vinyl materials, which are known to the State of California to cause cancer, and acrylamide, benzene, cadmium, lead, mercury, phthalates, toluene, DEHP, DIDP, DnHP, DBP, BBP, PVC, and vinyl materials, which are known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



CAUTION:

Information to prevent ***minor*** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



WARNING:

Information to prevent ***serious*** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Description	Date	By
0.1	Preliminary release	2026-05-05	AL
0.2	Specifications, block diagram, and BIOS setup updated	2026-06-15	AL

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Preface ..... **ii**

List of Figures ..... **vii**

List of Tables ..... **viii**

1 Introduction **1**

1.1 Features 1

1.2 Packing List 1

1.3 Optional Accessories 1

2 Specifications **3**

3 Functional Block Diagram **5**

4 Mechanical Layout **7**

4.1 Mechanical Dimensions 7

4.2 Server Layout 8

4.3 Connector Locations 10

5 Connector Pinouts and Jumper Settings **11**

5.1 Rear I/O Connectors 11

5.2 Onboard Headers and Connectors 18

5.3 Jumper and Switch Settings 27

5.4 Expansion Slots 31

6 Getting Started **45**

6.1 Installing Memory Modules 45

6.2 PCIe Slot Secondary Power Supply 46

6.3 BMC LAN Configuration 46

6.4 BIOS Update 47

6.5 BMC Firmware Update via Network 47

6.6 CPLD Update 47

6.7 Create a RAID Volume 48

7 BIOS Settings **49**

7.1 BIOS Setup Menu ..... **Error! Bookmark not defined.**

7.2 Main Menu ..... **Error! Bookmark not defined.**

7.3 Advanced Menu ..... **Error! Bookmark not defined.**

7.4 Chipset Menu ..... **Error! Bookmark not defined.**

7.5 Security Menu ..... **Error! Bookmark not defined.**

7.6 Boot Menu ..... **Error! Bookmark not defined.**

7.7 Save & Exit Menu ..... **Error! Bookmark not defined.**

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.8 Server Management .....Error! Bookmark not defined.
7.9 View System Event Log .....Error! Bookmark not defined.
7.10 BMC User Settings .....Error! Bookmark not defined.
7.11 BMC Warm Reset .....Error! Bookmark not defined.
8 BMC 89
8.1 BMC Introduction 89
8.2 Web GUI Introduction.....90
8.3 IPMI 141
8.4 Redfish 151
Safety Instructions.....182
Consignes de Sécurité Importantes.....184
FCC Warning 186
Getting Service.....187

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Figures

Figure 1: Functional block diagram....5
Figure 2: Mechanical dimensions....7
Figure 3: AXE-7420GWA rear panel....8
Figure 4: AXE-7420GWA front panel....9
Figure 5: Onboard LED indicators....10
Figure 6: Jumper and switch locations....27
Figure 7: Expansion slot block diagram....31

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Tables

Table 1: Motherboard layout descriptions.....10

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Introduction

ADLINK AXE-7420GWA is a 4U 19" rackmount edge computing server/workstation system powered by 6th-generation Intel® Xeon™ 600 workstation processors with Intel® W890 chipset. For providing rich IO expansion, there are 12x PCIe slots on chassis, up to 8x 2.5” storage bay and 1x 3.5” storage bay.

It also features high-speed data transfer interfaces such as PCIe 5.0, USB 3.2 Gen 2, and SATA 6 Gb/s (SATA III), along with quad-channel DDR5 memory supporting up to 6400 MT/s for edge AI applications.

With an abundant I/O port design and high-speed data transfer interfaces, the AXE-7420GWA provides a significant competitive advantage for edge AI computing in terms of device compatibility, durable connectivity, and readiness for extreme environments.

1.1 Features

The main features of the AXE-7420GWA as follows:

- 4U chassis with a single Intel® Xeon® 600 Processors for Workstations, up to 350W TDP
- 12-slot expansion design, including 4x PCIe x16(1x via MICO) & 2x PCIe x8 & 2x PCIe x4
- Up to 4x GPU cards with extension board
- Up to 11x PCIe slots with extension board
- 8x 2.5” SATA SSD
- 3x Internal fan modules & 2x optional external fan modules
- Supports a single Intel® Granite Rapids-Workstation family processor
- 8× DDR5 DIMMs, up to 6400 MT/s (4 channels, 1DPC)
- Supports up to 11 PCIe slots with extension board, including 3× PCIe x16 slots
- Supports up to 4 MCIO connectors
- Onboard VGA and DisplayPort (DP) ports
- 1× 1GbE (Intel® I210) and 1× 2.5GbE (Intel® I226); supports Wake-on-LAN (WOL) and PXE boot
- BMC with AST2600, compliant with IPMI v2.0 and Redfish
- Dimension: 550mm(L) x 438mm(W) x 176mm(H)

1.2 Packing List

- AXE-7420GWA bare bone
- CPU cooler
- Power code

1.3 Optional Accessories

- 2-bay SlimSAS storage (Part Number: 29-0450A-0000)
- 8-bay 2.5 Inch SATA/SAS 6Gbps Hard Drive kit (Part Number: 29-04300-0000)
- 1-slot PCIex16 extension (Part Number: xxx)
- 4-slots PCIe extension board, 2x PCIex8, 2PCIex4 (55-37233-000E)
- 2-port USB 2.0 cable with bracket (Part Number: 30-25010-3010)
- 2-port USB 3.0 cable with bracket (Part Number: 30-25046-0100)
- 2-port COM cable with bracket (Part Number: 30-25116-0000-A0)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Specifications

System	Form Factor	4U 19” Rackmount
	Dimension (WxDxH)	438 x 550 x 177mm (17.23 x 21.65 x 6.95 inch)
	Gross Weight	21.4kg (47.18 lbs)
	Net Weight	18.1kg (39.90 lbs)
Processor	Socket Type	Socket E2, LGA 4710 socket
	Support CPU Series	Single Intel® Xeon® 600 Processors for Workstations, up to 350W TDP
	TDP	Support up to 350W
Chipset	PCH	W890
GPU	Type	3x FHFL GPU Gen5 x16
Memory	Slot Count	8x DIMM slots
	Capacity	1TB, 128GBx 8 slot(note)
	DIMM Type/Speed	4 Channel DDR5, 8 slots DDR5 RDIMM ECC Memory speed: Up to 6400MT/S (1DPC), 5200 MT/S (2DPC)
Storage	SATA	4x SATA III slots, SATA RAID 0/1/5/10 supported by PCH or Up to 8x SATA III slots, SATA RAID 0/1/5/10 supported by PCH (optional)
	M.2 (2242/2280)	2x M.2(M-Key) NVMe #1 support 2280/22110/25110 #2 support 2280/22110
PCIe Expansion Slot	Configuration	Expert stream (128L): 3x PCIe 5.0 x16 2x PCIe 5.0 x8 2x PCIe 5.0 x4 Mainstream (80L): 2x PCIe 5.0 x16 2x PCIe 5.0 x8 2x PCIe 5.0 x4
Cooling	System Fan	3x fan modules (80x38 fan) 1x fan modules in rear end (60x 25 fan)
Power Supply	PSU Type	ATX PS2
	Efficiency	80 Plus Titanium
	Output Watts	1650W
	Voltage	100V to 240V AC @50-60Hz
	Redundancy	1+1
Front I/O	LEDs	Power on x1, system event x1, thermal alarm x1
	USB	2x USB 2.0
	Others	1x Power button 1x Reset hole
Rear I/O	LAN	1x 1Gb RJ45 Ethernet port (shared with IPMI Management LAN) 1x 2.5Gb RJ45 Ethernet port
	COM	1x DB-9 COM connector with RS-232/422/485
	USB	5x Type A USB3.2 Gen2 10Gbps 1x Type C USB3.2 Gen2 10Gbps
	Graphic	1x D-Sub 15-pin VGA port 1x DP port
	Button	1x Clear CMOS reset hole button
Security	TPM (Optional)	TPM 2.0 module SPI
BMC Controller	Chipset	ASPEED AST2600 with IPMI 2.0 and Redfish support

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS	Chipset	AMI BIOS on SPI flash memory
Environment	Temperature	Operating: 0°C to +40°C · Storage: -40°C to +70°C Relative Humidity: 10%–85% (long term), 5%–90% (short term)
Operation system	OS	Windows® 11 LTSC (64 bit) Ubuntu 24.04 (64 bit)



* Follow the latest Intel® Memory POR

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Functional Block Diagram

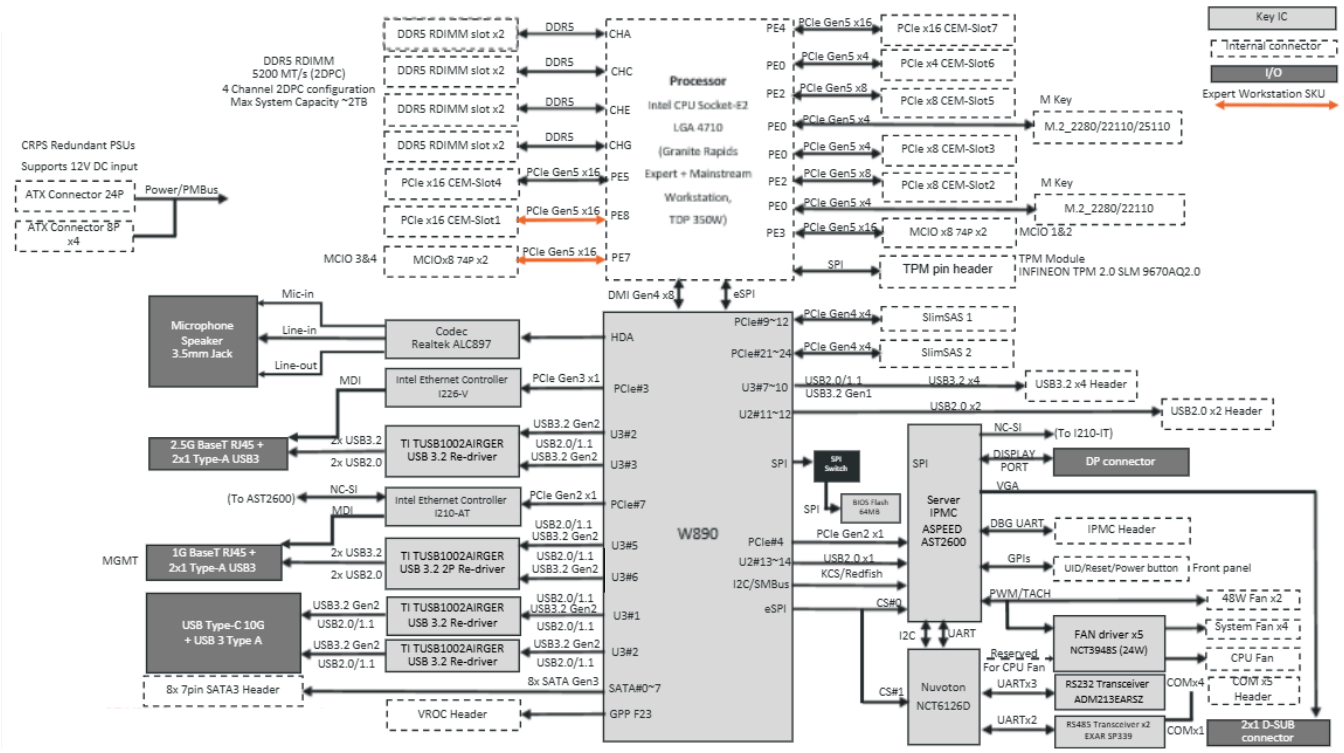


Figure 1: Functional block diagram

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Mechanical Layout

4.1 Mechanical Dimensions

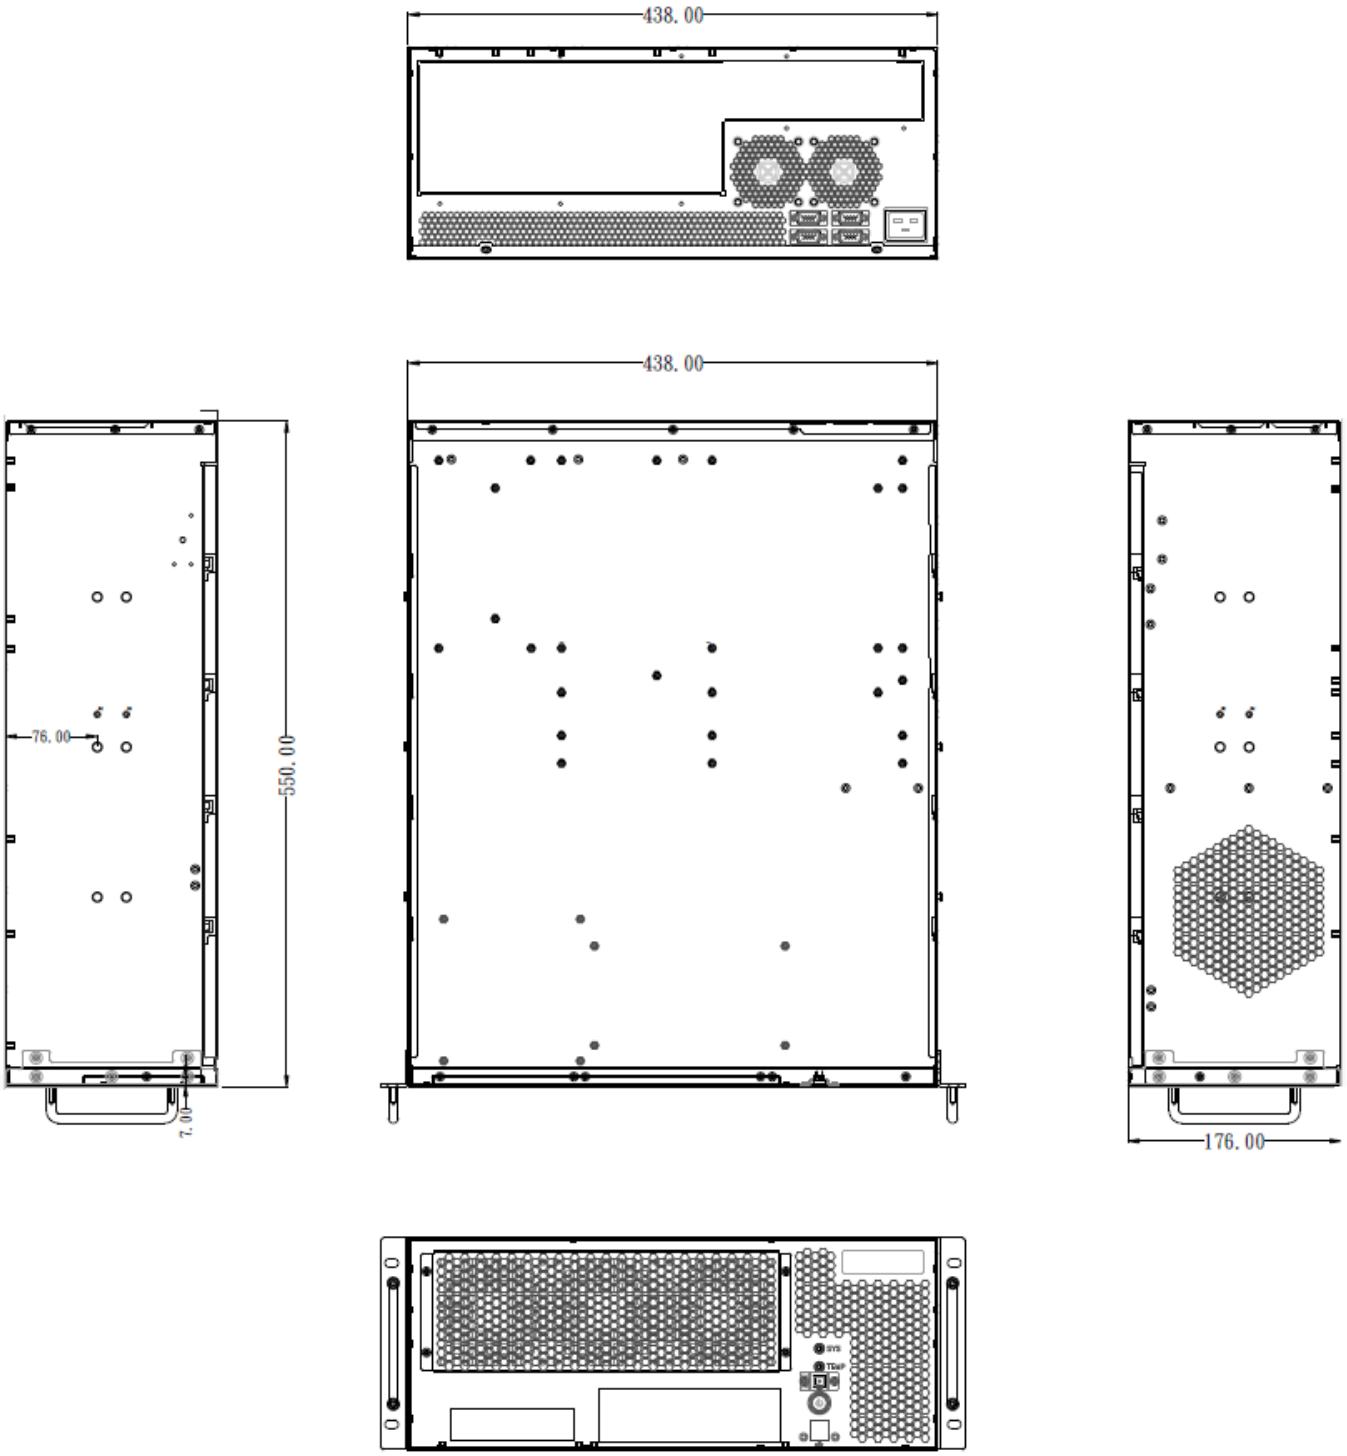


Figure 2: Mechanical dimensions

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2 Server Layout

4.2.1 AXE-7420GWA Rear Panel

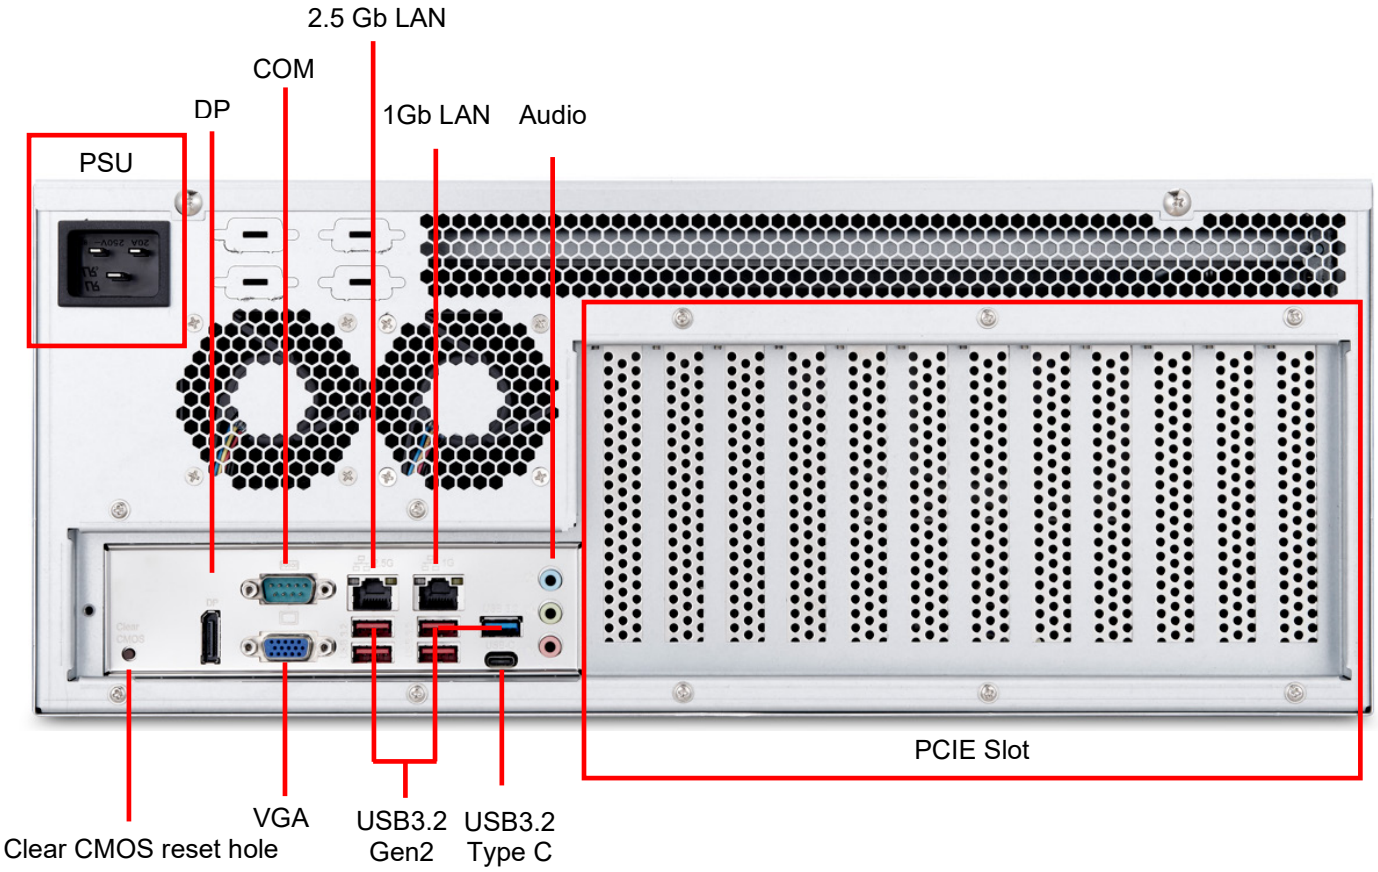


Figure 3: AXE-7420GWA rear panel

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2.2 AXE-7420GWA Front Panel

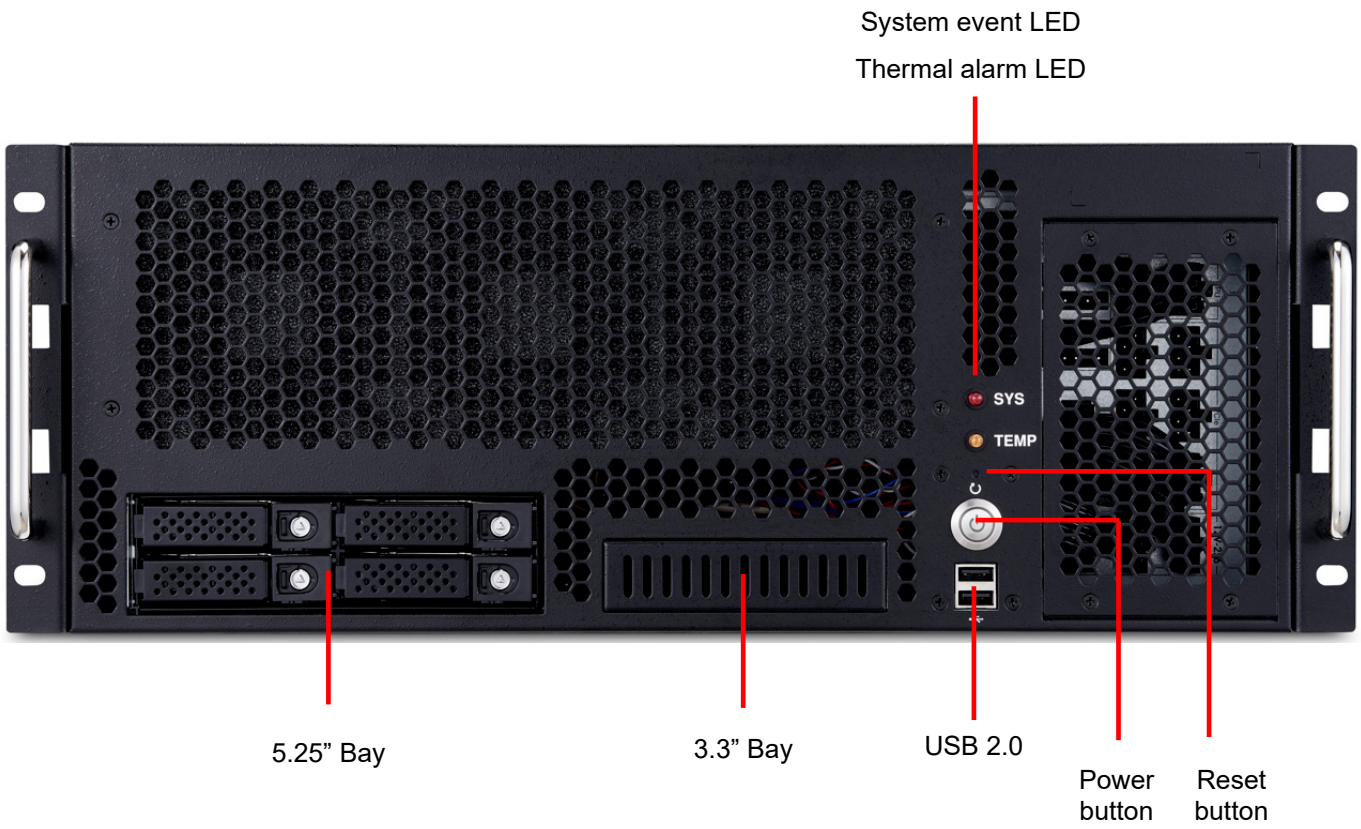


Figure 4: AXE-7420GWA front panel

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3 Connector Locations

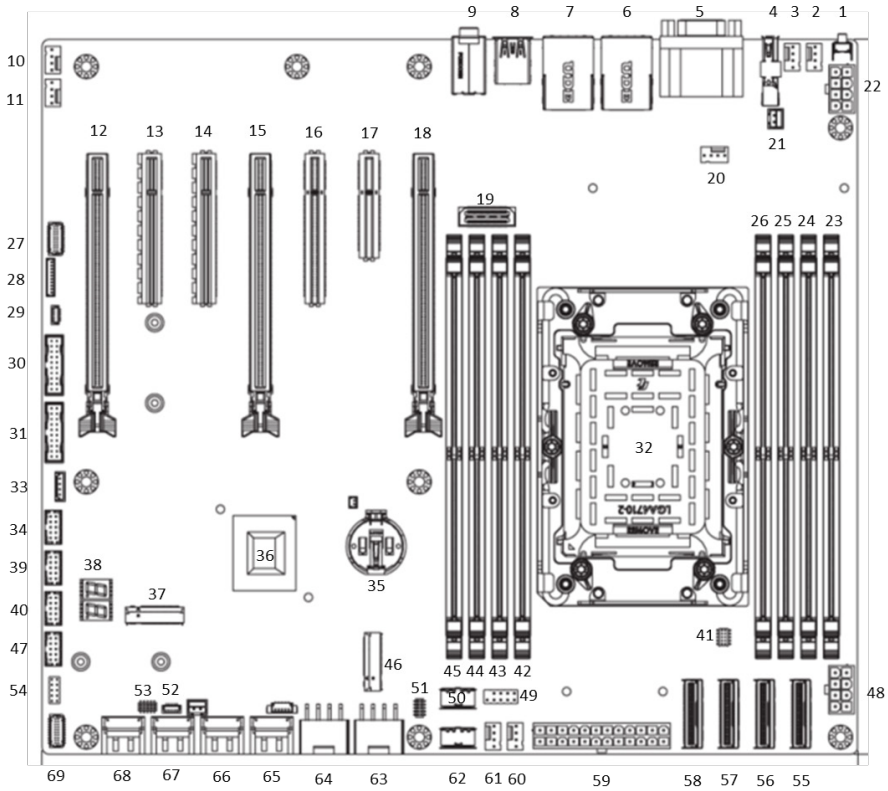


Figure 5: Onboard LED indicators

Table 1: Motherboard layout descriptions

No.	Description
1	Clear CMOS reset hole
2	System Fan
3	System Fan
4	DP connector
5	COM+VGA
6	2.5Gb LAN + USB3.2 Gen2
7	1Gb LAN+USB 3.2 Gen2
8	USB3.2 Gen2 + Type C
9	Audio
10	System Fan
11	System Fan
12	PCIe x16
13	PCIe x8
14	PCIe x4 with x8 connector
15	PCIex16
16	PCIex8
17	PCIex4
18	PCIex16
19	XDP (for debug)
20	CPU fan
21	Case open detection
22	CPU Power connector
23	DDR5 slot

No.	Description
24	DDR5 slot
25	DDR5 slot
26	DDR5 slot
27	CRPS power board header
28	DIDO header
29	IPMB header
30	USB3.2 Gen1 header
31	USB3.2 Gen1 header
32	CPU
33	VROC
34	COM port
35	CMOS battery
36	PCH-W890
37	M.2 connector
38	80 port display
39	COM port
40	COM port
41	COM port
42	DDR5 slot
43	DDR5 slot
44	DDR5 slot
45	DDR5 slot
46	M.2 connector

No.	Description
47	COM port
48	CPU Power connector
49	USB 2.0 header
50	SlimSAS
51	ESPI header
52	SMBus header
53	CPLD JTAG header
54	SGPIO header
55	MCIO connector
56	MCIO connector
57	MCIO connector
58	MCIO connector
59	ATX Power connector
60	System Fan
61	System Fan
62	SlimSAS
63	PCIe power connector
64	PCIe power connector
65	SATA III x2
66	SATA III x2
67	SATA III x2
68	SATA III x2
69	Front Panel header

NOTE:

Please ensure the correct pin definition when connecting the power cables.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


5 Connector Pinouts and Jumper Settings

5.1 Rear I/O Connectors

5.1.1 Clear CMOS Reset Button


(SW2)


Signal	Pin
PCH_RTCRST-L	1
GND	2
GND	3
GND	4

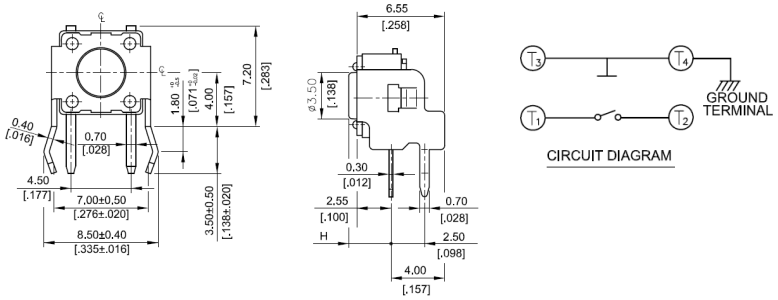

5.1.2 DisplayPort Connector

(DP_DDI1)

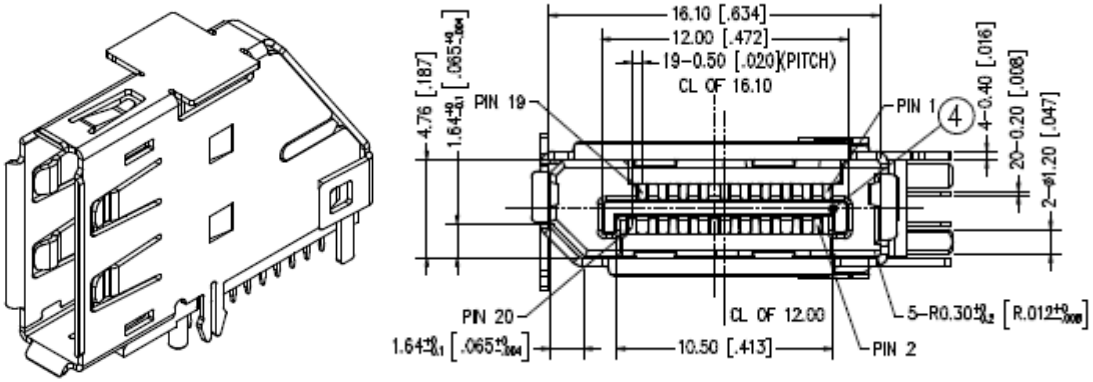

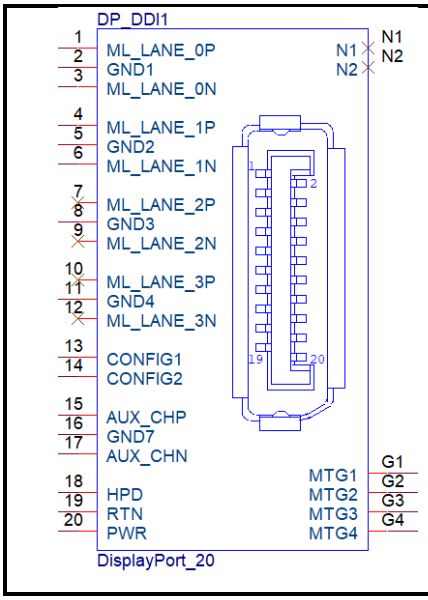



PIN#	Signal Name	PIN#	Signal Name
1	DDI2_PAIR0_P_Ch_CN	13	DP_CONN_CFG1 (1M ohm to GND)
2	GND	14	DP_CONN_CFG2 (1M ohm to GND)
3	DDI2_PAIR0_N_Ch_CN	15	DP_AUX_CONN_P
4	DDI2_PAIR1_P_Ch_CN	16	GND
5	GND	17	DP_AUX_CONN_N
6	DDI2_PAIR1_N_Ch_CN	18	CN_DDI2_HPD
7	NC	19	GND
8	GND	20	DP_3V3
9	NC	G1	GND
10	NC	G2	GND
11	GND	G3	GND
12	NC	G4	GND

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


5.1.3 VGA+ DSUB(9P)

VGA_COM1

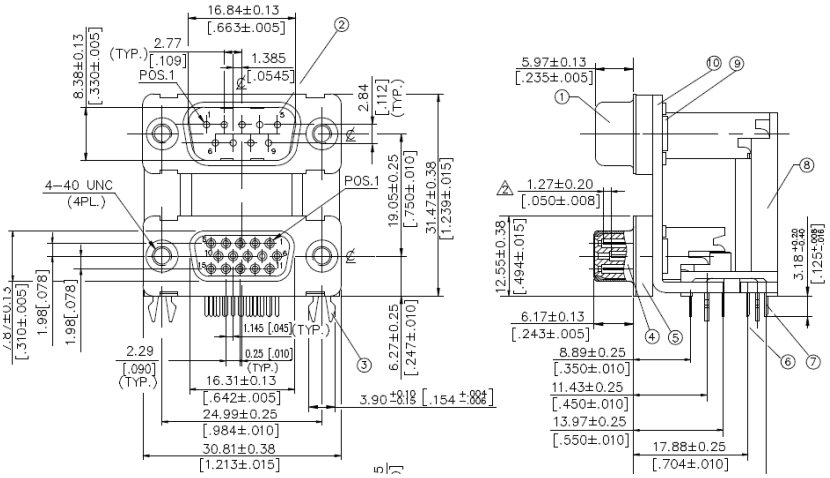

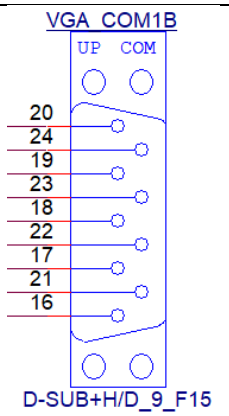

PIN#	Signal Name	PIN#	Signal Name
16	COM1_DCD-L	21	COM1_DSR-L
17	COM1_RXD	22	COM1_RTS-L
18	COM1_TXD	23	COM1_CTS-L
19	COM1_DTR-L	24	P_+5V_PSU/P_+12V_PSU
20	GND		

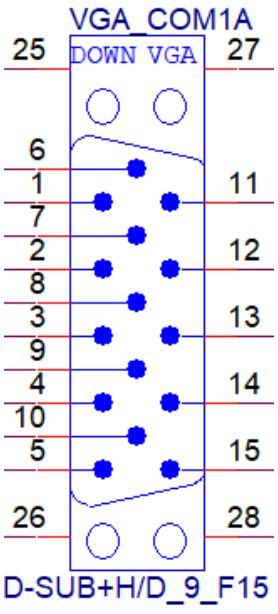



PIN#	Signal Name	PIN#	Signal Name
1	RED	13	CRT_HSYNC
2	GREEN	14	CRT_VSYNC
3	BLUE	15	SD_CLK
4	NC	25	GND
5	GND	26	GND
6	GND	27	GND
7	GND	28	GND
8	GND		
9	P_+5V_PSU		
10	GND		
11	NC		
12	SD_DATA		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


5.1.4 2.5G Base-T_RJ45 + USB3.2 Gen2 x2

RJ45_USB1

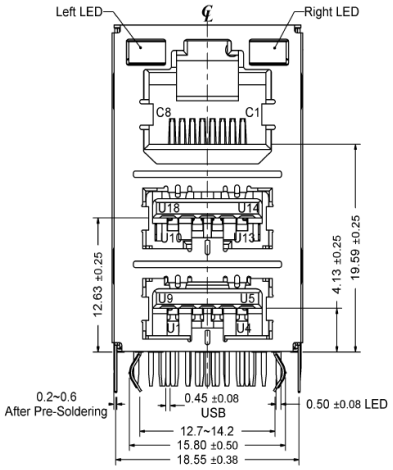

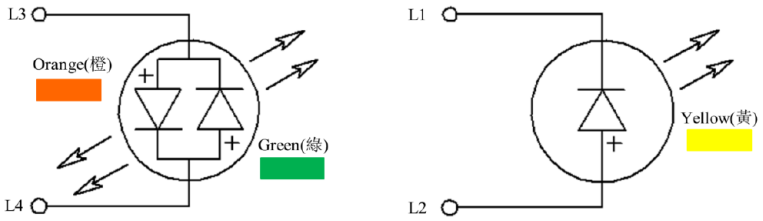

Emitting Color	λp (nm)	Vf @If=20mA	Ir @Vr=5V
Green	570	1.7 ~2.6 V	10μA max.
Orange	605	1.7 ~2.6 V	10μA max.
Yellow	588	1.7 ~2.6 V	10μA max.

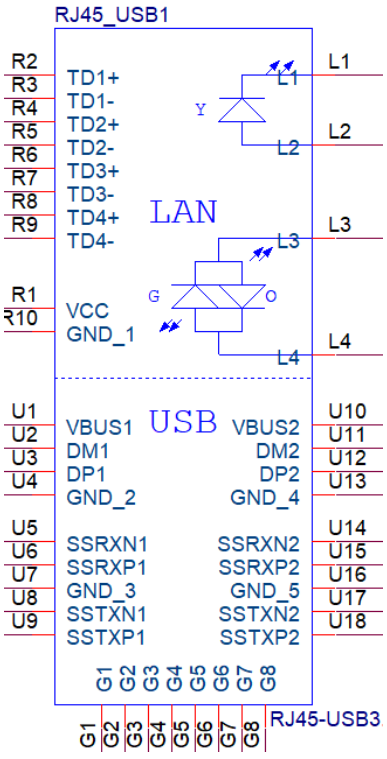



PIN#	Signal Name	PIN#	Signal Name
R1	LAN1_CT	U7	GND
R2	LAN1_MDI0_P	U8	USB31_3_TX_RE_CN_DN
R3	LAN1_MDI0_N	U9	USB31_3_TX_RE_CN_DP
R4	LAN1_MDI1_P	U10	USBVCC2
R5	LAN1_MDI1_N	U11	USB2_P4_CMC_DN
R6	LAN1_MDI2_P	U12	USB2_P4_CMC_DP
R7	LAN1_MDI2_N	U13	GND
R8	LAN1_MDI3_P	U14	USB31_4_RX_RE_CN_DN
R9	LAN1_MDI3_N	U15	USB31_4_RX_RE_CN_DP
R10	GND	U16	GND
L1	LIINK_AT_1	U17	USB31_4_TX_RE_CN_DN
L2	ACT_AT_1	U18	USB31_4_TX_RE_CN_DP
L3	LINK1000J_1	G1	GND
L4	LINK2500J_1	G2	GND
U1	USBVCC1	G3	GND
U2	USB2_P3_CMC_DN	G4	GND
U3	USB2_P3_CMC_DP	G5	GND
U4	GND	G6	GND
U5	USB31_3_RX_RE_CN_DN	G7	GND
U6	USB31_3_RX_RE_CN_DP	G8	GND


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.5 1G Base-T_RJ45 + USB3.2 Gen2 x2


RJ45_USB2

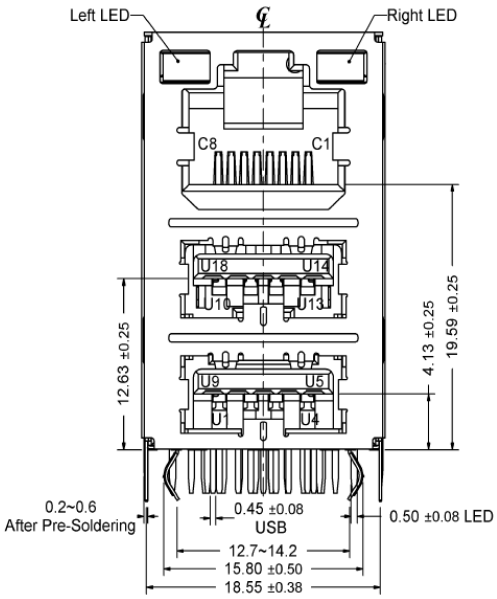

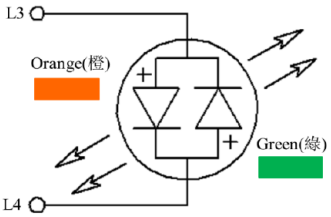

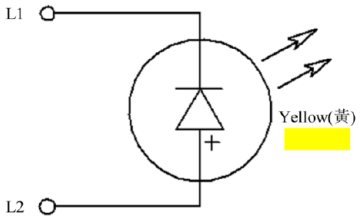

Emitting Color	λp (nm)	Vf @If=20mA	Ir @Vr=5V
Green	570	1.7 ~2.6 V	10μA max.
Orange	605	1.7 ~2.6 V	10μA max.
Yellow	588	1.7 ~2.6 V	10μA max.

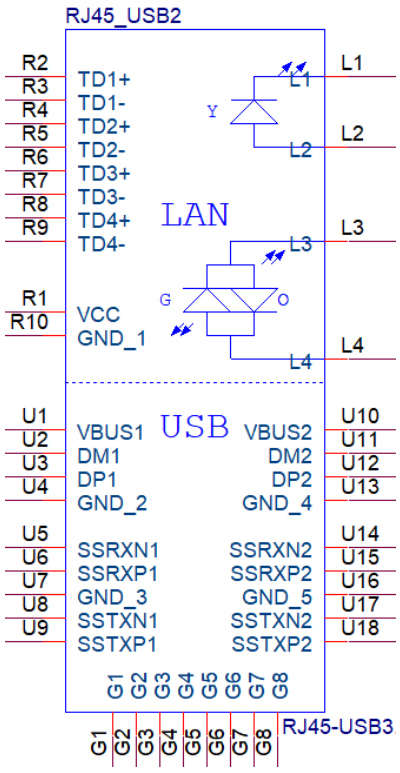



PIN#	Signal Name	PIN#	Signal Name
R1	LAN2_CT	U7	GND
R2	LAN2_MDI0_P	U8	USB31_5_TX_RE_CN_DN
R3	LAN2_MDI0_N	U9	USB31_5_TX_RE_CN_DP
R4	LAN2_MDI1_P	U10	USBVCC4
R5	LAN2_MDI1_N	U11	USB2_P6_CMC_DN
R6	LAN2_MDI2_P	U12	USB2_P6_CMC_DP
R7	LAN2_MDI2_N	U13	GND
R8	LAN2_MDI3_P	U14	USB31_6_RX_RE_CN_DN
R9	LAN2_MDI3_N	U15	USB31_6_RX_RE_CN_DP
R10	GND	U16	GND
L1	LIINK_AT_2	U17	USB31_6_TX_RE_CN_DN
L2	ACT_AT_2	U18	USB31_6_TX_RE_CN_DP
L3	LINK1000J_2	G1	GND
L4	LINK2500J_2	G2	GND
U1	USBVCC3	G3	GND
U2	USB2_P5_CMC_DN	G4	GND
U3	USB2_P5_CMC_DP	G5	GND
U4	GND	G6	GND
U5	USB31_5_RX_RE_CN_DN	G7	GND
U6	USB31_5_RX_RE_CN_DP	G8	GND


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.6 USB3.2 Gen2 Type-A

USB2

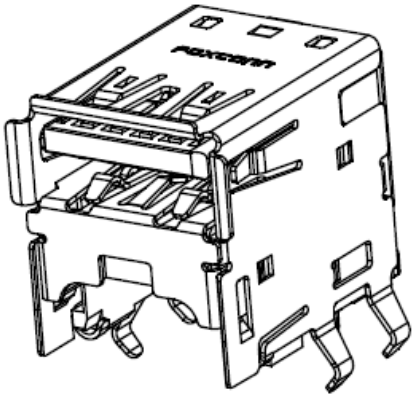

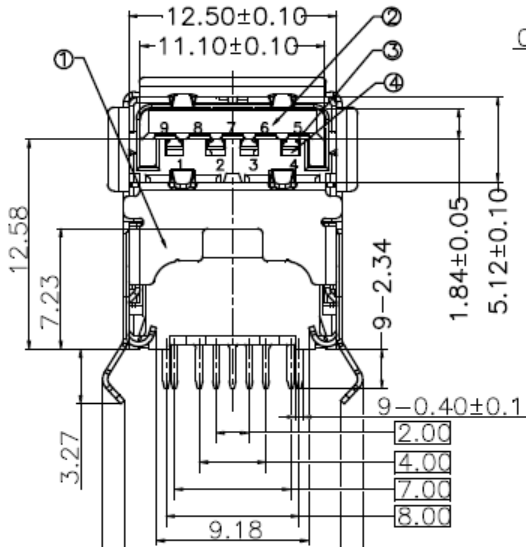

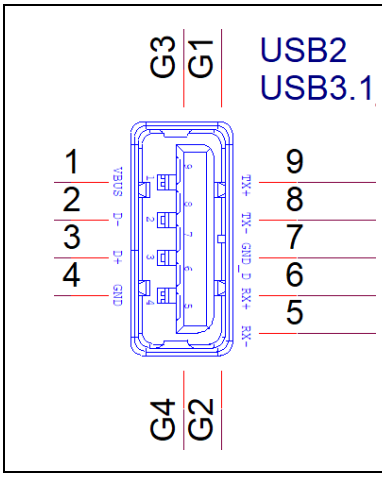



PIN#	Signal Name	PIN#	Signal Name
1	HUB_VBUS_USB1	8	USB31_2_TX_RE_CN_DN
2	USB2_P2_CMC_DN	9	USB31_2_TX_RE_CN_DP
3	USB2_P2_CMC_DP	G1	GND
4	GND	G2	GND
5	USB31_2_RX_RE_CN_DN	G3	GND
6	USB31_2_RX_RE_CN_DP	G4	GND
7	GND		


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.7 USB3.2 Gen2 Type-C

USB1

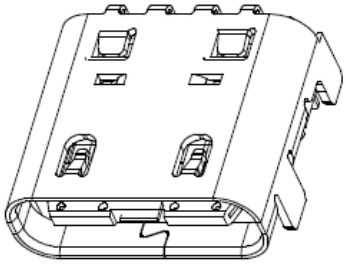

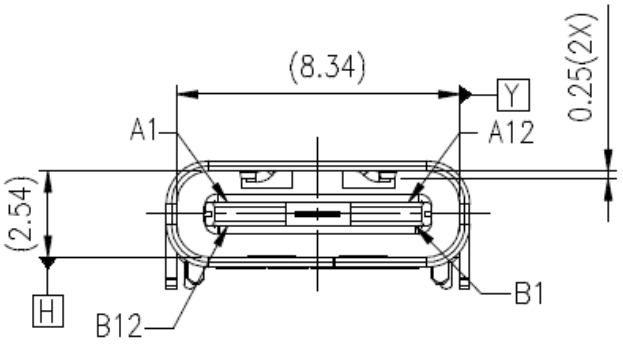

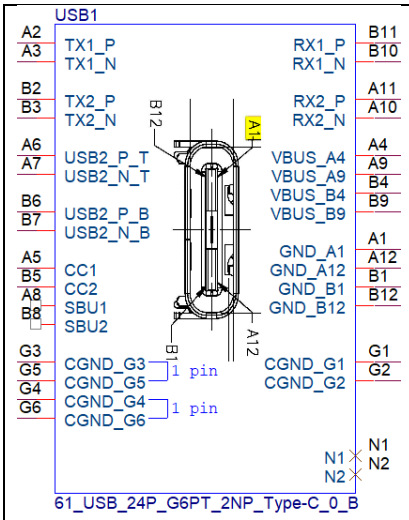



PIN#	Signal Name	PIN#	Signal Name
A1	GND	B4	P_5V_VBUS_C2
A2	USB31_1_TX1_CN_DP	B5	TYPE_C2_CC2
A3	USB31_1_TX1_CN_DN	B6	USB2_P1_CMC_DP
A4	P_5V_VBUS_C2	B7	USB2_P1_CMC_DN
A5	TYPE_C2_CC1	B8	NC
A6	USB2_P1_CMC_DP	B9	P_5V_VBUS_C2
A7	USB2_P1_CMC_DN	B10	USB31_1_RX1_CN_DN
A8	NC	B11	USB31_1_RX1_CN_DP
A9	P_5V_VBUS_C2	B12	GND
A10	USB31_1_RX2_CN_DN	G1	GND
A11	USB31_1_RX2_CN_DP	G2	GND
A12	GND	G3	GND
B1	GND	G4	GND
B2	USB31_1_TX2_CN_DP	G5	GND
B3	USB31_1_TX2_CN_DN	G6	GND


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.8 Audio Jack 3*1 Φ3.5

AUDIO1

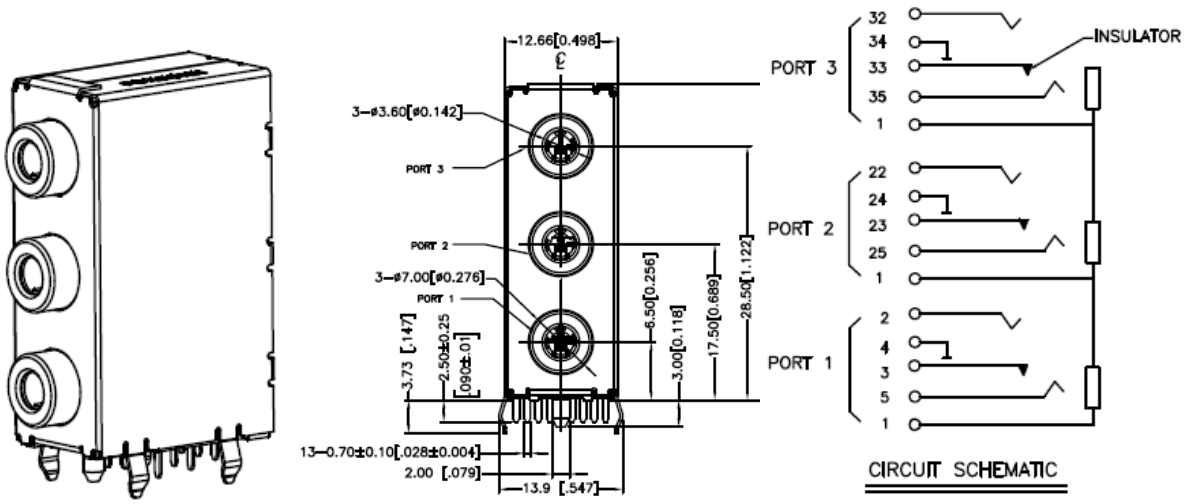

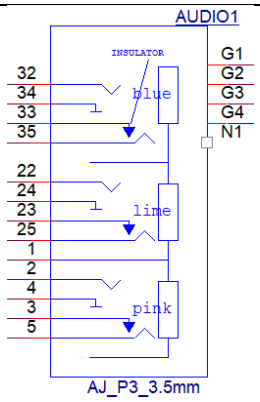

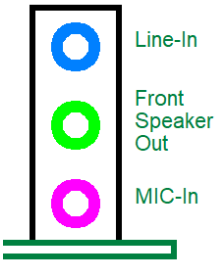



PIN#	Signal Name	PIN#	Signal Name
1	AGND_AU	32	CN_LINE1_L
2	CN_MIC1_L	33	LINE1_JD
3	MIC1_JD	34	AGND_AU
4	AGND_AU	35	CN_LINE1_R
5	CN_MIC1_R	G1	AU_CHGND
22	CN_FRONT_L	G2	AU_CHGND
23	FRONT_JD	G3	AU_CHGND
24	AGND_AU	G4	AU_CHGND
25	CN_FRONT_R		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2 Onboard Headers and Connectors

5.2.1 Chassis Intrusion Pin Header/Cable Definition

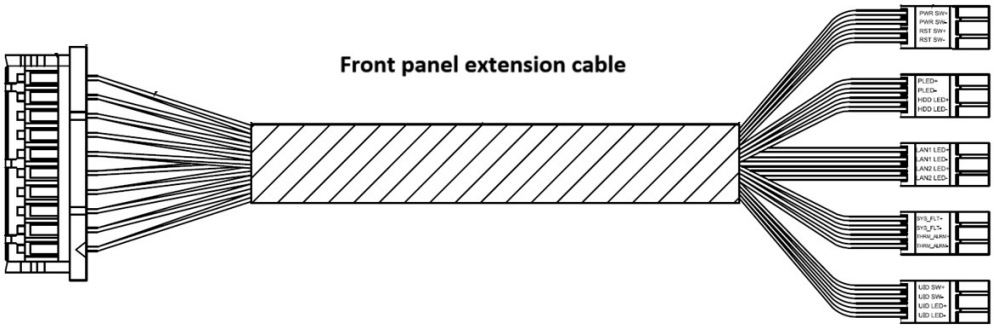

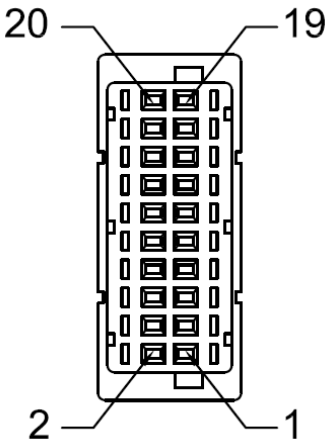


Pin	Signal	Pin	Signal
1	PWR SW-	2	SYS_FLT-
3	PWR SW+	4	SYS_FLT+
5	PLED+	6	UID SW+
7	PLED-	8	UID SW-
9	LAN1_LED+	10	LAN2_LED-
11	LAN1_LED-	12	LAN2_LED+
13	HDD_LED_+	14	UID_LED-
15	HDD_LED_-	16	UID_LED+)
17	THRM_ALRM+	18	RST SW+
19	THRM_ALRM-	20	RST_SW-

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.2 Common Redundant Power Supply

CRPS1


Pin	Signal	Pin	Signal
P1	GND	P2	PSU2_ALARM-L
P3	PMBUS_CLK_O	P4	PSU2_PSON-L
P5	PMBUS_DAT_O	P6	P_+3V3_DUAL
P7	PWROK_PSU1_N	P8	NC
P9	PWROK_PSU2_N	P10	GND
P11	GND	P12	CRPS_PSU1_DET#
P13	NC	P14	CRPS_PSU2_DET#
P15	EXT_SMBUS_ALERT-L	P16	EXT_SMBUS_SDA
P17	PSU1_PSON-L	P18	EXT_SMBUS_SCL
P19	PSU1_ALARM-L	P20	GND

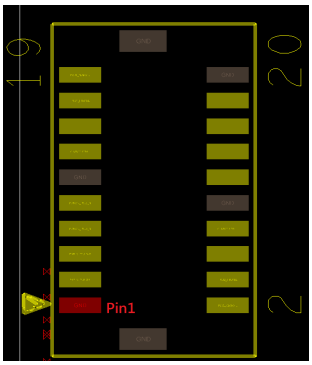

5.2.3 DI and DO

CN21


Pin	Signal
P1	GND
P2	DO0_CN
P3	DO1_CN
P4	DO2_CN
P5	DO3_CN
P6	DI0_CN
P7	DI1_CN
P8	DI2_CN
P9	DI3_CN
P10	DIDO_PWR

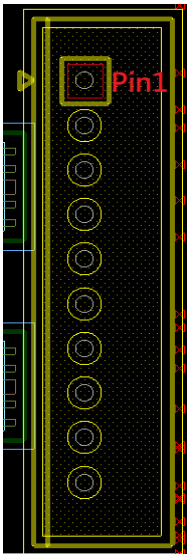

5.2.4 SMBus

SMBus2


Pin	Signal
P1	PMBUS_CLK_O
P2	PMBUS_DAT_O
P3	SMBUS1_ALERT
P4	GND
P5	P_+3V3_DUAL

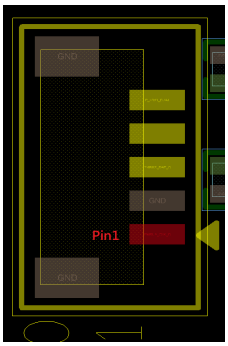


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.5 USB

USB 3 and USB 4

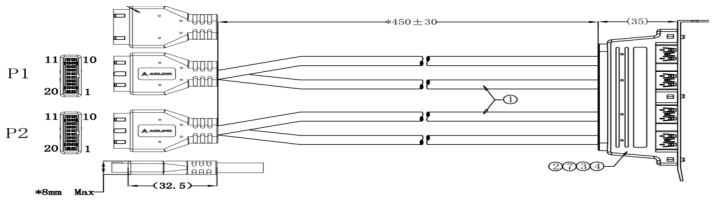


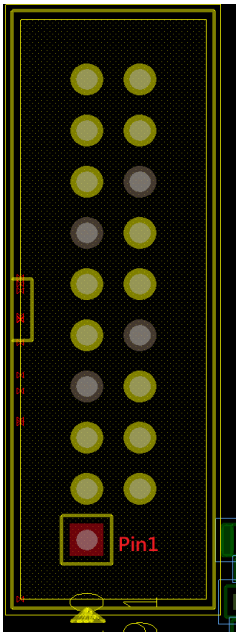

Pin	Signal	Pin	Signal
P1	P_+5V_USB_VBUS_A3		
P2	USB31_9_RX_CN_DN	P19	P_+5V_USB_VBUS_A4
P3	USB31_9_RX_CN_DP	P18	USB31_10_RX_CN_DN
P4	GND	P17	USB31_10_RX_CN_DP
P5	USB31_9_TX_CN_DN	P16	GND
P6	USB31_9_TX_CN_DP	P15	USB31_10_TX_CN_DN
P7	GND	P14	USB31_10_TX_CN_DP
P8	USB2_P9_CMC_DN	P13	GND
P9	USB2_P9_CMC_DP	P12	USB2_P10_CMC_DN
P10	USB_OC5-L	P11	USB2_P10_CMC_DP

5.2.6 VROC


CN15

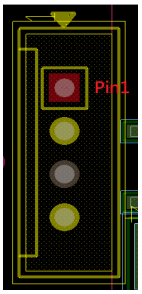

Pin	Signal
P1	GND
P2	P_+3V3_S1
P3	GND
P4	PCH_SATA_RAID_KEY

5.2.7 COM

SER 1, SER 2, SER 3, SER 4

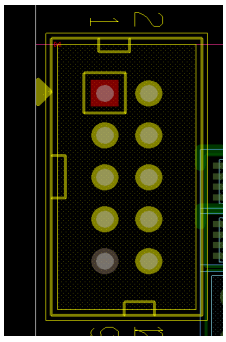


Pin	Signal	Pin	Signal
P1	COM5_RS232_DCD-L	P2	COM5_RS232_DSR-L
P3	COM5_RS232_RXD	P4	COM5_RS232_RTS-L
P5	COM5_RS232_TXD	P6	COM5_RS232_CTS-L
P7	COM5_RS232_DTR-L	P8	COM5_RS232_RI
P9	GND	P10	N.C

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.8 SPGIO

CN7


Pin	Signal	Pin	Signal
P1	SATA_SDATAOUT1	P2	N.C
P3	SATA_SLOAD	P4	GND
P5	SATA_SCLOCK	P6	SATA_SCLOCK
P7	GND	P8	SATA_SLOAD
P9	N.C	P10	SATA_SDATAOUT0

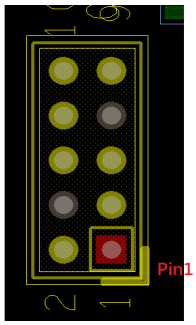

5.2.9 Misc

F_MISC1


Pin	Signal	Pin	Signal
P1	GND	P2	CUSTOM_LED2-L
P3	PWRBTN-L	P4	CUSTOM_LED2_PWR(3V3)
P5	S0_LED_PWR(3V3)	P6	FP_ID_BTN_R_N
P7	S0_LED-L	P8	GND
P9	LAN1_LED_PWR(3V3)	P10	LAN2_LED_ACT-L
P11	LAN1_LED_ACT-L	P12	LAN2_LED_PWR(3V3)
P13	HDD_LED_PWR **(5V)**	P14	FP_ID_LED-U
P15	HDD_LED_N	P16	UID_LED_PWR(3V3)
P17	CUSTOM_LED1_PWR(3V3)	P18	RSTBTN_3V3-L
P19	CUSTOM_LED1-L	P20	GND

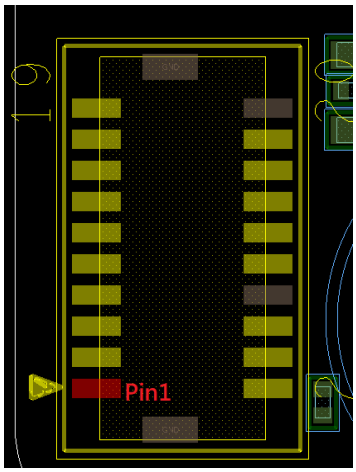

5.2.10 SATA

SATA_CN1, SATA_CN2, SATA_CN3, SATA_CN4

Pin	Signal	Pin	Signal
AS1	GND	BS1	GND
AS2	SATA_0_TX_DP	BS2	SATA_1_TX_DP
AS3	SATA_0_TX_DN	BS3	SATA_1_TX_DN
AS4	GND	BS4	GND
AS5	SATA_0_RX_DN	BS5	SATA_1_RX_DN
AS6	SATA_0_RX_DP	BS6	SATA_1_RX_DP
AS7	GND	BS7	GND

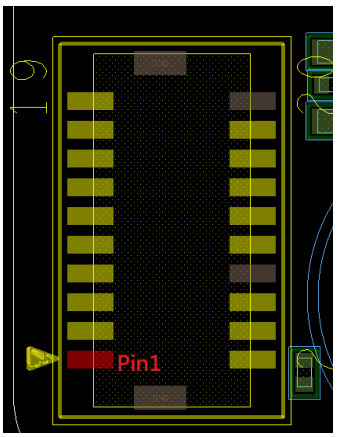


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.11 USB2 PH

CN6


Pin	Signal	Pin	Signal
P1	P5VA_U2RT3_4	P2	P5VA_U2RT3_4
P3	USB2_P12_CMC_DN	P4	USB2_P11_CMC_DN
P5	USB2_P12_CMC_DP	P6	USB2_P11_CMC_DP
P7	GND	P8	GND
P9	N.C	P10	

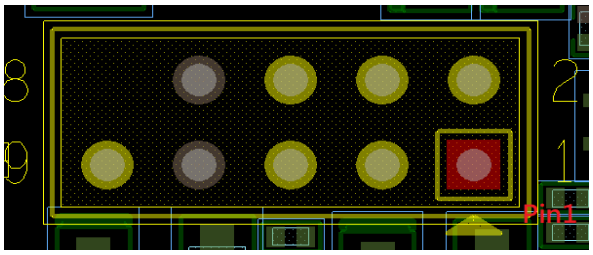

5.2.12 eSPI PH


ESPDB1

Pin	Signal	Pin	Signal
P1	P_+DBPWR (1V8/3V3)	P2	GND
P3	ESPI_DB_DAT1	P4	ESPI_DB_DAT2
P5	ESPI_DB_CLK	P6	ESPI_DB_DAT0
P7	ESPI_DB_RST-L	P8	ESPI_DB_CS-L
P9	ESPI_DB_DAT3	P10	P_+DBPWR (1V8/3V3)

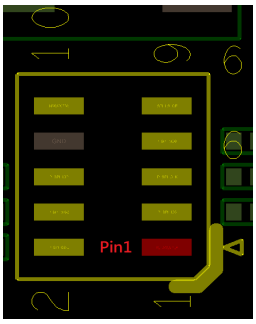

5.2.13 SlimSAS


Pin	Signal	Pin	Signal
A1	GND	B1	GND
A2	PCIE_21_RX_DP	B2	PCIE_21_TX_DP
A3	PCIE_21_RX_DN	B3	PCIE_21_TX_DN
A4	GND	B4	GND
A5	PCIE_22_RX_DP	B5	PCIE_22_TX_DP
A6	PCIE_22_RX_DN	B6	PCIE_22_TX_DN
A7	GND	B7	GND
A8	N.C	B8	N.C
A9	N.C	B9	N.C
A10	GND	B10	N.C
A11	CLK_SRC6_DP	B11	SAS_RST-L
A12	CLK_SRC6_DN	B12	N.C
A13	GND	B13	GND
A14	PCIE_23_RX_DP	B14	PCIE_23_TX_DP
A15	PCIE_23_RX_DN	B15	PCIE_23_TX_DN
A16	GND	B16	GND
A17	PCIE_24_RX_DP	B17	PCIE_24_TX_DP
A18	PCIE_24_RX_DN	B18	PCIE_24_TX_DN
A19	GND	B19	GND

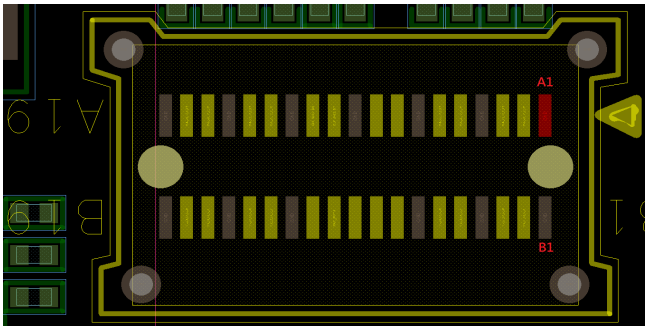

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.14 ATX_PCIe


CN11, CN12

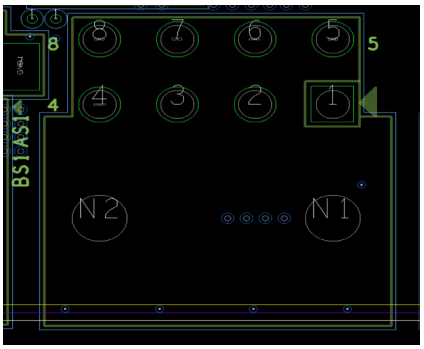

Pin	Signal	Pin	Signal
P1	P_+12V_PSU	P5	GND
P2	P_+12V_PSU	P6	SENSE0
P3	P_+12V_PSU	P7	GND
P4	SENSE1	P8	GND

5.2.15 ATX_CPU


CN9, CN10

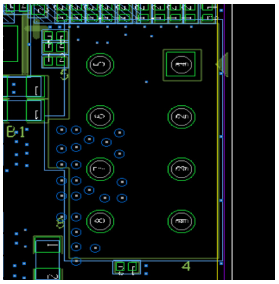

Pin	Signal	Pin	Signal
P1	GND	P5	P_+12V_PSU
P2	GND	P6	P_+12V_PSU
P3	GND	P7	P_+12V_PSU
P4	GND	P8	P_+12V_PSU

5.2.16 ATX_24P

PCN4

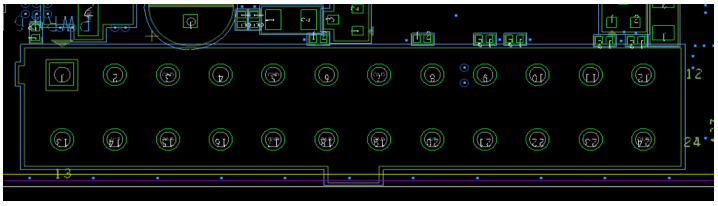


Pin	Signal	Pin	Signal
P1	P_+3V3_PSU	P13	P_+3V3_PSU
P2	P_+3V3_PSU	P14	-V12
P3	GND	P15	GND
P4	P_+5V_PSU	P16	PSON-L
P5	GND	P17	GND
P6	P_+5V_PSU	P18	GND
P7	GND	P19	GND
P8	PSU_PWROK	P20	-V5
P9	P_+5VSB_PSU	P21	P_+5V_PSU
P10	P_+12V_PSU	P22	P_+5V_PSU
P11	P_+12V_PSU	P23	P_+5V_PSU
P12	P_+3V3_PSU	P24	GND

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.17 MCIO

MCIO_CN1, MCIO_CN2, MCIO_CN3,MCIO_CN4

Pin	Signal	Pin	Signal
A1	GND	B1	GND
A2	CPU_PCIE5_PE3_RX_0_DP	B2	CPU_PCIE5_PE3_TX_0_C_DP
A3	CPU_PCIE5_PE3_RX_0_DN	B3	CPU_PCIE5_PE3_TX_0_C_DN
A4	GND	B4	GND
A5	CPU_PCIE5_PE3_RX_1_DP	B5	CPU_PCIE5_PE3_TX_1_C_DP
A6	CPU_PCIE5_PE3_RX_1_DN	B6	CPU_PCIE5_PE3_TX_1_C_DN
A7	GND	B7	GND
A8	MCIO_1A_PWRBRK_CLKREQ_N	B8	SMB_MCIO1A_SCL
A9	MCIO_1A_SMB_ALERT_WAKE_N	B9	SMB_MCIO1A_SDA
A10	GND	B10	GND
A11	CLK_100M_DB2000_MCIO_1A_DP	B11	MCIO1_RST0_N
A12	CLK_100M_DB2000_MCIO_1A_DN	B12	MCIO1_PRSNT0_N
A13	GND	B13	GND
A14	CPU_PCIE5_PE3_RX_2_DP	B14	CPU_PCIE5_PE3_TX_2_C_DP
A15	CPU_PCIE5_PE3_RX_2_DN	B15	CPU_PCIE5_PE3_TX_2_C_DN
A16	GND	B16	GND
A17	CPU_PCIE5_PE3_RX_3_DP	B17	CPU_PCIE5_PE3_TX_3_C_DP
A18	CPU_PCIE5_PE3_RX_3_DN	B18	CPU_PCIE5_PE3_TX_3_C_DN
A19	GND	B19	GND
A20	CPU_PCIE5_PE3_RX_4_DP	B20	CPU_PCIE5_PE3_TX_4_C_DP
A21	CPU_PCIE5_PE3_RX_4_DN	B21	CPU_PCIE5_PE3_TX_4_C_DN
A22	GND	B22	GND
A23	CPU_PCIE5_PE3_RX_5_DP	B23	CPU_PCIE5_PE3_TX_5_C_DP
A24	CPU_PCIE5_PE3_RX_5_DN	B24	CPU_PCIE5_PE3_TX_5_C_DN
A25	GND	B25	GND
A26	MCIO_1A_PWRBRK_CLKREQ_N	B26	SMB_MCIO1B_SCL
A27	MCIO_1A_SMB_ALERT_WAKE_N	B27	SMB_MCIO1B_SDA
A28	GND	B28	GND
A29	CLK_100M_DB2000_MCIO_1B_DP	B29	MCIO1_RST0_N
A30	CLK_100M_DB2000_MCIO_1B_DN	B30	MCIO1_PRSNT0_N
A31	GND	B31	GND
A32	CPU_PCIE5_PE3_RX_6_DP	B32	CPU_PCIE5_PE3_TX_6_C_DP
A33	CPU_PCIE5_PE3_RX_6_DN	B33	CPU_PCIE5_PE3_TX_6_C_DN
A34	GND	B34	GND
A35	CPU_PCIE5_PE3_RX_7_DP	B35	CPU_PCIE5_PE3_TX_7_C_DP
A36	CPU_PCIE5_PE3_RX_7_DN	B36	CPU_PCIE5_PE3_TX_7_C_DN
A37	GND	B37	GND

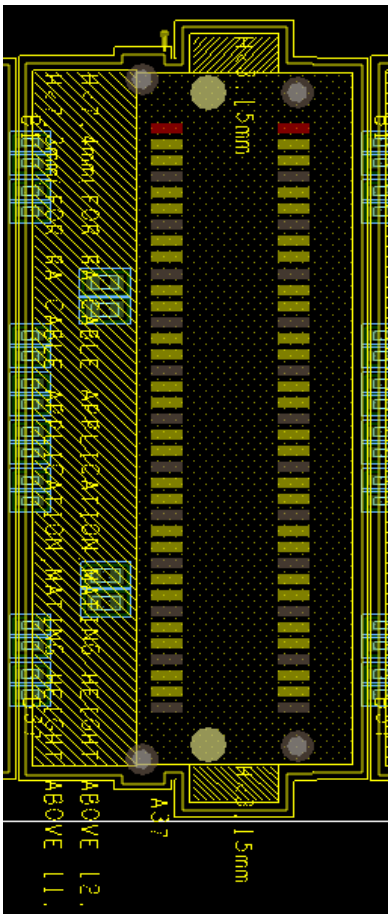


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2.18 Door Open Connector

CN19, CN20


Pin	Signal
P1	FRONT_CHASSIS
P2	GND

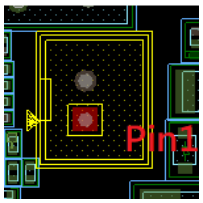

5.2.19 IPMB

IPMB1


Pin	Signal
P1	IPMB_SDA
P2	IPMB_SCL
P3	NC
P4	GND
P5	P_+3V3_DUAL

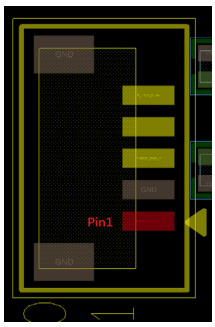

5.2.20 CPLD_JTAG

CN28


Pin	Signal	Pin	Signal
P1	GND	P2	P_+3V3SB
P3	GND	P4	FPGA_TMS
P5	GND	P6	FPGA_TCK
P7	GND	P8	FPGA_TDO
P9	GND	P10	FPGA_TDI

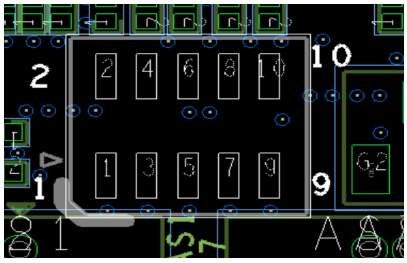


5.2.21 Backplane PCIe Header

CN24

Pin	Signal
P1	P_3V3_DUAL
P2	PCIE_HP_SCL
P3	PCIE_HP_SDA
P4	PCIE_HP_ALERT-L
P5	GND

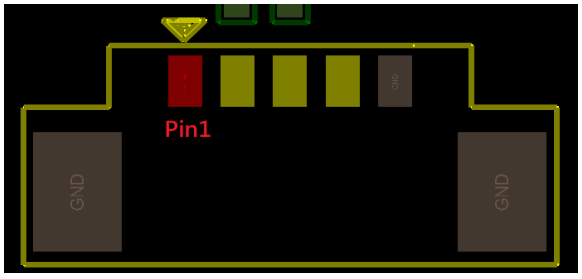


5.2.22 MIPI60

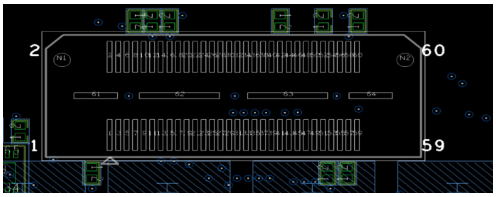

5.2.23 Debug UART

CN27


Pin	Signal	Pin	Signal
P1	P_+1V8_TPM	P2	GND
P3	CN_UART_RTS	P4	CN_UART_TXD
P5	CN_UART_CTS	P6	CN_UART_RXD

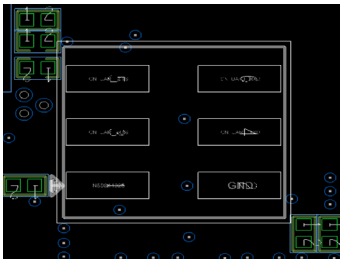

5.2.24 FAN Connector

FAN_*


Pin	Signal
P1	GND
P2	P_12V_FAN_*
P3	*_FAN_TACH
P4	*U_PWMOUT

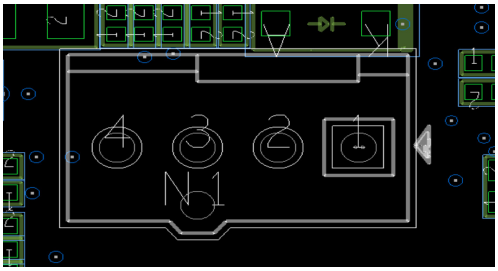

5.2.25 TPM Connector

TPM_CN1

Pin	Signal	Remark	Pin	Signal
P1	GND		P2	SPI_CPU0_TPM_CS-L
P3	TPM_IRQ-L		P4	SPI_CPU0_TPM_MISO
P5	TPM_PRESNT-L		P6	SPI_CPU0_TPM_MOSI
P7	LPC_RST-L		P8	SPI_CPU0_TPM_CLK
P9	P_+1V8_TPM	PWR	P10	GND

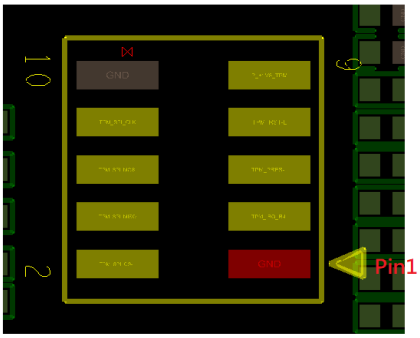

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3 Jumper and Switch Settings

5.3.1 Jumper and Switch Locations


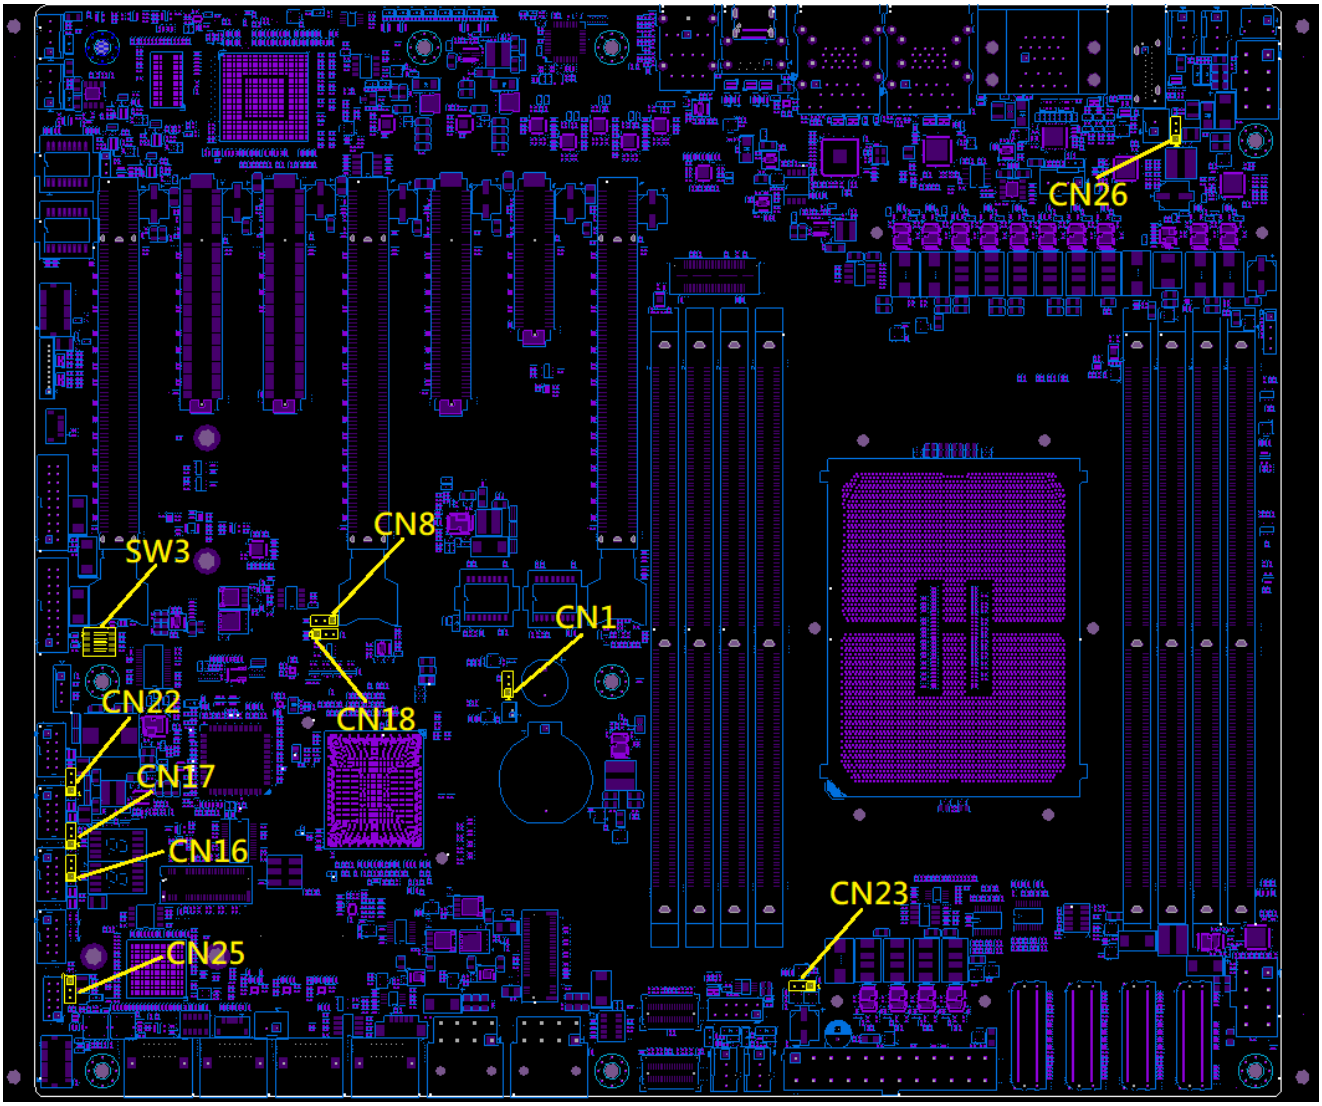


Figure 6: Jumper and switch locations

5.3.2 Clear CMOS Header

CN1	Settings
1-2	N/A (Default)
2-3	Clear CMOS

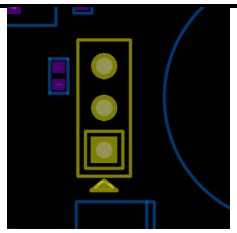


PIN#	Signal Name
1	NC
2	PCH_RTCRST-L
3	CLR_CMOS (1K ohm to GND)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3.3 ME Reset Header


CN8	Settings
1-2	N/A (Default)
2-3	Reset ME (Please do not use except special situation)

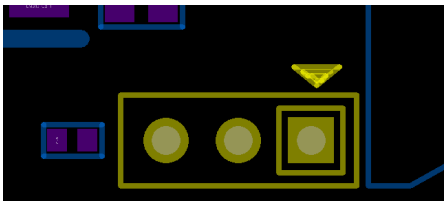

PIN#	Signal Name
1	NC
2	PCH_SRTCRST-L
3	1K ohm to GND

5.3.4 COM3 Power Supply Selection Header


CN16	Settings
NC	No Power Supply (Default)
1-2	5V Power Supply
2-3	12V Power Supply

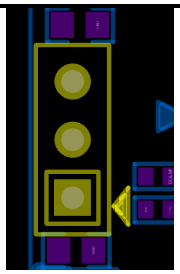

PIN#	Signal Name
1	P_+5V_PSU
2	COM3 Power Supply
3	P_+12V_PSU

5.3.5 COM4 Power Supply Selection Header

CN17	Settings
NC	No Power Supply (Default)
1-2	5V Power Supply
2-3	12V Power Supply

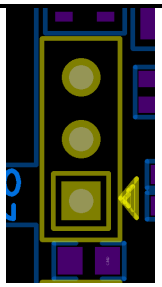


PIN#	Signal Name
1	P_+5V_PSU
2	COM4 Power Supply
3	P_+12V_PSU

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3.6 Flash Descriptor Security Override (FDSO)

CN18


CN18	Settings
1-2	Enable FDSO
2-3	Disable FDSO (ME Lock) (Default)

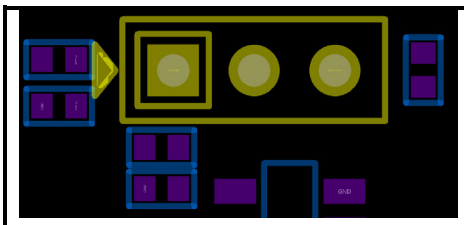

PIN#	Signal Name
1	+VCCPGPPDR_3P3_1P8
2	FLASH_DES_STRAP
3	20K ohm to GND

5.3.7 COM5 Power Supply Selection Header

CN22	Settings
NC	No Power Supply (Default)
1-2	5V Power Supply
2-3	12V Power Supply

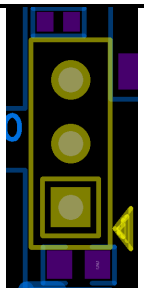


PIN#	Signal Name
1	P_+5V_PSU
2	COM5 Power Supply
3	P_+12V_PSU

5.3.8 Force Enable S0 Power

CN23 (Debug only, do not use)

CN23	Settings
1-2	N/A (Default)
2-3	Force Enable S0 Power (Debug only, do not use)

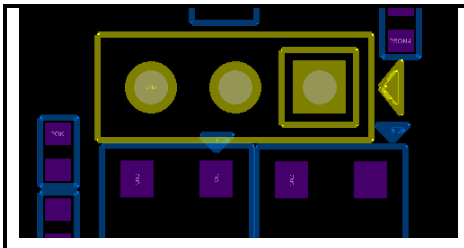


PIN#	Signal Name
1	NC
2	PSON-L
3	GND

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3.9 COM2 Power Supply Selection Header


CN25	Settings
NC	No Power Supply (Default)
1-2	5V Power Supply
2-3	12V Power Supply

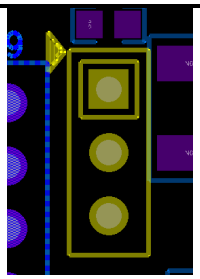

PIN#	Signal Name
1	P_+5V_PSU
2	COM2 Power Supply
3	P_+12V_PSU

5.3.10 COM1 Power Supply Selection Header

CN26	Setting
NC	No Power Supply (Default)
1-2	5V Power Supply
2-3	12V Power Supply

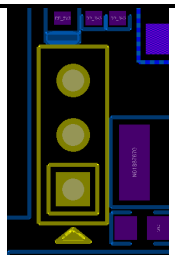


PIN#	Signal Name
1	P_+5V_PSU
2	COM1 Power Supply
3	P_+12V_PSU

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3.11 RS-485 Fail-Safe (Switch)

SW3	Setting OFF	Setting ON (Default)
1-8	COM1 RS-485 Fail-Safe Disable	COM1 RS-485 Fail-Safe Enable
2-7		
3-6	COM2 RS-485 Fail-Safe Disable	COM2 RS-485 Fail-Safe Enable
4-5		

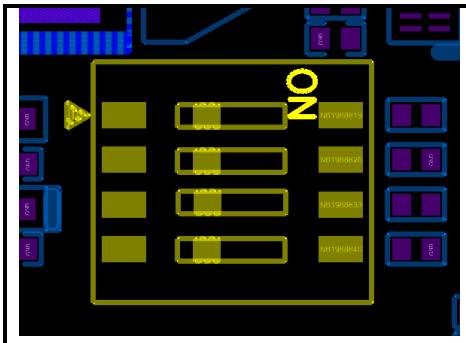

PIN#	Signal Name	PIN#	Signal Name
1	COM1_RXD_B	5	1K ohm to GND
2	COM1_DCD-L_B	6	1K ohm to P_+5V_PSU
3	COM2_RXD_B	7	1K ohm to GND
4	COM2_DCD-L_B	8	1K ohm to P_+5V_PSU

5.4 Expansion Slots

5.4.1 Expansion Slot Block Diagram


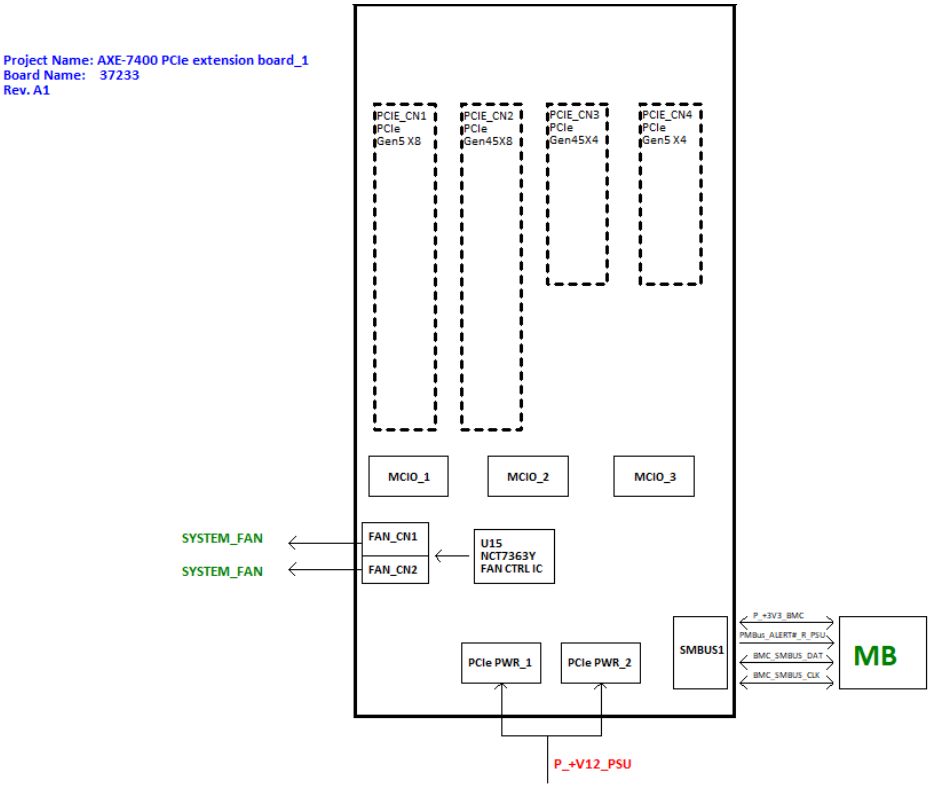



Figure 7: Expansion slot block diagram

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.4.2 MCIO Connectors

Location: MCIO_CN1; MCIO_CN2; MCIO_CN3
Description: MCIO x8, FML 74P RT

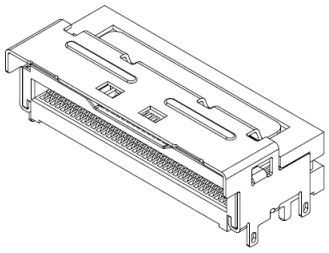

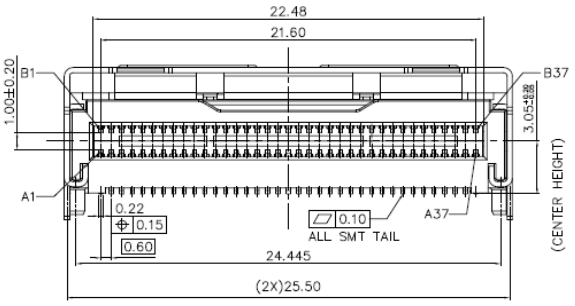

MCIO_CN1

Signal	Pin	Pin	Signal
GND	A1	B1	GND
MCIO_PCIE5_PE1_RX_0_DP	A2	B2	MCIO_PCIE5_PE1_TX_0_DP
MCIO_PCIE5_PE1_RX_0_DN	A3	B3	MCIO_PCIE5_PE1_TX_0_DN
GND	A4	B4	GND
MCIO_PCIE5_PE1_RX_1_DP	A5	B5	MCIO_PCIE5_PE1_TX_1_DP
MCIO_PCIE5_PE1_RX_1_DN	A6	B6	MCIO_PCIE5_PE1_TX_1_DN
GND	A7	B7	GND
MCIO_1A_PWRBRK_CLKREQ_N	A8	B8	SMB_MCIO1A_SCL
MCIO_1A_SMB_ALERT_WAKE_N	A9	B9	SMB_MCIO1A_SDA
GND	A10	B10	GND
CLK0_100M_MCIO_1_DP	A11	B11	MCIO_1A_RST_N
CLK0_100M_MCIO_1_DN	A12	B12	MCIO_1A_PRSNT_N
GND	A13	B13	GND
MCIO_PCIE5_PE1_RX_2_DP	A14	B14	MCIO_PCIE5_PE1_TX_2_DP
MCIO_PCIE5_PE1_RX_2_DN	A15	B15	MCIO_PCIE5_PE1_TX_2_DN
GND	A16	B16	GND
MCIO_PCIE5_PE1_RX_3_DP	A17	B17	MCIO_PCIE5_PE1_TX_3_DP
MCIO_PCIE5_PE1_RX_3_DN	A18	B18	MCIO_PCIE5_PE1_TX_3_DN
GND	A19	B19	GND
MCIO_PCIE5_PE1_RX_4_DP	A20	B20	MCIO_PCIE5_PE1_TX_4_DP
MCIO_PCIE5_PE1_RX_4_DN	A21	B21	MCIO_PCIE5_PE1_TX_4_DN
GND	A22	B22	GND
MCIO_PCIE5_PE1_RX_5_DP	A23	B23	MCIO_PCIE5_PE1_TX_5_DP
MCIO_PCIE5_PE1_RX_5_DN	A24	B24	MCIO_PCIE5_PE1_TX_5_DN
GND	A25	B25	GND
NC	A26	B26	NC
NC	A27	B27	NC
GND	A28	B28	GND
NC	A29	B29	NC

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

NC	A30	B30	NC
GND	A31	B31	GND
MCIO_PCIE5_PE1_RX_6_DP	A32	B32	MCIO_PCIE5_PE1_TX_6_DP
MCIO_PCIE5_PE1_RX_6_DN	A33	B33	MCIO_PCIE5_PE1_TX_6_DN
GND	A34	B34	GND
MCIO_PCIE5_PE1_RX_7_DP	A35	B35	MCIO_PCIE5_PE1_TX_7_DP
MCIO_PCIE5_PE1_RX_7_DN	A36	B36	MCIO_PCIE5_PE1_TX_7_DN
GND	A37	B37	GND
GND	G1	N1	NC
GND	G2	N2	NC
GND	G3		
GND	G4		

MCIO_CN2

Signal	Pin	Pin	Signal
GND	A1	B1	GND
MCIO_PCIE5_PE2_RX_0_DP	A2	B2	MCIO_PCIE5_PE2_TX_0_DP
MCIO_PCIE5_PE2_RX_0_DN	A3	B3	MCIO_PCIE5_PE2_TX_0_DN
GND	A4	B4	GND
MCIO_PCIE5_PE2_RX_1_DP	A5	B5	MCIO_PCIE5_PE2_TX_1_DP
MCIO_PCIE5_PE2_RX_1_DN	A6	B6	MCIO_PCIE5_PE2_TX_1_DN
GND	A7	B7	GND
MCIO_2A_PWRBRK_CLKREQ_N	A8	B8	SMB_MCIO2A_SCL
MCIO_2A_SMB_ALERT_WAKE_N	A9	B9	SMB_MCIO2A_SDA
GND	A10	B10	GND
CLK0_100M_MCIO_2_DP	A11	B11	MCIO_2A_RST_N
CLK0_100M_MCIO_2_DN	A12	B12	MCIO_2A_PRSNT_N
GND	A13	B13	GND
MCIO_PCIE5_PE2_RX_2_DP	A14	B14	MCIO_PCIE5_PE2_TX_2_DP
MCIO_PCIE5_PE2_RX_2_DN	A15	B15	MCIO_PCIE5_PE2_TX_2_DN
GND	A16	B16	GND
MCIO_PCIE5_PE2_RX_3_DP	A17	B17	MCIO_PCIE5_PE2_TX_3_DP
MCIO_PCIE5_PE2_RX_3_DN	A18	B18	MCIO_PCIE5_PE2_TX_3_DN
GND	A19	B19	GND
MCIO_PCIE5_PE2_RX_4_DP	A20	B20	MCIO_PCIE5_PE2_TX_4_DP
MCIO_PCIE5_PE2_RX_4_DN	A21	B21	MCIO_PCIE5_PE2_TX_4_DN
GND	A22	B22	GND
MCIO_PCIE5_PE2_RX_5_DP	A23	B23	MCIO_PCIE5_PE2_TX_5_DP
MCIO_PCIE5_PE2_RX_5_DN	A24	B24	MCIO_PCIE5_PE2_TX_5_DN
GND	A25	B25	GND
NC	A26	B26	NC

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

NC	A27	B27	NC
GND	A28	B28	GND
NC	A29	B29	NC
NC	A30	B30	NC
GND	A31	B31	GND
MCIO_PCIE5_PE2_RX_6_DP	A32	B32	MCIO_PCIE5_PE2_TX_6_DP
MCIO_PCIE5_PE2_RX_6_DN	A33	B33	MCIO_PCIE5_PE2_TX_6_DN
GND	A34	B34	GND
MCIO_PCIE5_PE2_RX_7_DP	A35	B35	MCIO_PCIE5_PE2_TX_7_DP
MCIO_PCIE5_PE2_RX_7_DN	A36	B36	MCIO_PCIE5_PE2_TX_7_DN
GND	A37	B37	GND
GND	G1	N1	NC
GND	G2	N2	NC
GND	G3		
GND	G4		

MCIO_CN3


Signal	Pin	Pin	Signal
GND	A1	B1	GND
MCIO_PCIE5_PE3_RX_0_DP	A2	B2	MCIO_PCIE5_PE3_TX_0_DP
MCIO_PCIE5_PE3_RX_0_DN	A3	B3	MCIO_PCIE5_PE3_TX_0_DN
GND	A4	B4	GND
MCIO_PCIE5_PE3_RX_1_DP	A5	B5	MCIO_PCIE5_PE3_TX_1_DP
MCIO_PCIE5_PE3_RX_1_DN	A6	B6	MCIO_PCIE5_PE3_TX_1_DN
GND	A7	B7	GND
MCIO_3A_PWRBRK_CLKREQ_N	A8	B8	SMB_MCIO3A_SCL
MCIO_3A_SMB_ALERT_WAKE_N	A9	B9	SMB_MCIO3A_SDA
GND	A10	B10	GND
CLK0_100M_MCIO_3_DP	A11	B11	MCIO_3A_RST_N
CLK0_100M_MCIO_3_DN	A12	B12	MCIO_3A_PRSNT_N
GND	A13	B13	GND
MCIO_PCIE5_PE3_RX_2_DP	A14	B14	MCIO_PCIE5_PE3_TX_2_DP
MCIO_PCIE5_PE3_RX_2_DN	A15	B15	MCIO_PCIE5_PE3_TX_2_DN
GND	A16	B16	GND
MCIO_PCIE5_PE3_RX_3_DP	A17	B17	MCIO_PCIE5_PE3_TX_3_DP
MCIO_PCIE5_PE3_RX_3_DN	A18	B18	MCIO_PCIE5_PE3_TX_3_DN
GND	A19	B19	GND
MCIO_PCIE5_PE3_RX_4_DP	A20	B20	MCIO_PCIE5_PE3_TX_4_DP
MCIO_PCIE5_PE3_RX_4_DN	A21	B21	MCIO_PCIE5_PE3_TX_4_DN
GND	A22	B22	GND
MCIO_PCIE5_PE3_RX_5_DP	A23	B23	MCIO_PCIE5_PE3_TX_5_DP

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

MCIO_PCIE5_PE3_RX_5_DN	A24	B24	MCIO_PCIE5_PE3_TX_5_DN
GND	A25	B25	GND
MCIO_3B_PWRBRK_CLKREQ_N	A26	B26	SMB_MCIO3B_SCL
MCIO_3B_SMB_ALERT_WAKE_N	A27	B27	SMB_MCIO3B_SDA
GND	A28	B28	GND
CLK1_100M_MCIO_3_DP	A29	B29	MCIO_3B_RST_N
CLK1_100M_MCIO_3_DN	A30	B30	MCIO_3B_PRSNT_N
GND	A31	B31	GND
MCIO_PCIE5_PE3_RX_6_DP	A32	B32	MCIO_PCIE5_PE3_TX_6_DP
MCIO_PCIE5_PE3_RX_6_DN	A33	B33	MCIO_PCIE5_PE3_TX_6_DN
GND	A34	B34	GND
MCIO_PCIE5_PE3_RX_7_DP	A35	B35	MCIO_PCIE5_PE3_TX_7_DP
MCIO_PCIE5_PE3_RX_7_DN	A36	B36	MCIO_PCIE5_PE3_TX_7_DN
GND	A37	B37	GND
GND	G1	N1	NC
GND	G2	N2	NC
GND	G3		
GND	G4		

5.4.3 PCIe Slots (PCIe x8)

Location: PCIE_CN1; PCIE_CN2
Description: PCIe Slot 98P x8 ST

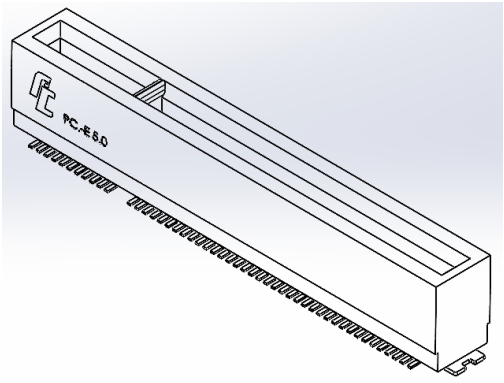

PCIE_CN1

Signal	Pin	Pin	Signal
P_+12V_PSU	B1	A1	MCIO_1A_PWRBRK_CLKREQ_N
P_+12V_PSU	B2	A2	P_+12V_PSU
P_+12V_PSU	B3	A3	P_+12V_PSU
GND	B4	A4	GND
SMB_MCIO1A_SCL	B5	A5	NC
SMB_MCIO1A_SDA	B6	A6	NC
GND	B7	A7	NC
P_+3V3_S0	B8	A8	NC

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

NC	B9	A9	P_+3V3_S0
P_+3V3_S0	B10	A10	P_+3V3_S0
MCIO_1A_SMB_ALERT_WAKE_N	B11	A11	MCIO_1A_RST_N
Separation Key			
NC	B12	A12	GND
GND	B13	A13	CLK_100M_MCIO_1A_DP
MCIO_PCIE5_PE1_TX_0_DP	B14	A14	CLK_100M_MCIO_1A_DN
MCIO_PCIE5_PE1_TX_0_DN	B15	A15	GND
GND	B16	A16	MCIO_PCIE5_PE1_RX_0_DP
MCIO_1A_PRSNT_N	B17	A17	MCIO_PCIE5_PE1_RX_0_DN
GND	B18	A18	GND
MCIO_PCIE5_PE1_TX_1_DP	B19	A19	NC
MCIO_PCIE5_PE1_TX_1_DN	B20	A20	GND
GND	B21	A21	MCIO_PCIE5_PE1_RX_1_DP
GND	B22	A22	MCIO_PCIE5_PE1_RX_1_DN
MCIO_PCIE5_PE1_TX_2_DP	B23	A23	GND
MCIO_PCIE5_PE1_TX_2_DN	B24	A24	GND
GND	B25	A25	MCIO_PCIE5_PE1_RX_2_DP
GND	B26	A26	MCIO_PCIE5_PE1_RX_2_DN
MCIO_PCIE5_PE1_TX_3_DP	B27	A27	GND
MCIO_PCIE5_PE1_TX_3_DN	B28	A28	GND
GND	B29	A29	MCIO_PCIE5_PE1_RX_3_DP
NC	B30	A30	MCIO_PCIE5_PE1_RX_3_DN
MCIO_1A_PRSNT_N	B31	A31	GND
GND	B32	A32	NC
MCIO_PCIE5_PE1_TX_4_DP	B33	A33	NC
MCIO_PCIE5_PE1_TX_4_DN	B34	A34	GND
GND	B35	A35	MCIO_PCIE5_PE1_RX_4_DP
GND	B36	A36	MCIO_PCIE5_PE1_RX_4_DN
MCIO_PCIE5_PE1_TX_5_DP	B37	A37	GND
MCIO_PCIE5_PE1_TX_5_DN	B38	A38	GND
GND	B39	A39	MCIO_PCIE5_PE1_RX_5_DP
GND	B40	A40	MCIO_PCIE5_PE1_RX_5_DN
MCIO_PCIE5_PE1_TX_6_DP	B41	A41	GND
MCIO_PCIE5_PE1_TX_6_DN	B42	A42	GND
GND	B43	A43	MCIO_PCIE5_PE1_RX_6_DP
GND	B44	A44	MCIO_PCIE5_PE1_RX_6_DN
MCIO_PCIE5_PE1_TX_7_DP	B45	A45	GND
MCIO_PCIE5_PE1_TX_7_DN	B46	A46	GND
GND	B47	A47	MCIO_PCIE5_PE1_RX_7_DP
MCIO_1A_PRSNT_N	B48	A48	MCIO_PCIE5_PE1_RX_7_DN
GND	B49	A49	GND

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

NC	N1	N2	NC
GND	G1	G2	GND

PCIE_CN2


Signal	Pin	Pin	Signal
P_+12V_PSU	B1	A1	MCIO_2A_PWRBRK_CLKREQ_N
P_+12V_PSU	B2	A2	P_+12V_PSU
P_+12V_PSU	B3	A3	P_+12V_PSU
GND	B4	A4	GND
SMB_MCIO2A_SCL	B5	A5	NC
SMB_MCIO2A_SDA	B6	A6	NC
GND	B7	A7	NC
P_+3V3_S0	B8	A8	NC
NC	B9	A9	P_+3V3_S0
P_+3V3_S0	B10	A10	P_+3V3_S0
MCIO_2A_SMB_ALERT_WAKE_N	B11	A11	MCIO_2A_RST_N
Separation Key			
NC	B12	A12	GND
GND	B13	A13	CLK_100M_MCIO_2A_DP
MCIO_PCIE5_PE2_TX_0_DP	B14	A14	CLK_100M_MCIO_2A_DN
MCIO_PCIE5_PE2_TX_0_DN	B15	A15	GND
GND	B16	A16	MCIO_PCIE5_PE2_RX_0_DP
MCIO_2A_PRSNT_N	B17	A17	MCIO_PCIE5_PE2_RX_0_DN
GND	B18	A18	GND
MCIO_PCIE5_PE2_TX_1_DP	B19	A19	NC
MCIO_PCIE5_PE2_TX_1_DN	B20	A20	GND
GND	B21	A21	MCIO_PCIE5_PE2_RX_1_DP
GND	B22	A22	MCIO_PCIE5_PE2_RX_1_DN
MCIO_PCIE5_PE2_TX_2_DP	B23	A23	GND
MCIO_PCIE5_PE2_TX_2_DN	B24	A24	GND
GND	B25	A25	MCIO_PCIE5_PE2_RX_2_DP
GND	B26	A26	MCIO_PCIE5_PE2_RX_2_DN
MCIO_PCIE5_PE2_TX_3_DP	B27	A27	GND
MCIO_PCIE5_PE2_TX_3_DN	B28	A28	GND
GND	B29	A29	MCIO_PCIE5_PE2_RX_3_DP
NC	B30	A30	MCIO_PCIE5_PE2_RX_3_DN
MCIO_2A_PRSNT_N	B31	A31	GND
GND	B32	A32	NC
MCIO_PCIE5_PE2_TX_4_DP	B33	A33	NC
MCIO_PCIE5_PE2_TX_4_DN	B34	A34	GND
GND	B35	A35	MCIO_PCIE5_PE2_RX_4_DP
GND	B36	A36	MCIO_PCIE5_PE2_RX_4_DN

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

MCIO_PCIE5_PE2_TX_5_DP	B37	A37	GND
MCIO_PCIE5_PE2_TX_5_DN	B38	A38	GND
GND	B39	A39	MCIO_PCIE5_PE2_RX_5_DP
GND	B40	A40	MCIO_PCIE5_PE2_RX_5_DN
MCIO_PCIE5_PE2_TX_6_DP	B41	A41	GND
MCIO_PCIE5_PE2_TX_6_DN	B42	A42	GND
GND	B43	A43	MCIO_PCIE5_PE2_RX_6_DP
GND	B44	A44	MCIO_PCIE5_PE2_RX_6_DN
MCIO_PCIE5_PE2_TX_7_DP	B45	A45	GND
MCIO_PCIE5_PE2_TX_7_DN	B46	A46	GND
GND	B47	A47	MCIO_PCIE5_PE2_RX_7_DP
MCIO_2A_PRSNT_N	B48	A48	MCIO_PCIE5_PE2_RX_7_DN
GND	B49	A49	GND
NC	N1	N2	NC
GND	G1	G2	GND

5.4.4 PCIe Slots (PCIe x4)

Location: PCIE_CN3; PCIE_CN4
Description: PCIe Slot 64P x4 ST

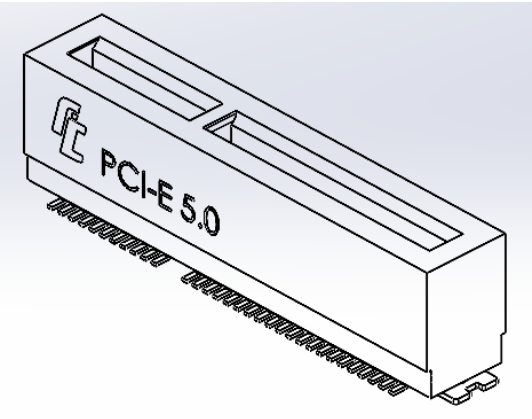

PCIE_CN3

Signal	Pin	Pin	Signal
P_+12V_PSU	B1	A1	MCIO_3A_PWRBRK_CLKREQ_N
P_+12V_PSU	B2	A2	P_+12V_PSU
P_+12V_PSU	B3	A3	P_+12V_PSU
GND	B4	A4	GND
SMB_MCIO3A_SCL	B5	A5	NC
SMB_MCIO3A_SDA	B6	A6	NC
GND	B7	A7	NC
P_+3V3_S0	B8	A8	NC
NC	B9	A9	P_+3V3_S0
P_+3V3_S0	B10	A10	P_+3V3_S0

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

MCIO_3A_SMB_ALERT_WAKE_N	B11	A11	MCIO_3A_RST_N
Separation Key			
NC	B12	A12	GND
GND	B13	A13	CLK_100M_MCIO_3A_DP
MCIO_PCIE5_PE3_TX_0_DP	B14	A14	CLK_100M_MCIO_3A_DN
MCIO_PCIE5_PE3_TX_0_DN	B15	A15	GND
GND	B16	A16	MCIO_PCIE5_PE3_RX_0_DP
MCIO_3A_PRSNT_N	B17	A17	MCIO_PCIE5_PE3_RX_0_DN
GND	B18	A18	GND
MCIO_PCIE5_PE3_TX_1_DP	B19	A19	NC
MCIO_PCIE5_PE3_TX_1_DN	B20	A20	GND
GND	B21	A21	MCIO_PCIE5_PE3_RX_1_DP
GND	B22	A22	MCIO_PCIE5_PE3_RX_1_DN
MCIO_PCIE5_PE3_TX_2_DP	B23	A23	GND
MCIO_PCIE5_PE3_TX_2_DN	B24	A24	GND
GND	B25	A25	MCIO_PCIE5_PE3_RX_2_DP
GND	B26	A26	MCIO_PCIE5_PE3_RX_2_DN
MCIO_PCIE5_PE3_TX_3_DP	B27	A27	GND
MCIO_PCIE5_PE3_TX_3_DN	B28	A28	GND
GND	B29	A29	MCIO_PCIE5_PE3_RX_3_DP
NC	B30	A30	MCIO_PCIE5_PE3_RX_3_DN
MCIO_3A_PRSNT_N	B31	A31	GND
GND	B32	A32	NC
NC	N1	N2	NC
GND	G1	G2	GND

PCIE_CN4

Signal	Pin	Pin	Signal
P_+12V_PSU	B1	A1	MCIO_3B_PWRBRK_CLKREQ_N
P_+12V_PSU	B2	A2	P_+12V_PSU
P_+12V_PSU	B3	A3	P_+12V_PSU
GND	B4	A4	GND
SMB_MCIO3B_SCL	B5	A5	NC
SMB_MCIO3B_SDA	B6	A6	NC
GND	B7	A7	NC
P_+3V3_S0	B8	A8	NC
NC	B9	A9	P_+3V3_S0
P_+3V3_S0	B10	A10	P_+3V3_S0
MCIO_3B_SMB_ALERT_WAKE_N	B11	A11	MCIO_3B_RST_N
Separation Key			
NC	B12	A12	GND


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

GND	B13	A13	CLK_100M_MCIO_3B_DP
MCIO_PCIE5_PE3_TX_4_DP	B14	A14	CLK_100M_MCIO_3B_DN
MCIO_PCIE5_PE3_TX_4_DN	B15	A15	GND
GND	B16	A16	MCIO_PCIE5_PE3_RX_4_DP
MCIO_3B_PRSNT_N	B17	A17	MCIO_PCIE5_PE3_RX_4_DN
GND	B18	A18	GND
MCIO_PCIE5_PE3_TX_5_DP	B19	A19	NC
MCIO_PCIE5_PE3_TX_5_DN	B20	A20	GND
GND	B21	A21	MCIO_PCIE5_PE3_RX_5_DP
GND	B22	A22	MCIO_PCIE5_PE3_RX_5_DN
MCIO_PCIE5_PE3_TX_6_DP	B23	A23	GND
MCIO_PCIE5_PE3_TX_6_DN	B24	A24	GND
GND	B25	A25	MCIO_PCIE5_PE3_RX_6_DP
GND	B26	A26	MCIO_PCIE5_PE3_RX_6_DN
MCIO_PCIE5_PE3_TX_7_DP	B27	A27	GND
MCIO_PCIE5_PE3_TX_7_DN	B28	A28	GND
GND	B29	A29	MCIO_PCIE5_PE3_RX_7_DP
NC	B30	A30	MCIO_PCIE5_PE3_RX_7_DN
MCIO_3B_PRSNT_N	B31	A31	GND
GND	B32	A32	NC
NC	N1	N2	NC
GND	G1	G2	GND


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.4.5 PCIe 12V Power Connectors

Location: CN1; CN2
Description: Power Header ML 2x4P

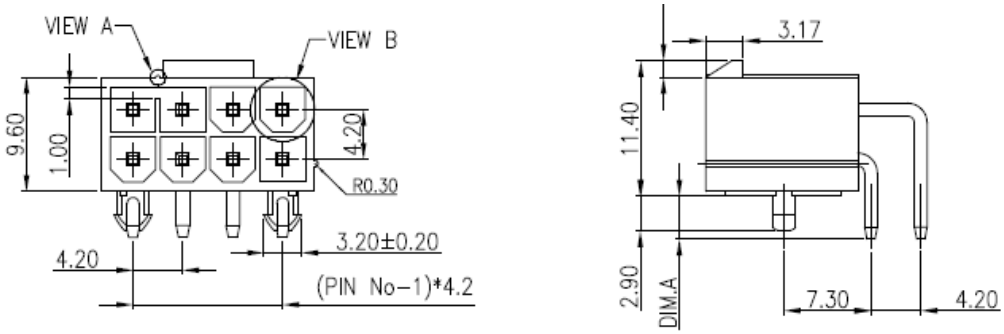


CN1

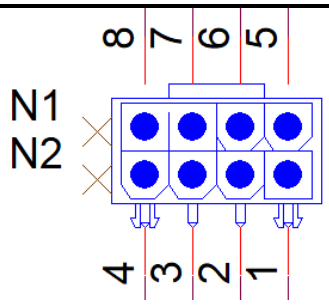

PIN#	Signal Name	PIN#	Signal Name
1	P_+12V_PSU	5	CN1_SENSE0 (10K ohm to GND)
2	P_+12V_PSU	6	GND
3	P_+12V_PSU	7	GND
4	CN1_SENSE1 (10K ohm to GND)	8	GND

CN2

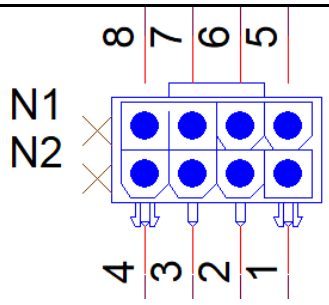



PIN#	Signal Name	PIN#	Signal Name
1	P_+12V_PSU	5	CN2_SENSE0 (10K ohm to GND)
2	P_+12V_PSU	6	GND
3	P_+12V_PSU	7	GND
4	CN2_SENSE1 (10K ohm to GND)	8	GND

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


5.4.6 System Fan Connectors

Location: FAN_CN1; FAN_CN2
Description: WAFER ML 1x4P ST D2.54

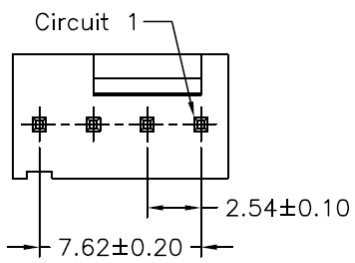

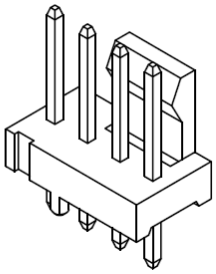


FAN_CN1

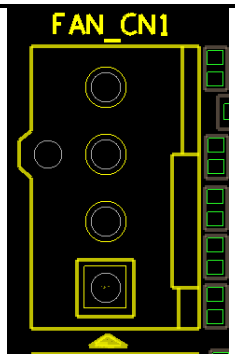

PIN#	Signal Name
1	GND
2	P_+12V_FAN1
3	FAN1_PWM_IN
4	FAN1_PWM_OUT

FAN_CN2

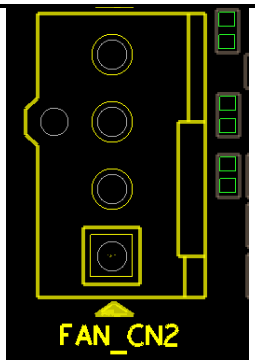


PIN#	Signal Name
1	GND
2	P_+12V_FAN2
3	FAN2_PWM_IN
4	FAN2_PWM_OUT


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.4.7 SMBus Connector

Location: SMBUS1
Description: WAFER ML 1x5P ST D1.0

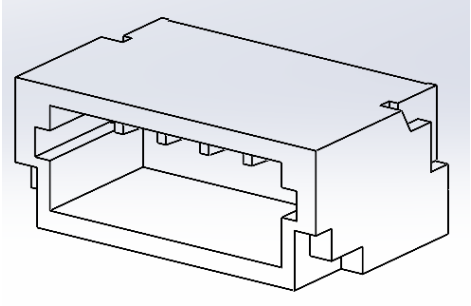

SMBUS1

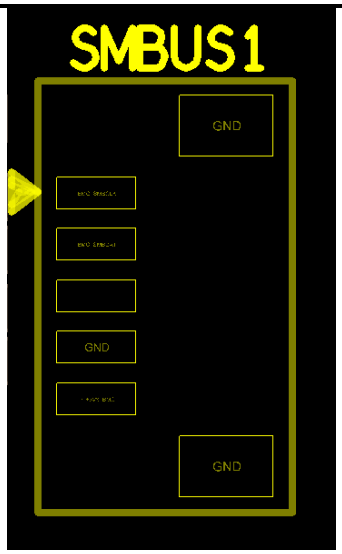

PIN#	Signal Name
1	BMC_SMBCLK
2	BMC_SMBDAT
3	BMC_ALERT
4	GND
5	P_+3V3_BMC
G1	GND
G2	GND

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6 Getting Started

6.1 Installing Memory Modules

Memory modules must be populated as shown (slots 1 > 2 > 3 > 4 > 5 > 6).

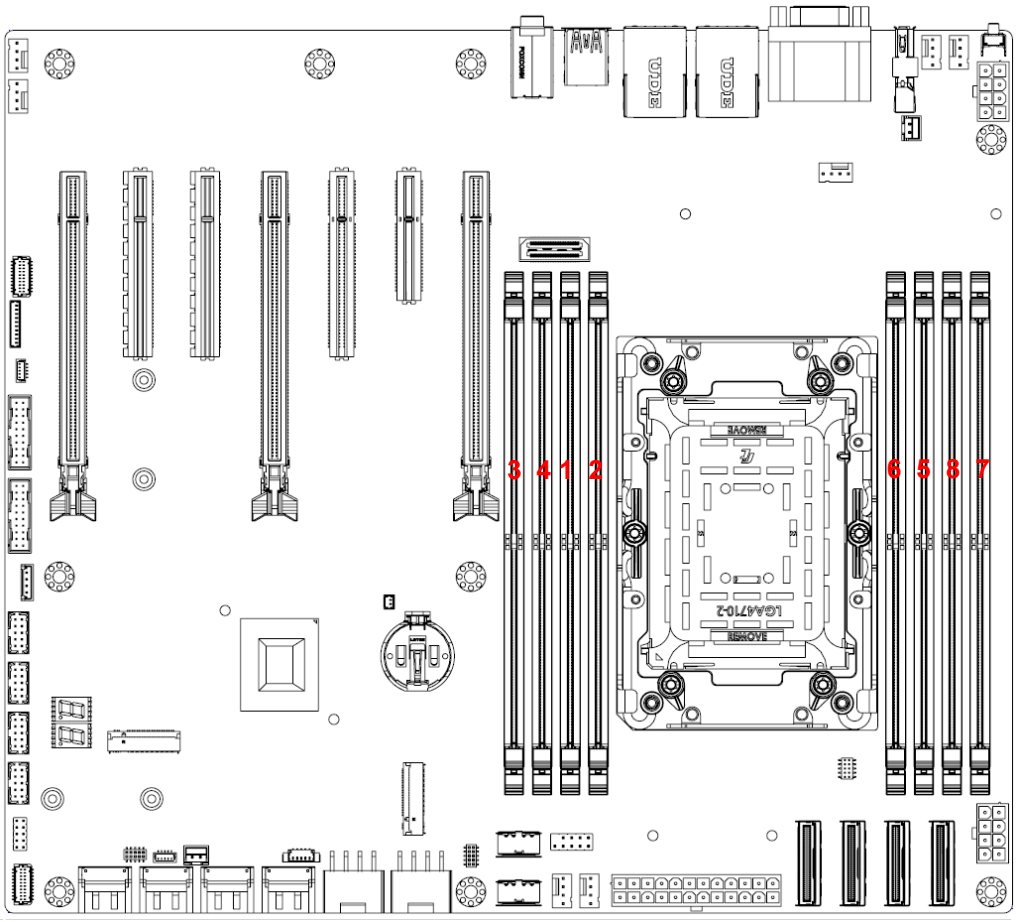

Granite Rapids DDR5 only DIMM configurations diagram

DIMM Quantity	AXE-7420GWA DIMM							
	DIMM3	DIMM4	DIMM1	DIMM2	DIMM6	DIMM5	DIMM8	DIMM7
1DIMM			V					
1DIMM						V		
2DIMM			V					V
2DIMM	V					V		
4DIMM	V		V			V		V
8DIMM	V	V	V	V	V	V	V	V

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.2 PCIe Slot Secondary Power Supply

The AXE-7420GWA is equipped with two 8-pin ATX-type 12V power connectors on the mainboard (see section 4.2 Connector Locations) The pin definitions of the connectors and cables are described below.


CAUTION:
mise en garde

All installation procedures are restricted to skilled personnel.

Toutes les procédures d'installation sont réservées au personnel qualifié.

6.2.1 8-Pin ATX-Type 12V Power Connector Pinout

Pin #	Signal
1	P12V
2	P12V
3	P12V
4	SENSE1
5	GND
6	SENSE0
7	GND
8	GND

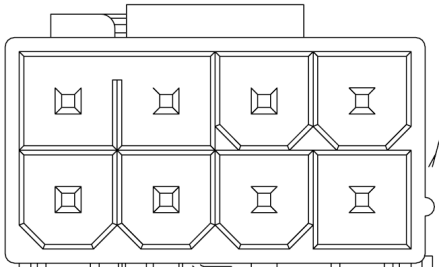

6.3 BMC LAN Configuration

Users can modify the BMC IP via ipmitool commands.

Show the current LAN setting

- ipmitool lan print 1

[Static IP]

Set the IP source to static

- ipmitool lan set 1 ipsrc static

Set the IP address

- ipmitool lan set 1 ipaddr xxx.xxx.xxx.xxx

Set the netmask address

- ipmitool lan set 1 netmask xxx.xxx.xxx.xxx

Set the gateway address

- ipmitool lan set 1 defgw ipaddr xxx.xxx.xxx.xxx

[DHCP IP]

Set IP source to DHCP

- ipmitool lan set 1 ipsrc dhcp

NOTE:

BMC IP can be set in the BIOS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.4 BIOS Update

Users can update the AXE-7420GWA system BIOS via various interfaces (Gigabit LAN, KCS, and the console port).

6.4.1 Updating BIOS via Host with BIOS Tool

1. Boot/Login to the Shell
2. Update the BIOS from the host using the following commands:

Example:

AfuEfix64 BIOS.ROM /p /b /n /x (to update BIOS without ME)

```
FS0:\> cd AXE-7400GRW_00510_FullImage
FS0:\AXE-7400GRW_00510_FullImage\> ls
Directory of: FS0:\AXE-7400GRW_00510_FullImage\
12/03/2025  14:54 <DIR>        16,384  .
12/03/2025  14:54 <DIR>             0  ..
12/03/2025  01:27              684,048  AfuEfix64.efi
12/03/2025  01:27           50,331,648  AXE-7400GRW_00510.ROM
12/03/2025  01:27           67,108,864  AXE-7400GRW_00510_Corporate.BIN
12/03/2025  01:27                6,202  HISTORY.txt
12/03/2025  01:27                  405  pBIOS.nsh
          5 File(s)  118,131,167 bytes
          2 Dir(s)
FS0:\AXE-7400GRW_00510_FullImage\>
```

NOTE:

Updating BIOS via BMC, please refer to Chapter 9 BMC.

6.5 BMC Firmware Update via Network

This section outlines the various methods available for updating the BMC firmware.

BMC firmware updates can be performed through four primary methods:

1. **Web interface update**
   For detailed steps and guidelines, please refer to Section 8.2.8.1.1 BMC Update.
2. **Redfish update**
   For detailed steps and guidelines, please refer to Section 8.4.4 BMC Update.

6.6 CPLD Update

This section outlines the various methods available for updating the BMC firmware.

BMC firmware updates can be performed through four primary methods:


1. **Web interface update**
   For detailed steps and guidelines, please refer to Section 8.2.8.2.1 HPM Firmware Update-CPLD/BIOS.
2. **Redfish update**
   For detailed steps and guidelines, please refer to Section 8.4.6 CPLD Update.
3. **ipmitool update**
   For detailed steps and guidelines, please refer to Section 8.3.2.6 CPLD Update.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


6.7 Create a RAID Volume

To create a RAID volume, the RAID option must be enabled in the BIOS so that the system loads the RAID option ROM code (see section 8.4.2.1 SATA Configuration)

1. Go to **Chipset** > **PCH Configurations** > **SATA Configuration**.
2. Set **SATA Mode Selection** to **RAID**, save changes, and reboot the system.

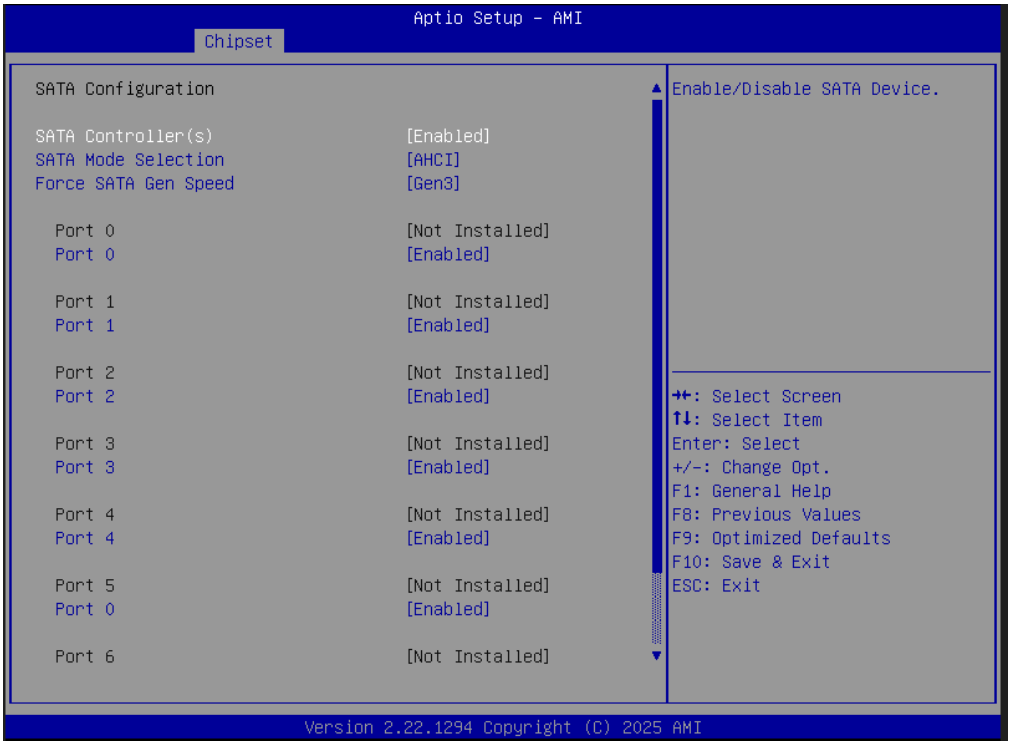

To create a RAID volume, go to the **Advanced** menu

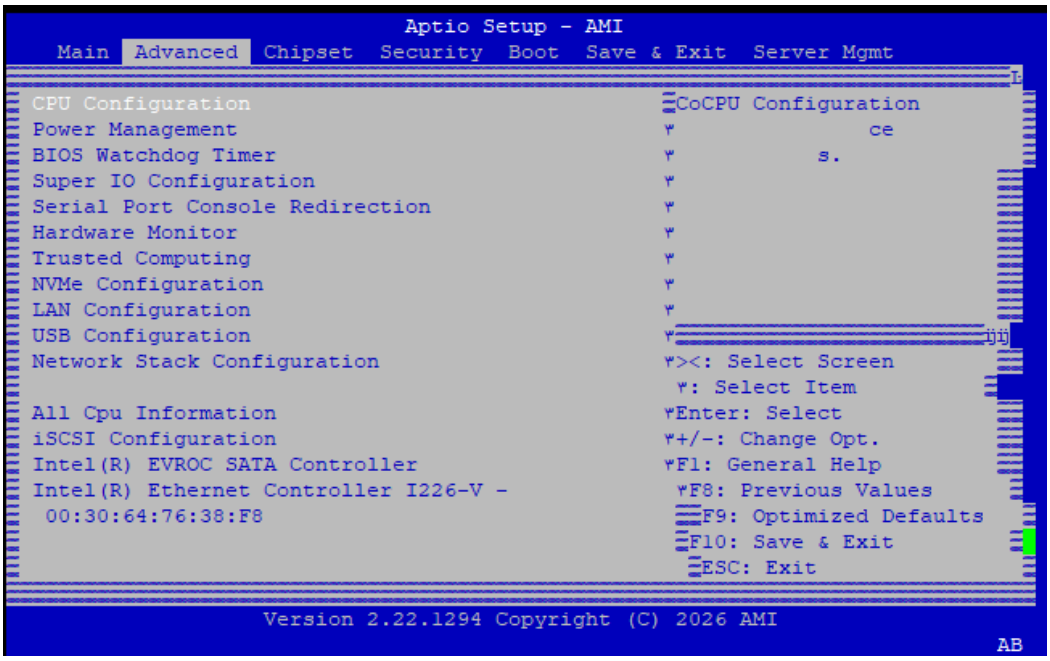

Enter the **Intel(R) VROC sSATA Controller** submenu and click on **Create RAID Volume**.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7 BIOS Settings

To enter the BIOS setup screen, follow these steps:

1. Power on the AXE-7420GWA.

2. Press the <Delete> or <ESC> key on your keyboard when you see the following text prompt: “Press DEL or ESC to enter Setup”.
   (Note: If Quick Boot is enabled, the screen below will not display, but pressing the <Delete> or <ESC> key will still allow you to enter the BIOS setup screen.)



3. After pressing the <Delete> or <ESC> key, the main BIOS setup menu will display. You can access the other setup screens from the main BIOS setup menu, such as Chipset and Power menus.

7.1 BIOS Setup Menu

The BIOS setup utility is invoked by pressing <ESC> or <DEL> keys. User can change BIOS settings during setup utility runs. A system reset is required for new settings to take effect.

In the BIOS setup utility, there are several hot keys are designed for specific purposes, as listed below.

- <F1>: General help in setup menu
- <F8>: Load previous BIOS values
- <F9>: Load BIOS default in setup utility
- <F10>: Save & Exit setup utility

To navigate through the BIOS setup menu, use the following.

→←	Left/Right. The *Left and Right* < Arrow > keys allow you to select a setup screen. For example: Main screen, Advanced screen, Chipset screen, and so on.
↑↓	Up/Down The *Up and Down* < Arrow > keys allow you to select a setup item or sub-screen.
+-	Plus/Minus The *Plus and Minus* < Arrow > keys allow you to change the field value of a particular setup item. For example: Date and Time.
Tab	The < Tab > key allows you to select setup fields.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.1.1 Menu Selection Bar

The Menu Selection Bar is located at the top of the screen. It displays the top-level available menus to the user:

- Main Menu
- Advanced Menu
- Chipset Menu
- Security Menu
- Boot Menu
- Save & Exit Menu
- Server Mgmt

7.1.2 Menu Conventions

The appearance of the setup menu listed in this chapter is a sample to describe the item list. It is shown on a VT100 terminal via serial console. The menu conventions are as follows.

Using color


The mandatory BIOS setup fields are in black. The BIOS setup fields currently not used are in grey. The display only strings are in black.

Using brackets

Editable menu options are marketed with squares '[' and ']' to distinguish them from display only fields that can't be modified.

7.2 Main Menu

The Main Menu provides read-only information about the system and also allows you to set the system date and time. The tables below show screen shots of the Main menu details, submenus and settings.

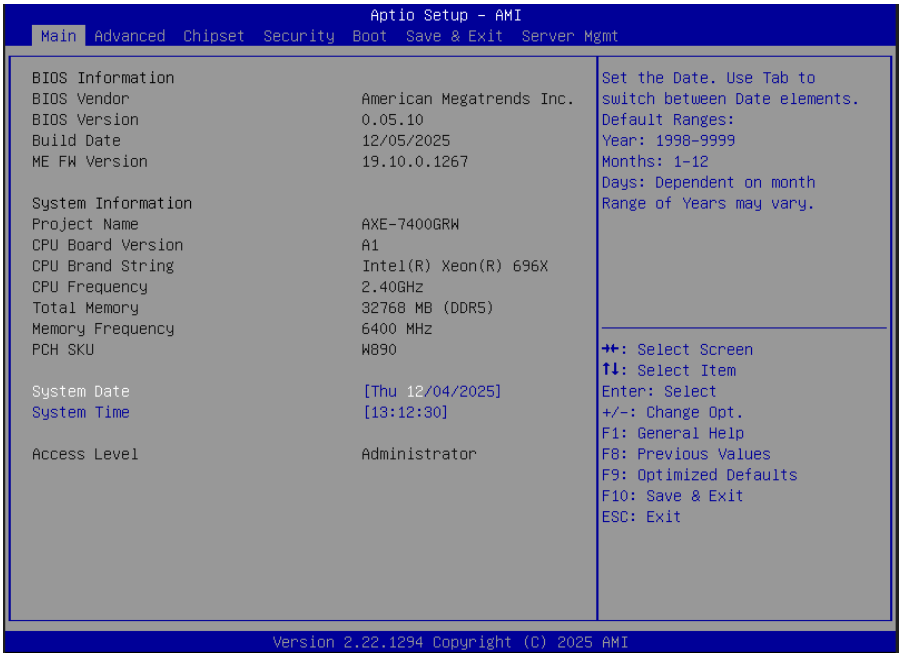

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.1 BIOS Information

BIOS Item	Options	Description
BIOS Vendor	**Info-only.** American Megatrends	Display vendor name of system BIOS.
BIOS Version	**Info-only.** x.yy.zz	Display version of booting BIOS.
Build Date	**Info-only.** MM/DD/YYYY	It shows the date that BIOS was built.
MRC Version	**Info-only.** xxx.Ryy	Display the revision of MRC code which is implemented in BIOS.
ME FW Version	**Info-only.** ww:x.y.z.aaa	Display the version of Intel manageability firmware which is implemented in BIOS.


7.2.2 System Information

BIOS Item	Options	Description
Project Name	**Info-only.**	Shows Project Name
CPU Board Version	**Info-only.**	Shows Main Board Version
CPU Brand String	**Info-only.** Intel(R) Core, …	Shows what CPU is booting the system.
CPU Frequency	**Info-only.** XXXX MHz	Shows CPU frequency.
Total Memory	**Info-only.** XXXX MB (DDR4)	Shows total memory size used on the motherboard and memory type.
Memory Frequency	**Info-only.** XXXX MHz	Shows memory frequency.
System Date	MM/DD/YYYY	For configuring/showing system date. When setting the Date, use <Tab> key to switch between Date elements.
System Time	HH:MM:SS	For configuring/showing system time. When setting the Time, use <Tab> key to switch between Time elements.
Access Level	**Info-only.** Administrator/User	It shows what access level is used to enter BIOS setup menu.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3 Advanced Menu


This menu contains the Advance settings.

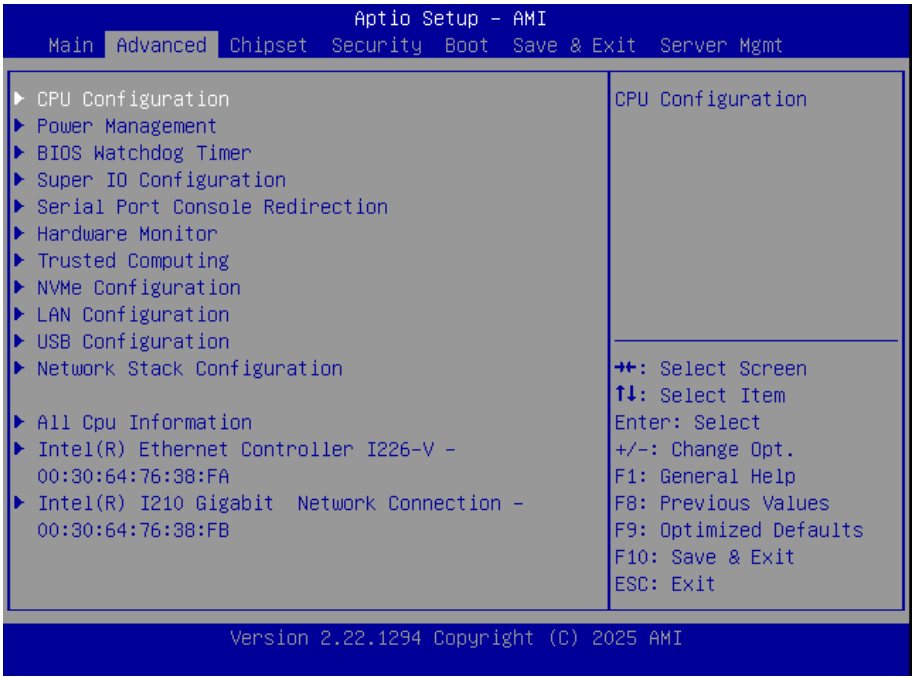

BIOS Item	Options	Description
1CPU Configuration	**Sub-Menu**	For Cpu setting
2Power Management	**Sub-Menu**	For Power Management
3BIOS Watchdog Time	**Sub-Menu**	For BIOS Watchdog Time setting
4Super IO Configuration	**Sub-Menu**	For Super IO Configuration
5Serial Port Console Redirection	**Sub-Menu**	For configuring serial console
6Hardware Monitor	**Sub-Menu**	For Hardware Monitor
7Trusted Computing	**Sub-Menu**	For TPM settings
8NVMe Configuration	**Sub-Menu**	For NVMe Device Information
9Lan Configuration	**Sub-Menu**	For Lan settings
10USB Configuration	**Sub-Menu**	For USB settings
11Network Stack Configuration	**Sub-Menu**	For configuring Network Stack.
12All Cpu Information	**Sub-Menu**	
13Intel(R) Ethernet Contoller I226-V	**Sub-Menu**	Onboard Ethernet controller configuration loaded by EFI driver. The setup page is designed by Intel and is shown when running the Ethernet EFI driver. It is related to the “Network” settings on the Boot setup page.
14Intel(R) I210 Gigabit Network Connect	**Sub-Menu**	Onboard Ethernet controller configuration loaded by EFI driver. The setup page is designed by Intel and is shown when running the Ethernet EFI driver. It is related to the “Network” settings on the Boot setup page.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.1 CPU Configuration

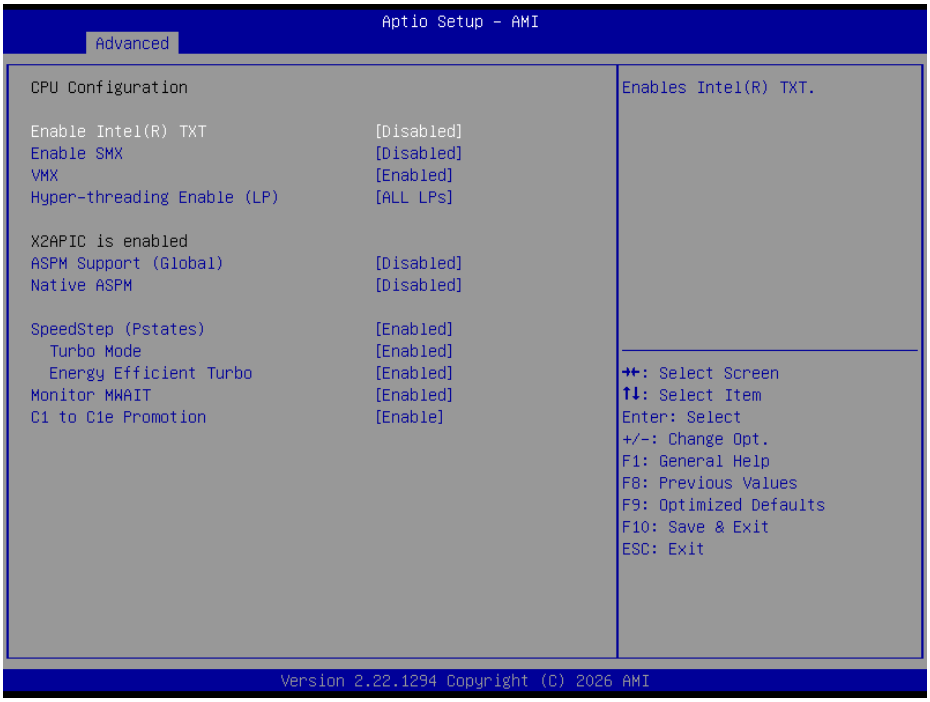


BIOS Item	Options	Description
Enable Intel(R) TXT	**Disabled** Enabled	Enables Intel(R) TXT.
Enable SMX	**Disabled** Enabled	Enables Safer Mode Extensions.
VMX	Disabled **Enabled**	Enables the Vanderpool Technology, takes effect after reboot.
Hyper-Threading Enable (LP)	**All LPs** Single LP	Enable Logical processor (software Method to Enable/Disable Logical Processor threads)
X2APIC is enable	**Info**	
ASPM Support (Global)	**Disabled** Enabled	This option can disable ASPM support for all PCIe root ports.
Native ASPM	**Disabled** Enabled	Enabled - OS Controlled ASPM, Disabled - ASPM Off, AUTO - BIOS Controlled ASPM
SpeedStep (PStates)	Disabled **Enabled**	Enable/Disable EIST (P-States)
Turbo mode	Disabled **Enabled**	Enable/Disable processor Turbo Mode
Energy Efficient Turbo	Disabled **Enabled**	Enable/Disable Energy Efficient Turbo. Enable: MSR 0x1FC Bit[19] = 0 ,Disable: MSR 0x1FC Bit[19] =1.
Monitor MWAIT	Disabled **Enabled**	Allows Monitor and MWAIT instructions.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

C1 to C1e Promotion	Disabled **Enabled**	CPU will promote C1 request to C1e state.


7.3.2 Power Management

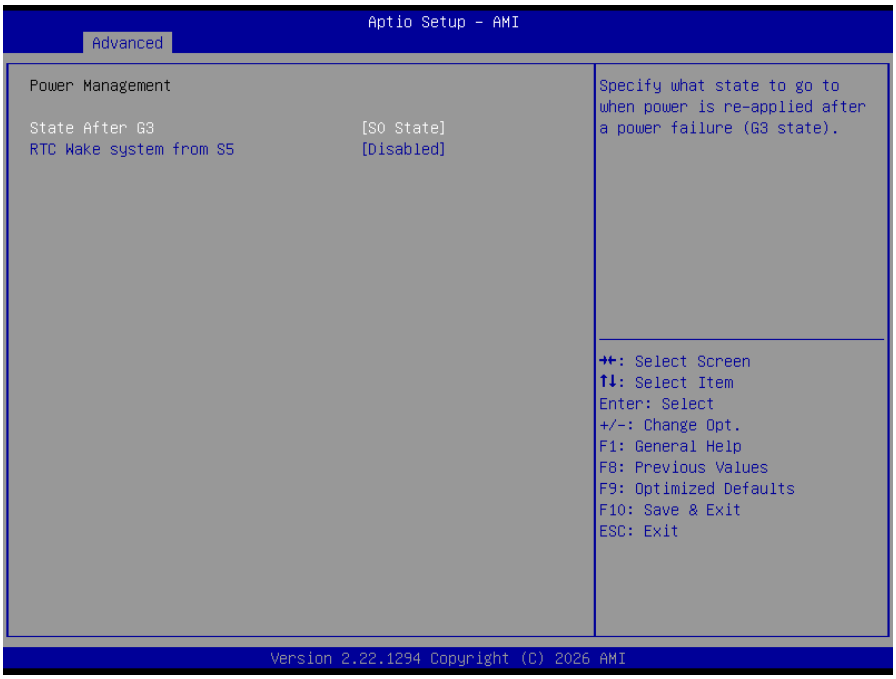

BIOS Item	Options	Description
State After G3	**S0 StateDisabled** S5 State Last State	To enable or disable WOL
RTC Wake system from S5	**Disabled** Enabled Enable and Set wake on time	Enable: Enable Wake on RTC feature but not set RTC wake up value(used for set RTC value by OS tool). Disable: Disable Wake on RTC feature. Enabled and set wake time: Enable System wake on alarm event and set wake on the day::hr::min::sec specified.
Wake Up hour	**0**	
Wake Up minute	**0**	
Wake Up second	**0**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.3.3 Super IO Configuration

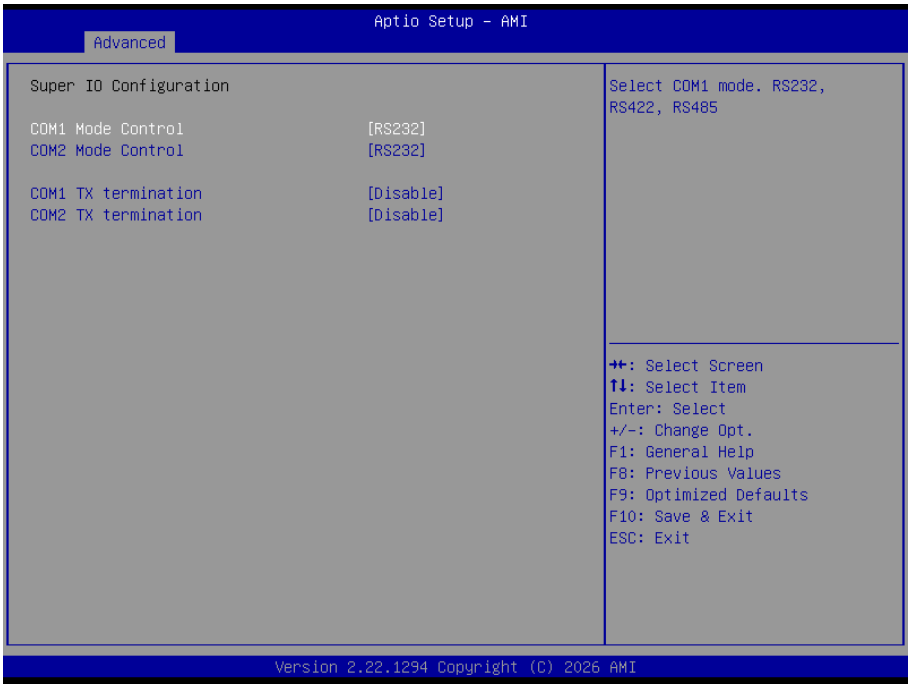

BIOS Item	Options	Description
COM1 Mode Control	**RS232** RS422 RS485	Select COM1 mode. RS232, RS422, RS485
COM2 Mode Control	**RS232** RS422 RS485	Select COM2 mode. RS232, RS422, RS485
Com1 TX termination	**Disabled** Enabled	COM1 TX termination Enable/Disable
Com2 TX termination	**Disabled** Enabled	COM2 TX termination Enable/Disable


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.4 Serial Port Console Redirection

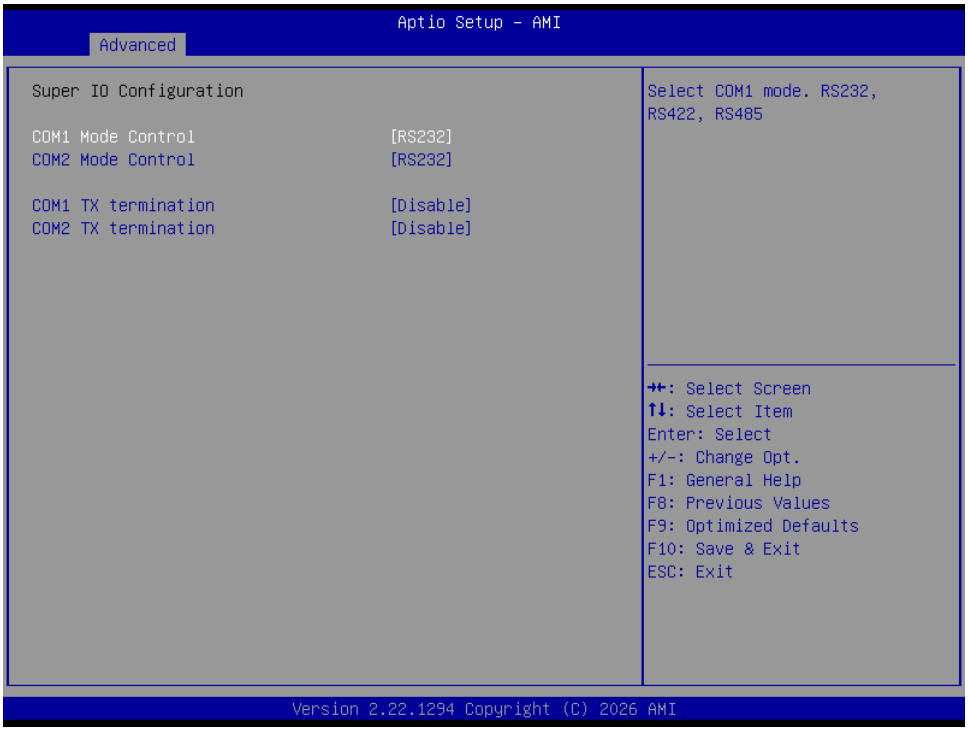

BIOS Item	Options	Description
Console Redirection	**Enabled** Disabled	Enable or disable serial port console redirection function.
Console Redirection Settings	**Sub-Menu**	For configuring serial port settings when console redirection function is enabled.

7.3.4.1 Console Redirection Settings

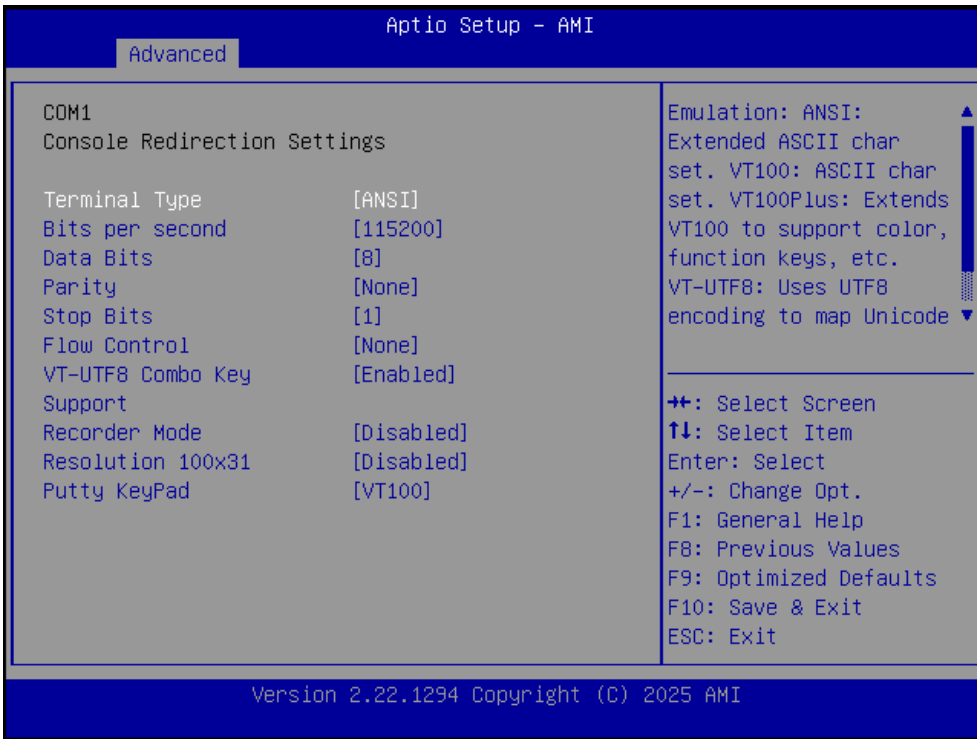


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
Terminal Type	VT100 VT100+ VT-UTF8 **ANSI**	Configure type of console emulation. Emulation: **ANSI:** Extended ASCII char set. **VT100:** ASCII char set. **VT100+:** Extends VT100 to support color, function keys, etc. **VT-UTF8:** Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Bits per second	9600 19200 38400 57600 **115200**	Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speed.
Data Bits	7 **8**	Configure the number of data bits in each transmitted or received serial character for both serial ports.
Parity	**None** Even Odd Mark Space	Configures if parity bit is generated (transmit data) or checked. A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.
Stop Bits	**1** 2	Configures the number of stop bits transmitted and received in each serial character for both serial ports. Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.
Flow Control	**None** Hardware RTS/CTS	Configures flow control for console redirection. Hardware flow control uses RTC/CTS.
VT-UTF8 Combo Key Support	Disabled **Enabled**	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals
Recorder Mode	**Disabled** Enabled	This mode only text wil be sent
Resolution 100x31	**Disabled** Enabled	To enable or disable extended terminal resolution
Putty Keypad	**VT100**	Select Function Key and keypad on Putty


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.5 Trusted Computing

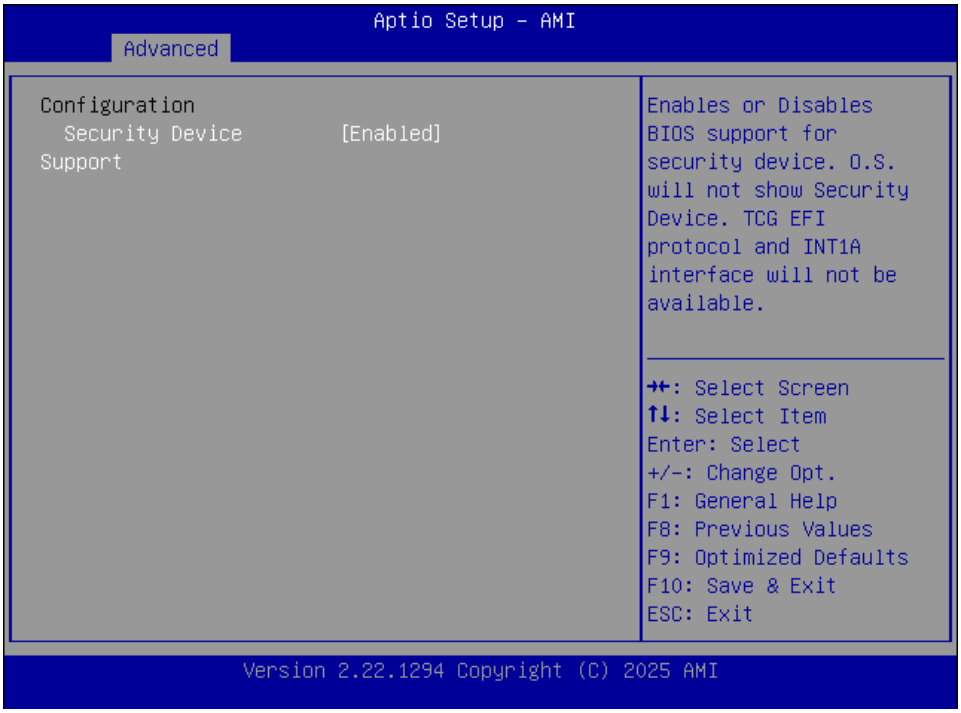


BIOS Item	Options	Description
Security Device Support	**Enabled** Disabled	Security Device Support

7.3.6 NVMe Configuration

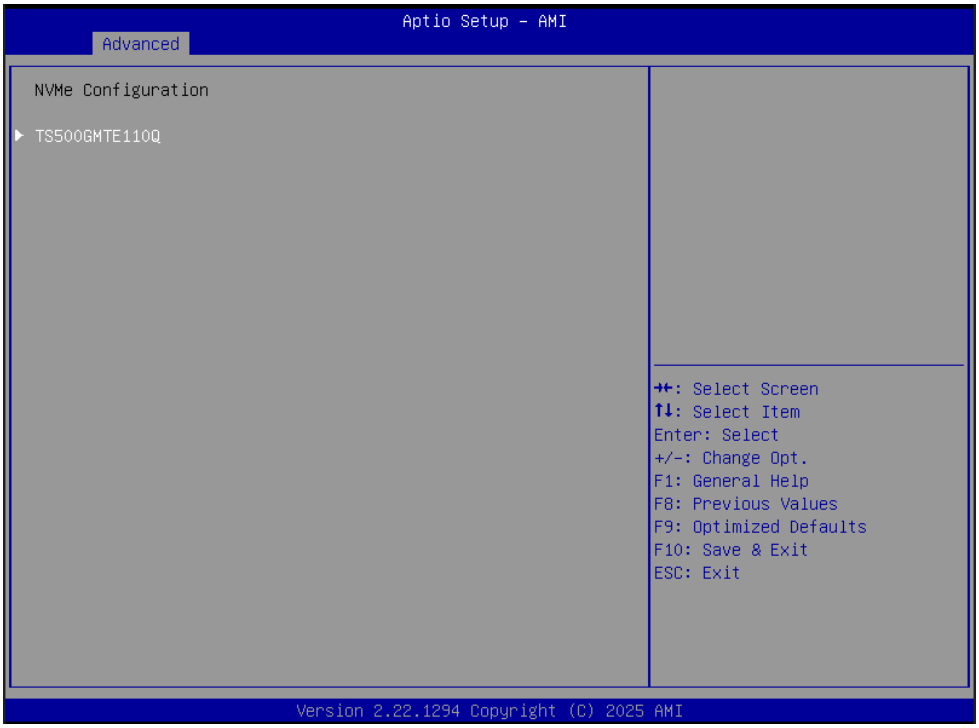


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
NVME Info	**Sub-Menu**	Dynamically generated information for NVME

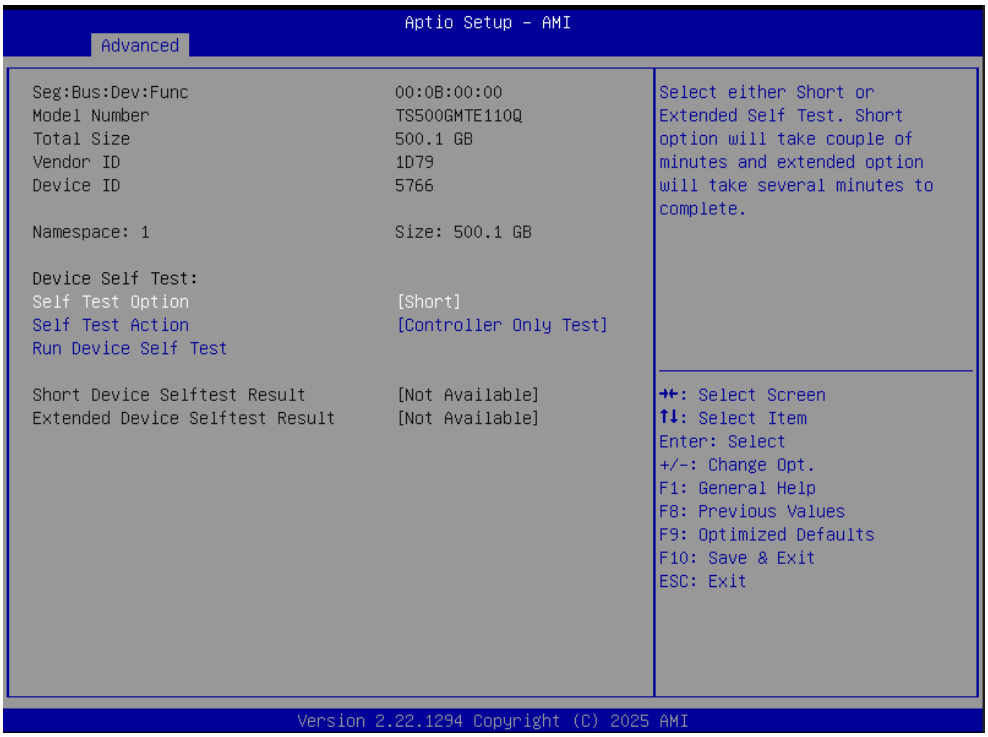


7.3.7 VGA Configuration

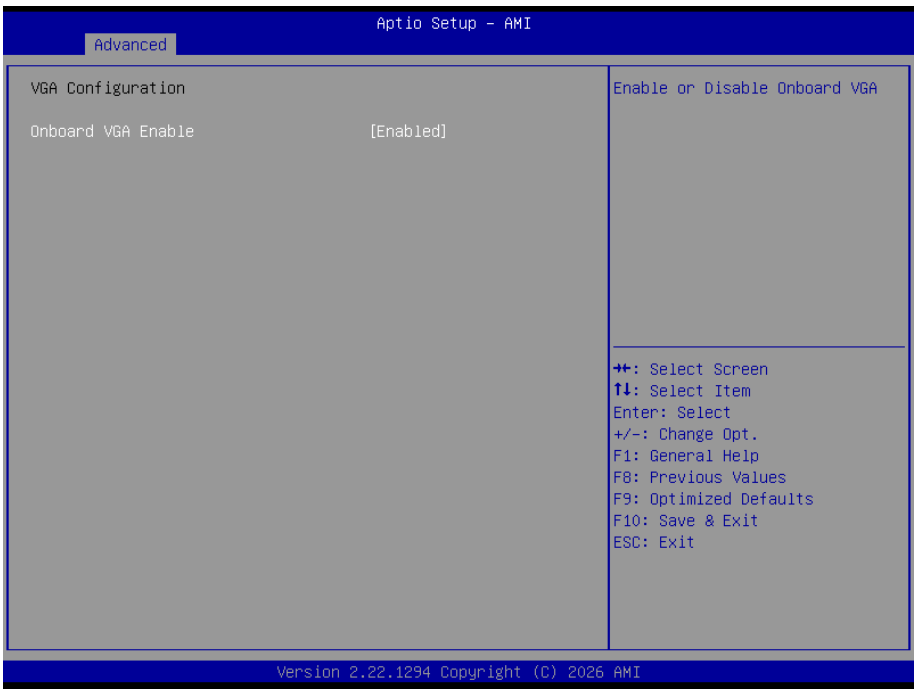

BIOS Item	Options	Description
Onboard VGA Enable	Disabled **Enabled**	Enable or Disable onboard VGA


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.8 LAN Configuration

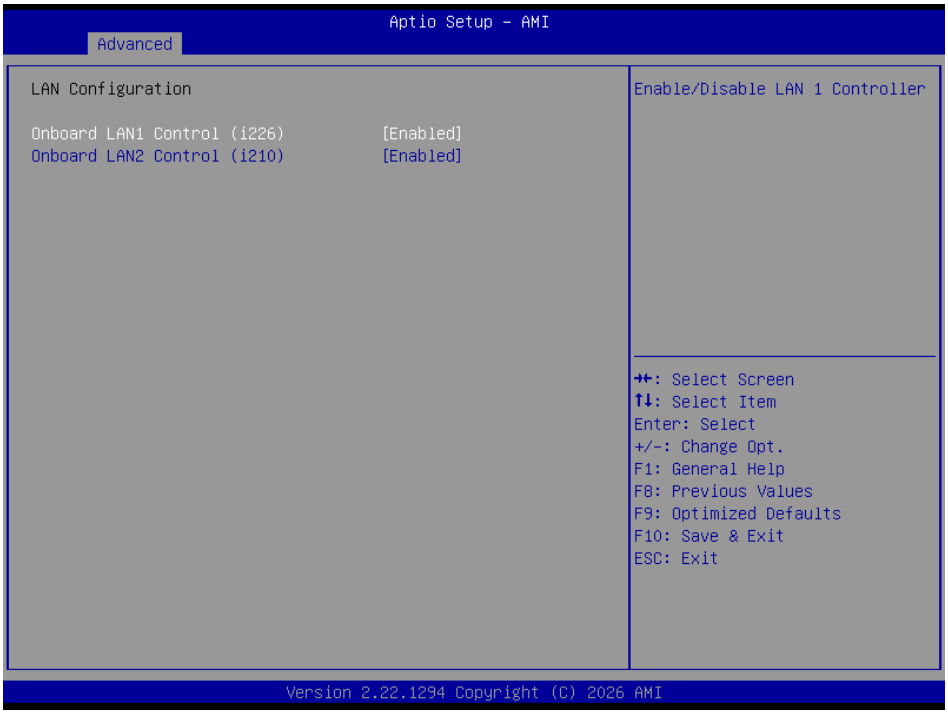

BIOS Item	Options	Description
Onboard LAN1 control (i226)	**Enabled** Disabled	Enable/Disable Lan 1 Controller
Onboard LAN2 control (i210)	**Enabled** Disabled	Enable/Disable Lan 2 Controller


7.3.9 USB Configuration

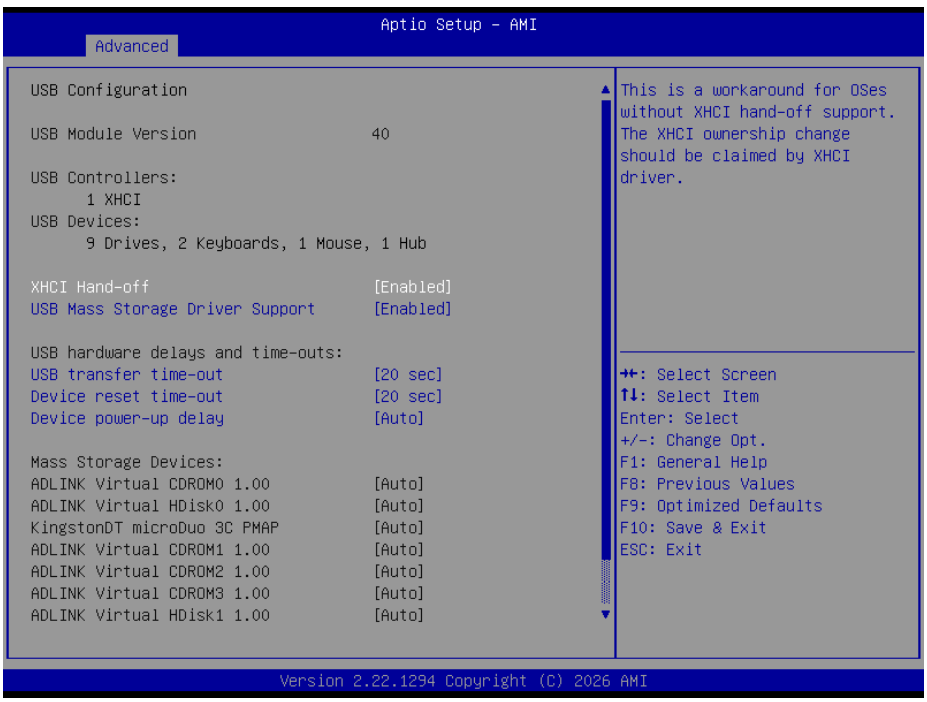

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
XHCI Hand-off	**Enabled** Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	**Enabled** Disabled	Configure the USB Mass Storage Devices.
USB transfer time-out	1 Sec 5Sec 10 Sec **20 Sec**	The time-out value for Control, Bulk, and Interrupt transfers
Device reset time-out	10 Sec **20 Sec** 30 Sec 40 Sec	USB mass storage device Start Unit command time-out.
Device power-up delay	**Auto** Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.

7.3.10 Miscellaneous

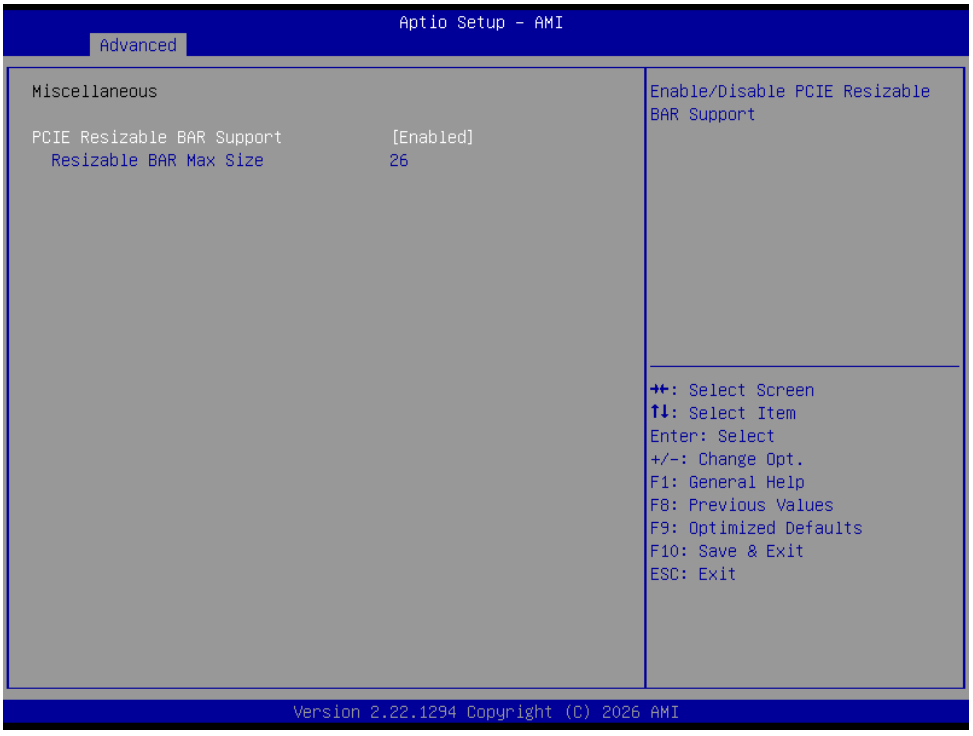


BIOS Item	Options	Description
PCIE Resizable BAR Support	Disabled **Enabled**	Enable/Disable PCIE Resizable BAR Support
Resizable BAR Max size	numeric	Set platform limit for max size to pick from Resizable BAR Capability register. Decimal value 'n' is interpreted as 2^(n+20), which means 0=>1MB, 1=>2MB, 2=>4MB, 3=>8MB, etc.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

		Maximum possible to set is half of processor address width, i.e. address width - 1.


7.3.11 Network Stack Configuration

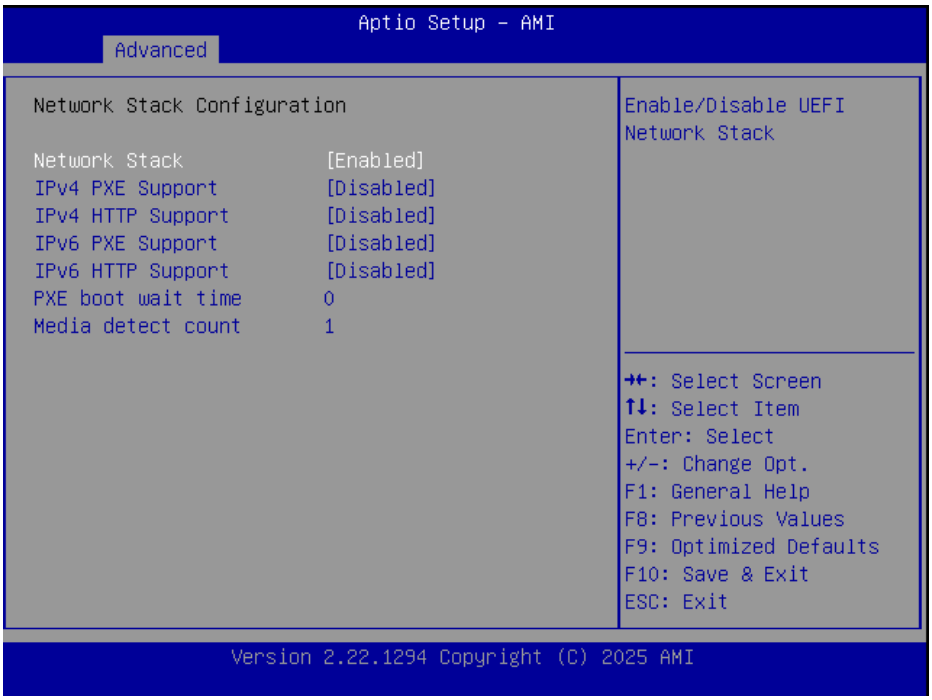


BIOS Item	Options	Description
Network stack	Enabled **Disabled**	Enable/Disable UEFI Network Stack
IPv4 PXESupport	Enabled **Disabled**	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv4 HTTP Support	Enabled **Disabled**	Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.
IPv6 PXESupport	Enabled **Disabled**	Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.
IPv4 HTTP Support	Enabled **Disabled**	Enable/Disable IPv6 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.
PXE Boot wait time	**0**	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value
Media detect count	**1**	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.12 All CPU Information

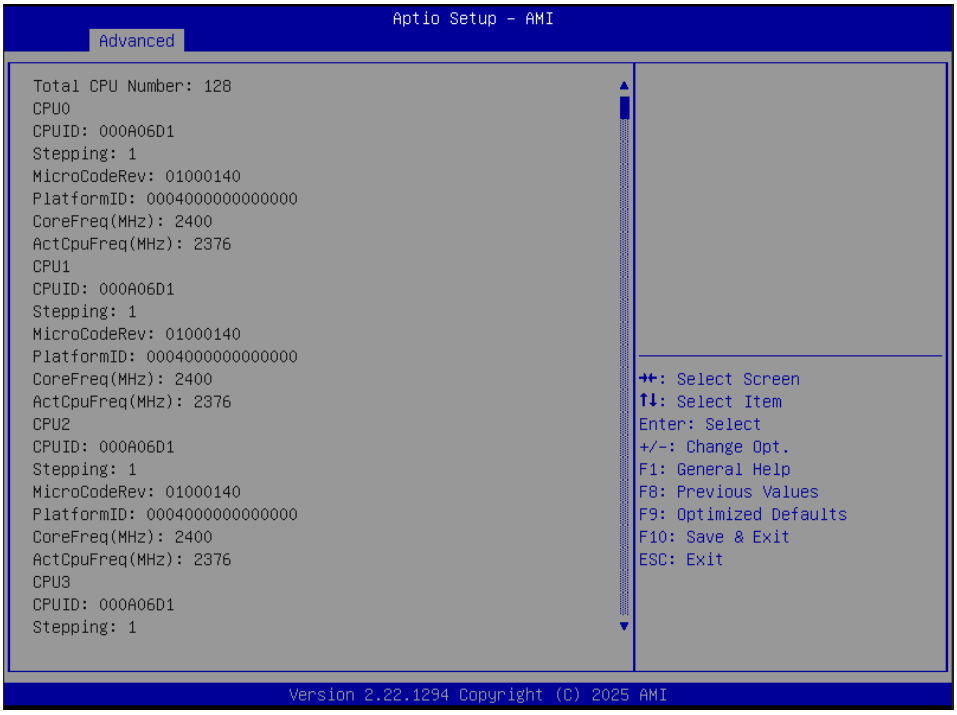


7.3.13 Intel(R) Ethernet Controller I226-V

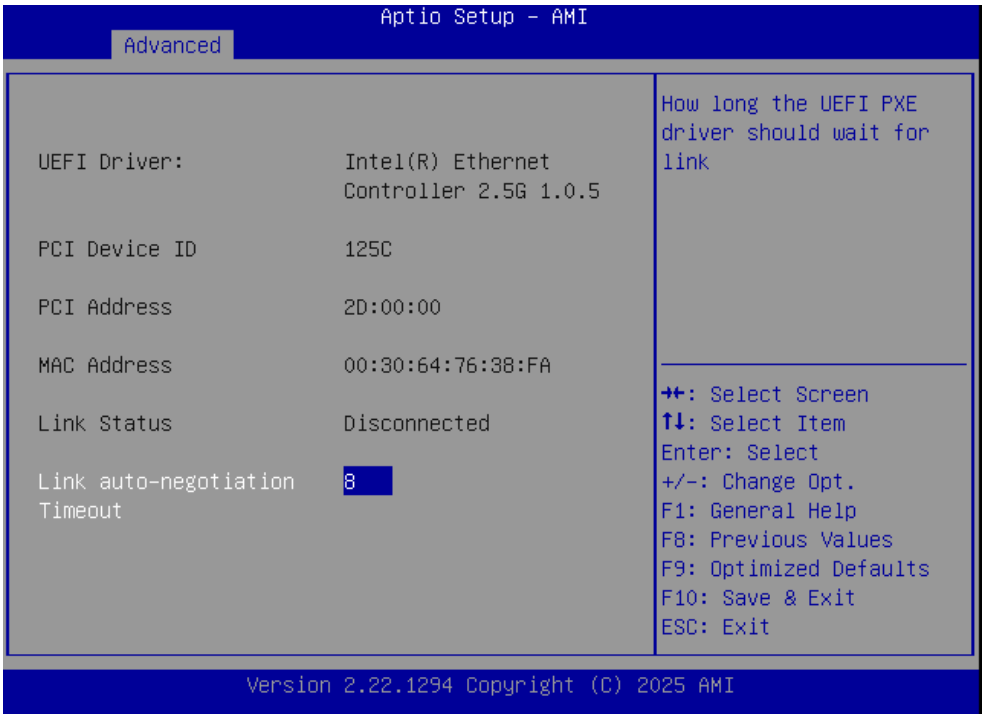

BIOS Item	Options	Description
Link auto-negotiation Timeout	**8**	How long the UEFI PXE driver should wait for link

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.3.14 Intel(R) I210 Gigabit Network Connect

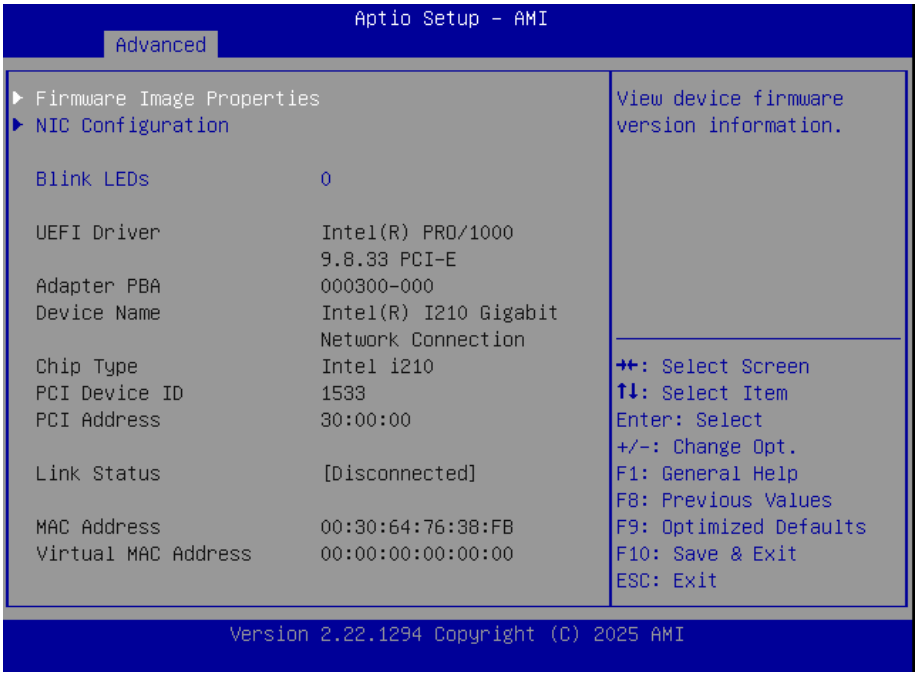

BIOS Item	Options	Description
Firmware Image Properties	**Sub-Menu**	View device firmware version information
NIC Configuration	**Sub-Menu**	
Blink LEDs	**0**	

7.4 Chipset Menu


This menu contains the Chipset settings.

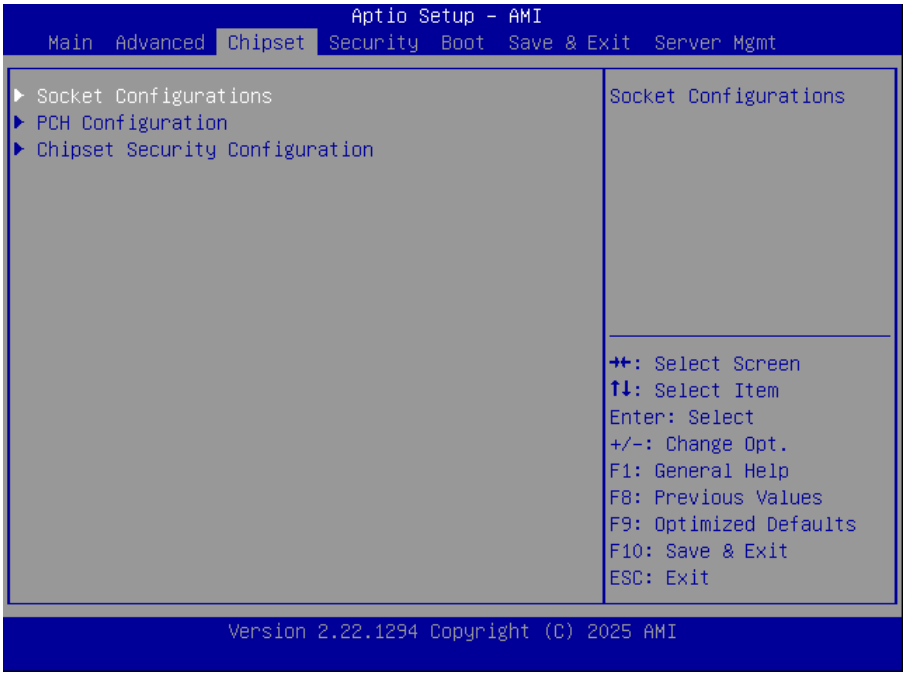

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
Socket Configurations	**Sub-Menu**	For Socket Configurations.
PCH Configurations	**Sub-Menu**	For PCH Configurations.
Chipset Security Configurations	**Sub-Menu**	For Chipset Security Configurations


7.4.1 Socket Configuration

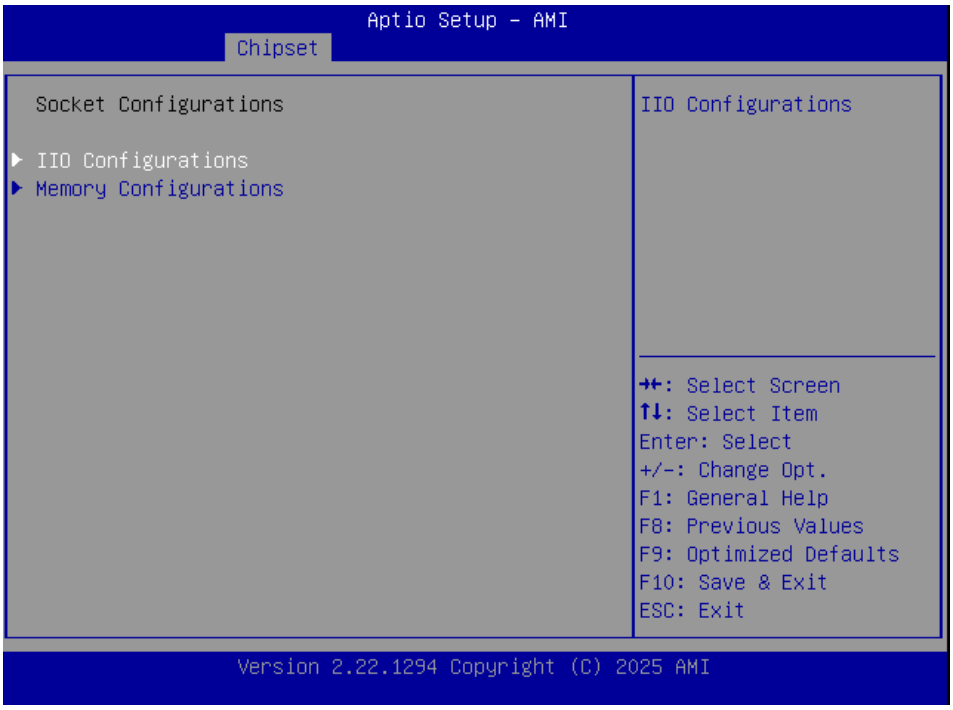

BIOS Item	Options	Description
IIO Configurations	**Sub-Menu**	For IIO Configurations
Memory Configurations	**Sub-Menu**	For Memory Configurations


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4.1.1 IIO Configurations

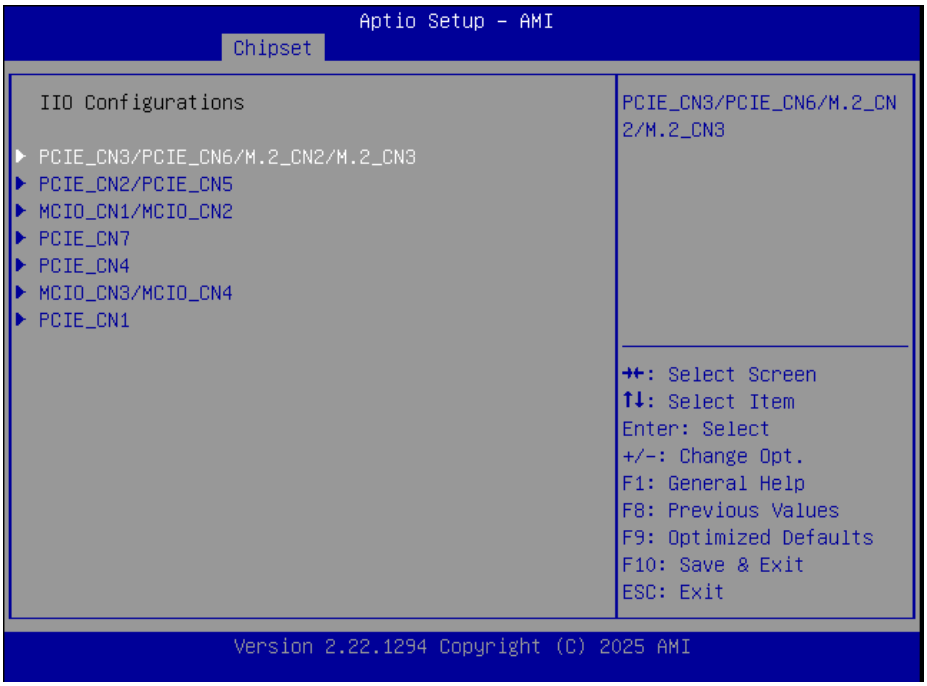

BIOS Item	Options	Description
PCIE_CN3/PCIE_CN6/ M.2_CN2/M.2_CN3	**Sub-Menu**	For PCIE_CN3/PCIE_CN6/ M.2_CN2/M.2_CN3
PCIE_CN2/PCIE_CN5	**Sub-Menu**	For PCIE_CN2/PCIE_CN5
MCIO_CN1/MCIO_CN2	**Sub-Menu**	For MCIO_CN1/MCIO_CN2
PCIE_CN7	**Sub-Menu**	For PCIE_CN7
PCIE_CN4	**Sub-Menu**	For PCIE_CN4
MCIO_CN1/MCIO_CN2	**Sub-Menu**	For MCIO_CN1/MCIO_CN2
PCIE_CN1	**Sub-Menu**	For PCIE_CN1

7.4.1.1.1 PCIE_CN3/PCIE_CN6/M.2_CN2/M.2_CN3

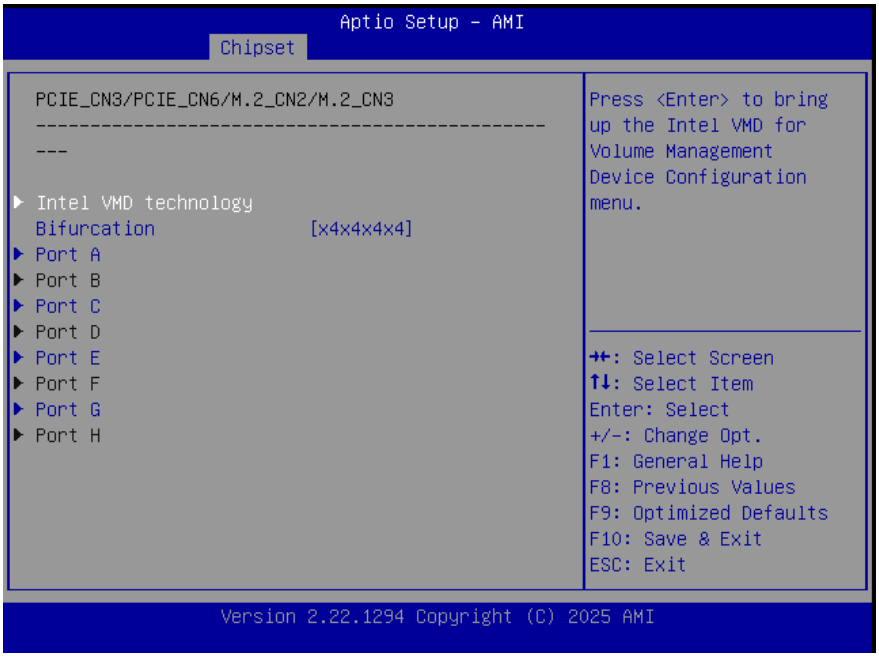


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	Auto **x4x4x4x4** x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4.1.1.2 PCIE_CN2/PCIE_CN5

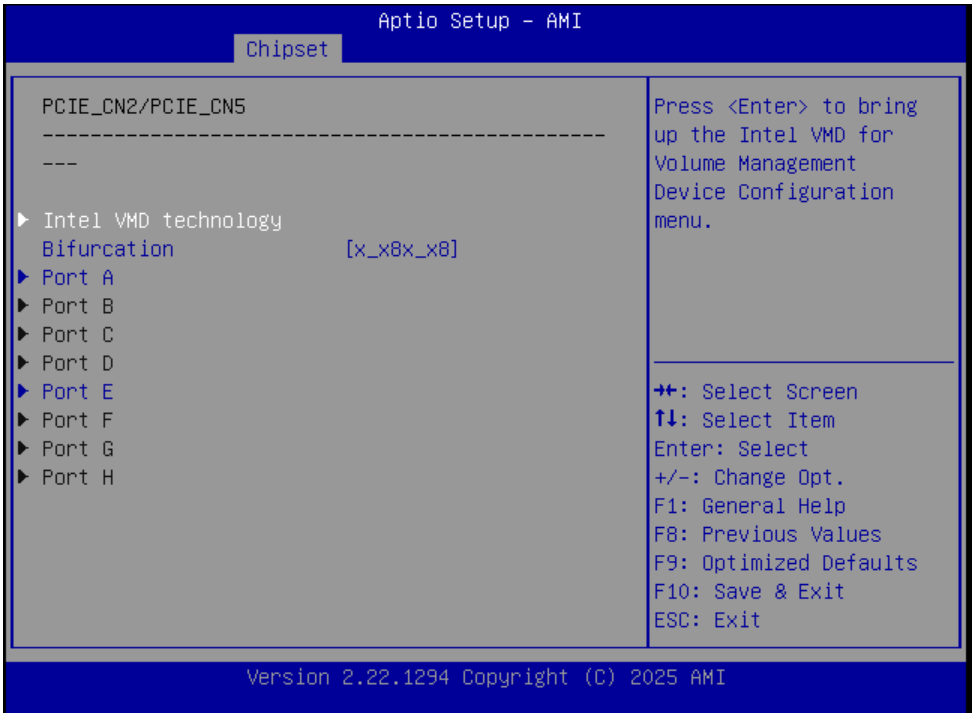


BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	Auto x4x4x4x4 x4x4x_x8 x_x8x4x4 **x_x8x_x8** x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

7.4.1.1.3 MCIO_CN1/MCIO_CN2

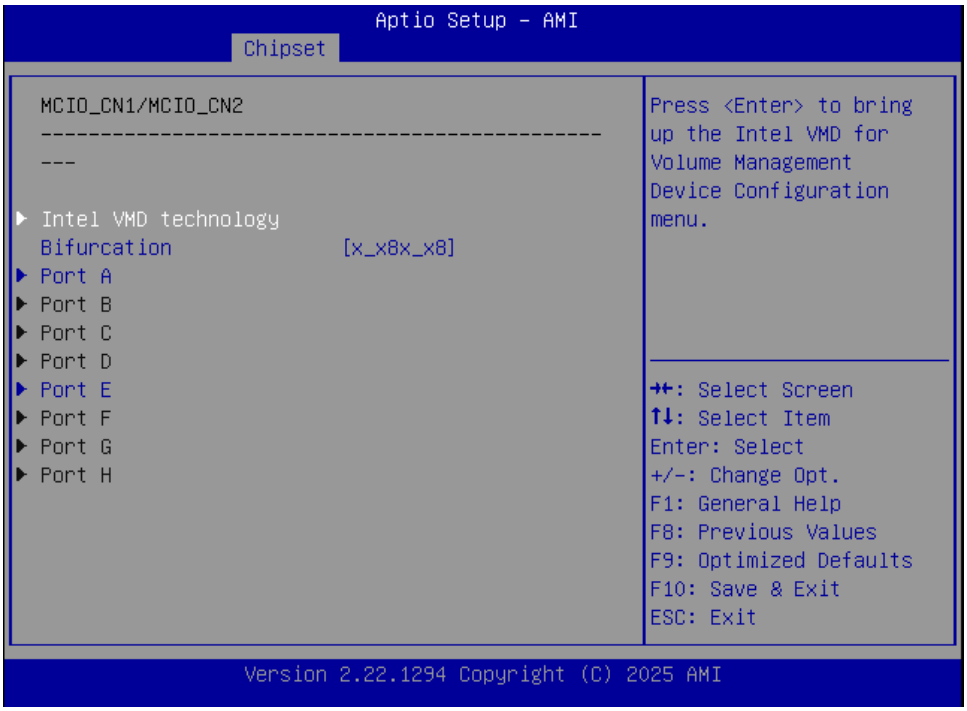


BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	Auto x4x4x4x4 x4x4x_x8 x_x8x4x4 **x_x8x_x8** x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	x4x2x2x2x2x2x2	
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

7.4.1.1.4 PCIE_CN7

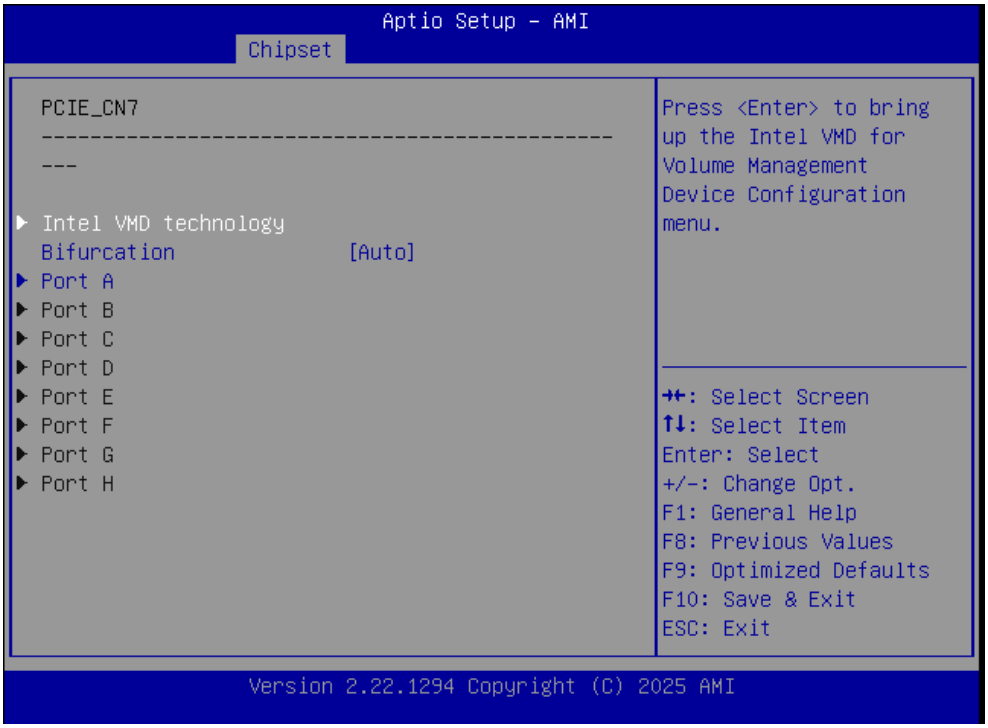


BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	**Auto** x4x4x4x4 x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

7.4.1.1.5 PCIE_CN4

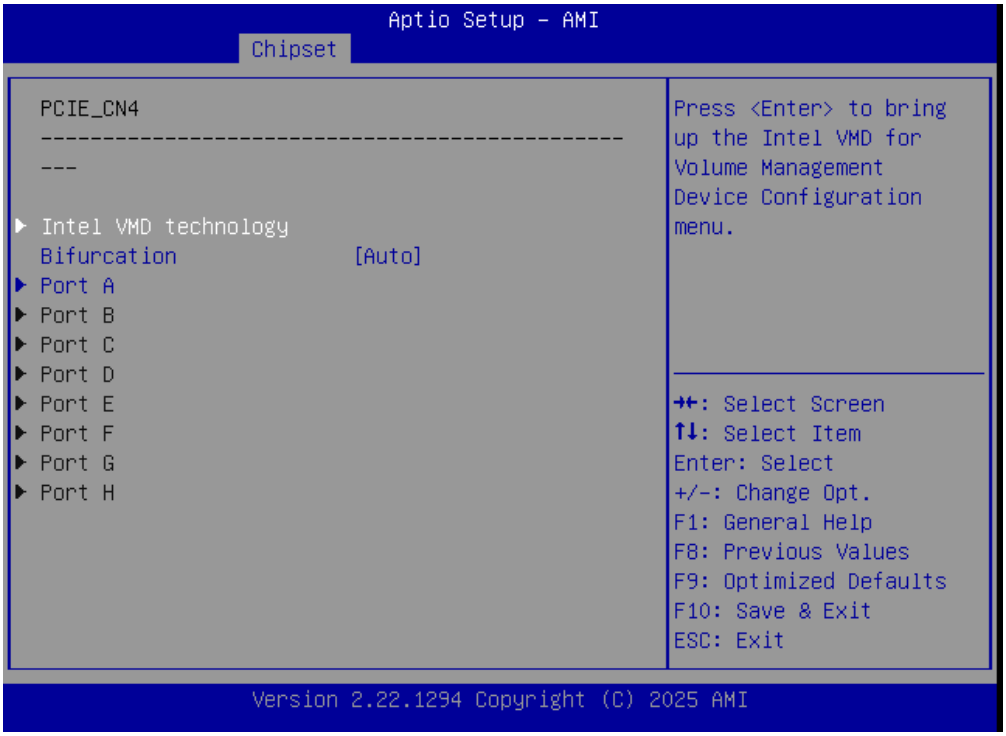


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	**Auto** x4x4x4x4 x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4.1.1.6 MCIO_CN3/MCIO_CN4

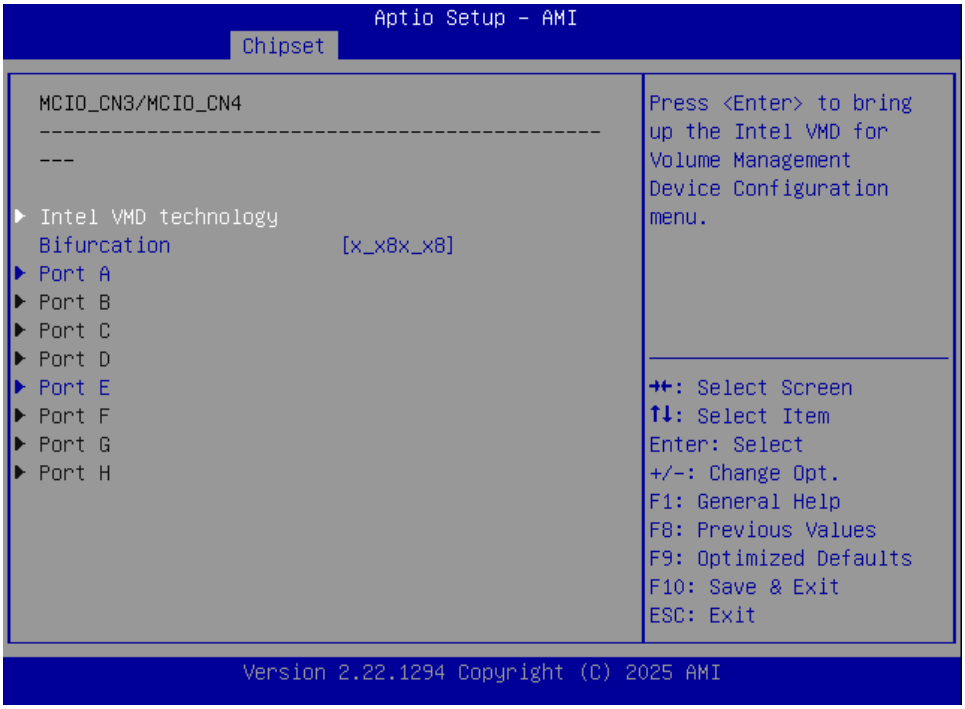


BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	**Auto** x4x4x4x4 x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2
Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	

7.4.1.1.7 PCIE_CN1

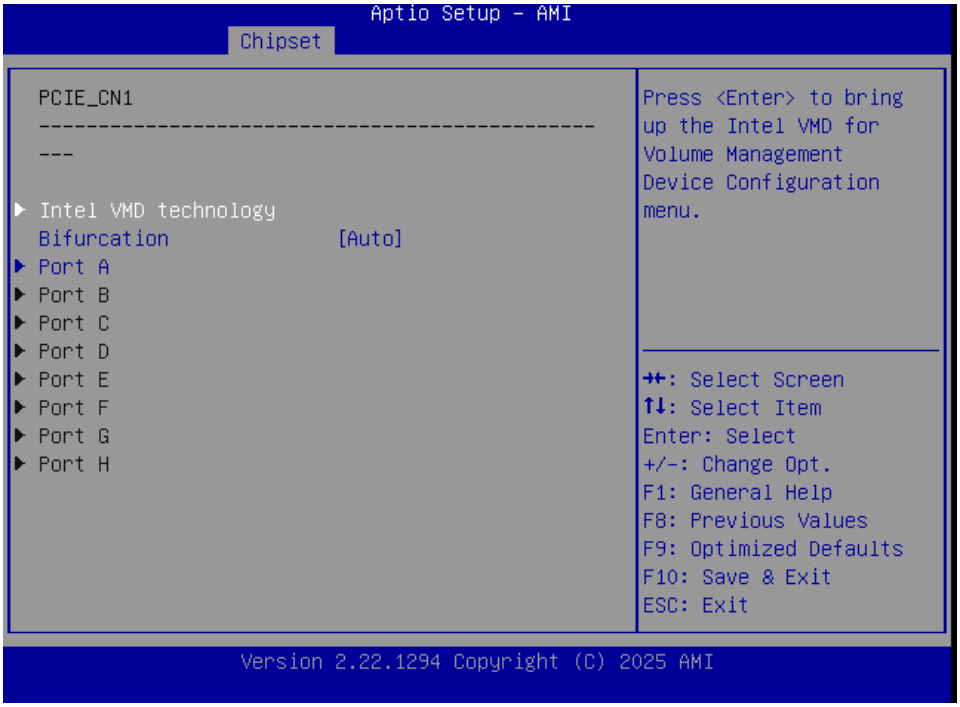


BIOS Item	Options	Description
Intel VMD technology	**Sub-Menu**	Press <Enter> to bring up the Intel VMD for Volume Management Device Configuration menu.
Bifurcation	**Auto** x4x4x4x4 x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2x2 x4x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s) Port Format: xGxExCxA The port can further be x2x2

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Port A	**Sub-Menu**	
Port B	**Sub-Menu**	
Port C	**Sub-Menu**	
Port D	**Sub-Menu**	
Port E	**Sub-Menu**	
Port F	**Sub-Menu**	
Port G	**Sub-Menu**	
Port H	**Sub-Menu**	


7.4.1.2 Memory Configurations

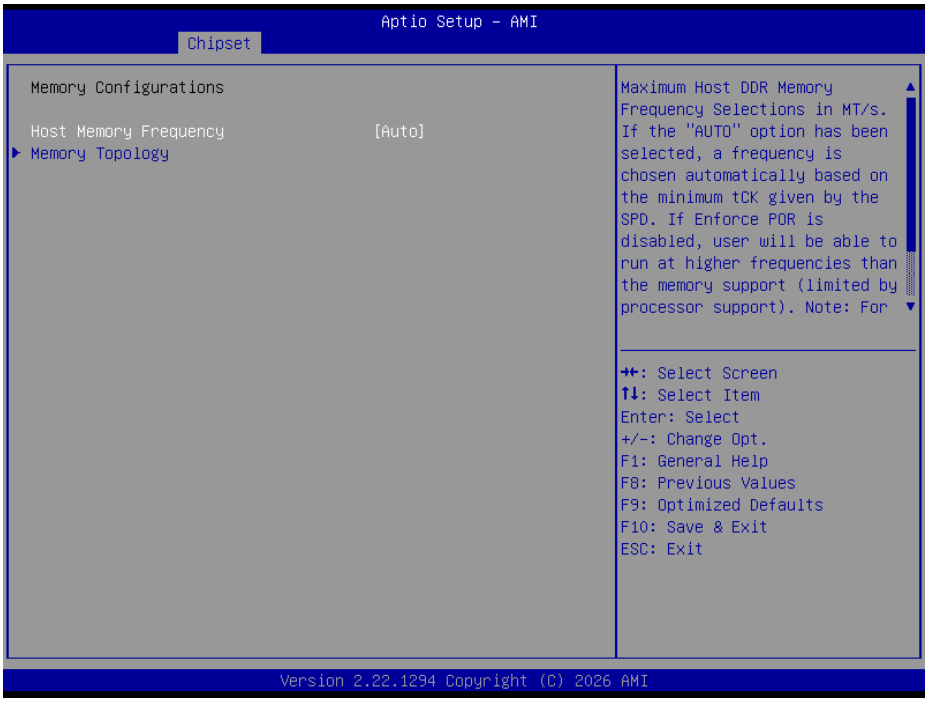

BIOS Item	Options	Description
Host Memory Frequency	**Auto** 4800 5200 5600 6000 6400	Maximum Host DDR Memory Frequency Selections in MT/s. If the "AUTO" option has been selected, a frequency is chosen automatically based on the minimum tCK given by the SPD. If Enforce POR is disabled, user will be able to run at higher frequencies than the memory support (limited by processor support). Note: For MRDIMM, DDR DRAM frequency is half of Host frequency
Memory Topology	**Sub-Menu**	Displays memory topology with Dimm population information

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4.1.2.1 Memory Topology

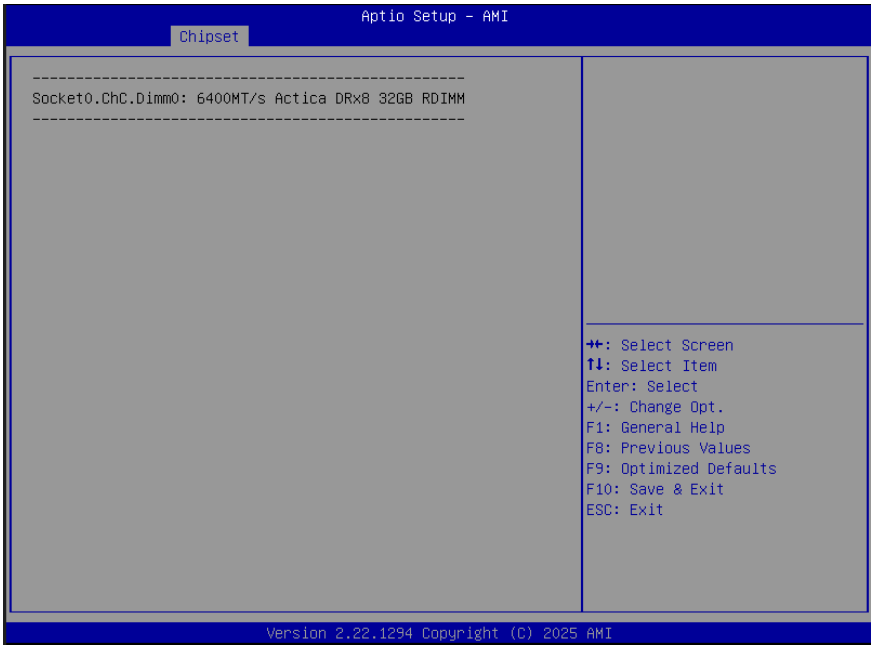


7.4.2 PCH Configurations



BIOS Item	Options	Description
SATA Configuration	**Sub-Menu**	SATA Device options Settings

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4.2.1 SATA Configuration

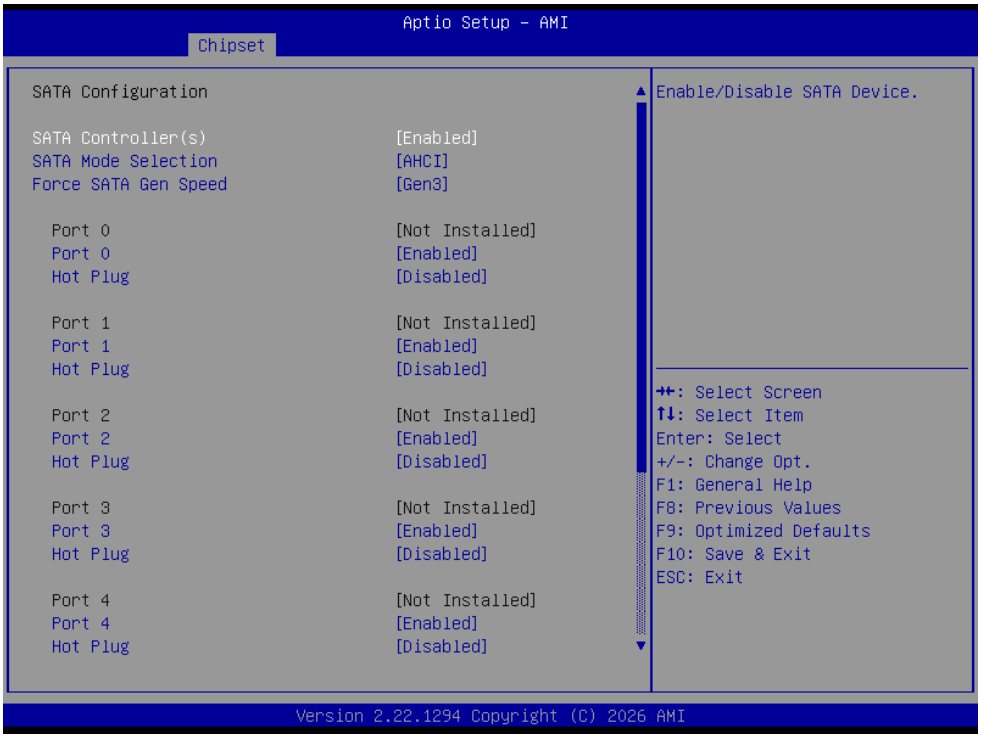


BIOS Item	Options	Description
SATA Controller(s)	**Enabled** Disabled	Enable/Disable SATA Device.
SATA Mode Selection	**AHCI** RAID	Determines how SATA controller(s) operate.
Force SATA Gen Speed	Gen1 Gen2 **Gen3**	Changes SATA Gen Speed for port.
Port 0	Not Installed	Software Preserve
Port 0	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 1	Not Installed	Software Preserve
Port 1	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 2	Not Installed	Software Preserve
Port 2	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 3	Not Installed	Software Preserve
Port 3	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 4	Not Installed	Software Preserve
Port 4	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 5	Not Installed	Software Preserve

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Port 5	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 6	Not Installed	Software Preserve
Port 6	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.
Port 7	Not Installed	Software Preserve
Port 7	**Enabled** Disabled	Enable or Disable SATA Port
Hot Plug	Enabled/**Disabled**	Designates this port as Hot Pluggable.


7.4.3 Chipset Security Configurations

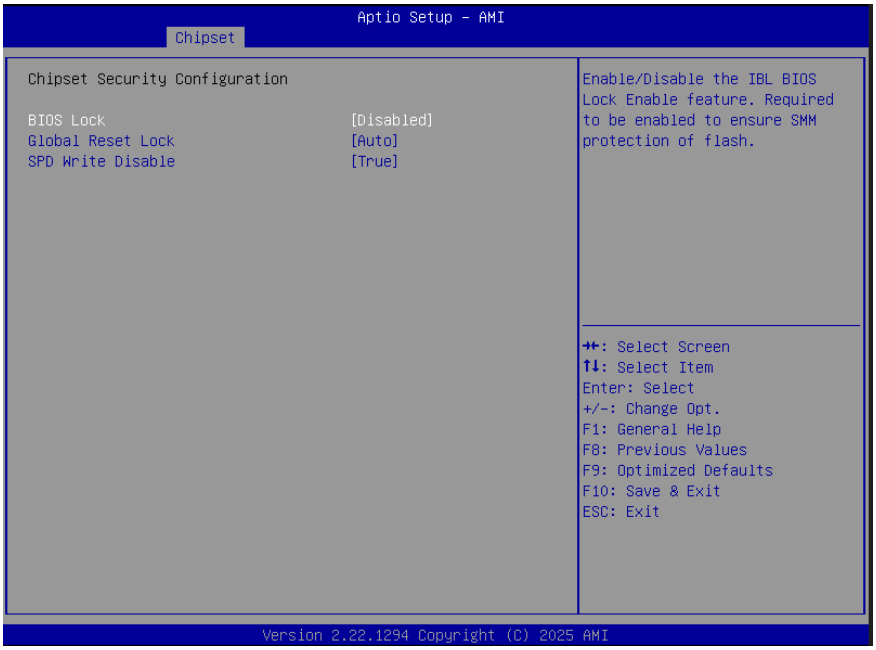

BIOS Item	Options	Description
BIOS Lock	Disabled **Enabled**	Enable/Disable the IBL BIOS Lock Enable feature. Required to be enabled to ensure SMM protection of flash.
Global Reset Lock	Disable Enable **Auto**	Enable/Disable locking global host reset
SPD Write Disable	**True** False	Enable/Disable setting SPD Write Disable. For security recommendations, SPD write disable bit must be set.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.5 Security Menu

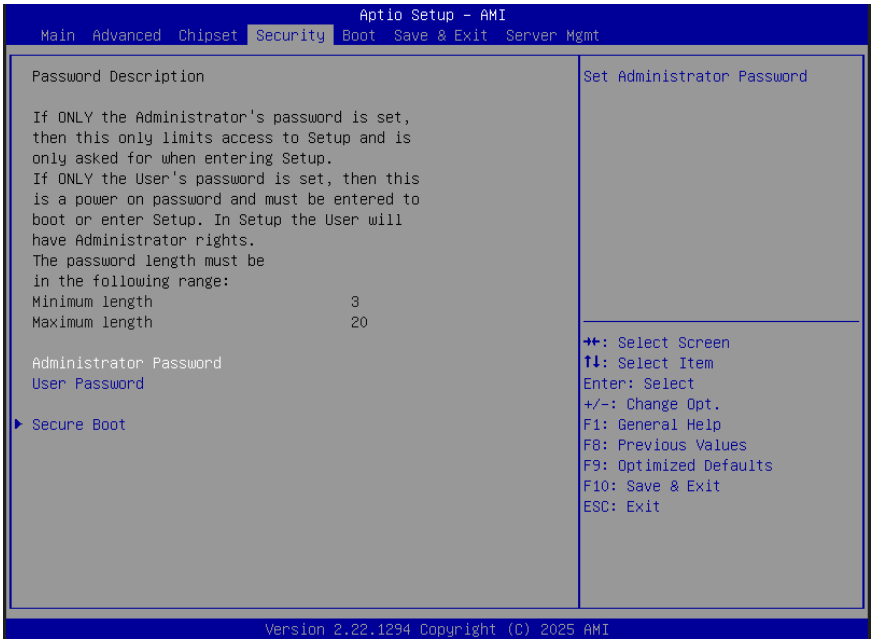


BIOS Item	Options	Description
Administrator Password	Enter to set password	Configure/Clear Administrator Password. When pressing enter, a menu will be popped up for creating new password. When password installed, press enter without inputting password, it will clear password.
User Password	Enter to set password	Configure/Clear User Password. When pressing enter, a menu will be popped up for creating new password. When password installed, press enter without inputting password, it will clear password.
Secure Boot	Sub-Menu	Secure Boot Menu. Default is Disabled.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.6 Boot Menu


This menu contains the settings for bootable devices in the system.

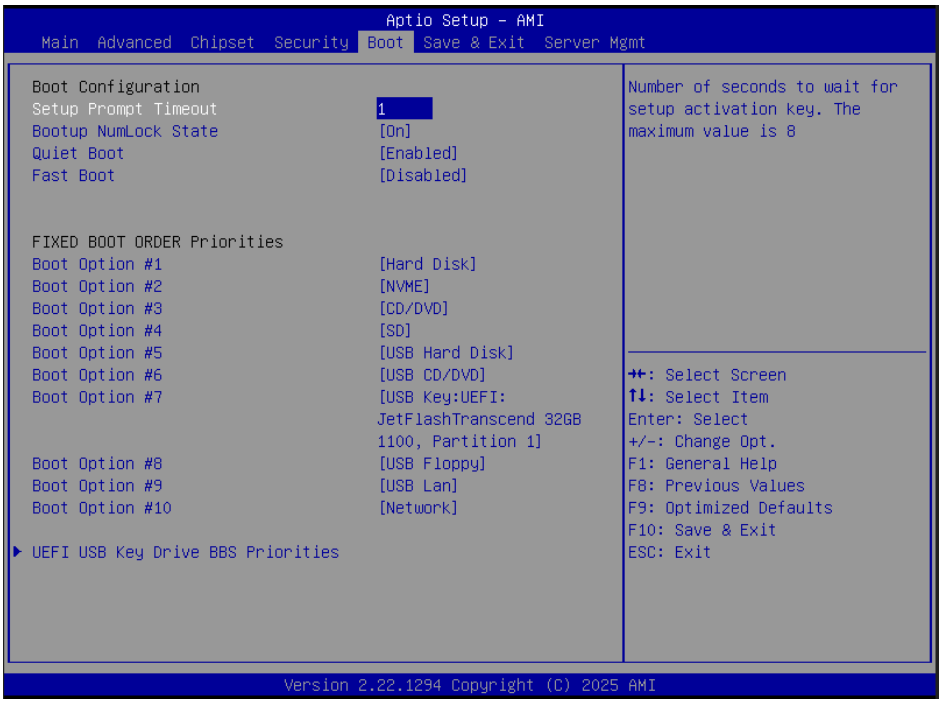

BIOS Item	Options	Description
Setup Prompt Timeout	**1**	Number of seconds to wait for setup activation
Bootup NumLock State	**On** Off	Select the keyboard NumLock state
Quiet Boot	**Enabled** Disabled	Enables or disables Quiet Boot option
Fast Boot	**Disable** Enable	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Boot Option #1 ~ #9	#1: Hard Disk #2: CD/DVD #3: SD #4: USB Hard Disk #5: USB CD/DVD #6: USB Key #7: USB Floppy #8: USB LAN #9: Network	For boot priority setting.
XXXX Drive BBS Priorities	**Sub-Menu**	When the bootable device is attached to system and found by BIOS, it will be listed at boot option #. If there are many devices with the same device type found, it can set priority among these devices through this sub-menu.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.7 Save & Exit Menu

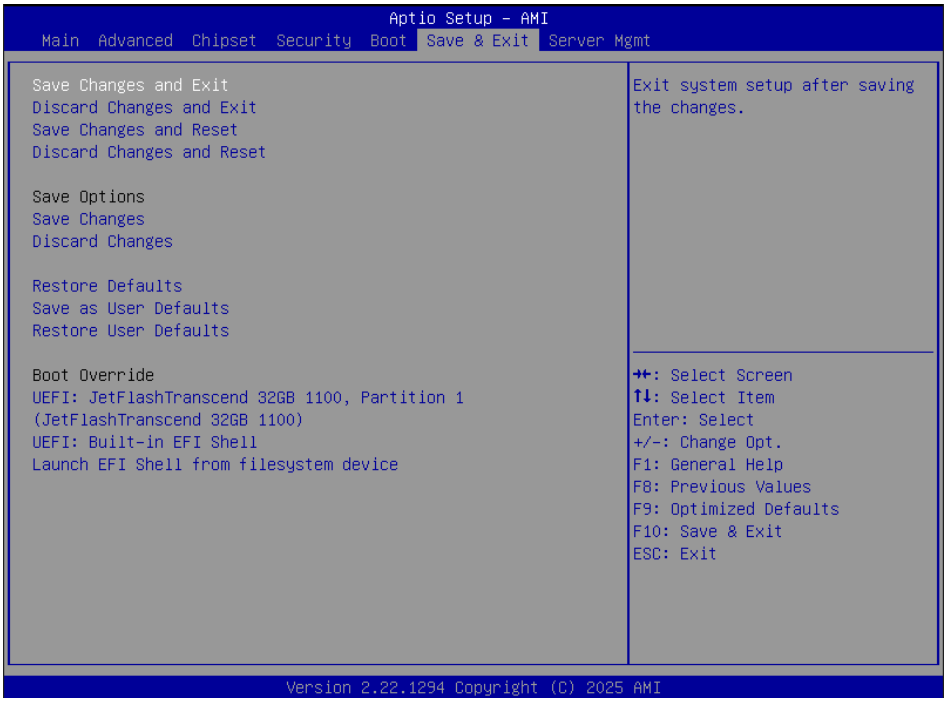

BIOS Item	Options	Description
Save Changes and Exit	**Enter**	Save changed settings and exit BIOS setup utility.
Discard Changes and Exit	**Enter**	Skip changed setting and exit BIOS setup utility.
Save Changes and Reset	**Enter**	Save all changed settings and let system do reset to boot system.
Discard Changes and Reset	**Enter**	Discard all changed settings and let system do reset to boot system.
Save Changes	**Enter**	Save all changed settings.
Discard Changes	**Enter**	Discard changes done so far to any of the setup options.
Restore Default	**Enter**	Load the default made when BIOS was built.
Save as User Default	**Enter**	Save all changed done so far as User Defaults.
Restore User Default	**Enter**	Load the default that user save as user defaults.
Boot Override	**Info-only**	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.8 Server Management

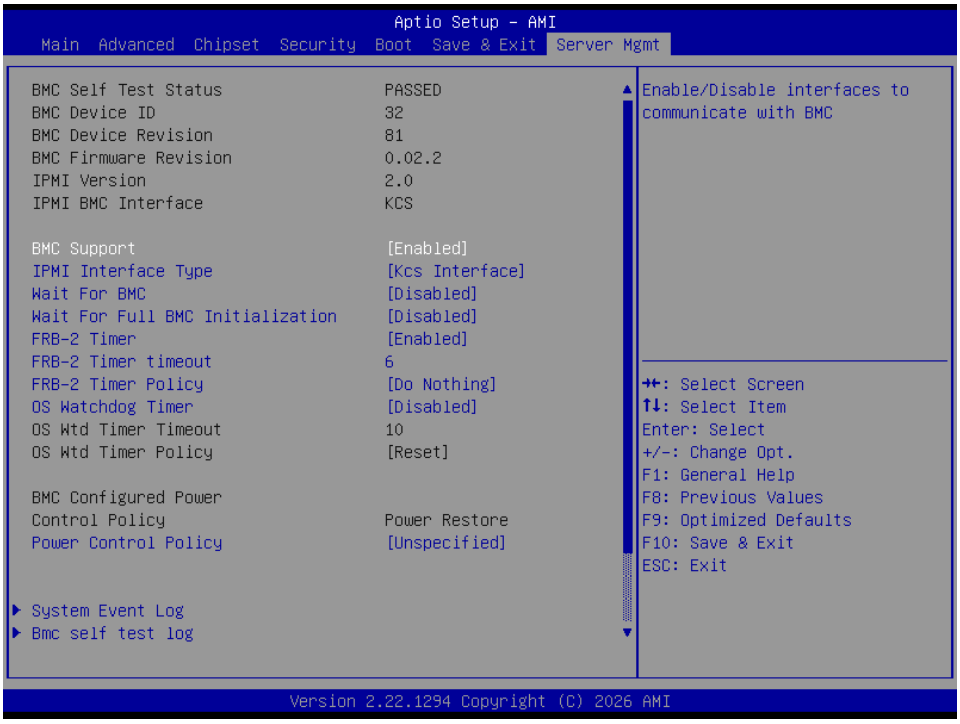


BIOS Item	Options	Description
BMC Support	**Enabled** Disabled	Enable/Disable interfaces to communicate with BMC.
IPMI Interface Type	**Kcs Interface**	Type of Interface to communicate BMC from HOST.
Wait For BMC	Enabled **Disabled**	Wait for BMC response for specified time out. In PILOT II, BMC starts at the same time when BIOS starts during AC power ON. It takes around 30 seconds to initialize HOST to BMC interfaces.
Wait For Full BMC Initialization	Enabled **Disabled**	Based on above rules, additional provide user can manually increase the waiting time on different platforms if necessary.
FRB-2 Timer	**Enabled** Disabled	Enable/Disable Fault Resilient Boot level 2 timer in POST stage.
FRB-2 Timer timeout	**6**	Enter value between 1 to 30 min for FRB-2 timer expiration.
FRB-2 Timer Policy	**Do Nothing** Reset Power Down Power Cycle	Configure how the system should respond if the FRB-2 timer expires. Not available if FRB-2 timer is disabled.
OS Watchdog Timer	Enabled **Disabled**	If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads. Helps determine that the OS successfully loaded or follows the OS Boot Watchdog Timer policy.
OS Wtd Timer Timeout	**10**	Enter the value between 1 to 30 min for OS Boot Watchdog Timer expiration. Not available if OS Boot Watchdog Timer is disabled.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

OS Wtd Timer Policy	Do Nothing **Reset** Power Down Power Cycle	Configure how the system should respond if the OS Boot Watchdog Timer expires. Not available if OS Boot Watchdog Timer is disabled.
BMC Configured Power Control Policy	**Power Restore**	
Power Control Policy	Do Not Power Up Last Power State Power Restore **Unspecified**	Configure how the system should respond if AC power is lost, reset not required as selected power policy will be set in BMC when policy is saved.

7.8.1 System Event Log

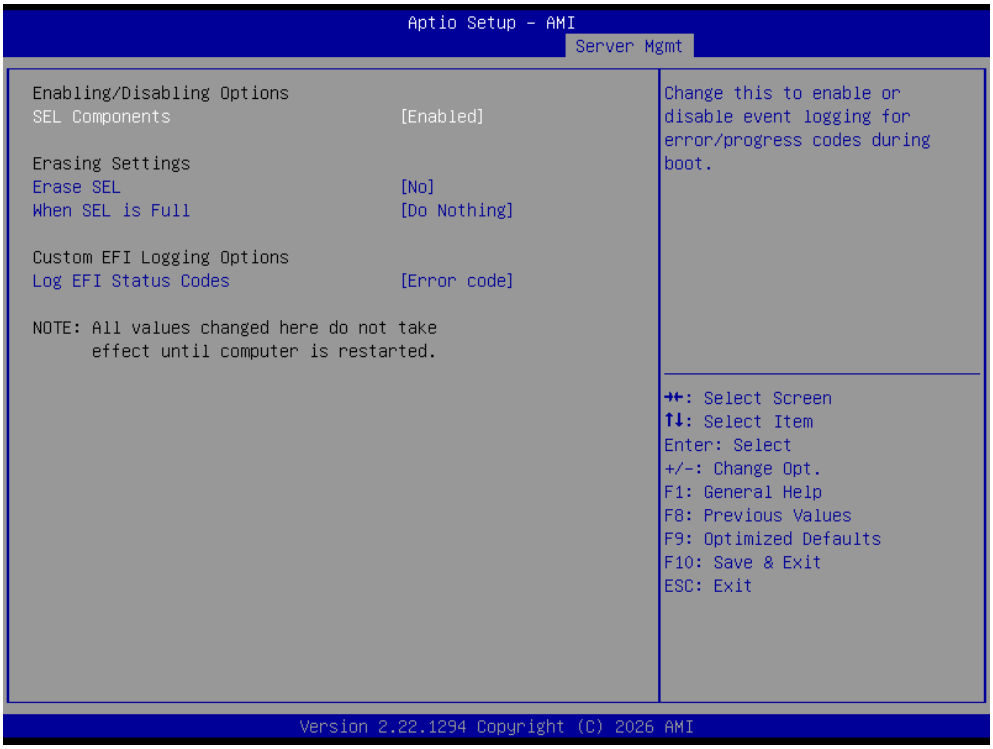


BIOS Item	Options	Description
SEL Components	**Enabled** Disabled	Enable/Disable event logging for error/progress codes during boot.
Erase SEL	**No** Yes, on next reset Yes, on every reset	Choose options for erasing SEL.
When SEL is Full	**Do Nothing** Erase Immediately Delete Oldest Record	Choose options for reactions to a full SEL.
Log EFI Status Codes	Disabled Both **Error code**	Choose options for logging EFI Status Codes.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Progress code	


7.8.2 BMC Self Test Log

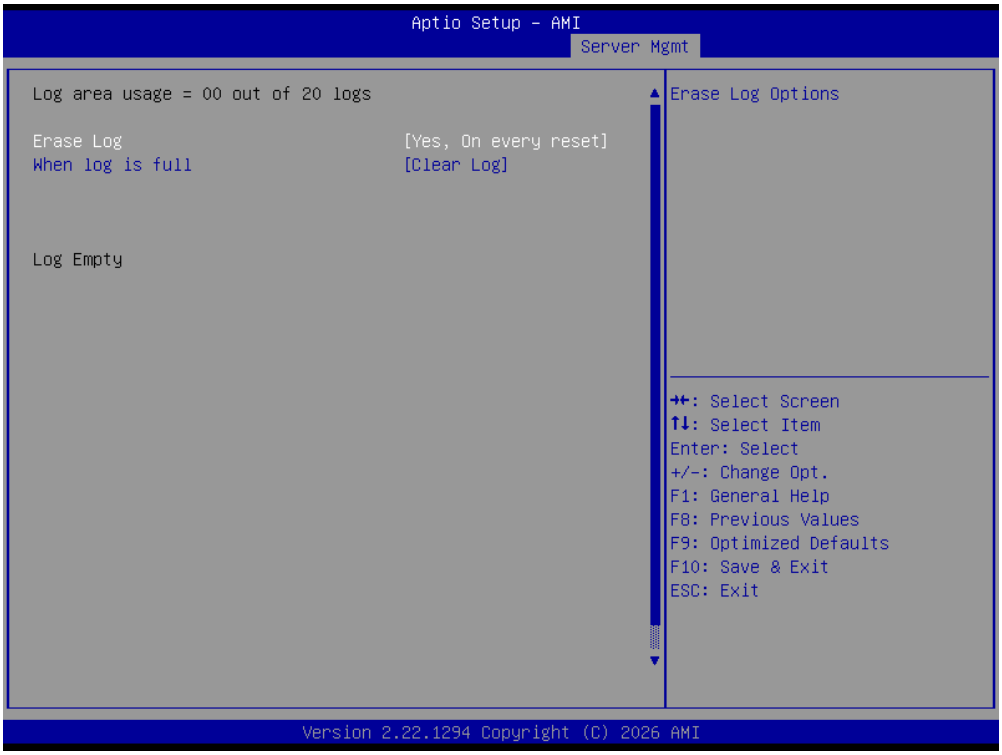

BIOS Item	Options	Description
Erase Log	**Yes, on every reset** No	Choose options for erasing logs.
When log is full	**Clear Log** Do not log any more	Choose options for reactions to a full log.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.8.3 BMC Network Configuration

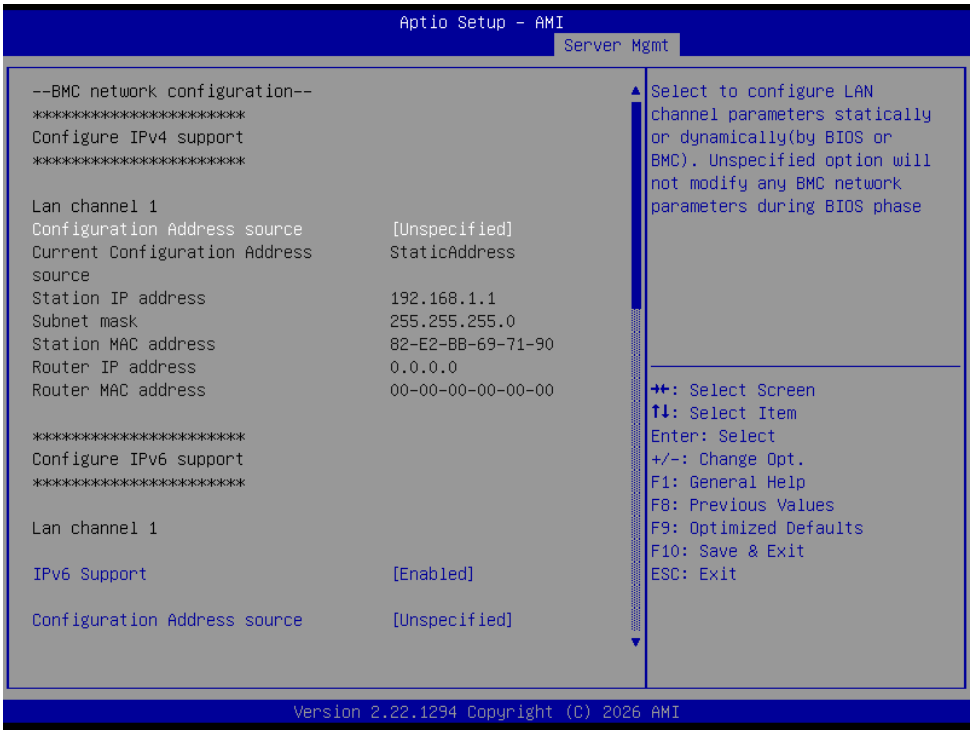

BIOS Item	Options	Description
IPv4 Configuration Address source	**Unspecified** Static DynamicBmcDhcp DynamicBmcNonDhcp	Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase.
IPv6 Support	**Enabled** Disabled	Enable/Disable LAN1 IPv6 Support
IPv6 Configuration Address source	**Unspecified** Static DynamicBmcDhcp DynamicBmcNonDhcp	Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase.
IPv6 Configuration Router Lan1 Address source	**Unspecified** Static DynamicBmcDhcp	Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase
VLAN Support	Enabled Disabled **Unspecified**	Enable VLAN Support to specify the 802.1q VLAN ID

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.9 View System Event Log

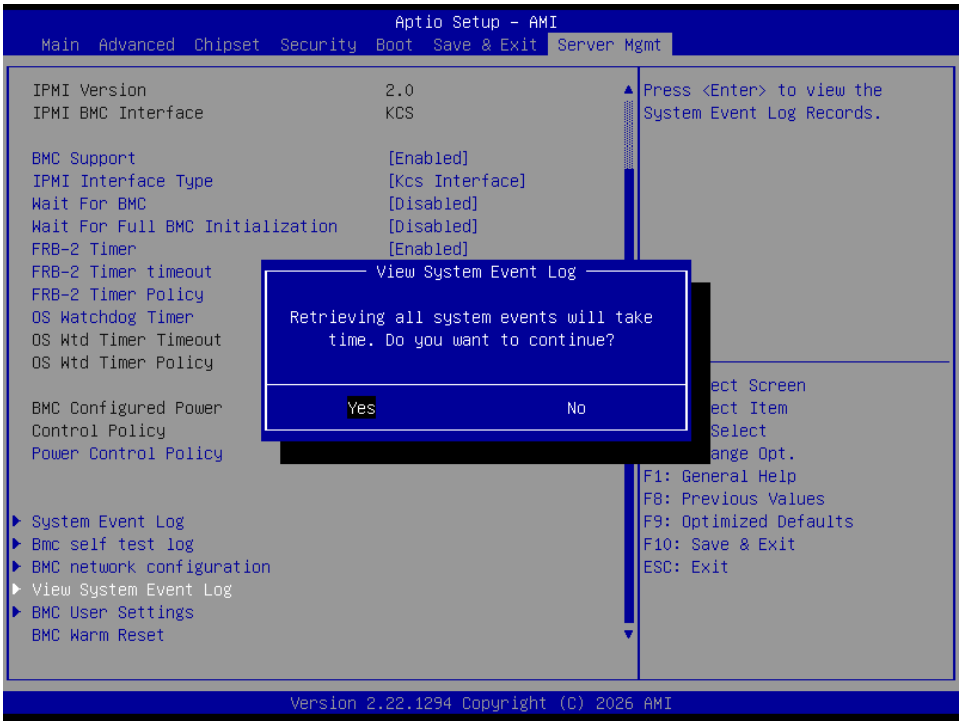

BIOS Item	Options	Description
View System Event Log	Yes No	Retrieving all system events will take time. Do you want to continue?

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


7.10 BMC User Settings

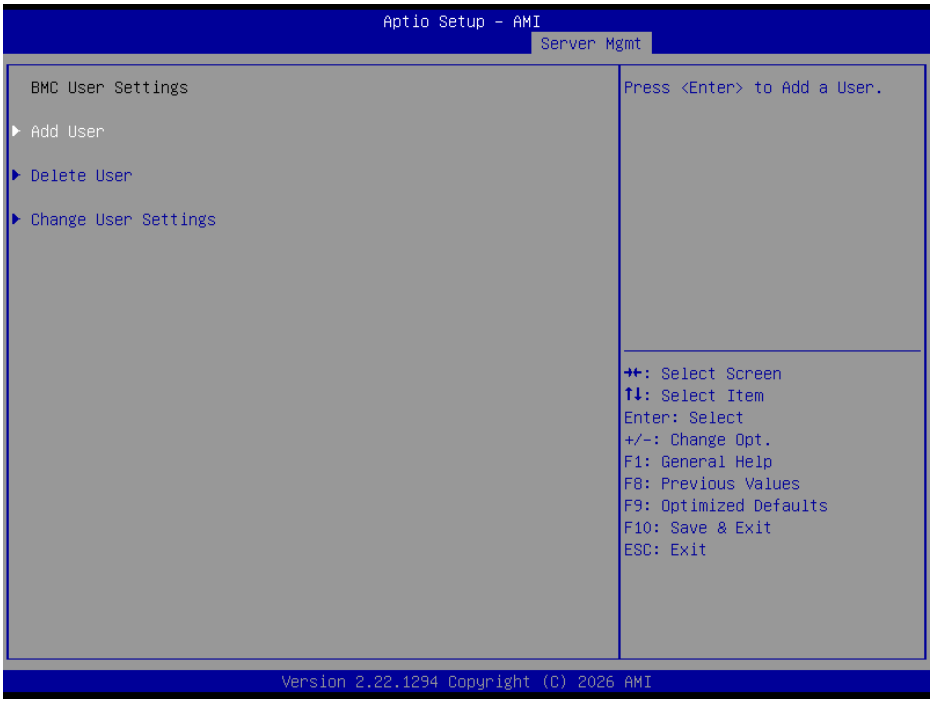

BIOS Item	Options	Description
Add User	Enter	Press <Enter> to Add a User.
Delete User	Enter	Press <Enter> to Delete a User.
Change User Settings	Enter	Press <Enter> to Change User Settings.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.11 BMC Warm Reset

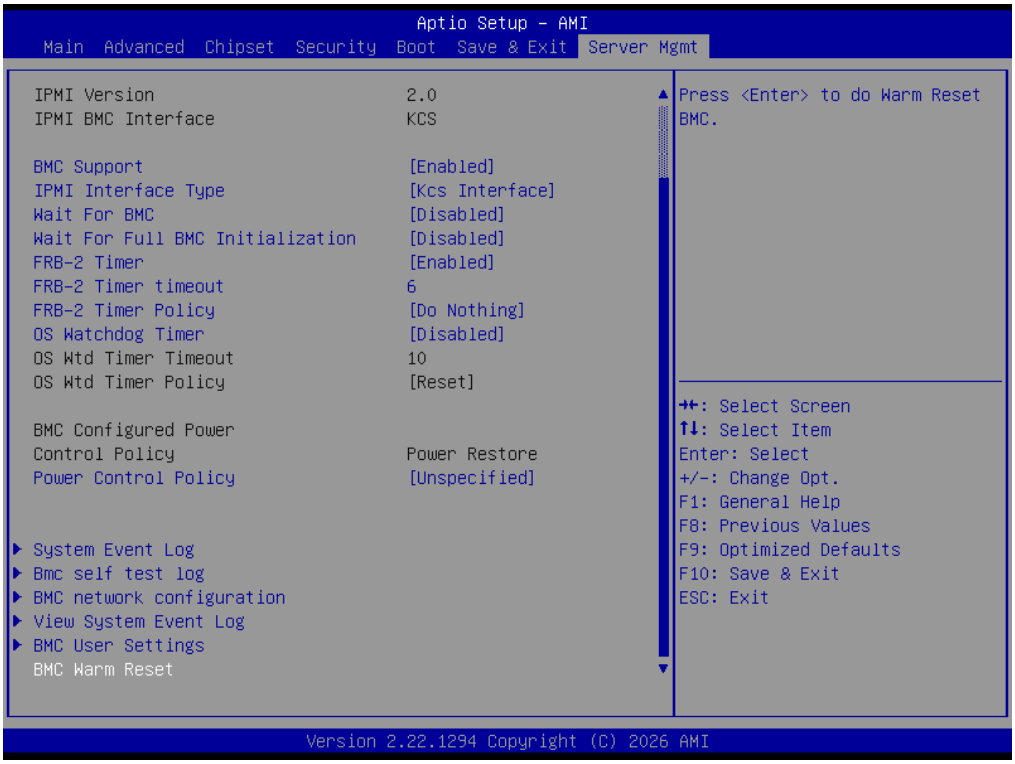

BIOS Item	Options	Description
BMC Warm Reset	Enter	Press <Enter> to do Warm Reset BMC.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8 BMC

This chapter provides detailed information on understanding, configuring, and managing the BMC.

Abbreviation	Description
BMC	Baseboard management controller
CLI	Command line interface
FRU	Field replaceable unit
GUI	Graphical user interface
IPMI	Intelligent platform management interface
IPU	Intelligence Processing Unit
NTP	Network time protocol
PSU	Power supply unit
SDR	Sensor data record
SEL	System event log
SNMP	Simple network management protocol
SoL	Serial over LAN

8.1 BMC Introduction

8.1.1 Software Interface

BMC (Baseboard Management Controller) is equipped with a multitude of interfaces, each designed to cater to different aspects of server management and monitoring. These interfaces provide comprehensive control and insight, ensuring administrators can effectively oversee server operations.

8.1.1.1 Web GUI

The product supports Web GUI access through HTTPS (port 443), with HTTP disabled by default for enhanced security. The Web GUI offers a management interface, enabling users to view system information, system events, and status, as well as to control the managed servers.

8.1.1.2 IPMI Interface

The IPMI (Intelligent Platform Management Interface) is a standardized interface used for remote monitoring and management of server systems. It provides a powerful set of tools for system administrators to control and monitor servers independently of the operating system.

Features of IPMI

Event Logging: Critical system events and hardware status changes are logged, facilitating efficient troubleshooting.

Security: IPMI supports secure interfaces and protocols for safe remote management.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1.1.3 Redfish

Redfish is a modern, RESTful API used for the management of servers, storage, and networking equipment in data centers and large-scale enterprise environments. It's designed to replace older, less efficient management interfaces with a standardized, scalable, and secure approach.

8.2 Web GUI Introduction

The Web GUI of BMC is a critical component that offers an intuitive and user-friendly platform for managing and monitoring server operations remotely. This web-based interface ensures administrators can efficiently interact with the server's BMC from anywhere.

8.2.1 Web Login

Web login to the BMC interface is a straightforward process designed to provide secure and easy access to server management tools.


8.2.1.1 Environment Setup

Before logging into the BMC's Web GUI, certain environmental prerequisites must be met:

- Network Configuration
  Ensure the server and the device used for access are on the same network or have a route to connect.

- Browser Requirements:
  Verify that the web browser used is compatible with the BMC's Web GUI. Commonly supported browsers include Chrome, Firefox, Safari, and Edge.

- BMC IP Address
  You can setup the BMC IP address from the server's BIOS interface or ipmitool command listed in the section 5.3 BMC LAN Configuration. To setup from BIOS interface, navigate to the "Server Mgmt" tab and select the "BMC network configuration" option.

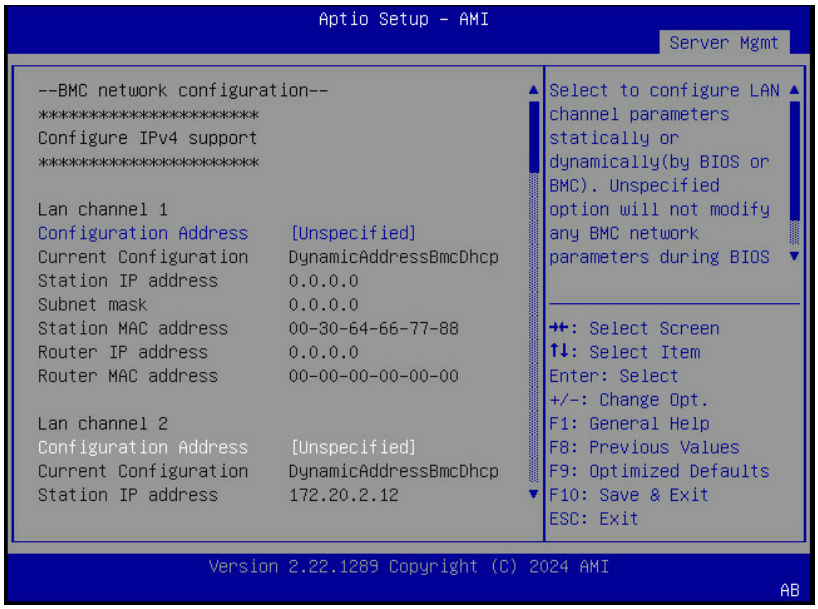


- Security Considerations
  For security reasons, access to the BMC Web GUI is exclusively through HTTPS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.1.2 User Sign-In

- Accessing the Login Page
  Open your web browser and type in the BMC's IP address, obtained from the BIOS, preceded by "https://". For example, https://[BMC-IP-Address].

This action will direct you to the BMC Web GUI login page.

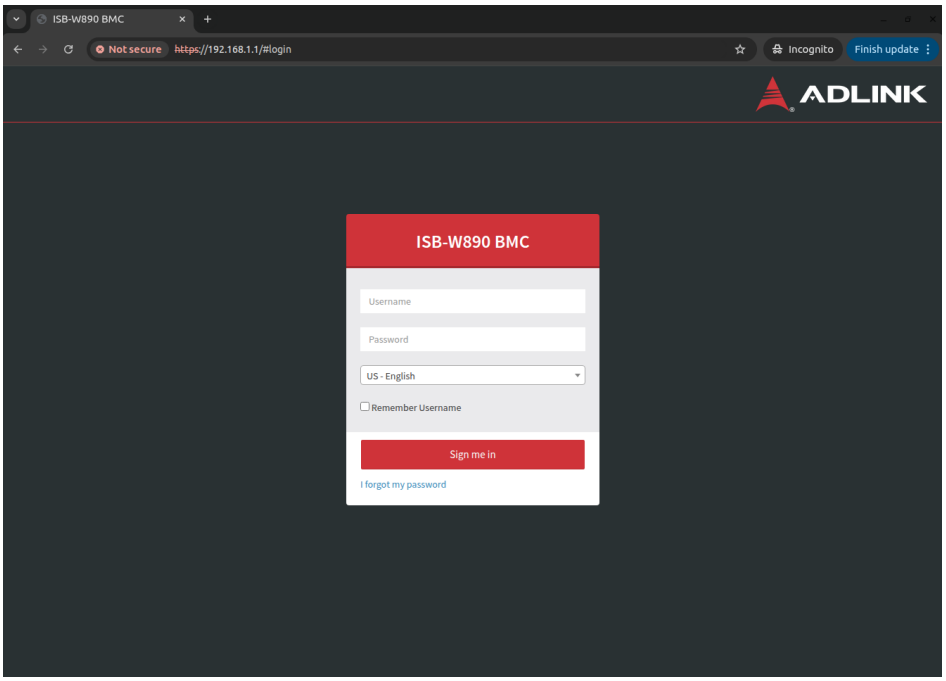

- Selecting Language
  Below the login fields, there is an option to select your preferred language.

  The BMC Web GUI supports multiple languages, including Simplified Chinese, Traditional Chinese, and English.

  Choose your desired language from the dropdown menu before logging in.

- Entering Login Credentials
  On the login page, you will be prompted to enter your username and password.

  The default username: admin

  The default password: admin

  After entering these credentials, click the "**Sign me in**" button to proceed.

- Other fields
  Remember Username: Check this option to remember your login Username. If you select this option, the browser will save your credentials internally in its memory, and when you open that site the next time, it will auto-fill Username for you.


  I Forgot my Password: If you forget your password, you can generate a new password using this link.

  .

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.2 Web Interface Overview


This section provides an overview of the BMC's Web Interface, emphasizing the functionalities and information displayed on the main interface. The primary purpose of the main interface is to offer a quick and comprehensive understanding of the current status of the BMC.

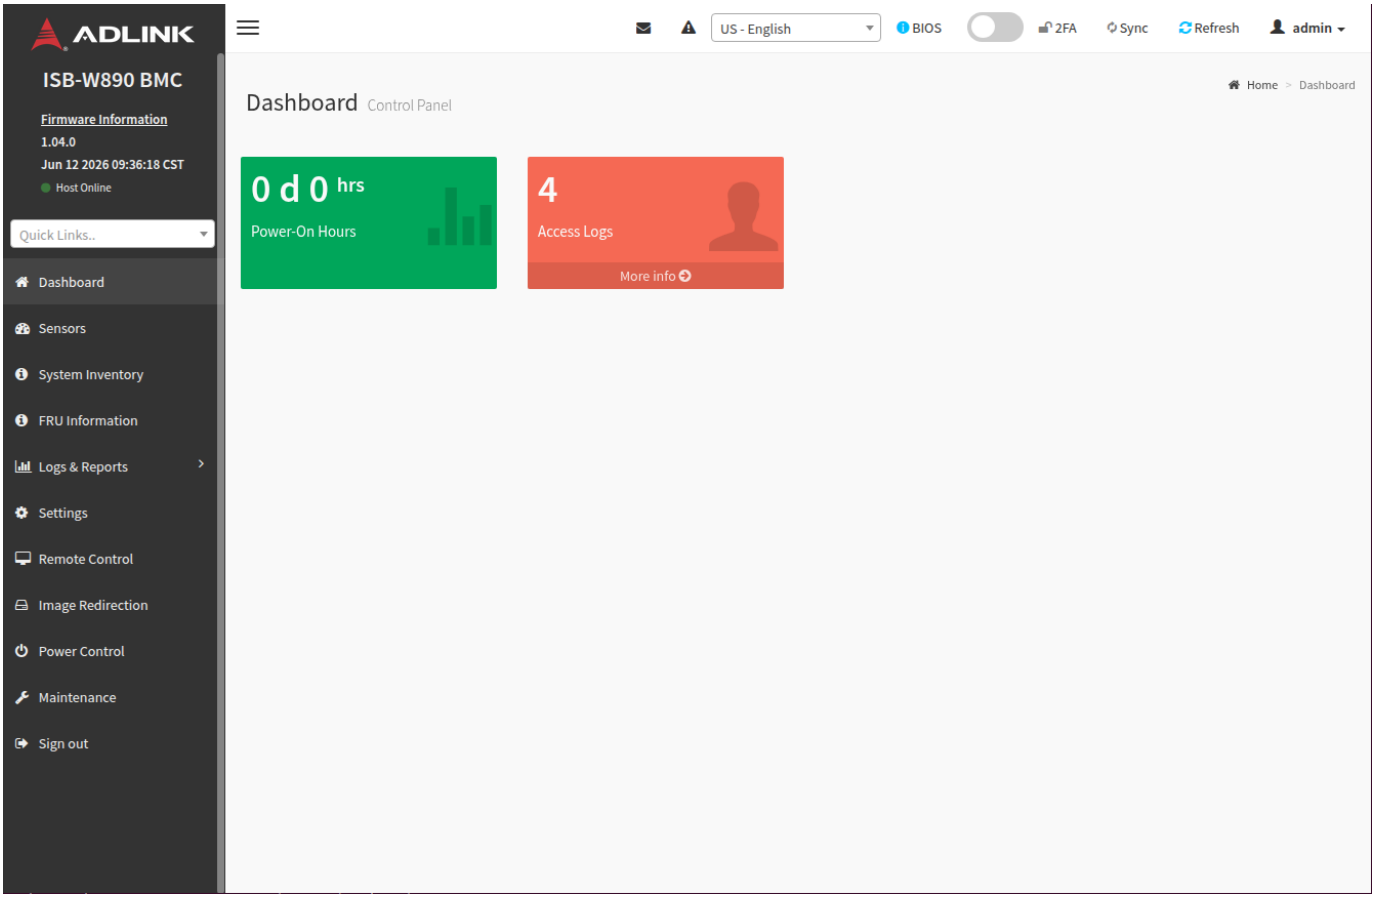


The BMC Web GUI is primarily divided into three sections, each offering specific functionalities and information crucial for server management.

1. Top Menu Bar

Functionality: The top menu bar is designed for receiving and viewing server messages, setting BMC global configurations, and accessing the BIOS configuration interface. This area serves as a quick access point for important notifications and system adjustments.


Function	Icon	Detailed Description
Message		Display the messages received.
Notification		Display the notifications received.
Language		Set Board Language.
Bios interface		Open the new window or popup to configure the BIOS settings.
Dashboard Expansion		Show/Hide limited Dashboard Widgets.
2FA		Enable/Disable Two Factor Authentication.
Synchronization		On/Off to synchronize with latest Sensor and Event Log updates.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Function	Icon	Detailed Description
Refresh		Reload the current page.
Profile		Set the User Profile.

2. Server Version Information

This section of the interface displays the current version information of various server components, listed in the following order:

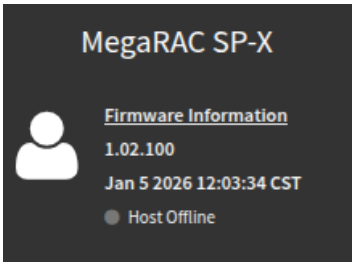

- BMC Version Information
- BMC Image Build Date and Time
- Chassis Power Status

The version information window provides a quick overview of the server's hardware and firmware status, ensuring that administrators are immediately aware of the current versions and operational status.

The Chassis Power Status will be displayed as Host Online / Host Offline. To Change the Power Control Status, click Host Online / Host Offline link.

3. Function Menu bar


The menu bar displays the following.

- ✧ Dashboard
- ✧ Sensor
- ✧ System Inventory
- ✧ FRU Information
- ✧ Logs & Reports
- ✧ Settings
- ✧ Remote Control
- ✧ Image Redirection
- ✧ Power Control
- ✧ Maintenance
- ✧ Sign out

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.3 Server Information

8.2.3.1 FRU Information

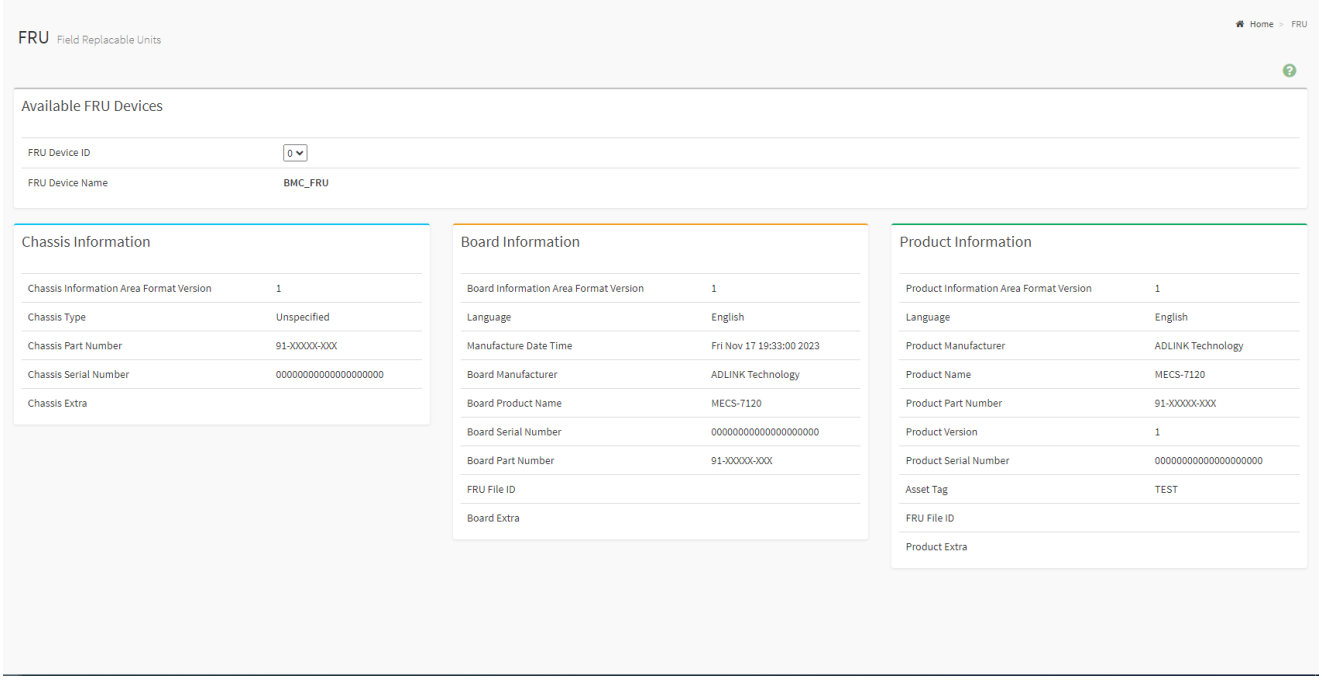

The FRU (Field Replaceable Unit) Information interface in the BMC Web GUI is accessed by clicking on the "FRU Information" option in the left-hand function bar. This feature allows users to view electronic label information for the motherboard and other components, providing detailed FRU data.

Structure and Functionality of the FRU Information Interface. The FRU information is divided into four main sections, each offering specific insights:

Information Category	**Description**
Available FRU Devices	Details about each FRU device: FRU Device ID FRU Device Name
Chassis Information	Information related to the server's chassis, featuring: Chassis Information Area Format Version Chassis Type Chassis Part Number Chassis Serial Number Chassis Extra
Board Information	Data about the server's mainboard, encompassing: Board Information Area Format Version Language Manufacture Date Time Board Manufacturer Board Product Name

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Information Category	Description
	Board Serial Number Board Part Number FRU File ID Board Extra
Product Information	Comprehensive details about the product, including: Product Information Area Format Version Language Product Manufacturer Product Name Product Part Number Product Version Product Serial Number Asset Tag FRU File ID Product Extra

8.2.3.2 Sensor Information

The Sensor Information panel in the BMC Web GUI provides a detailed overview of the current status and readings from various sensors within the server. Accessing and understanding this data is essential for maintaining the server's health and performance.

- Accessing the Sensor Information Panel
- Navigating to the Panel
- Click on the "Sensor" button located on the left side of the BMC Web GUI


8.2.3.2.1 Introduction to Sensor Interface

This will lead you to the Sensor Information interface, which is central for real-time sensor status monitoring.

Sensor Information Interface Layout

The Sensor Information interface is divided into four distinct sections, each providing specific types of sensor data:

1. **Critical Sensors**

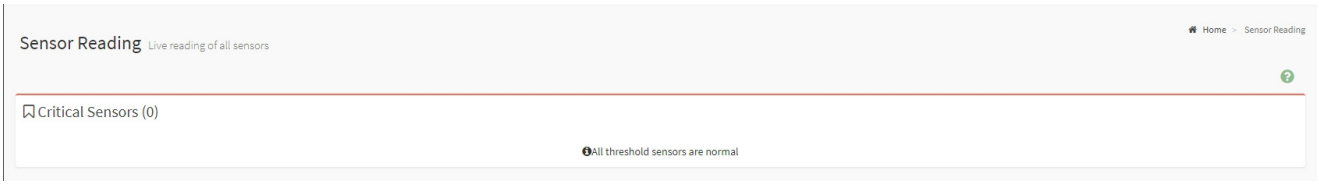


This section displays the status of critical sensors, highlighting if any sensor has exceeded its threshold or is showing abnormal readings.

It's a focal point for quickly identifying potential issues that require immediate attention.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. Discrete Sensor States

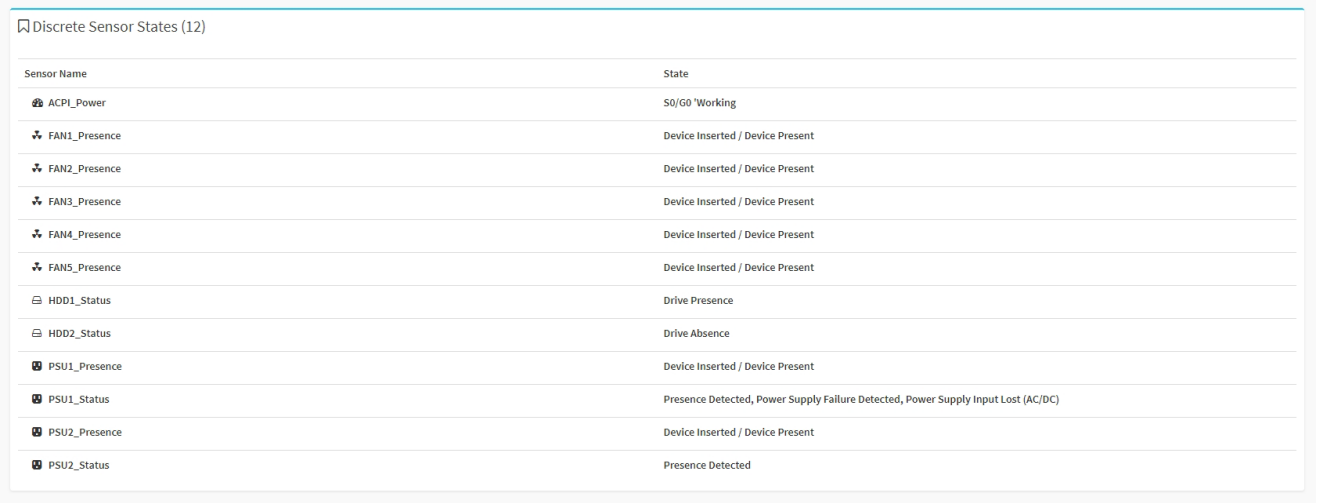

Discrete Sensor States (12)

Sensor Name	State
ACPI_Power	S0/G0 'Working
FAN1_Presence	Device Inserted / Device Present
FAN2_Presence	Device Inserted / Device Present
FAN3_Presence	Device Inserted / Device Present
FAN4_Presence	Device Inserted / Device Present
FAN5_Presence	Device Inserted / Device Present
HDD1_Status	Drive Presence
HDD2_Status	Drive Absence
PSU1_Presence	Device Inserted / Device Present
PSU1_Status	Presence Detected, Power Supply Failure Detected, Power Supply Input Lost (AC/DC)
PSU2_Presence	Device Inserted / Device Present
PSU2_Status	Presence Detected

Shows the status of discrete sensors, particularly focusing on those that are offline.

This part is crucial for identifying sensors that are not functioning or are disconnected.

3. Normal Sensors

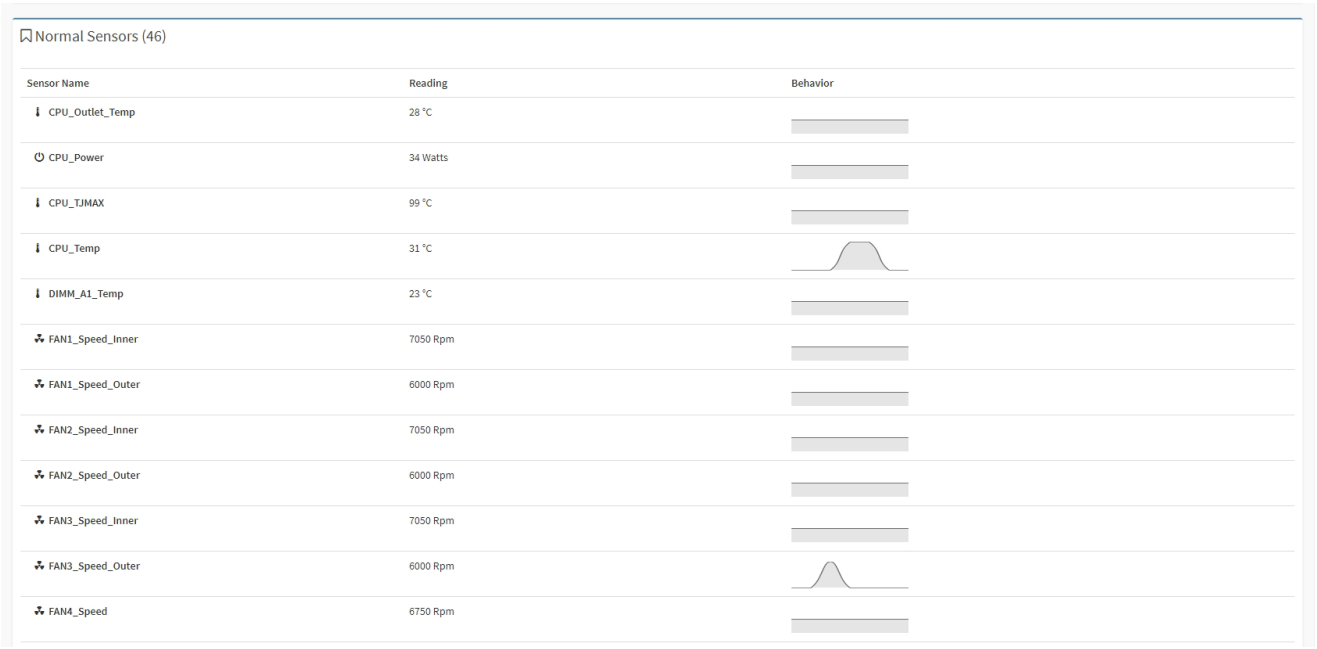
Normal Sensors (46)


Sensor Name	Reading	Behavior
CPU_Outlet_Temp	28 °C	
CPU_Power	34 Watts	
CPU_TJMAX	99 °C	
CPU_Temp	31 °C	
DIMM_A1_Temp	23 °C	
FAN1_Speed_Inner	7050 Rpm	
FAN1_Speed_Outer	6000 Rpm	
FAN2_Speed_Inner	7050 Rpm	
FAN2_Speed_Outer	6000 Rpm	
FAN3_Speed_Inner	7050 Rpm	
FAN3_Speed_Outer	6000 Rpm	
FAN4_Speed	6750 Rpm	

Displays the actual readings from various sensors.

These readings include data such as temperature, fan speeds, voltage levels, and more.

The section provides a comprehensive view of the real-time operating conditions of the server.

4. Disabled Sensors

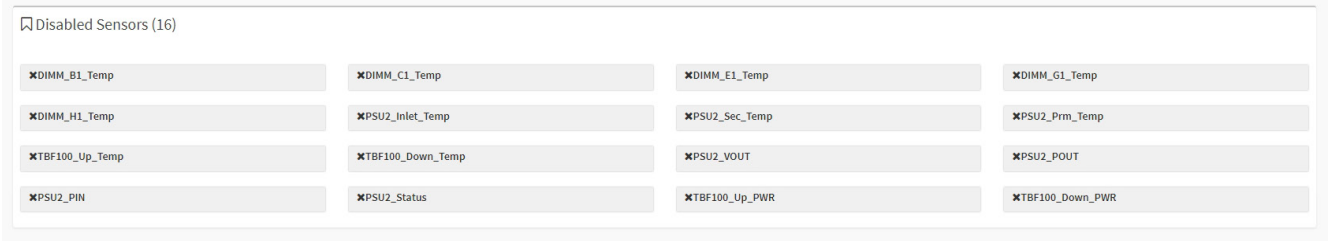
Disabled Sensors (16)

DIMM_B1_Temp	DIMM_C1_Temp	DIMM_E1_Temp	DIMM_G1_Temp
DIMM_H1_Temp	PSU2_Inlet_Temp	PSU2_Sec_Temp	PSU2_Prm_Temp
TBF100_Up_Temp	TBF100_Down_Temp	PSU2_VOUT	PSU2_POUT
PSU2_PIN	PSU2_Status	TBF100_Up_PWR	TBF100_Down_PWR

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Lists sensors that are currently not in operation or are disabled.

This section helps in identifying which sensors are not contributing to the monitoring process and may need reactivation or maintenance.

8.2.3.2.2 Detailed Sensor Information

Accessing and Viewing Sensor Details. To view detailed information about a specific sensor, simply click on the desired sensor listed in the Sensor Information panel. This action will lead you to a dedicated detail page for that sensor.

On this detailed page, extensive information about the selected sensor is displayed, including its current operational status, various parameters, and any unique specifications.

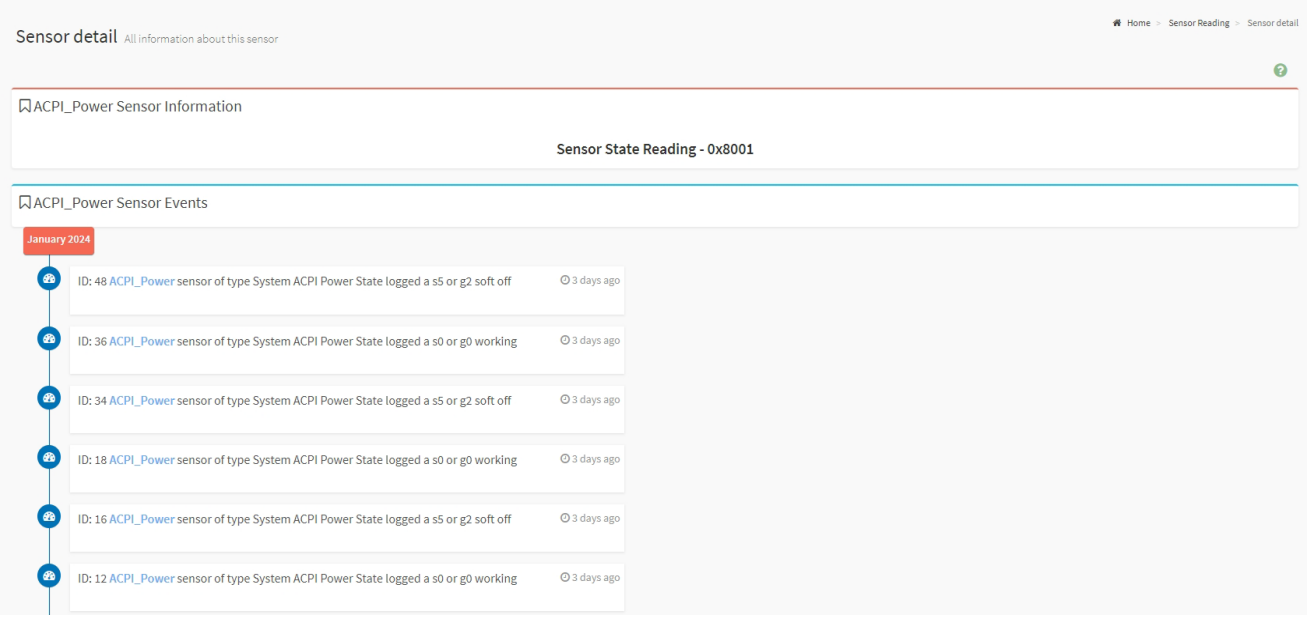

Customizing Sensor Thresholds:

For general sensors, the detailed interface provides the capability to adjust various sensor threshold parameters. Administrators have the flexibility to modify several threshold levels including:

Upper Non-Recoverable

Upper Critical

Upper Non-Critical

Lower Non-Critical

Lower Critical

Lower Non-Recoverable

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Practical Application:


Adjusting these thresholds is vital for preemptive alerts and ensuring that sensors are operating within safe and optimal ranges.



If the synchronization button in the top menu bar is active, accessing the detail interface for a general sensor will enable a graphing feature. This feature provides a line graph depicting the sensor's data over time. It serves as a visual tool for quickly assessing the sensor's performance.

8.2.3.2.3 Modifying Sensor Thresholds

Accessing Sensor Thresholds Modification Interface. In the Sensor Details interface, locate and click on the "Change Thresholds" button. This action will redirect you to the Sensor Thresholds interface.

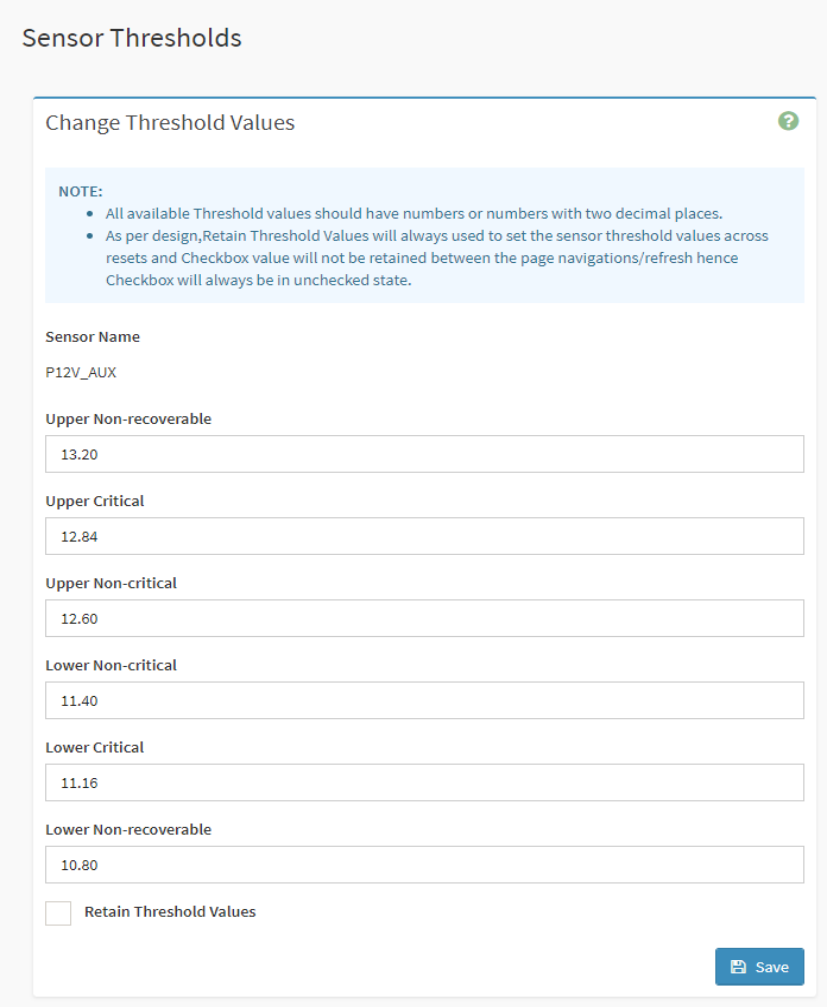

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Sensor Thresholds Interface:

- The Sensor Thresholds interface displays each sensor's name along with its threshold values.
- Users can view and modify thresholds for each sensor, including upper and lower warning and critical limits.
- Thresholds not applicable or unavailable for a sensor are marked as "NA".

Retaining Threshold Values

At the bottom of the interface, a "**Retain Threshold Values**" checkbox is provided.

Note: *If this option is not selected, threshold adjustments will be temporary, reverting to default upon BMC reboot or power loss.*


8.2.4 Server Information

BMC provides various logging functions that are crucial for system diagnosis, monitoring, and security. Logs are divided into different types, each with a specific purpose.

Accessing BMC Logs

To view these logs, navigate to the BMC web interface:

- From the left-side functional panel, click on "Logs & Reports".
- A dropdown menu will appear, listing the following types of logs available for viewing:

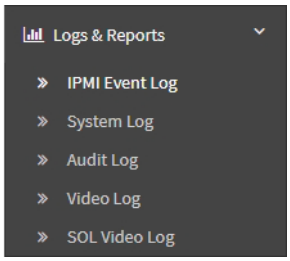


- IPMI Event Log
- System Log
- Audit Log
- Video Log
- SOL Video Log

8.2.4.1 IPMI Event Log

This page displays the list of event logs occurred by the different sensors on this device. Double click on a record to see the details of that entry. You can use the sensor type or sensor name filter options to view those specific events or you can also sort the list of entries by clicking on any of the column headers.

To open the Event Log page, click **Logs & Reports > Event Log** from the menu bar. A sample screenshot of Event Log page is shown below.

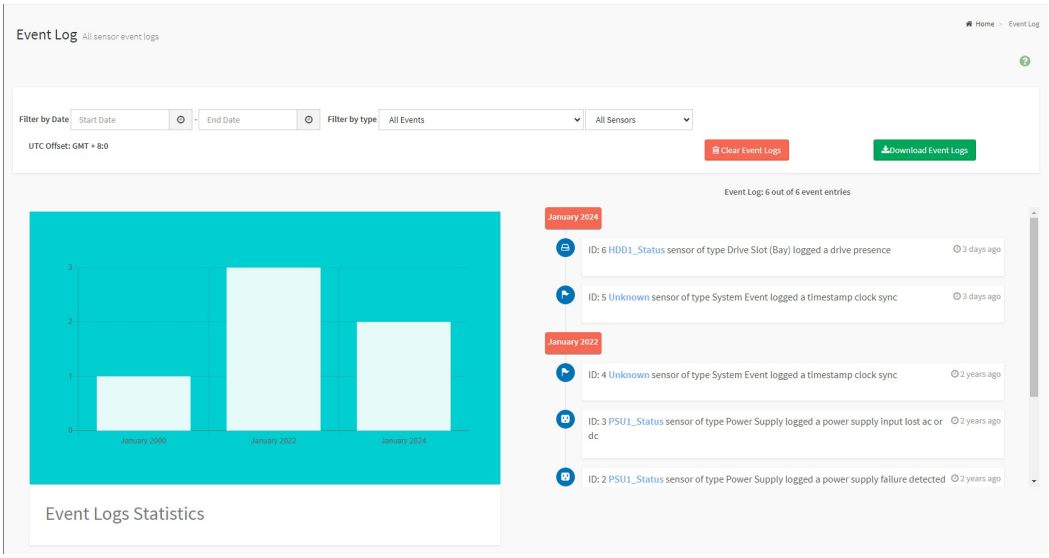

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The Event Log page consists of the following fields:

Filter By Date: Filtering can be done by selecting Start Date and End Date using Calendar.

Note: *Date should be in MM/DD/YYYY format. By default, all log time will be displayed in BMC time zone.*

Filter By Type: The category could be either All Events, System Event Records, OEM Event Records, BIOS Generated Events, SMI Handler Events, System Management Software Events, System Software - OEM Events, Remote Console Software Events, Terminal Mode Remote Console software Events.

Note: *Once the Filter By Date and Filter type are selected, the list of events will be displayed with the Event ID, Time Stamp, Sensor Type, Sensor Name and Description.*

UTC Offset: Displays the current UTC Offset value based on which event Time Stamps will be updated. Navigational arrows can be used to selectively access different pages of the Event Log.

Event Log Statistics: Displays the statistical graph for the selected date.

Clear Event Logs: To delete all the event logs.

Download Event Logs: To download the event logs.

Procedure

1. From the Filter ByDate field, select the time period by Start Date and End Date using Calendar for the event categories. The events will be displayed according to the selected date.
2. From the Filter By Type field, select the Type of the event and Sensor name to view the events for the date. The events will be displayed based on the selected time period.
3. To clear all events from the list, click Clear All Event Logs.
4. To download the event logs, click Download Event Logs.


Note: *When Clear All Event Logs action is performed, there might be some events present even after clearing those events are generated after performing clear operation which can be verified using its timestamp.*

8.2.4.2 System Log

System Log page will display all the system events occurred in this device that has been already configured.

Note: *Logs have to be configured under **Settings > Log Settings** in order to display any entries.*

To open the Event Log page, click **Logs & Reports > System Log** from the menu bar.

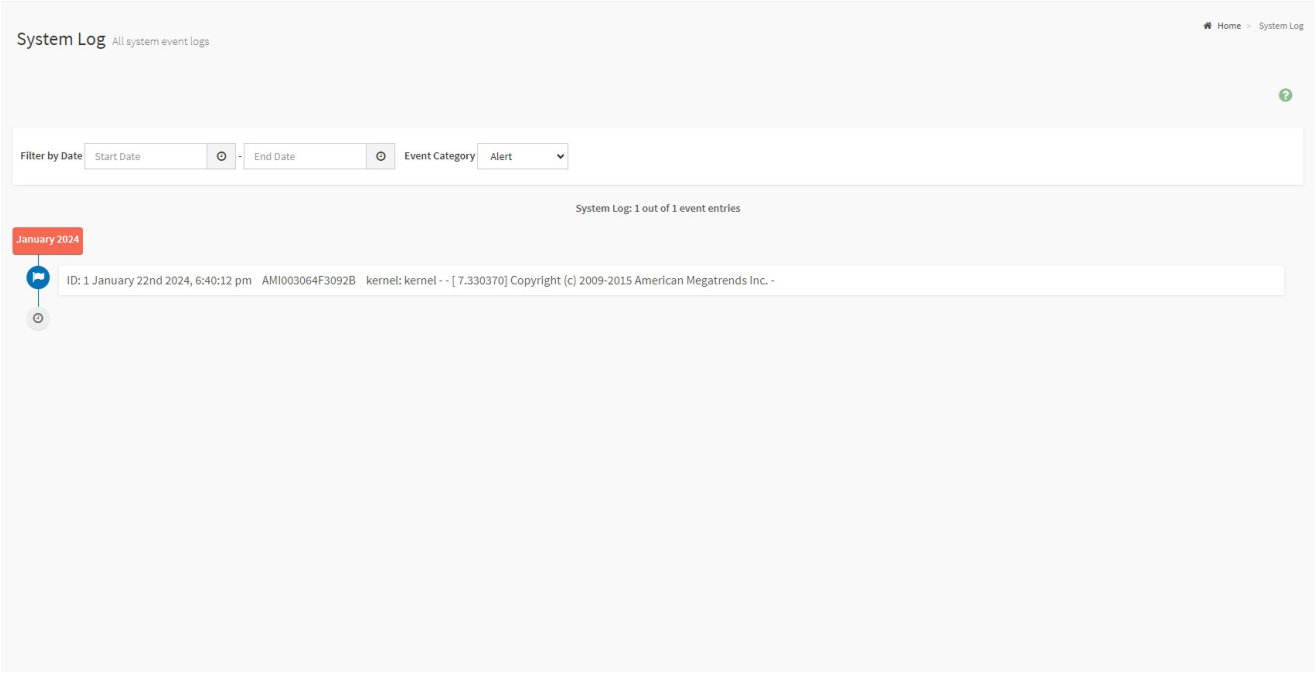

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure


To view System Log, click the **System Log** tab to view all system events. Entries can be filtered based on Filter By Date (Start Date and End Date) and Event Category like Alert, Critical, Error, Notification, Warning, Debug, Emergency and Information.

8.2.4.3 Audit Log

Audit Log page will display all the system events occurred in this device that has been already configured.

Note: *Logs have to be configured under **Settings > Log Settings > Advanced Log Settings** in order to display any entries.*

To open the Event Log page, click **Logs & Reports > Audit Log** from the menu bar.

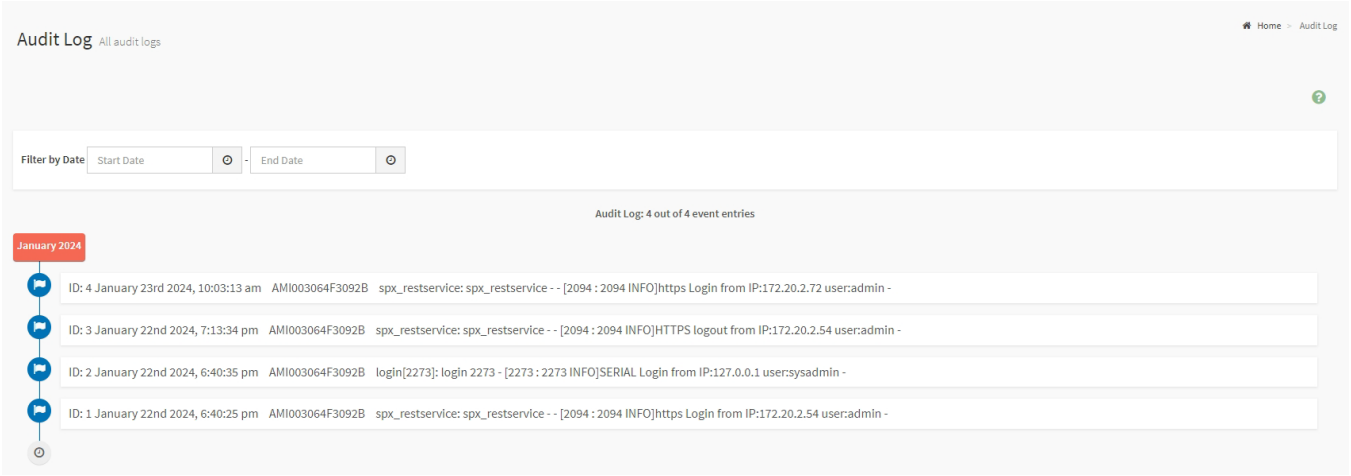


8.2.4.4 Video Log

The video log page will record the configured system events in the device in a video format that has been already configured.


Note: *Video Trigger Settings should be enabled, to display the Video Log page. Video Trigger Settings can be configured under **Settings > Video Recording > Auto Video Settings > Video Trigger Settings**.*

To open the Video Log page, click **Logs & Reports > Video Log** from the menu bar. A sample screenshot of Video Log page is shown below

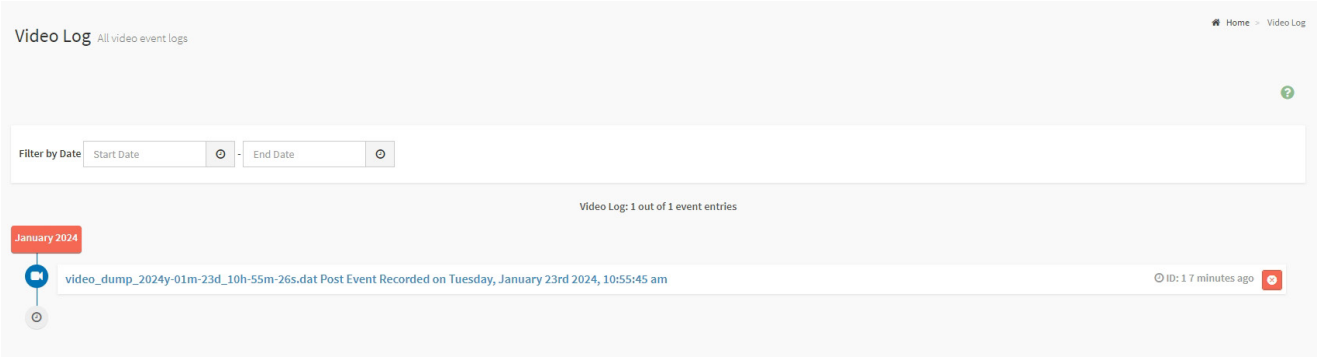

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

After clicking on the video event, the video conversation box will pop up. Play the current video. In this interface, you can choose to download or delete the current video log.

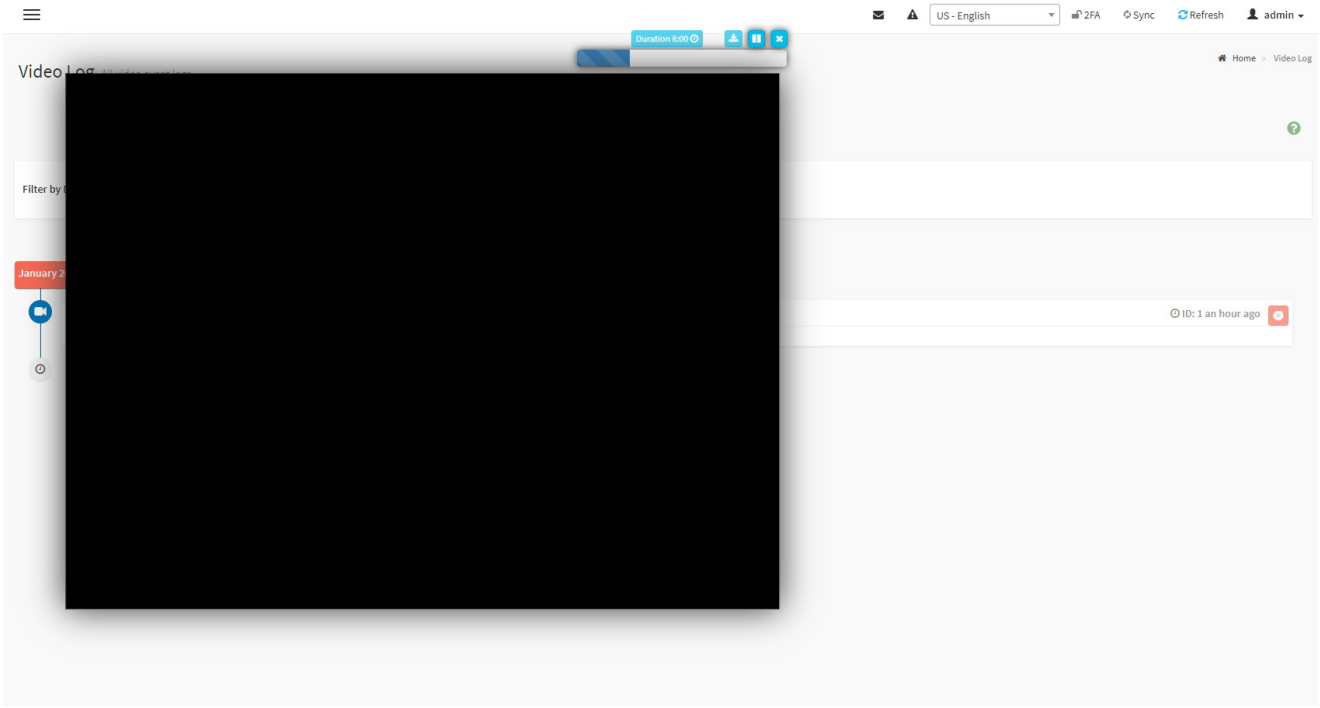

Note: *Video will be allowed to play/download only if file size is lesser than 40MB. Browsers have various memory restrictions, due to this browser cannot store and process data greater than 40MB (approximately). If file size is greater than 40MB, user will be notified with a message to use Java player Application.*

The video data may not be proper if the browser zoom in/out settings are changed during video playback.

To download a video, you need to wait for the video buffering to complete before downloading.


8.2.4.5 SOL Video Log

The sol log page will record configured system events through sol.

Note: *SOL Trigger Settings should be enabled, to display the SOL Log page. SOL Trigger Settings can be configured under* ***Settings > Video Recording > SOL Settings > SOL Trigger Settings****.*

SOL Configurations can set the baud rate of the serial port.

To open the Video Log page, click ***Logs & Reports > SOL Log*** from the menu bar. A sample screenshot of SOL Log page is shown below.

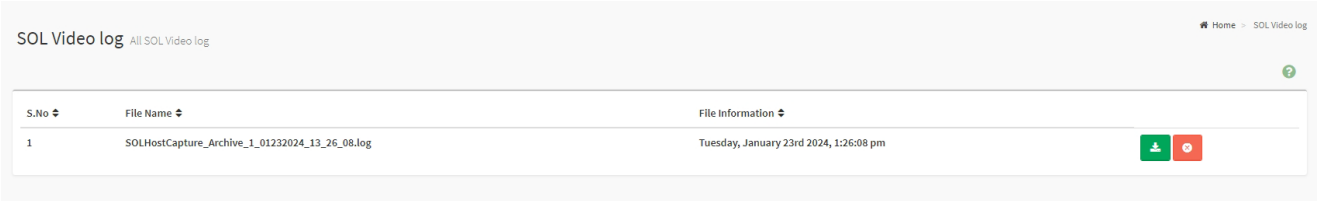

S.No - The serial number

File Name - The video filename

File Information - Day, date, and time of video upload

Download - To download the selected video


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Delete - To delete the selected video.

Note: *The timestamp displayed in the file information represents last modified time, and it will be updated (if the file is modified) when the webpage is refreshed.*

8.2.5 Power Control

It is used to control power on the WEB. A sample screenshot of service management is shown as below.

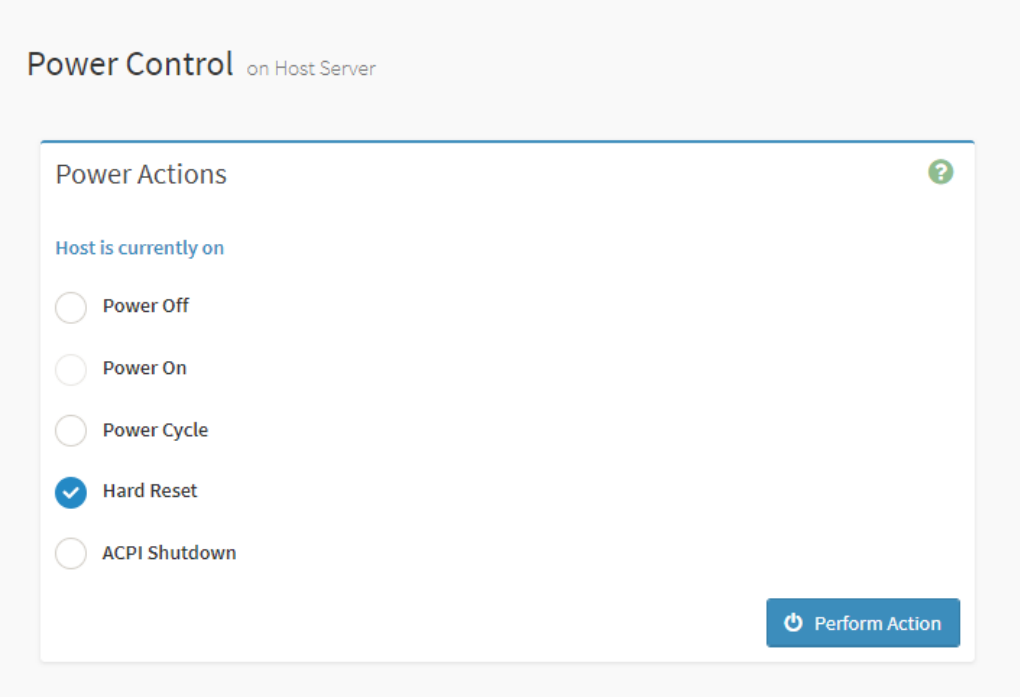

The power control consists of the following items.


- **Power off:** Power on the chassis.
- **Power on:** Power off the chassis.
- **Power Cycle:** Power off the chassis and power on the chassis.
- **Hard Reset:** Restart the chassis.
- **ACPI Shutdown:** Soft power off the chassis.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6 BMC Settings

The BMC Settings section in the BMC web interface is a centralized location for accessing and modifying a wide range of configuration settings for the BMC.

1. In the BMC web interface, click on the "**Settings**" button located in the functional menu on the left side.
2. This action will open a group menu that displays various configurable options and settings.

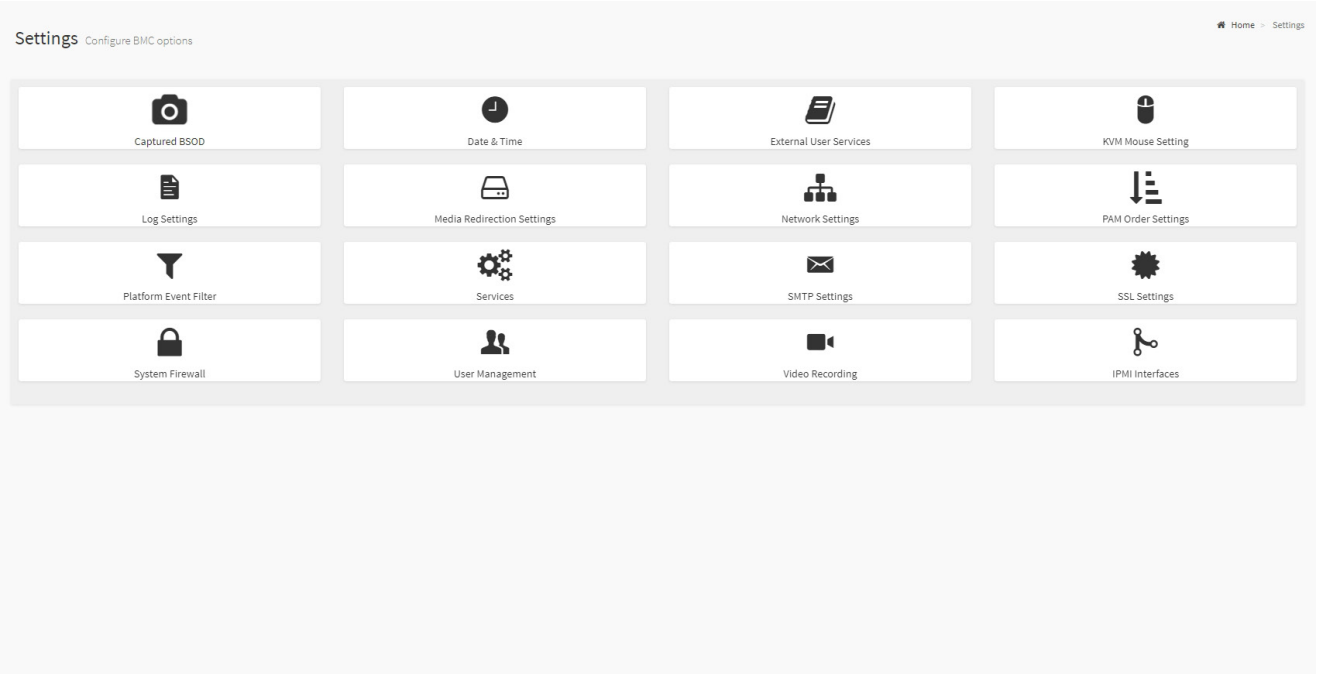

Features

Comprehensive Configuration: This interface allows you to adjust and set most of the BMC's configurations, tailoring the controller to your specific needs and preferences.


Information Retrieval: Besides configuration, this section also provides access to essential information about the BMC and the server it manages.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6.1 Captured BSOD

This page displays a snapshot of the blue screen captured if the host system crashed since last reboot.

A screenshot of Captured BSOD is shown below.

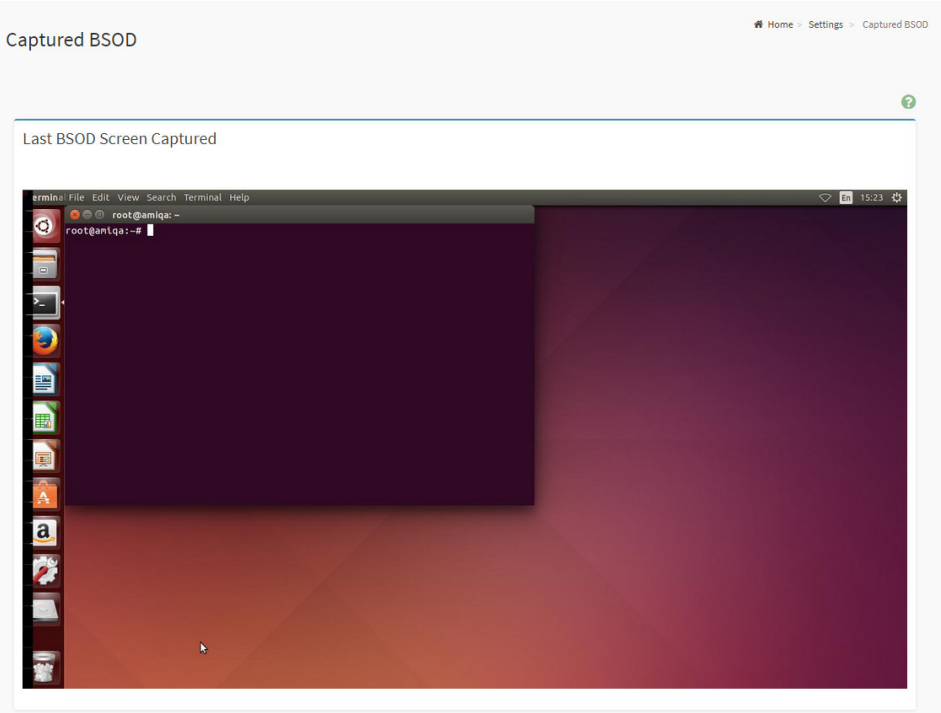

Note: *KVM service should be enabled to display the BSOD screen. KVM Service can be configured under* ***Settings > Services > KVM****.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6.2 Date & Time

This field is used to set the date and time on the BMC. A sample screenshot of Date & Time is shown as below.



The Date & Time section consists of the following fields.

Configure Date & Time: Displays Time zone list containing the UTC offset along with the locations and Navigational line to select the location which can be used to display the exact local time.

Select Time Zone: This field is used to set the date and time on the BMC.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Note: *Based on the manual selection of GMT or ETC/GMT, time zone alone will be changed and date & time will remain the same.*

Automatic NTP Date & Time: To automatically synchronize Date and Time with the NTP Server.

- **Primary NTP Server:** To configure a primary NTP server to use when automatically setting the date and time. The following address formats & Domain name format are supported:
  - ✧ IPv4 Address format
  - ✧ IPv6 Address format
  - ✧ Domain name format allowed 'A-Z', 'a-z', '0-9', dash (-), underscore (_) and dot(.) characters
- **Secondary NTP Server:** To configure a secondary NTP server to use when automatically setting the date and time.
  The following address formats & Domain name format are supported
  - ✧ IPv4 Address format
  - ✧ IPv6 Address format
  - ✧ Domain name format allowed 'A-Z', 'a-z', '0-9', dash (-), underscore (_) and dot(.) characters
- **Automatic PTP Date & Time:** To enable/disable the use of PTP servers to automatically set the date and time.
- **PTP Interface:** To configure a PTP server interface to use when automatically setting the date and time.
- **PTP Preset:** To configure a PTP Preset type to use when automatically setting the date and time.
- **PTP Transport:** To configure a PTP Transport type to use when automatically setting the date and time.
- **PTP Ipmode:** To configure a PTP Ipmode type to use when automatically setting the date and time.
- **PTP Unicast IP:** To configure a Unicast IP when ipmode is unicast and server to use when automatically setting the date and time.
- **PTP Delay Mechanism:** To configure a PTP Delay Mechanism type to use when automatically setting the date and time.
- **PTP Inbound Latency:** To configure an Inbound latency of the server to use when automatically setting the date and time.
- **PTP Outbound Latency:** To configure a PTP outbound latency server to use when automatically setting the date and time.
- **PTP Priority1:** To configure a priority of PTP clock to use when automatically setting the date and time.
- **PTP Max Master capacity:** To configure a max master capacity of the PTP clock to use when automatically setting the date and time.
- **Panic Mode:** To configure a PTP clock to not reset if jump is more than 1 second, use when automatically setting the date and time.

Save: To save the settings.

Note: *If the time zone is selected as Manual Offset, the map selection will be disabled. The Time-Zone settings will be reflected only after saving the settings.*
If disable the Automatic Date & Time, the time needs to select by users themselves or the time would not change.

Procedure

1. Select the Timezone location either using drop down or Map.
2. Enable **Automatic Date &Time** option to enable/disable the use of NTP servers to automatically set the date and time.
   a) In the Primary NTP Server and Secondary NTP Server fields, specify the NTP servers of the device respectively.

   Note: *Secondary NTP server is optional field. If the Primary NTP server is not working fine, then the Secondary NTP Server will be tried.*

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Enable **Automatic PTP Date &Time** to enable/disable the use of PTP servers to automatically set the date and time.
   a) Enter the Interface, Preset, Transport, Ipmode, Unicast IP, Delay Mechanism, Inbound Latency, Outbound Latency, Priority1, Max Master capacity and Log request delay details in their corresponding fields.
   b) Enable/Disable Panic Mode to not reset if jump is more than 1 second, use when automatically setting the date and time.
4. Click **Save** button to save the settings.

8.2.6.3 External User Services


8.2.6.3.1 LDAP/E-Directory Settings

The Lightweight Directory Access Protocol (LDAP)/E-Directory Settings is an application

protocol for querying and modifying data of directory services implemented in Internet Protocol (IP) networks.


In MegaRAC GUI, LDAP is an Internet protocol that MegaRAC® card can use to authenticate users. If you have an LDAP server configured on your network, you can use it as an easy way to add, manage and authenticate MegaRAC® card users. This is done by passing login requests to your LDAP Server. This means that there is no need to define an additional authentication mechanism, when using the MegaRAC card. Since your existing LDAP Server keeps an authentication centralized, you will always know who is accessing the network resources and can easily define the user or group-based policies to control access.

To open External User Services page, click **Settings -> External User Services** from the menu bar. A sample screenshot of External User Services page is shown below.

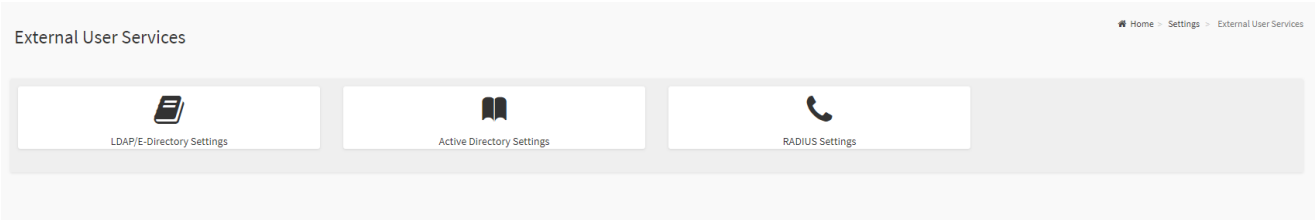

To open LDAP/E-DIRECTORY Settings page, click **Settings > External User Services > LDAP/E-Directory Settings** from the menu bar.

A sample screenshot of External User Services page is shown below.

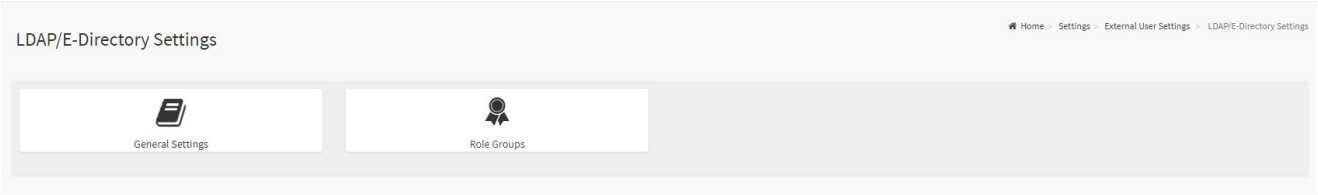

The fields of LDAP/E-Directory Settings Page are explained below.

General Settings: To configure LDAP/E-Directory Settings. Options are Enable LDAP/E-Directory Authentication, IP Address, Port and Search base.

Role Groups: To add a new role group to the device. Alternatively, double click on a free slot to add a role group.


Note: *It is recommended to Enable LDAP configuration from configure general settings page otherwise error message will pop-up stating that "LDAP configuration is not enabled" while trying to create/view LDAP role groups.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure

Entering the details in General LDAP/E-Directory Settings Page.

1. In the LDAP/E-Directory Settings Page, click General Settings. A sample screenshot of General LDAP Settings page is given below.

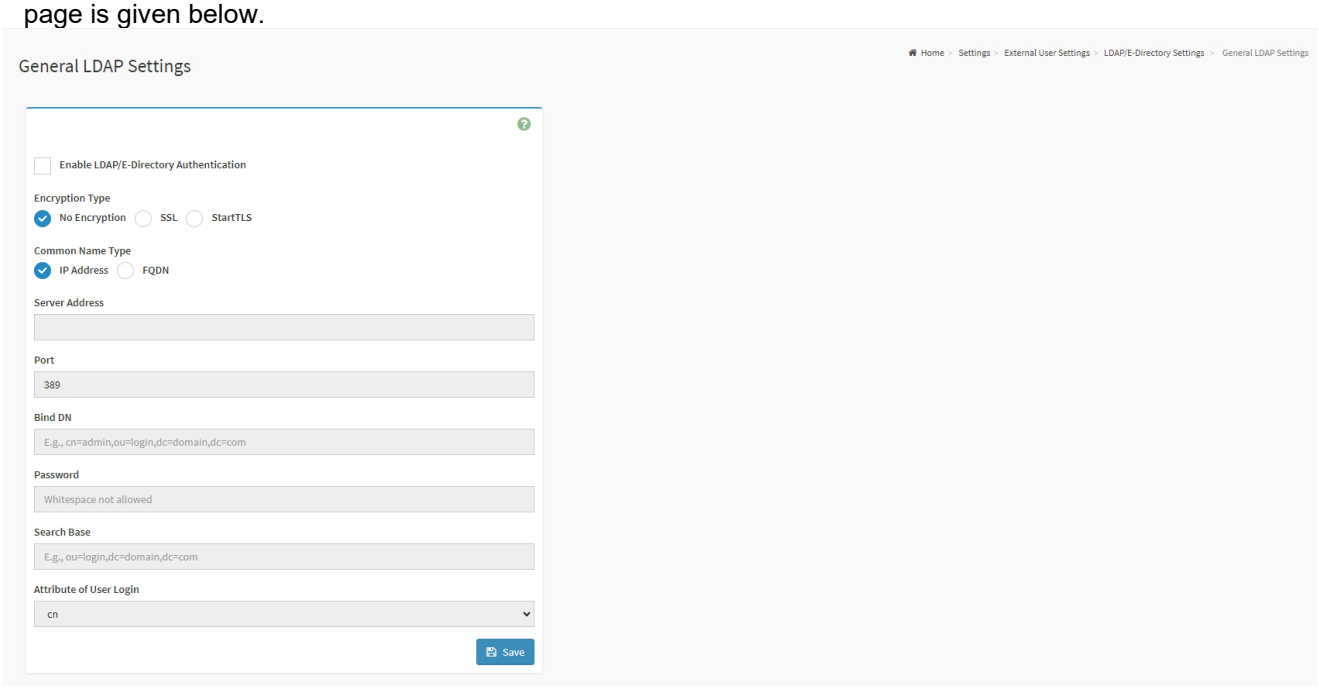

2. Click Enable LDAP/E-Directory Authentication, to enable LDAP/E-Directory Settings.
   Note: *During login prompt, use username to login as an LDAP Group member.*
3. Select the encryption type for LDAP/E-Directory from the Encryption Type.
   Note: *Configure proper port number, when SSL is enabled.*
4. Select the Common Name Type as IP Address.
5. Enter the IP address of LDAP server in the Server Address field.
   Note:

   IP Address made of 4 numbers separated by dots as in 'xxx.xxx.xxx.xxx'.

   Each Number ranges from 0 to 255.

   First Number must not be 0.

   Supports IPv4 Address format and IPv6 Address format.

   Configure FQDN address, when using StartTLS with FQDN.

5. Specify the LDAP Port in the Port field.
   Note:

   Default Port is 389. For SSL connections, default port is 636. The Port value ranges from 1 to 65535.

6. Specify the Bind DN that is used during bind operation, which authenticates the client to the server.
   Note:

   Bind DN is a string of 4 to 253 alpha-numeric characters.

   It must start with an alphabetical character.

   Special Symbols like dot(.), comma(,), hyphen(-), underscore(_), equal-to(=) are allowed.

   Example: cn=manager,ou=login, dc=domain,dc=com

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7. Enter the password in the Password field.
   Note:

   Password must be at least 1 character long.

   White space is not allowed.

   This field will not allow more than 48 characters.

8. Enter the Search Base. The Search base allows the LDAP server to find which part of the external directory tree to be searched. The search base may be something equivalent to the organization, group of external directory.
   Note:

   Search base is a string of 4 to 253 alpha-numeric characters.

   It must start with an alphabetical character.

   Special Symbols like dot(.), comma(,), hyphen(-), underscore(_), equal-to(=) are allowed.

   Example: ou=login,dc=domain,dc=com.

9. Select Attribute of User Login to find the LDAP/E-Directory server which attribute should be used to identify the user.
   Note: *It only supports cn or uid.*

10. Select CA Certificate File from the Browse field to identify the certificate of the trusted CA certs.

11. Select the **Certificate File** to find the client certificate filename.

12. Select **Private Key** to find the client private key filename.


    Note: *All the 3 files are required, when SSL or StartTLS is enabled.*

13. Click **Save** to save the settings.

To add a new Role Group

1. In the LDAP/E-Directory Settings Page, Click Role Groups and select a blank row.
   Note: *It is recommended to Enable LDAP configuration from configure general settings page otherwise error message will pop-up stating that "LDAP configuration is not enabled" while trying to create/view LDAP role groups.*

2. Click Add Role Group or alternatively double click on the blank row to open the Add Role group Page as shown in the screenshot below.

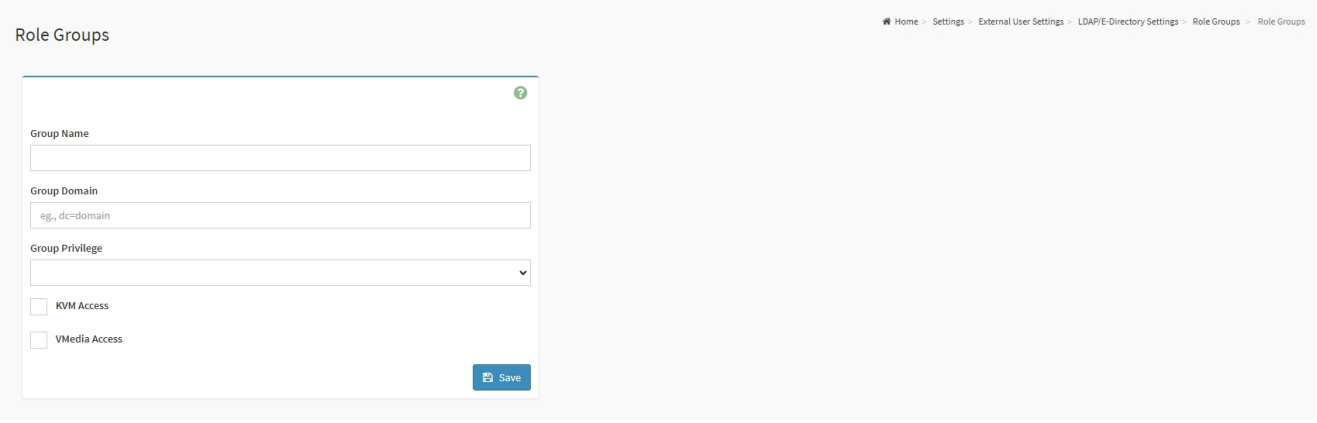

3. In the Group Name field, enter the name that identifies the role group.
   Note:

   Maximum size of Role Group Name is 255 bytes.

   Special symbols hyphen and underscore are allowed.

4. In the Group Domain field. Enter the Role Group Domain where the role group is located.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Note:

Maximum size of Group Domain Name is 255 bytes.

It must start with an alphabetical character.

Special Symbols like dot(.), comma(,), hyphen(-), underscore(_), equal-to(=) are allowed.

Example: cn=manager,ou=login, dc=domain,dc=com

5. In the Group Privilege field, enter the level of privilege (User, Administrator, Operator, None) to assign to this role group.
6. Select the required options or both.
   - ✧ KVM Access
   - ✧ VMedia Access

   Note: *VMedia privilege is not applicable for LMedia and RMedia clients.*
7. Click **Save** to save the new role group and return to the Role Group List.

8.2.6.3.2 Active Directory Settings

An active directory is a directory structure used on Microsoft Windows based computers and


servers to store information and data about networks and domains. An active directory (sometimes referred to as AD) does a variety of functions including the ability to provide information on objects. It also helps to organize these objects for easy retrieval and access, allows access by end users and administrators and allows the administrator to set security up for the directory.

In MegaRAC SP-X application, Active Directory allows you to configure the Active Directory

Server Settings. The displayed table shows any configured Role Groups and the available slots. You can modify, add or delete role groups from here. Group domain can be the AD domain or a trusted domain. Group Name should correspond to the name of an actual AD group.

Note: *To view the page, you must be at least a User and to modify or add a group, you must be an Administrator.*

To open Active Directory Settings page, click **Settings > External User Settings > Active Directory** from the menu bar. A sample screenshot of Active Directory Settings page is shown below.

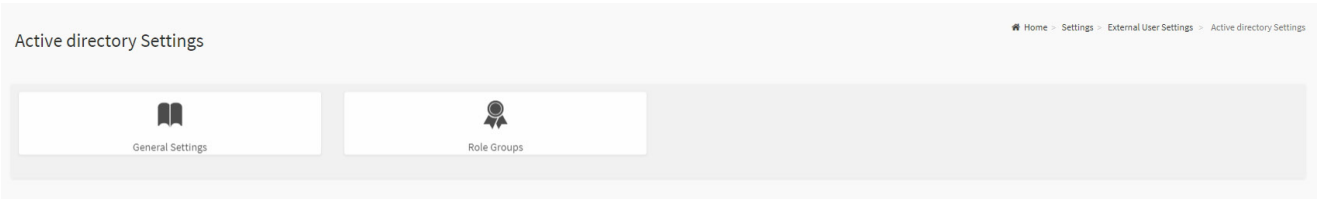

The fields of Active Directory page are explained below.

General Settings: This option is used to configure Active Directory General Settings. Options are Enable Active Directory Authentication, Secret User Name, Secret Password, User Domain name, and up to three Domain Controller Server Addresses.

Role Groups: To add a new role group to the device. Alternatively, double click on a free slot to add a role group.


Note: *It is recommended to Enable AD configuration from configure general settings page otherwise error message will pop-up stating that "AD configuration is not enabled" while trying to create/view AD role groups.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure

Entering the details in General Active Directory Settings Page

1. Click on **General Settings** to open the General Active Directory Settings Page.

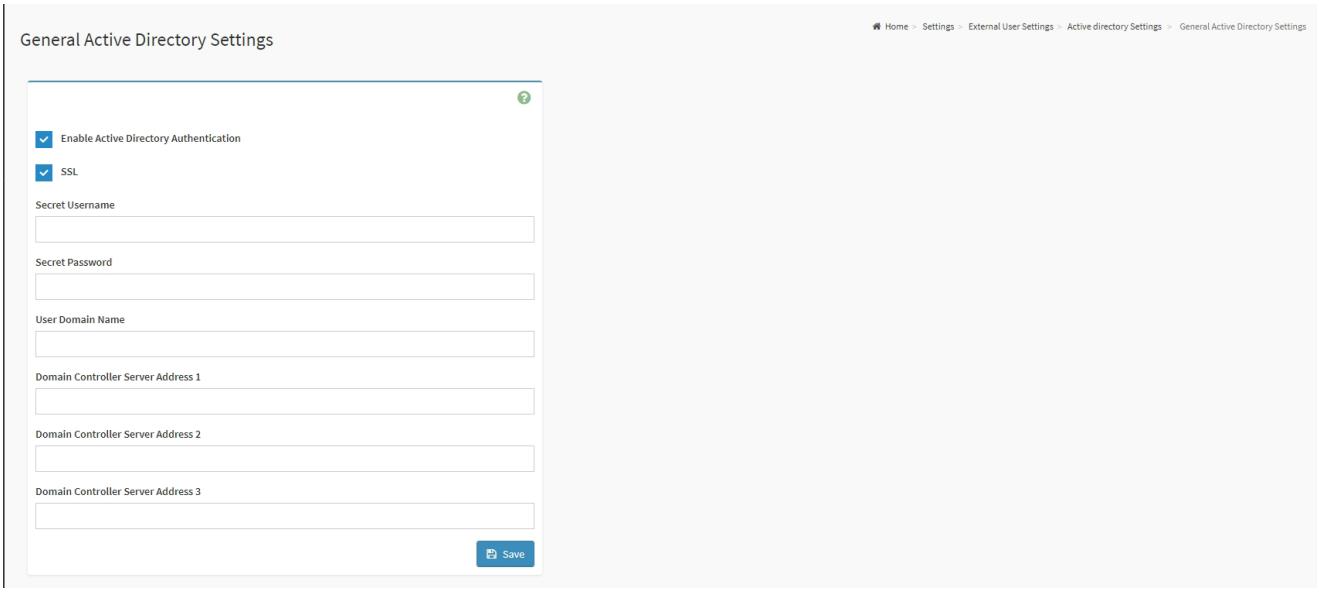

2. In the Active Directory Settings page, check or uncheck the **Enable Active directory Authentication** check box to enable or disable Active Directory Authentication respectively.
   Note: *If you have enabled Active Directory Authentication, enter the required information to access the Active Directory server.*
3. **SSL:** Check or uncheck to enable or disable the SSL.
4. Specify the Secret user name and password in the **Secret UserName** and **Secret Password** fields respectively.
   Note:
   - *Secret username/password for AD is not mandatory. When secret username & password is empty, Authentication fails will be always treated as Invalid Password error. For Invalid Password error PAM will not try other Authentication Methods.*
   - *User Name is a string of 1 to 64 alpha-numeric characters.*
   - *It must start with an alphabetical character.*
   - *It is case-sensitive.*
   - *Special characters like comma, period, colon, semicolon, slash, backslash, square brackets, angle brackets, pipe, equal, plus, asterisk, question mark, ampersand, double quotes, space are not allowed.*
   - *Password must be at least 6 character long and will not allow more than 127 characters.*
   - *White space is not allowed.*


5. Specify the Domain Name for the user in the **User Domain Name** field. e.g., MyDomain.com
6. Configure IP addresses in **Domain Controller Server Address1**, **Domain Controller Server Address2** and **Domain Controller Server Address3**.
   Note:

   IP address of Active Directory server: At least one Domain Controller Server Address must be configured.

   - *IP Address made of 4 numbers separated by dots as in "xxx.xxx.xxx.xxx".*
   - *Each number ranges from 0 to 255.*
   - *First number must not be 0.*
   - *Domain Controller Server Addresses will support IPv4 Address format and IPv6 Address format.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7. Click **Save** to save the entered settings and return to Active Directory Settings Page.

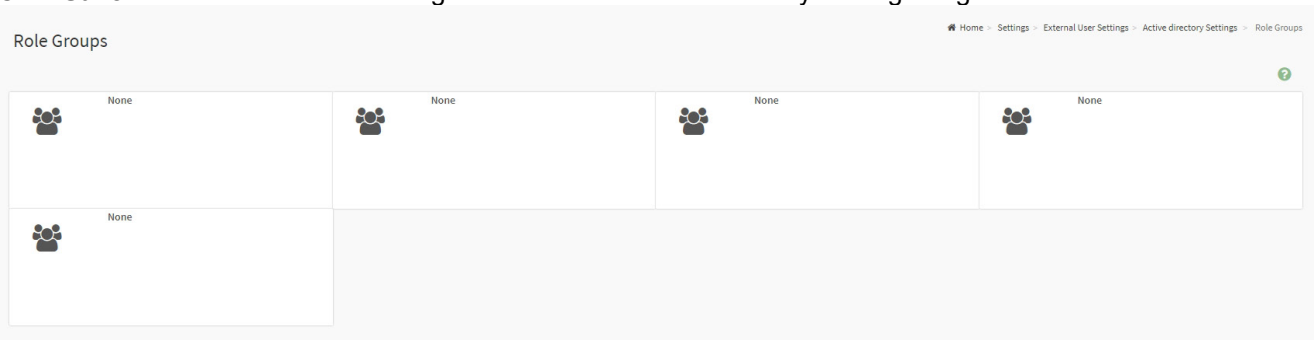

The fields of Role Group page are explained below.

Role Group Name: The name that identifies the role group in the Active Directory.

Note:

- *Maximum size of Role Group Name is 255 bytes.*
- *Special symbols hyphen and underscore are allowed.*

Group Domain: The domain where the role group is located.

Note:

- *Maximum size of Group Domain Name is 255 bytes.*
- *Special symbols hyphen, underscore and dot are allowed.*

Group Privilege: The level of privilege to assign to this role group.


KVM Access: To provide access to KVM for AD authenticated role group user.

VMedia Access: To provide access to VMedia for AD authenticated role group user.

To Add a New Role Group

1. In the Active Directory Settings page, select a Role Group and click Add Role Group or alternatively double click on the blank row to open the Add Role group Page as shown in the screenshot below.

Note: *It is recommended to Enable AD configuration from configure general settings page otherwise error message will pop-up stating that "AD configuration is not enabled" while trying to create/view AD role groups.*

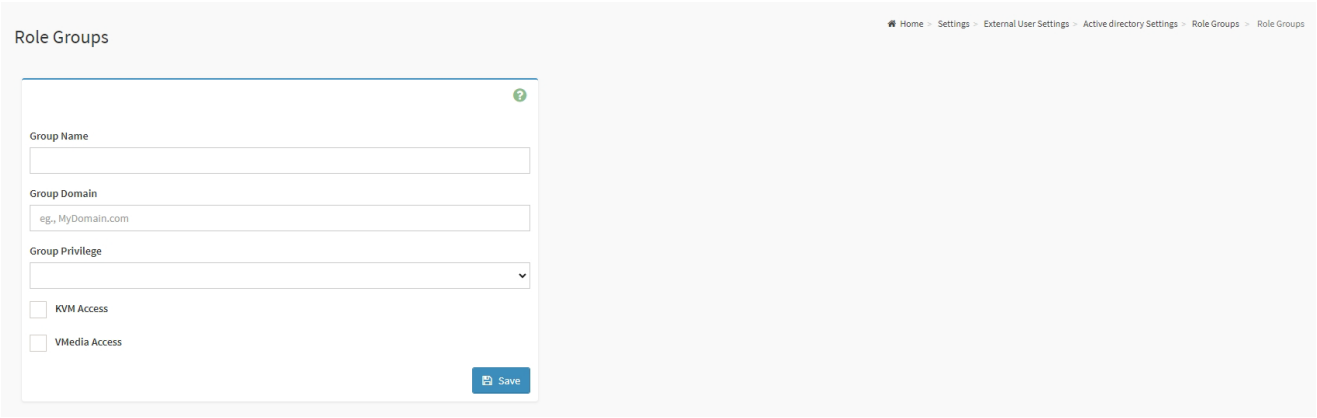

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. In the **Group Name** field, enter the name that identifies the role group in the Active Directory.

Note:

- *Maximum size of Role Group Name is 255 bytes.*
- *Special symbols hyphen and underscore are allowed.*

3. In the **Group Domain** field, enter the domain where the role group is located.

Note:

- *Maximum size of Group Domain Name is 255 bytes.*
- *Special symbols hyphen, underscore and dot are allowed.*

4. In the **Group Privilege** field, enter the level of privilege to assign to this role group.

5. Select the required options
   - ✧ KVM Access
   - ✧ VMedia Access

   Note: *VMedia privilege is not applicable for LMedia and RMedia clients.*

6. Click Save to add the new role group and return to the Role Group List.

To Delete a Role Group


1. In the Role Groups Page, select the row that you wish to delete.
2. Click Delete Role Group.

8.2.6.4 RADIUS Settings


RADIUS is a modular, high performance and feature-rich RADIUS suite including server, clients, development libraries and numerous additional RADIUS related utilities.

In MegaRAC GUI, this page is used to set the RADIUS Authentication.

To open RADIUS Settings page, click **Settings -> External User Settings -> RADIUS Settings** from the menu bar. A sample screenshot of RADIUS Settings page is shown below.

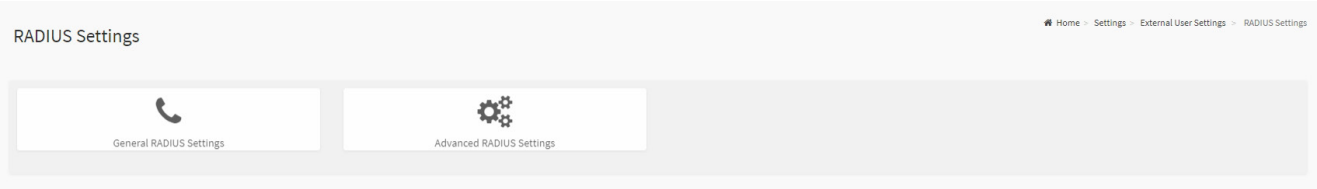

General RADIUS Settings

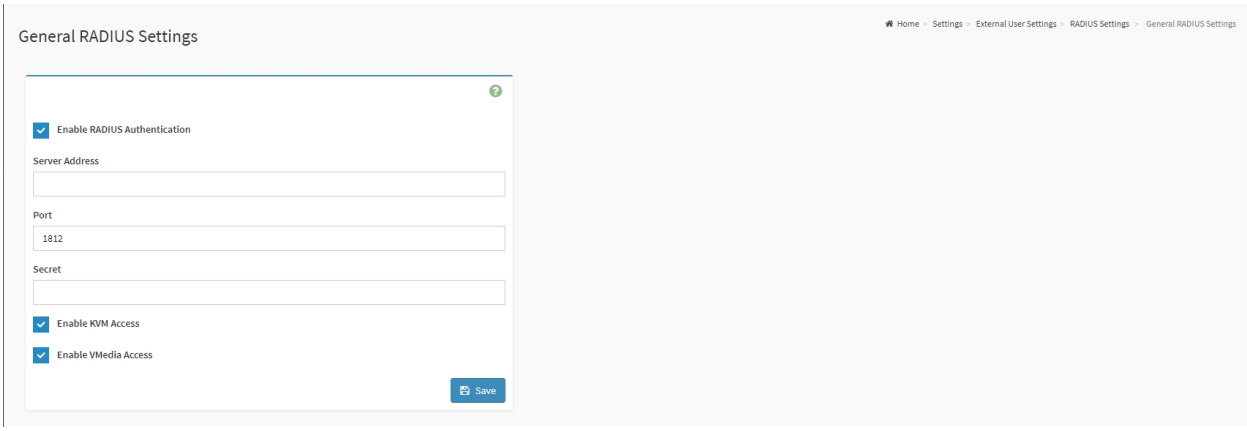

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The fields of General RADIUS Settings page are explained below.

Enable RADIUS Authentication: Option to enable/disable RADIUS authentication.

Server Address: The IP address of RADIUS server.

Note:

- *IP Address (Both IPv4 and IPv6 format).*
- *FQDN (Fully Qualified Domain Name) format.*

Port: The RADIUS Port number.

Note:

- *Default Port is 1812.*
- *Port value ranges from 1 to 65535.*

Secret: The Authentication Secret for RADIUS server.

Note:

- *This field will not allow more than 31 characters.*
- *Secret must be at least 4 characters long.*
- *White space is not allowed.*

Enable KVM Access: This field provides access to KVM for RADIUS authenticated users.

Enable VMedia Access: This field provides access to VMedia for RADIUS authenticated users.

Save: To save the settings.


Procedure

1. Enable the RADIUS Authentication check box to authenticate the RADIUS.
2. Click Advanced RADIUS Settings. This opens the Radius Authorization window as shown below.

Note:

It will not allow more than 127 characters. Special characters like ';' and '#' are not allowed.

It is recommended to Enable Radius configuration from configure general RADIUS settings page otherwise error message will pop-up stating that "Radius configuration is not enabled" while trying to create/view Advanced RADIUS Settings.

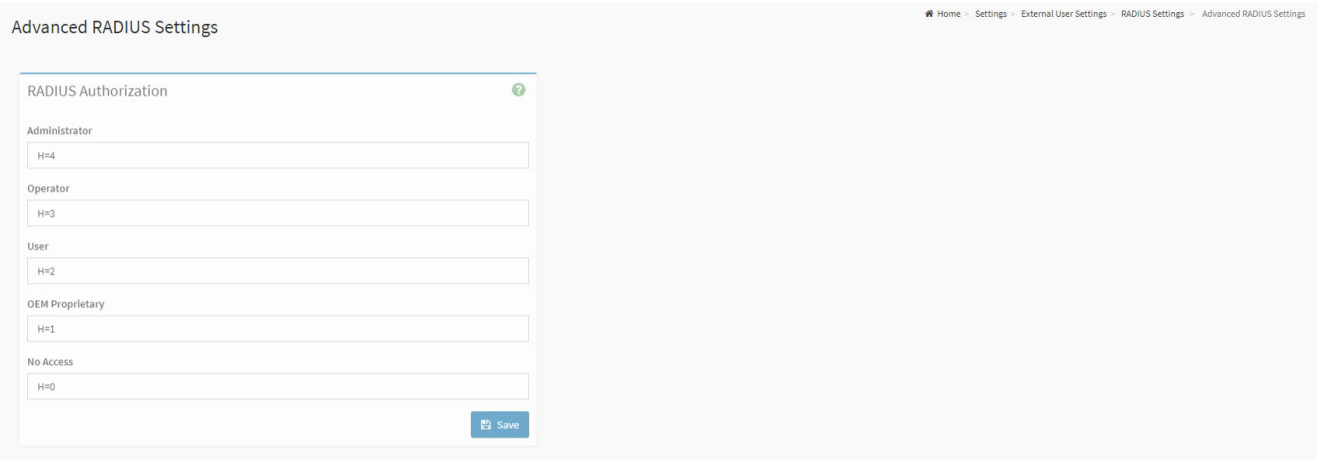

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

For Authorization Purpose, configure the Radius user with Vendor Specific Attribute in server side.

Example:1

testadmin Auth-Type :=PAP,Cleartext-Password:= "admin"

Auth-Type :=PAP, Vendor-Specific="H=4"

Example:2

testoperator Auth-Type := PAP, Cleartext-Password := "operator"

Auth-Type :=PAP, Vendor-Specific="H=3"


If you change the Vendor-Specific value in server then you should change the same values

in this page.

3. Click **Save** to save the changes made.

8.2.6.5 Service Management


It is used to set service information on the BMC. A sample screenshot of service management is shown as below.

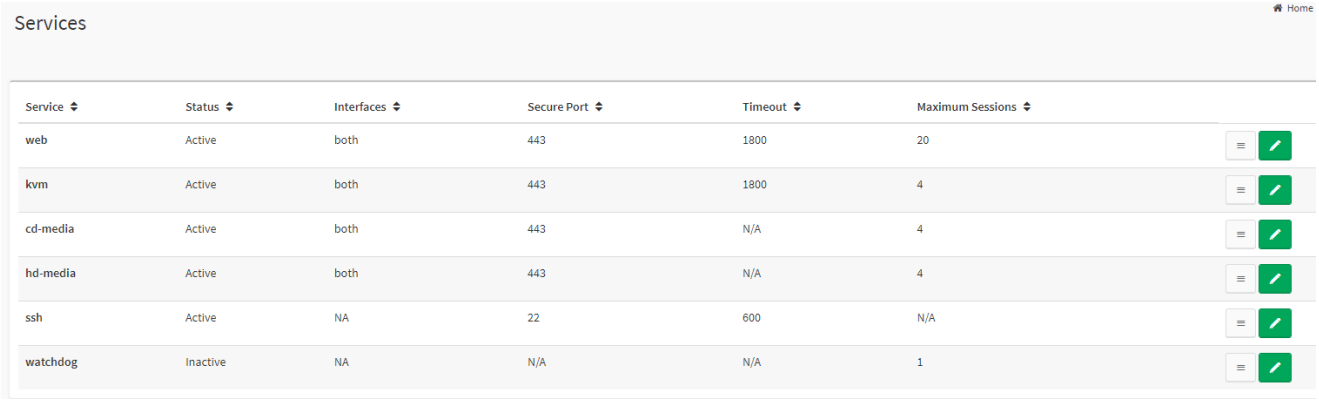

The service management consists of the following items.

- web
- kvm
- cd-media
- hd-media
- ssh
- watchdog

(Click the "edit" button in the "watchdog" column to enter the "watchdog" configuration interface (the interface is as follows), watchdog default state is inactive, if watchdog is set to the active state, it will monitor the BMC in real time.)

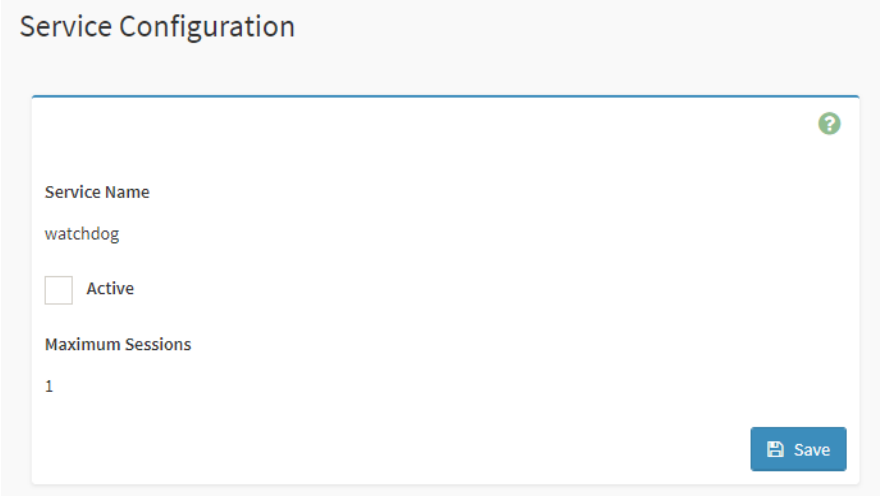

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6.6 Network Configuration


Note: *Change the IP settings of the management ports will disconnect the network.*

This section is used to configure the network settings for the available LAN channels.

8.2.6.6.1 Network IP Settings

This section is used to configure the network IP settings.

To open the Network IP Settings page, click **Settings -> Network Settings -> Network IP Settings**.

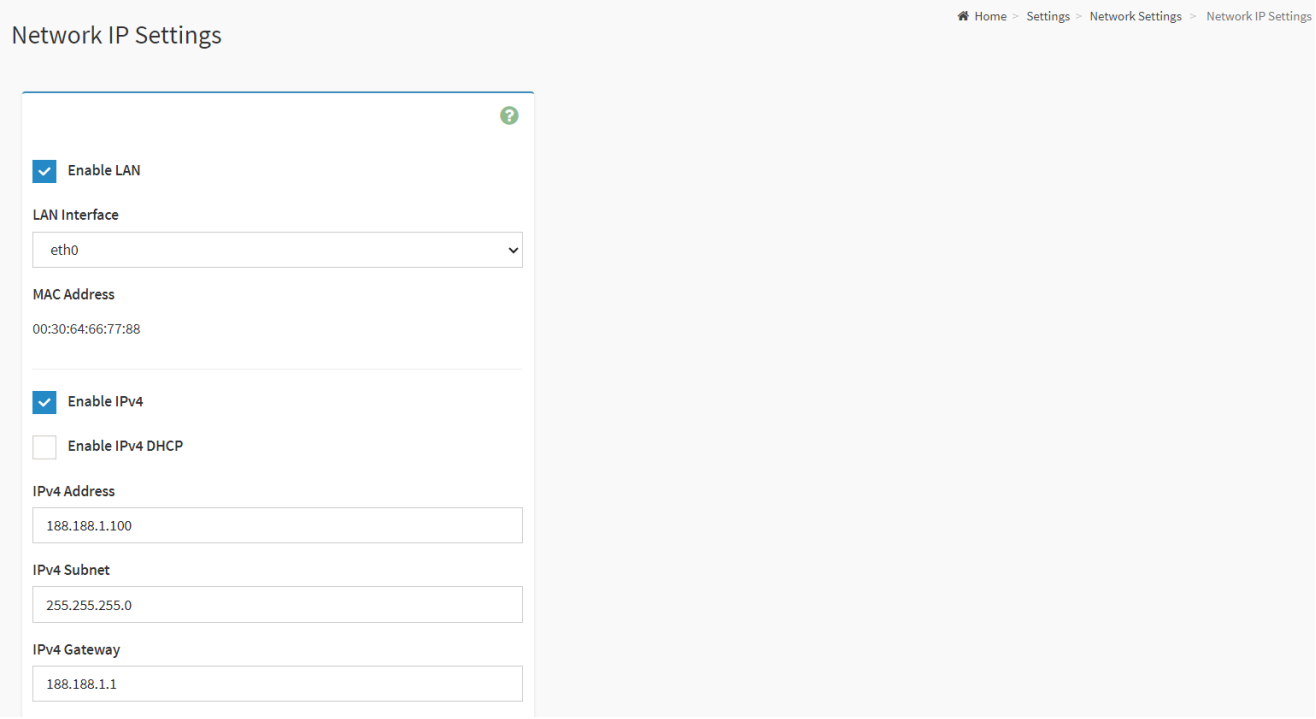


The fields of Network IP Settings page are explained below.

- **Enable LAN:** Enable or disable the LAN settings.
- **LAN Interface:** Select the LAN interface to be configured.
- **MAC Address:** Display the read-only MAC Address of the selected interface.
- **Enable IPv4:** Enable or disable the IPv4 settings for the selected interface.
- **Enable IPv4 DHCP:** Enable or disable the IPv4 DHCP support for the selected interface. If disable the IPv4 DHCP support, then **static IP address** is selected, configure the static **IPv4 Address**, **IPv4 Subnet**, and **IPv4 Gateway**.


  Notes:

  - ✓ *An IP address consists of 4 numbers separated by dots, as in "xxx.xxx.xxx.xxx".*
  - ✓ *Each number ranges from 0 to 255.*
  - ✓ *The first number must not be 0.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

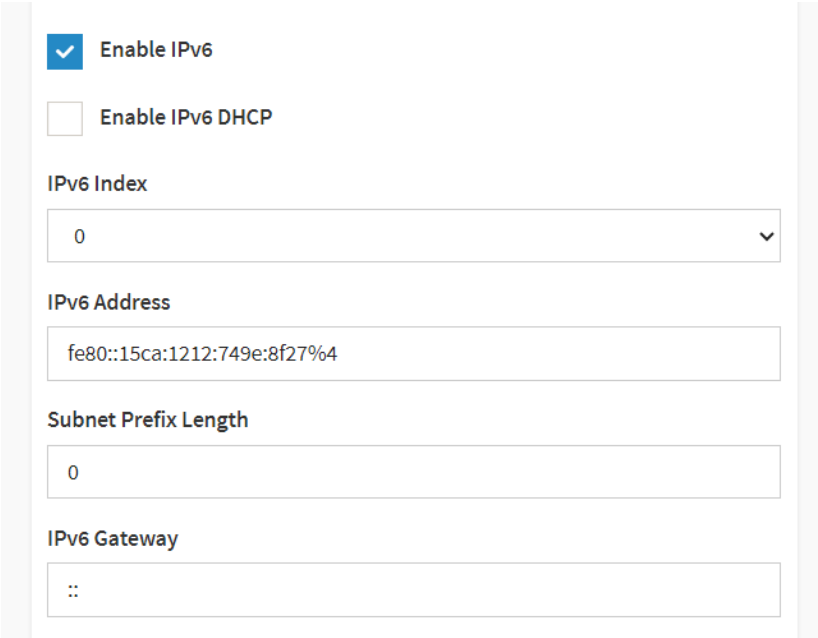

- **Enable IPv6:** Enable or disable the IPv6 configuration settings.
- **Enable IPv6 DHCP:** Enable or disable the IPv6 DHCP support for the selected interface. It dynamically configures IPv6 address using DHCP (Dynamic Host Configuration Protocol).
  Note: *Disable this* ***Enable IPv6 DHCP*** *field and enter the values in following fields such as* ***IPv6 Index***, ***IPv6 Address***, ***Subnet Prefix Length*** *and* ***IPv6 Gateway***.
- **IPv6 Index:** Specify a static IPv6 index to be configured to the device. E.g.: 0
- **IPv6 Address:** Specify a static IPv6 address to be configured to the device. E.g.: 2004::2010.
- **Subnet Prefix Length:** Specify the subnet prefix length for the IPv6 settings. The value ranges from 0 to 128.
- **IPv6 Gateway:** Specify an IPv6 default gateway for the IPv6 settings.

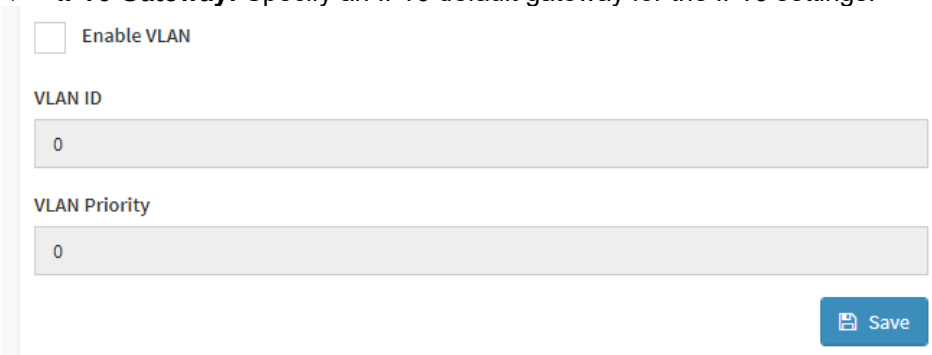


- **Enable VLAN:** Enable or disable VLAN support for the selected interface.
- **VLAN ID:** Value ranges from 2 to 4094. VLAN ID 0, 1 & 4095 are reserved VLAN IDs.
- **VLAN Priority:** Value ranges from 0 to 7. 7 is the highest priority for VLAN.
- **Save:** Save the entries.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6.6.2 Network Link Configuration

This section is used to configure the network link.

To open Network Link Configuration page, click **Settings >Network Settings > Network Link Configuration**.

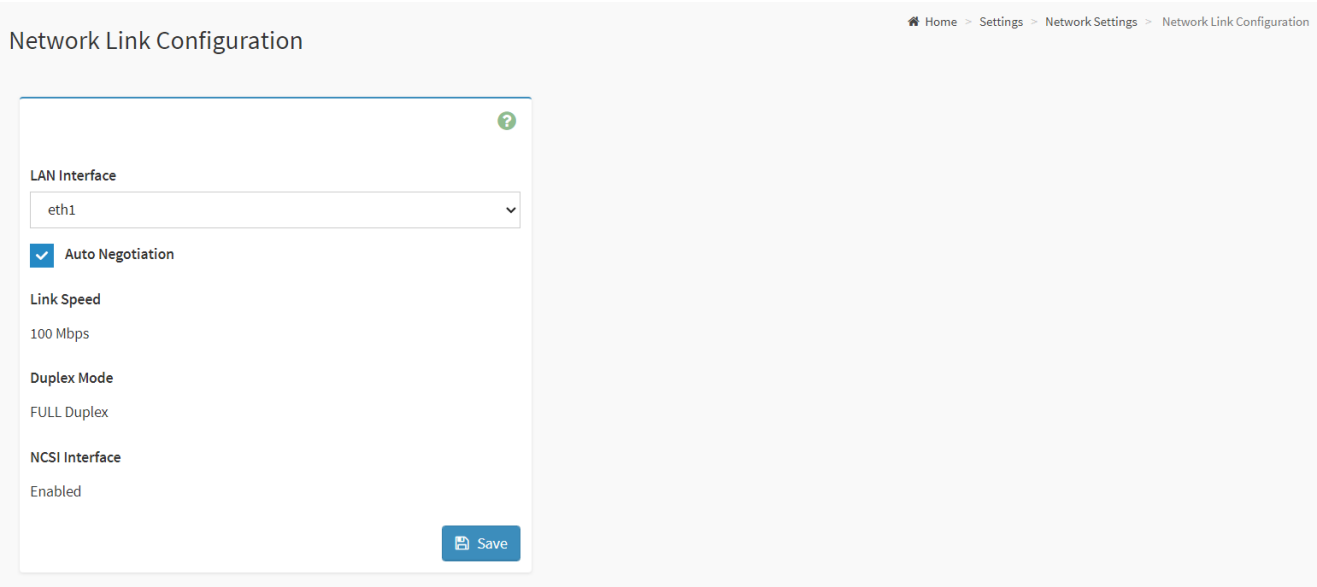

The fields of the Network Link Configuration page are explained below.

- **LAN Interface:** Select the required network interface from the list to which the link speed and duplex mode are to be configured.
- **Auto Negotiation:** Enable to allow the device to perform automatic configuration to achieve the best possible mode of operation (speed and duplex) over a link.
- **Link Speed:** Link speed will list all the supported capabilities of the network interface. It can be 10/100/1000 Mbps.
  Note: *Link speed of 1000 Mbps is not applicable when* ***Auto Negotiation*** *is OFF.*
- **Duplex Mode:** This field could be either **Half Duplex** or **Full Duplex**.
- **NCSI Interface:** The NCSI interface status could be either **Enabled** or **Disabled** for the selected LAN interface.
- **Save:** Save the settings.

8.2.6.6.3 DNS Configuration


The **Domain Name System (DNS)** is a distributed hierarchical naming system for computers,

services, or any resource connected to the Internet or a private network. It associates the information with domain names assigned to each of the participants. Most importantly, it translates domain names meaningful to humans into the numerical (binary) identifiers associated with networking equipment for the purpose of locating and addressing these devices worldwide.

This section is used to manage the DNS settings of a device.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


To open DNS Configuration page, click **Settings > Network Settings > DNS Configuration**.

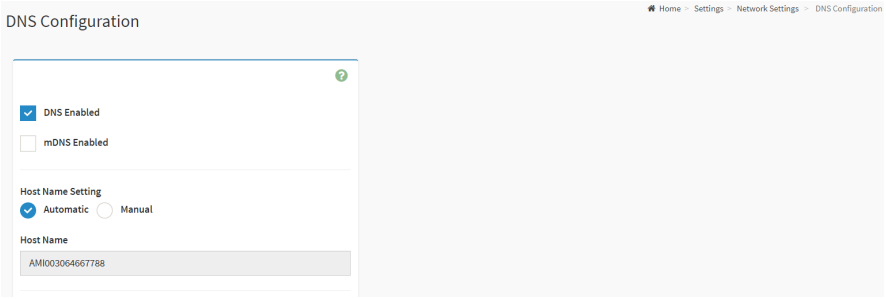

The fields of DNS Configuration page are explained below.

Domain Name Service Configuration


- **DNS Enabled:** Enable or disable all the DNS service configurations.
- **mDNS Enabled:** Enable or disable the multicast DNS.
- **Host Name Setting:** Choose either **Automatic** or **Manual** settings.
- **Host Name:** Display host name of the device.
  - If the Host setting is chosen as **Manual**, then specify the host name of the device.
    Notes:
    - ✓ *Value ranges from 1 to 64 alpha-numeric characters.*
    - ✓ *Special character '-'(hyphen) is allowed.*
    - ✓ *It must not start or end with a '-'(hyphen).*
    - ✓ *The underscore (_) character and double hyphen (--) character are not a legal character for use in host names.*

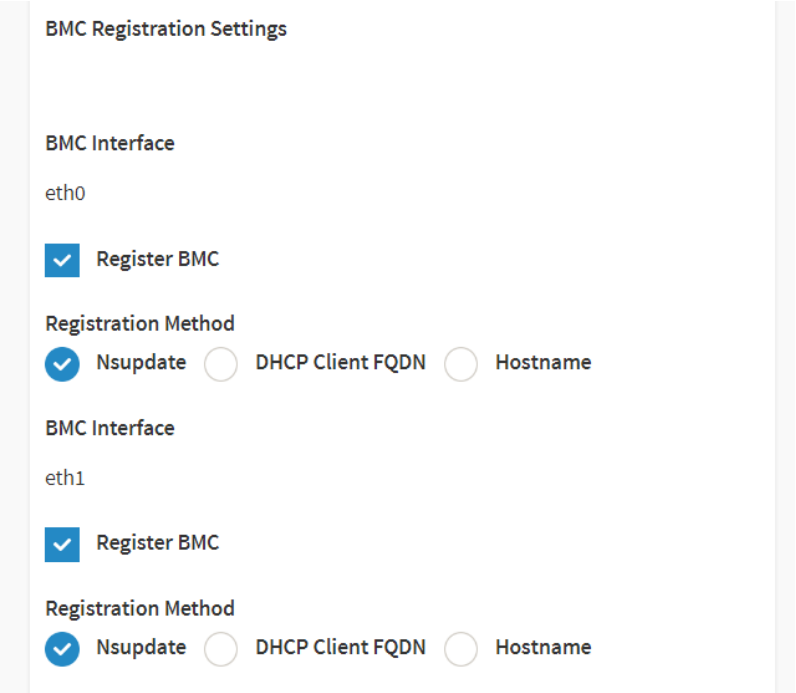

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


BMC Registration Settings

- **BMC Interface:** Options to register the BMC through the Interfaces (eth0&eth1).
- **Register BMC:** Register BMC through registration method.
- **Registration Method:** Options to register the BMC through **Nsupdate** or **DHCP Client FQDN** or **Hostname**.

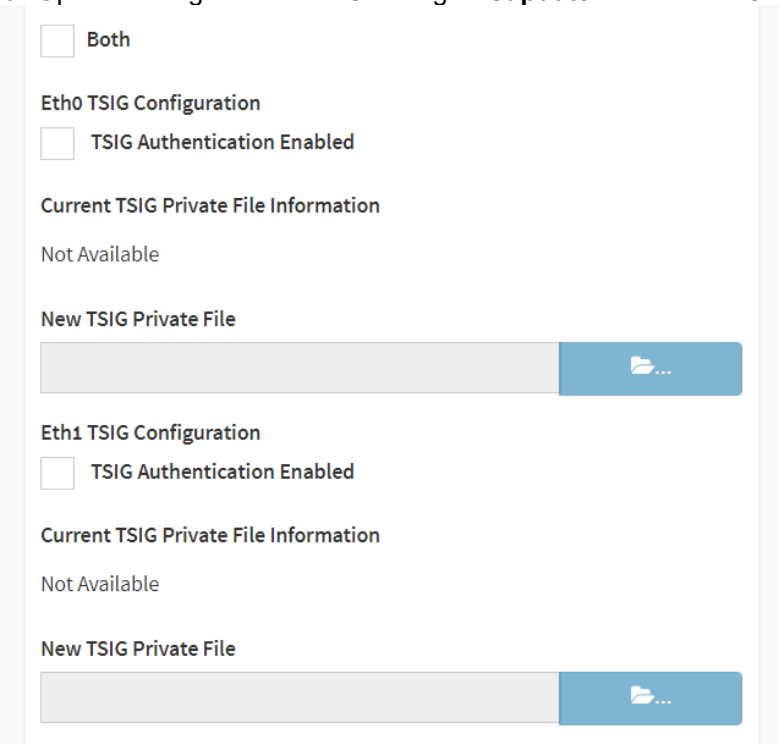

TSIG Configuration

- **Both:** Check this option to modify TSIG authentication for both interfaces.
- **Eth 0&1:**
  - **TSIG Authentication Enabled:** Check this box to enable TSIG authentication while registering DNS via nsupdate. Separate TSIG files can be uploaded for each LAN interface.
  - **Current TSIG Private File Information:** The information of current TSIG private file along with its uploaded date and time will be displayed (read only).
  - **New TSIG Private File:** Browse and navigate to the TSIG private file.

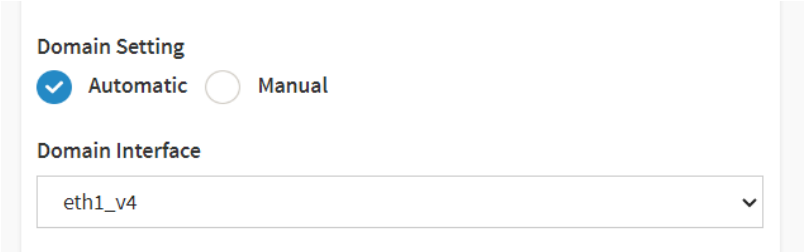


- **Domain Setting:** Select whether the domain interface will be configured manually or automatically.
  - **Automatic:** If you select **Automatic**, the Domain Name cannot be configured as it will be done automatically.
  - **Manual:** If you select **Manual**, then specify the domain name of the device.

  Notes:

  - ✓ *If you select **Automatic**, it displays the **Domain Interface** option. If you select **Manual**, it displays **Domain name**.*
  - ✓ *Domain name must be a string of 4 to 253 alphanumeric characters. (254 characters are allowed only if the last byte is dot.)*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

✓ *Domain name must start with a letter and end with a letter or digit. (Must contain at least one dot character) Only letters, digits, dot and hyphen are allowed.*

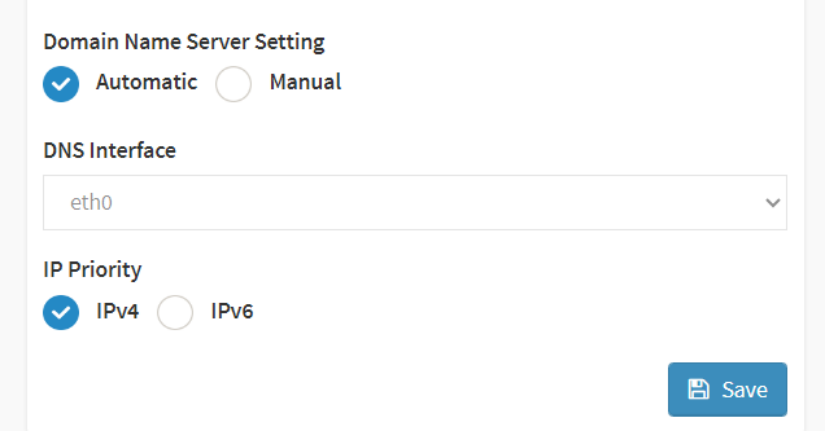

✧ **Domain Name Server Setting:**
- **Automatic** - If you select **Automatic**, **DNS Interface** option should be explained.
- **Manual** - Specify the DNS (Domain Name System) server address to be configured for the BMC.

✧ **IP Priority:**
- **IPv4:** It will have 2 IPv4 DNS servers and 1 IPv6 DNS server.
- **IPv6:** It will have 2 IPv6 DNS servers and 1 IPv4 DNS server.

Note: *This is not applicable for Manual configuration.*

✧ **DNS Server 1, 2 & 3:**
Specify the DNS (Domain Name System) server address to be configured for the BMC.

Notes:

- *IPv4 Addresses should be given in dotted decimal representation.*
- *IPv6 Addresses are supported and must be global unicast addresses.*
- *DNS Server Address will support the following:*
  - *IPv4 Address format.*
  - *IPv6 Address format.*


✧ **Save:** Save the entered changes.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6.6.4 Sideband Interface (NC-SI)

This section is used to configure Network Controller Sideband Interface (NCSI) settings.

To open the Sideband Interface (NC-SI) page, click **Settings > Network Settings > Sideband Interface (NC-SI)**.

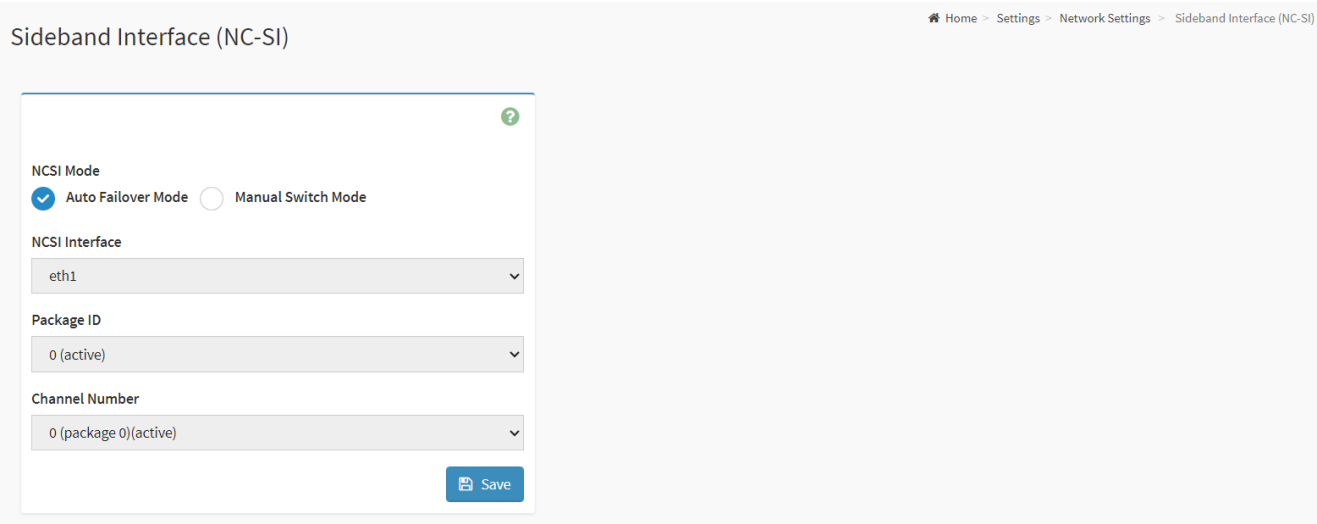


The fields of the Sideband Interface (NC-SI) page are explained below.

- **NCSI Mode:**
  - If you select **Auto Failover Mode**, the NCSI interface and other settings will be configured automatically.
  - If you select **Manual Switch Mode**, you are allowed to configure the below settings.
- **NCSI Interface:** Select the NSCI interface for which you need to configure NCSI settings.
- **Package ID:** Select the package ID to be configured for the selected interface.
- **Channel Number:** Select the channel number to be configured for the selected interface.
- **Save:** Save the settings.

8.2.7 Remote Management

The "Remote Control" includes two functions: KVM and SOL, KVM is mainly used to remotely access the x86 system through WEB, and SOL is mainly to access x86 BIOS configuration information through WEB, WEB UI is as follows.

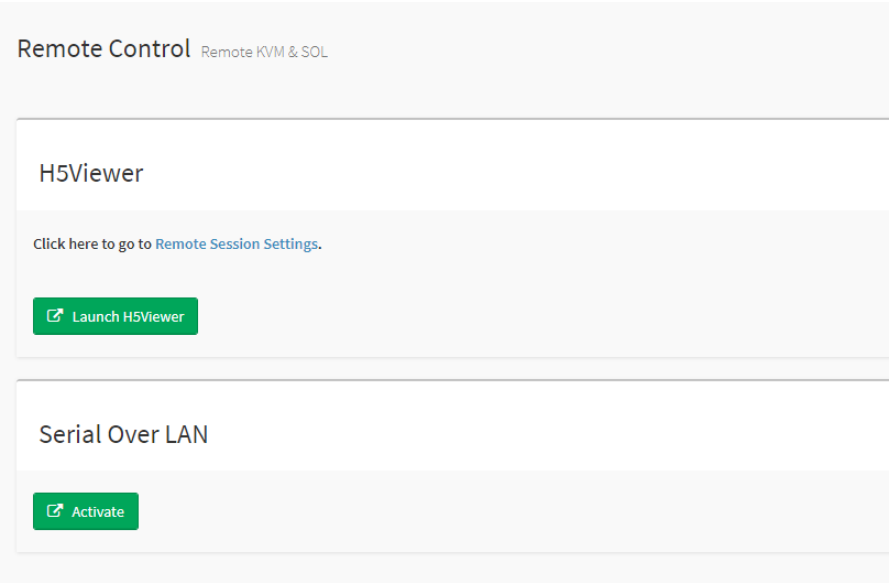

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.7.1 KVM

Launch H5Viewer
The system and browser requirements for Remote Control are given below.

System Requirements
Client machine with 8GB RAM.


If the client machine has 4GB RAM or lower, there will be lag in Video/Keyboard/ Mouse/Media redirection functionality.

Supported Browsers
- ✧ Chrome latest version
- ✧ IE11 and above
- ✧ Firefox (with limited support)
- ✧ Edge
- ✧ Safari (On Mac only)

Note: *It is advisable to use Chrome or IE for H5Viewer, since Firefox has its own memory limitations.*

To open Remote Control page, click Remote Control from the menu bar. A detailed description of the menu items is given below.

Open the **"Remote Control"** page, click **"Launch H5Viewer"**. A sample screenshot of the Remote KVM page is shown below.

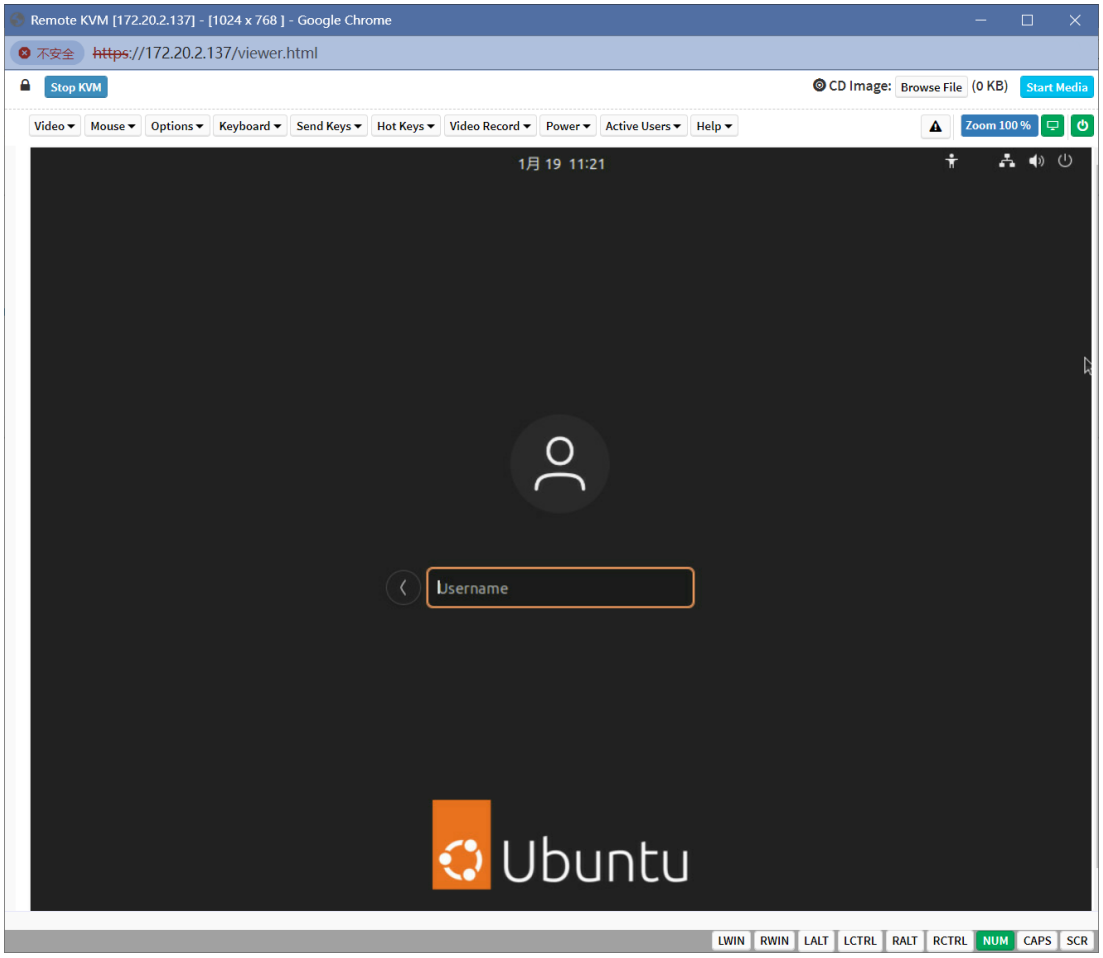


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure to Start KVM

1. Click Launch H5Viewer to open the Remote Control KVM page.
2. To stop the H5Viewer video redirection, click Stop KVM.

Procedure to Start /Stop Media

1. Click **Browse File** to select CD Image. After selecting the image, **Select/Unselect** media boost option.
2. Click **Start Media** to redirect the selected CD image file to the Host. A sample screenshot is as shown below.
   Note: *If media boost mode is selected, the processes related to media redirection will have high priority than other processes. This will improve media performance but other processes will have limited access to CPU cycle.*



3. To stop the CD Image redirection, click **Stop Media**.

A detailed description of menu items are given below.

Video

This menu contains the following sub menu items.

Pause Video: This option is used for pausing Console Redirection.

Resume Video: This option is used to resume the Console Redirection when the session is paused.

Refresh Video: This option can be used to update the display shown in the Console Redirection window.

Capture Screen: This option helps to take the screenshot of the host screen and save it in the client s system.

Mouse

Show Client Cursor: This menu item can be used to show or hide the local mouse cursor on the remote client system.

Mouse Mode: This option handles mouse emulation from local window to remote screen using either of the two methods. Only Administrator has the right to configure this option.

- **Absolute mouse mode**: The absolute position of the local mouse is sent to the server if this option is selected.
- **Relative mouse mode**: The Relative mode sends the calculated relative mouse position displacement to the server if this option is selected.
- **Other mouse mode**: This mouse mode sets the client cursor in the middle of the client system and sends the deviation to the host. This mouse mode is specific for SUSE Linux installation.
  Note: *AMI MegaRAC SP-X suggests users to use Linux version of OS except SUSE11.4 with BMC to avoid mouse sync issue in absolute mouse mode.*

  Client cursor will be hidden always. If you want to enable, use Alt + C to access the menu.

Options

Zoom:

Normal - By default, this option is selected.

Zoom In - For increasing the screen size. This zoom varies from 100% to 150% with an interval of 10%

Zoom Out - For decreasing the screen size. This zoom varies from 100% to 50% with an interval of 10%

Block Privilege Request: To enable or disable the access privilege of the user.

*__Compression Mode:__ This option helps to compress the Video data transfer to the specific mode.

*__DTC Quantization Table:__ This option helps to choose the video quality.

Note: **Specific to AST SOC.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Keyboard

Keyboard Layout: This feature is fully compatible when host and client has the same keyboard language layout. If the client and host language layouts differ, some special characters will not be compatible.

List of Host Physical Keyboard languages supported in SPX H5Viewer.

- English U.S.
- German.
- Japanese.

Send Keys

This option is used to key items. This menu contains the following sub menu items.
Hold Down
Press and Release

Hold Down

This menu contains the following sub menu items.
Right Ctrl Key: This menu item can be used to act as the right-side <CTRL> key when in Console Redirection.
Right Alt Key: This menu item can be used to act as the right-side <ALT> key when in Console Redirection.
Right Windows Key: This menu item can be used to act as the right-side <WIN> key when in Console Redirection.
Left Ctrl Key: This menu item can be used to act as the left-side <CTRL> key when in Console Redirection.
Left Alt Key: This menu item can be used to act as the left-side <ALT> key when in Console Redirection.
Left Windows Key: This menu item can be used to act as the left-side <WIN> key when in Console Redirection.
You can also decide how the key should be pressed: Hold Down or Press and Release.

Press and Release

Ctrl+Alt+Del: This menu item can be used to act as if you depressed the <CTRL>,

<ALT>and<DEL> keys down simultaneously on the server that you are redirecting.

Left Windows Key: This menu item can be used to act as the left-side <WIN> key when in Console Redirection.
You can also decide how the key should be pressed: Hold Down or Press and Release.

Right Windows Key: This menu item can be used to act as the right-side <WIN> key when in Console Redirection.

Context Menu Key: This menu item can be used to act as the context menu key, when in Console Redirection.

Print Screen Key: This menu item can be used to act as the print screen key, when in Console Redirection.

Hot Keys

This menu is used to add the user configurable shortcut keys to invoke in the host machine. The configured key events are saved in the BMC.

This menu contains the following sub menu items.

- **Add Hot Keys** - This menu is used to enable macros. Click **Add** to macros.

Video Record

This menu contains the following sub menu items.

Record Video: This option is to start recording the screen.

Stop Recording: This option is used to stop the recording.

Record Settings: This option is used to set video record duration and video compression value. Video record duration value should be in the range of 1 to 1800 seconds. Video Compression value should be in the range of 0.1 (Low image quality) to 1.0 (High image quality).

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Normalized video resolution to 1024 X 768 (*specific to AST SOC): Host video will be scaled to 1024 x 768 in the recorded video file. Enabling this option improves client-side video recording performance in H5Viewer.

Disable this option to record video at same resolution as host video. The host video capture depends on client system performance. If this option is disabled, recorded video file may have inconsistency. (i.e., Recorded video file duration may not be the same as configured value).

Note:

The Maximum video file size allowed is around 40MB. If the video file size reaches its max size limit, the recorded file is downloaded and recording will be in progress until the configured video recording time is reached. The video file is saved as video date-month-year hr-min-sec part no in client side video recording.

User have to take care of saving the video files in different browsers.

When H5Viewer focus is lost and if video recording is in progress, the recording will be stopped with a notification message and the recorded video file will be discarded.

Due to browser limitation, Set timeout/set interval will be delayed from specified time of interval when browser window loses focus, hence video server will not send the video packets to H5Viewer and so the video recording will be stopped.

Power

The power options are to perform any power cycle operation. Click on the required option to perform the following operation.

Reset Server: To reboot the system without powering off (warm boot).

Immediate Shutdown: To perform Power OFF Immediately.

Orderly Shutdown: To Power OFF the server in proper order.

Power ON Server: To Power ON the server.

Power Cycle Serve: To first power off, and then reboot the system (cold boot).

Active Users

Click this option to display the active users and their system IP address.

Active KVM Session can be terminated when there are multiple KVM Session from Master [FULL Privilege KVM Session].

Help

Click this option to get more information About H5Viewer. The KVM Remote Console utility version and plugin version will be displayed.

Quick Buttons

Quick Buttons: The upper right of H5Viewer window displays all the quick buttons. These quick buttons allow you to perform the below functions by clicking them.

Quick Buttons	Explanation
	This quick button will show / hide notifications dropdown menu, which will contain the list of notifications displayed by H5Viewer.
	It shows the current zoom value in percentage.
	This quick button is used to display the current host monitor status. If icon is in green color, then host monitor is unlocked. If the icon is in red color host monitor is locked. By clicking the button, host monitor status can be toggled.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Quick Buttons	Explanation
	This quick button is used to display the current server power status. If the icon is in green color, the server status is powered on. If the icon is in red color, the server status is powered off. Click the button to toggle immediate power off / power on the host.

Status bar buttons



Num/Caps/Scroll lock buttons are LED status buttons that denotes the current status of Num/Caps/ Scroll lock in the host.

Keyboard LED Sync

When the H5Viewer is launched, the keyboard locks status and LEDs denoting the lock status of the host machine, should be in sync with the client machine. That is, if the Num/Caps/Scroll lock is enabled/disabled in the client machine, the same should be updated in the host machine as well.

Note:

Client-Side Limitations

Due to web browser related security concerns, this feature has following limitations.

- *Host LED status will be synced with client LED status, only if user presses any key in client keyboard when H5Viewer window is in focus.*
- *Client keyboard LED status cannot be updated from web browsers.*

Host Side Limitations

- In some Linux hosts, when the host is booted into text mode, CAPS LOCK LED status will not be updated properly. CAPS LOCK LED will not turn ON/OFF while changing the CAPS lock status in the host OS.

- In such cases, H5Viewer CAPS LOCK synchronization functionality will not work properly.

-Example - Typing letters in H5Viewer (after pressing CAPS LOCK) will toggle between lower to upper case inside host.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

KVM Sharing

MegaRAC SP-X stack supports N number of KVM redirection sessions. Only one full permission H5Viewer session at a time. With Full permission in H5Viewer, the user can control the KVM redirection, and the other H5Viewer users can only view the video redirected from the server without intervention.

When the First user launches H5Viewer, the user will get full permission to control the host during KVM redirection. When another H5Viewer session is launched, the Video server will send KVM sharing permission request packet to the current session, for the new Requesting session.

Once the requesting session is authenticated, a packet containing the information such as the client IP/hostname and user name of the newly authenticated or logged in user, will be send to the current session. The first client shows the dialog as a shown below:

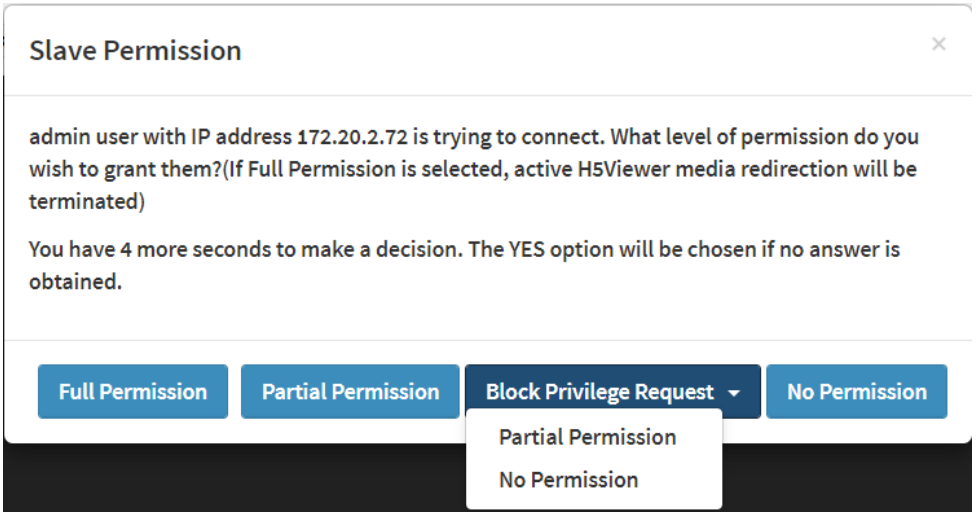

Clicking the button in the dialog box will trigger specified action:

Full Permission: When this button is clicked, the requesting session will receive full access permission, and the current (full permission) session will have a partial KVM access permission only.

Partial Permission: When this button is clicked, the requesting session will receive partial permission and can only view server display (Video only).

Block Privilege Request > Partial Permission: Once this option is selected, both newly requesting session and active partial privileged session will get partial permission as auto response and can only view server display. Further request will be served by auto response mechanism.

Block Privilege Request > No Permission: Once this option is selected, both newly requesting session and active partial privileged session access will be denied as auto response. Further request will be served by auto response mechanism.


No Permission: When this button is clicked, the requesting session access will be denied.

8.2.7.2 SOL

The serial over LAN (SOL) feature is very useful, and the SOL redirects the local serial interface via an IPMI session, allowing remote access to the console.


Click the "**Active**" button on the "Remote Control" interface to enter the SOL output window, and then enter the BIOS configuration interface, and the content of the BIOS configuration will be redirected to the WEB UI, as shown in the following figure.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

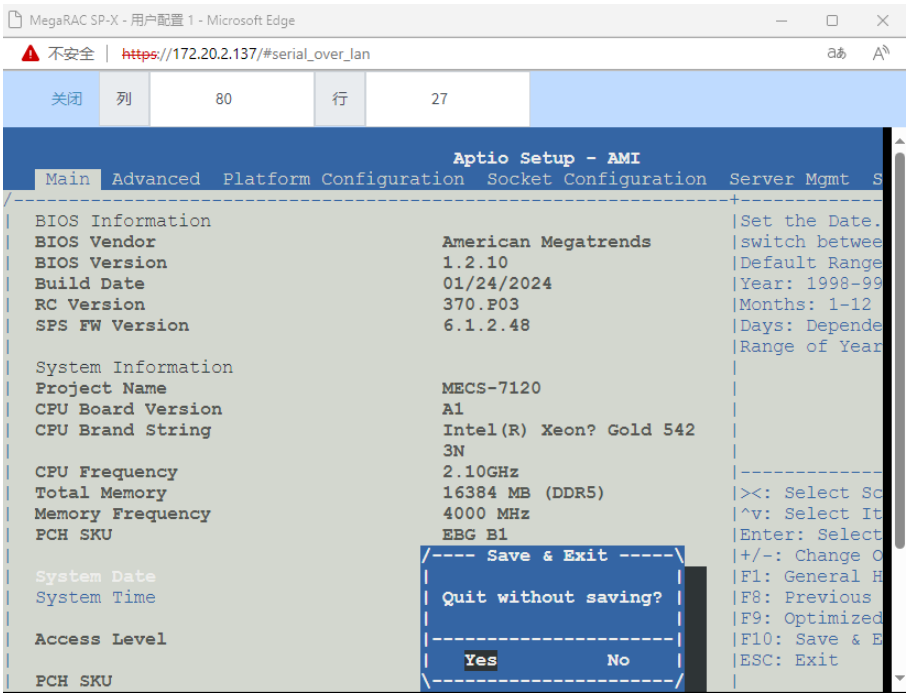

8.2.8 Server Maintenance

This function is mainly maintenance tasks on the device. Click Maintenance on the left function bar to enter the following interface.

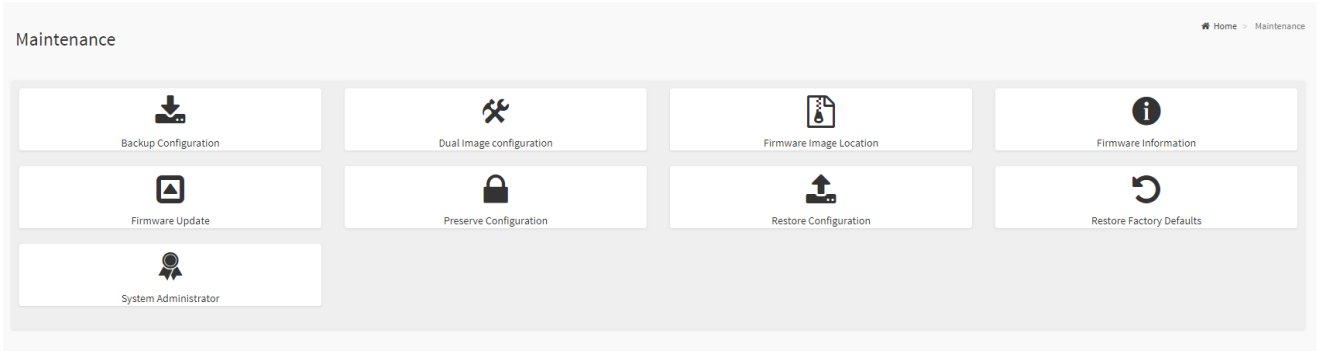

8.2.8.1 Firmware Update

The system upgrade function is for updating and maintaining the system. Mainly used to update BMC and BIOS. Here's how to update via the Web.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.8.1.1 BMC Update

Preserve Configuration

This page allows the user to configure the preserve configuration items, which will be used by the Restore factory defaults to preserve the existing configuration without overwriting with defaults/Firmware Upgrade configuration.

To open Preserve Configuration page, click **Maintenance > Preserve Configuration** from the menu bar. A sample screenshot of Preserve Configuration page is shown below.

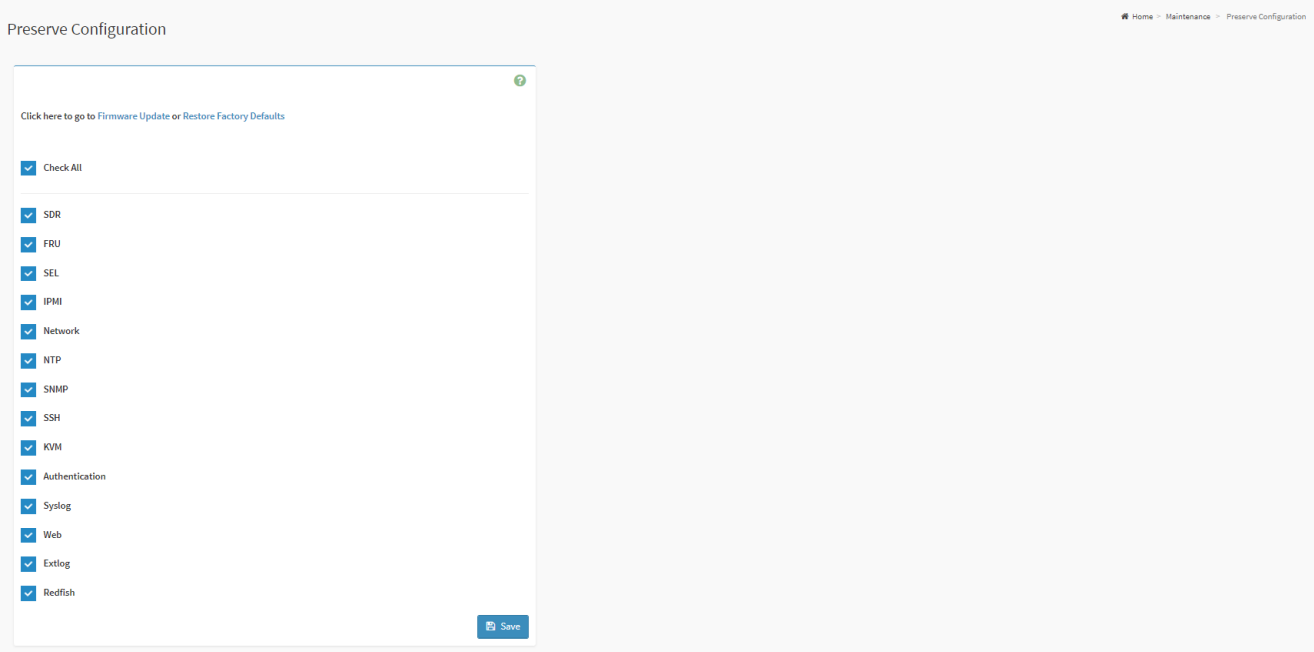

The various fields of Preserve Configuration are as follows.

Click here to go to Firmware Update or Restore Factory Defaults: This link will redirect to the Firmware Update or Restore Factory Defaults page which needs to be preserved.

Check All: To check the entire configuration list.

Save: To save any changes made.

Procedure

1. Click **Firmware Update** or **Restore Configuration** link to view Firmware Update or Restore Configuration page accordingly.
2. Select the required Preserve Configuration items by either choosing the items individually by selecting the appropriate check boxes or by selecting all or none using Check All.
3. Click **Save** to save the changes.

Firmware Update


This wizard takes you through the process of firmware upgradation. A reset of the box will automatically follow if the upgrade is completed or cancelled. An option to Preserve All Configuration is available. Enable it, if you wish to preserve configured settings through the upgrade.

To perform Dual Firmware Update operation, click **Maintenance > Firmware Update** from the menu bar.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure


1. Click **Browse** to select firmware image.
   Note: *A file upload pop-up will be displayed for http/https but in the case of tftp files, the file is automatically uploaded displaying the status of upload.*
2. Click **Start firmware update** to load the Firmware Update information. A sample screenshot is displayed below.

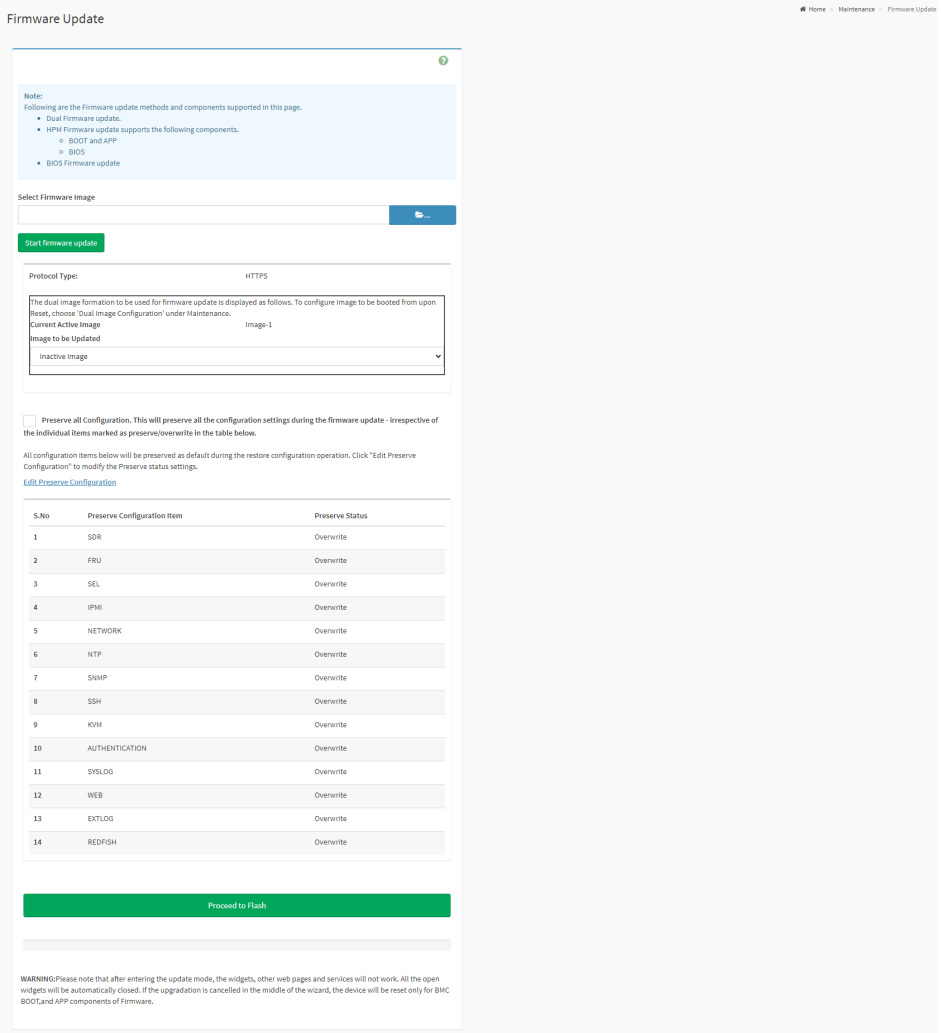

3. Select an Image (Inactive Image, Image 1, Image 2 or Both Image) from Image to be Updated drop-down list. The selected image will be getting flashed.

   • **Image to be Updated:** To update an Image (Inactive, Image 1, Image 2 or Both) to be flashed. If You select an Inactive image, the Inactive image will be flashed. If you select both images, then Both Image 1 and Image 2 will be flashed with uploaded image file.

   • **reboot the device after update:** This option is used to reboot the device after the firmware update.

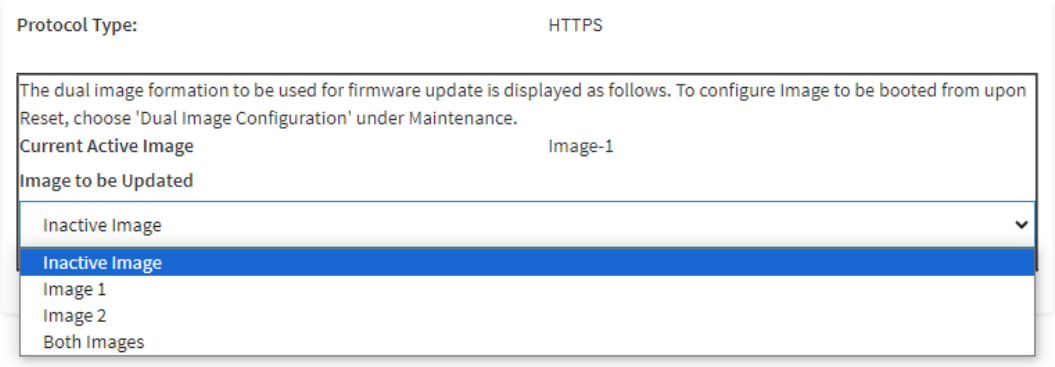

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. Click **Preserve** all Configuration to preserve all configuration.
   • **Preserve all Configuration:** To preserve all configuration.


   • **Edit Preserve Configuration:** To modify the Preserve status settings.

5. Click **Proceed** to Flash, it will prompt you with the warning message. Click **Ok** to start the Firmware update.

The Dual Firmware Update undergoes the following steps:

a) Closing all active client requests
b) Preparing Device for Firmware Upgrade
c) Uploading Firmware Image
d) Verifying Firmware Image:

- In **Section Based Firmware Update**, you can configure the firmware image for section-based flashing. Check the required sections and click **Proceed** to update the firmware.
- If flashing is required for all images, select the option **Full Flash**.
- If you select **Version Compare Flash** option from web, the current and uploaded module versions, FMHlocation, size will be compared.
- If the modules differ in size and location, proceed with force firmware upgrade.
- If all the module versions are same, restart BMC by saying all the module versions are similar.
- If only a few module versions differ, those modules will be flashed.

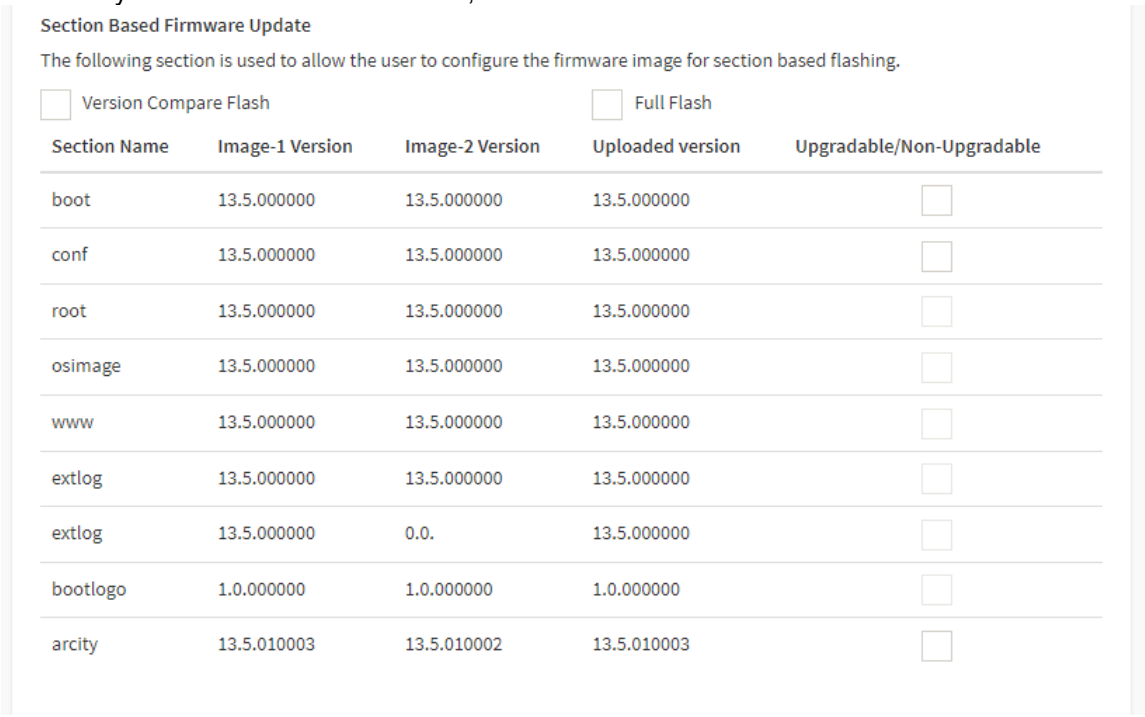


e) Flashing Firmware Image
f) Resetting the image

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.8.2 BIOS Update


This wizard takes you through the process of BIOS firmware upgradation.

To perform BIOS Firmware Update operation, click **Maintenance > Firmware Update**.

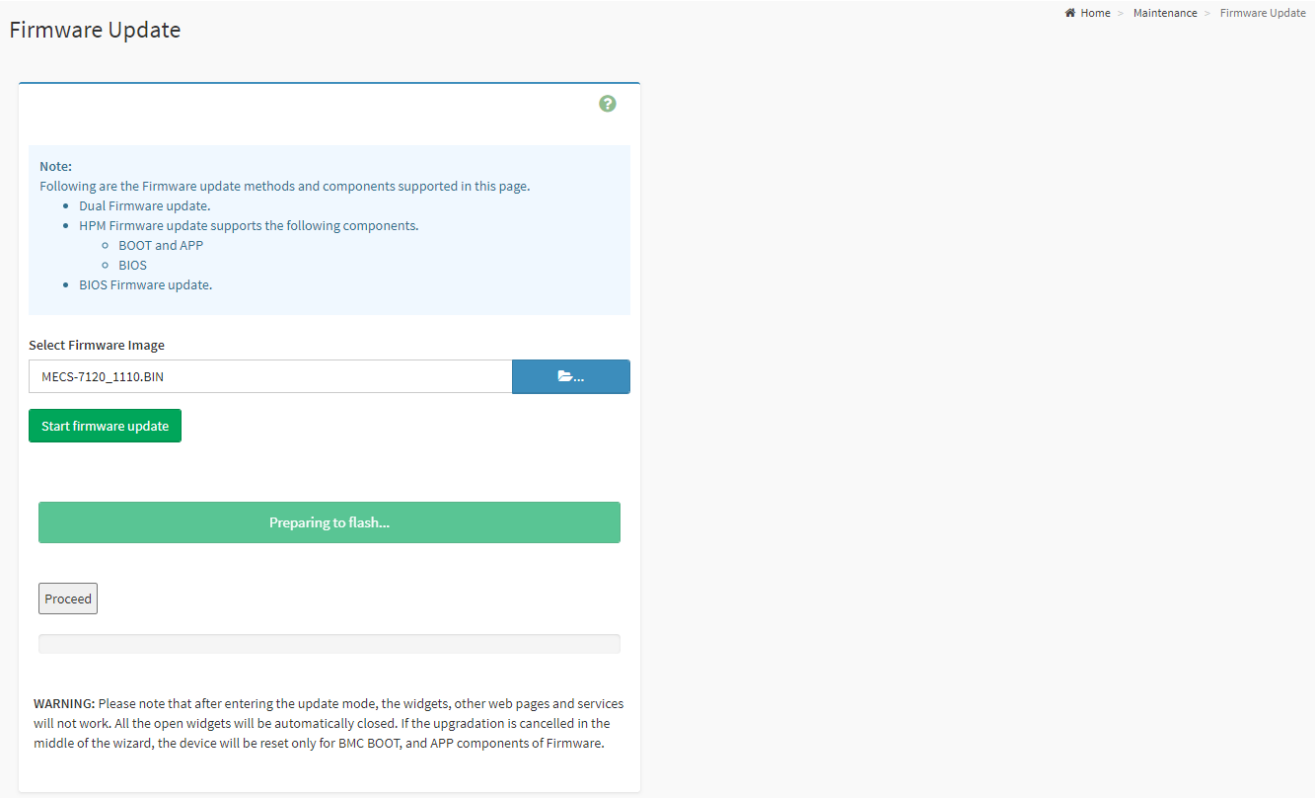


Procedure

1. Click **Browse** to select BIOS Firmware Image.
   Note: *Firmware update wizard will detect .bin and .bin_enc extensions, and validate as BIOS firmware image.*
2. Click **Start firmware update** to load the BIOS firmware image information.
3. Click **Proceed**, it will prompt you with the warning message. Click **OK** to start the firmware update.

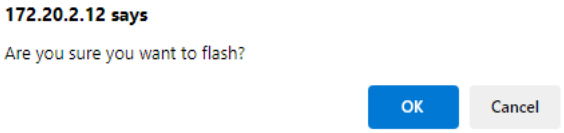


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


4. Select the components from the list to flash. **BIOS** is mandatory, **ME** and **NVRAM** are optional.

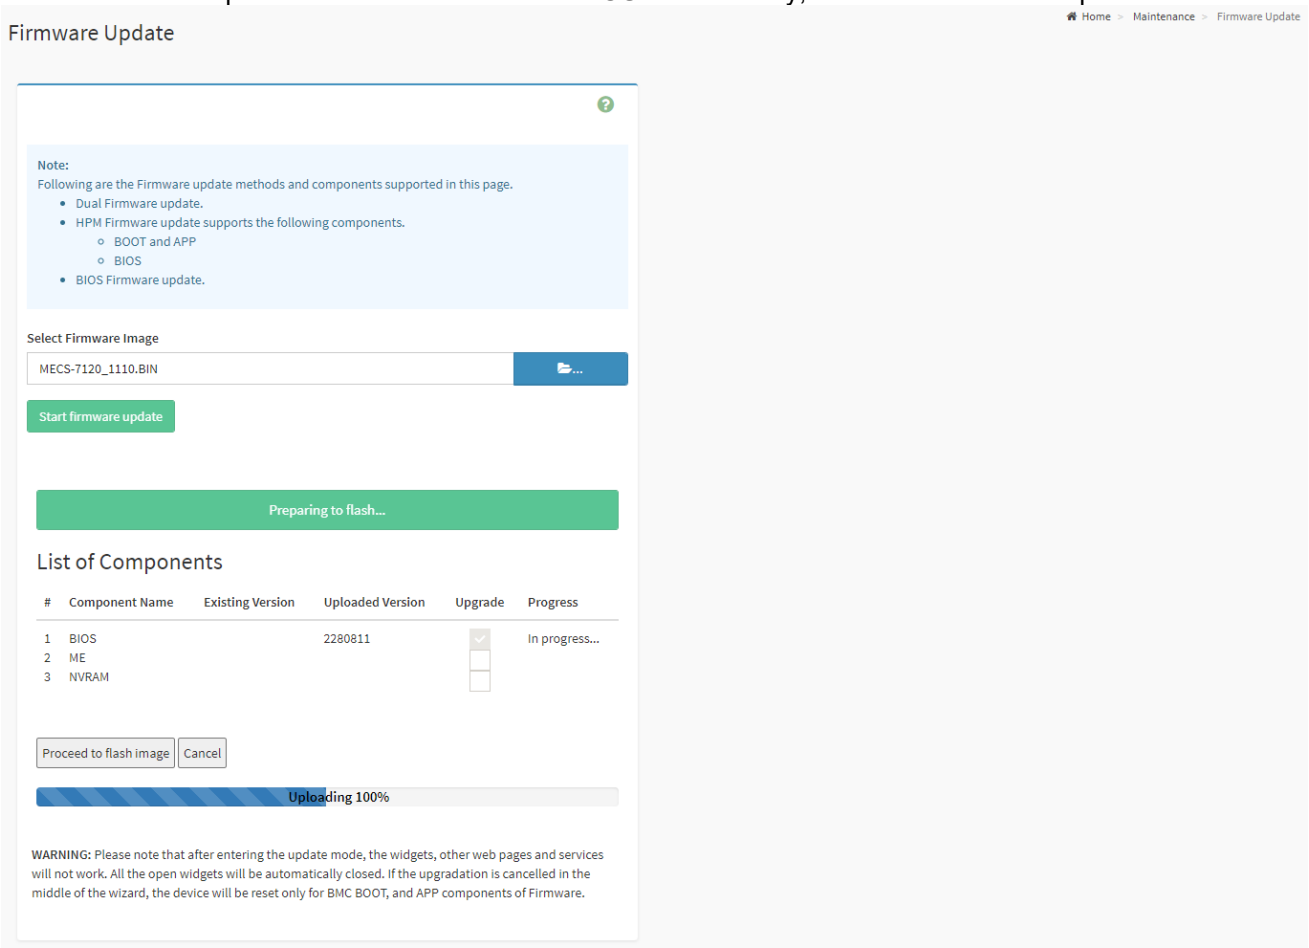


5. Click **Proceed to flash image**, it will prompt you with the selection message. Click **Cancel**, the update will be cancelled.

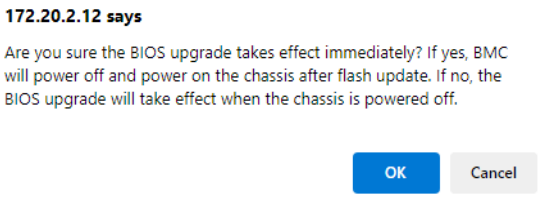

- Click **OK**: Update the device immediately, the chassis will be powered cycle. Once the BIOS firmware update is completed, it will prompt you with the success message. Click **OK** to complete the process.

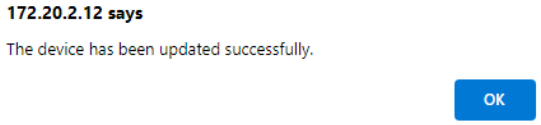

- Click **Cancel**: Update the device when the chassis is powered off. It will prompt you with the notification message. Click **OK** to complete the process.

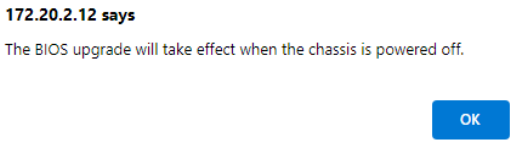

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.8.2.1 HPM Firmware Update – CPLD/BIOS

To perform HPM Firmware Update operation, click **Maintenance > Firmware Update** from the menu bar.

Note: *For BIOS or CPLD firmware update, it is required to hash its uploaded image via creating HPM image utility.*

Create HPM Image


```
./CreateHPMImage create hpmimage.conf
```

CreateHPMImage is the creating HPM image utility from AMI.

Sample of hpmimage.conf

```
[GLOBAL]
DeviceID = 0x20                          ;1B Device ID as per IPMI
ManufacturerID = 0x005f13                ;3B Manufacturer ID as per IPMI
ProductID = 0x7120                       ;2B Product ID
HPMImage = /home/bmc/outputjbc_02b4.hpm  ;Path & Filename of final output HPM Image
[CPLD]                                   ;Component Type: BIOS, CPLD
UpgradeActionType = 0x02                 ;1B Upgrade Action Type: 0x02 = Upload, 0x03 - 0xFF = Reserved
FwVersionMajor = 0x02                    ;1B This component's Major Version
FwVersionMinor = 0x04                    ;1B This component's Minor Version
FwVersionAux = 0x02200000                ;4B This component's Aux Version
FwDescription = "cpld"                   ;21B Firmware Description String to be used
FwData = /home/bmc/cpld_02b4.jbc         ;Path & Filename of Component's Image
SectionFlash = 0x0                       ;For Section based flashing of the particular component 0 -
disabled 1 - enabled
```


Note: *The CPLD Image should be a* ***.jbc*** *file and enable the option "****Enable real-time ISP to allow background programming when available****".*




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Procedure for CPLD Firmware Update


1. Select HPM format of CPLD supported image to perform the CPLD Firmware Update.
2. Click **Start firmware update** to load the Firmware Update information. Once the image is successfully uploaded, the uploaded image information such as **Component Name**, **Existing Version**, **Uploaded Version** and **Upgrade** will be displayed as shown in the screenshot below. In addition, all the CPLD devices information such as **Name**, **Interface**, **Interface Number**, **ID code** and **Firmware Version** will be displayed as well. User can select the device that needs to be updated.

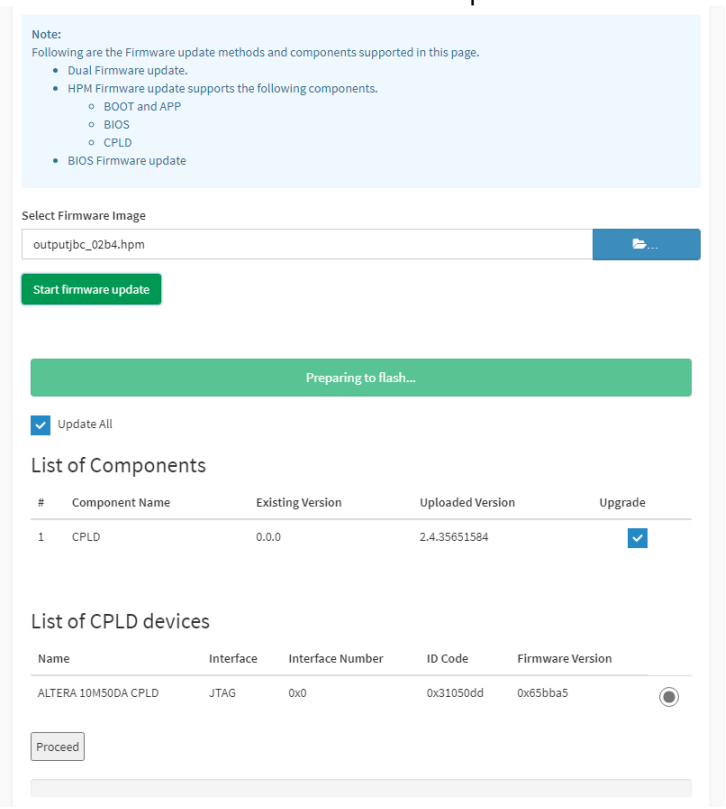

3. Click **Proceed**, it will prompt you with the warning message. Click **OK** to start the firmware update.

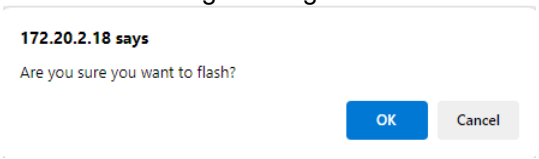


If a CPLD firmware has been uploaded, it will prompt you with the selection message. Click **Cancel**, the update will be cancelled.

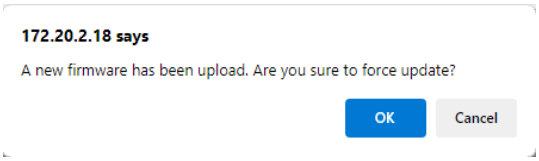


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

A sample screenshot is shown below:

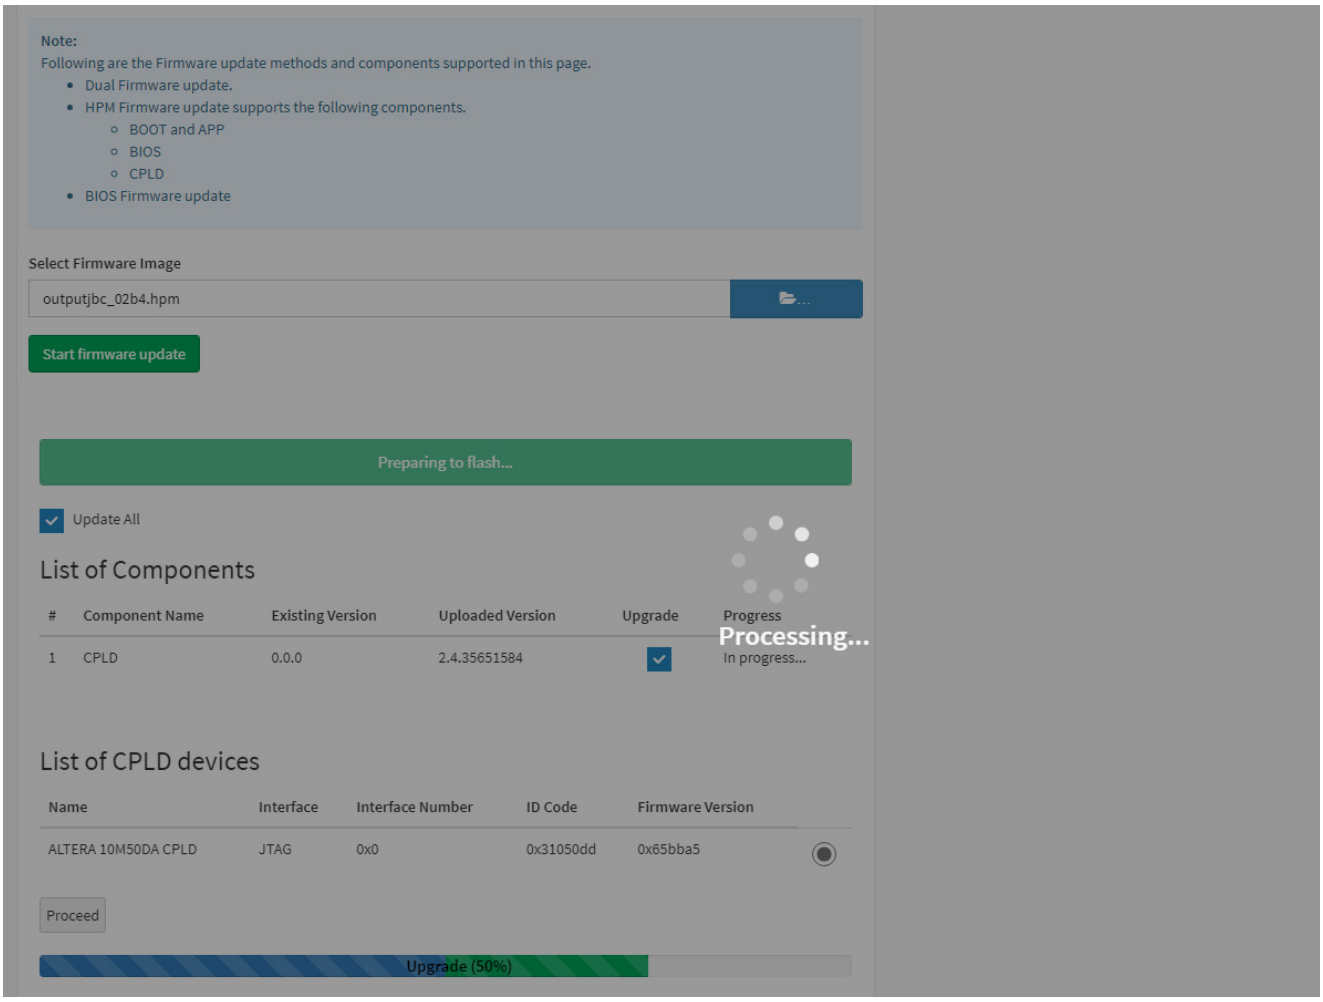

4. Once the CPLD Firmware Update process is completed, an alert message will be displayed as shown in the screenshot below.

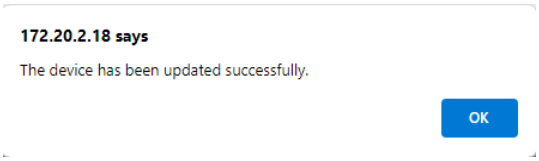

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


8.2.8.3 Firmware Configuration

8.2.8.3.1 Dual Image Configuration

This page is used to configure the dual image information. Dual Image support feature is helpful to store two firmware images on two SPI flash, and boot any of the image according to users request.

The running firmware is responsible for setting the Boot Selector options and Firmware Upload Selector options.

To open Dual Image Configuration, click **Maintenance > Dual Image Configuration** from the menu bar. A sample screenshot of Dual Image Configuration page is shown below.

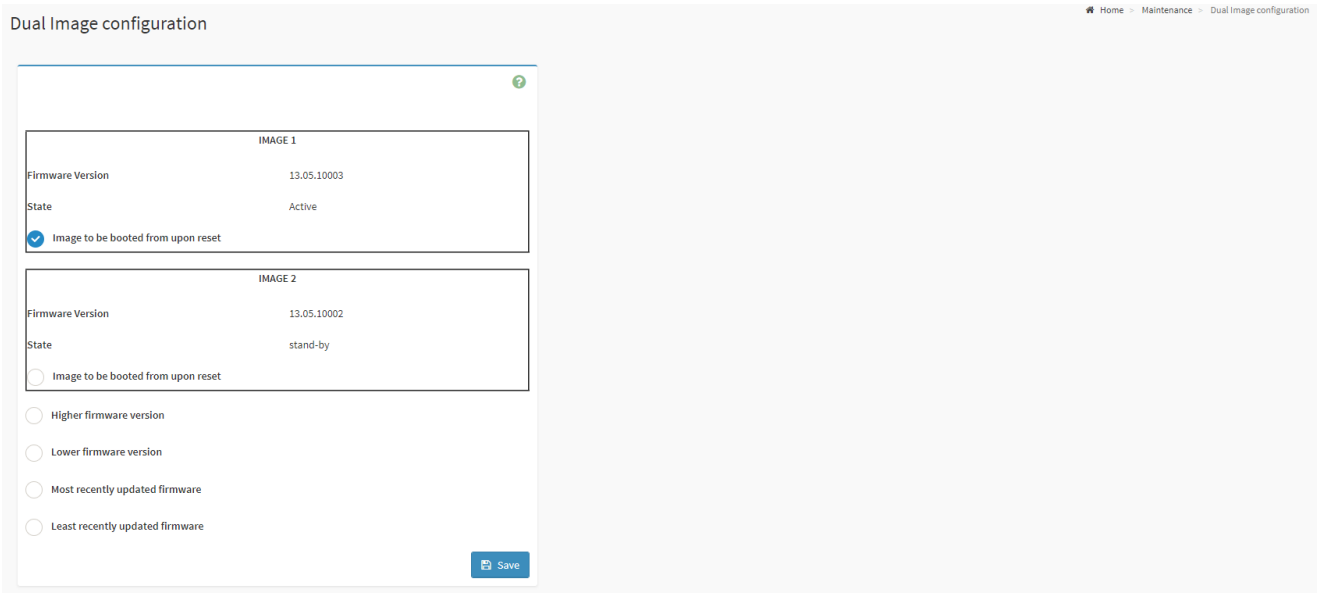

The various options of Dual Image Configuration are given below.

Firmware Version: Displays the firmware version of both images.

State: Displays the current state of both images.

Image to be booted from upon reset: This option is to boot particular image (either 1 or 2) in the next boot up process.

Higher firmware version: This option is to boot higher firmware version image among the dual images in the next boot up process.

Lower firmware version: This option is to boot lower firmware version image among the dual images in the next boot up process.

Most recently updated firmware: This option is to boot most recently updated firmware image among the dual images in the next boot up process.

Least recently updated firmware: This option is to boot least recently updated firmware image among the dual images in the next boot up process.

Procedure

1. Select the required image to be configured or the required option for Image setting.
2. Click **Save** to save the changes.

Fail Safe Booting Configuration:

Hardware based fail safe boot support: This feature supports switching to secondary image as failsafe using hardware configurations. Using this feature, the user can boot into secondary image, even though primary uboot is crashed. Please verify whether SOC supports this feature.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Software FailSafe Boot: Legacy AMI dual image support. This feature uses common UBOOT which switches between 2 different images based on user requirement. This feature does not requires a special hardware support.

8.2.9 One-Click Log Collection

The One-Click Log Collection feature enables users to download essential BMC information data for detailed analysis of BMC status or issue identification.

To open the One-Click Log Collection, click **One-click Log collection** from the menu bar. A sample screenshot of Event Log page is shown below.



Click the "**Download**" button to automatically download the Log to the system.

The log package is named：

One-Click_Collection_Log_[time].zip


Inside the zip file, you will find the following folders:

- conf: Configuration files
- tmp: Temporary files
- var: Variable files

8.2.10 Firmware and Hardware versions

To get the version info of BMC, BIOS, CPLD and hardware, please refer to home page, up-left corner.

For example:

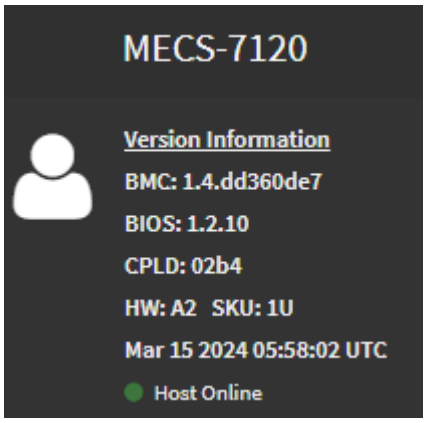

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3 IPMI

Intelligent Platform Management Interface (IPMI) is a standardized interface used for managing a computer system and monitoring its operation. It provides a set of specifications for hardware-based management, independent of the operating system.

8.3.1 Overview of ipmitool

The ipmitool is a command-line utility that interfaces with the IPMI system. It allows administrators to execute a range of IPMI commands to manage and monitor servers. This tool is essential for system management, providing an interface to the IPMI functionalities of the server's BMC.

8.3.1.1 General Usage of ipmitool

The ipmitool allows for a range of operations through its command-line interface. The general syntax includes various parameters for network communication and authentication.

Common Parameters:

-H or --hostname: Hostname or IP address of the target server (for network interfaces).

-U or --user: Username for login.

-P or --password: Password for login (it's recommended to input interactively for security).

Parameter	Alias	Description
-H	--hostname	Hostname or IP address of the target server (for network interfaces).
-U	--user	Username for login.
-P	--password	Password for login (recommended to be input interactively for security).

8.3.1.2 Specific Interface Options

LAN Interface (lan)

Usage: ipmitool -I lan -H [hostname] -U [username] -P [password] [command]

Note: *The LAN interface is suitable for local communication with IPMI. For remote management capabilities, the LANplus interface should be used.*

Example:

```
~ # ipmitool -I lan -H 127.0.0.1 -U admin -P admin.123 mc info
IOCTL to get IP failed: -1
Device ID                 : 32
Device Revision           : 1
Firmware Revision         : 1.03
IPMI Version              : 2.0
Manufacturer ID           : 24339
Manufacturer Name         : ADLINK Technology Inc.
Product ID                : 28960 (0x7120)
Product Name              : Unknown (0x7120)
Device Available          : yes
Provides Device SDRs      : yes
Additional Device Support :
    Sensor Device
    SDR Repository Device
    SEL Device
    FRU Inventory Device
    IPMB Event Receiver
    IPMB Event Generator
    Chassis Device
Aux Firmware Rev Info     :
    0x11
    0x0d
    0x10
    0xb9
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LANplus Interface (lanplus)

Usage: ipmitool -I lanplus -H [hostname] -U [username] -P [password] [command]

Enhanced LAN interface with better encryption and additional features for secure remote communication.

Example:

```
root@adlink-Default-string:/home/adlink# ipmitool -I lanplus -H 172.20.2.137 -U admin -P admin.123 mc info
Device ID                 : 32
Device Revision           : 1
Firmware Revision         : 1.03
IPMI Version              : 2.0
Manufacturer ID           : 24339
Manufacturer Name         : ADLINK Technology Inc.
Product ID                : 28960 (0x7120)
Product Name              : Unknown (0x7120)
Device Available          : yes
Provides Device SDRs      : yes
Additional Device Support :
    Sensor Device
    SDR Repository Device
    SEL Device
    FRU Inventory Device
    IPMB Event Receiver
    IPMB Event Generator
    Chassis Device
Aux Firmware Rev Info     :
    0x11
    0x0d
    0x10
    0xb9
```

KCS Interface (kcs)

Usage: ipmitool [command]

KCS (Keyboard Controller Style) is used for communication between the x86 segment and the BMC directly, without needing the -I parameter. It's used for local, direct communication with BMC.

Example:

```
root@adlink-Default-string:/home/adlink#
root@adlink-Default-string:/home/adlink# ipmitool mc info
Device ID                 : 32
Device Revision           : 1
Firmware Revision         : 1.03
IPMI Version              : 2.0
Manufacturer ID           : 24339
Manufacturer Name         : ADLINK Technology Inc.
Product ID                : 28960 (0x7120)
Product Name              : Unknown (0x7120)
Device Available          : yes
Provides Device SDRs      : yes
Additional Device Support :
    Sensor Device
    SDR Repository Device
    SEL Device
    FRU Inventory Device
    IPMB Event Receiver
    IPMB Event Generator
    Chassis Device
Aux Firmware Rev Info     :
    0x11
    0x0d
    0x10
    0xb9
root@adlink-Default-string:/home/adlink#
```

8.3.2 ipmitool Command Introduction

This section is dedicated to introducing and explaining a variety of ipmitool commands, with detailed descriptions of their specific uses.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.2.1 Sensor Information

The ipmitool command is used to retrieve sensor information, allowing system users to monitor various hardware sensors within the server. These sensors can include temperature, voltage, fan speed, and other key operating metrics.

List sensor information using ipmitool command:

Command:

```
ipmitool sensor
ipmitool sensor list
```

Return Details:

Return Details	Description
Sensor Name	Identifies the sensor.
Reading	The current value or status reported by the sensor.
Units	The measurement units for the sensor reading.
Status	Indicates the operational status of the sensor.
Lower/Upper Thresholds	The predefined limits for the sensor values, indicating warning or critical conditions.

Example:

```
root@adlink-Default-string:/home/adlink# ipmitool sensor list
P12V_PSU         | 12.230     | Volts       | ok    | 10.800    | 11.160    | 11.400    | 12.600    | 12.840    | 13.200
P12V_AUX         | 12.200     | Volts       | ok    | 10.800    | 11.160    | 11.400    | 12.600    | 12.840    | 13.200
P3V3             | 3.315      | Volts       | ok    | 2.970     | 3.069     | 3.135     | 3.465     | 3.531     | 3.630
P5V              | 5.120      | Volts       | ok    | 4.500     | 4.650     | 4.750     | 5.250     | 5.350     | 5.500
PVNN_PCH_AUX     | 0.905      | Volts       | ok    | 0.810     | 0.837     | 0.855     | 0.941     | 0.963     | 0.990
P1V05_PCH_AUX    | 1.057      | Volts       | ok    | 0.945     | 0.977     | 0.998     | 1.082     | 1.124     | 1.155
P1V8_AUX         | 1.816      | Volts       | ok    | 1.620     | 1.674     | 1.728     | 1.864     | 1.926     | 1.980
P3V_BAT          | 2.998      | Volts       | ok    | 2.002     | 2.302     | 2.500     | 3.148     | 3.208     | 3.298
PVCCIN_CPU       | 1.813      | Volts       | ok    | 1.441     | 1.489     | 1.519     | 1.891     | 1.927     | 1.981
P0V8_E810        | 0.822      | Volts       | ok    | 0.720     | 0.744     | 0.760     | na        | na        | 0.880
PVCCINFAON       | 1.090      | Volts       | ok    | 0.856     | 0.900     | 0.930     | 1.130     | 1.150     | 1.180
P3V3_AUX         | 3.300      | Volts       | ok    | 2.970     | 3.069     | 3.135     | 3.465     | 3.531     | 3.630
PVCCFA_EHV_FIVRA  | 1.812      | Volts       | ok    | 1.620     | 1.674     | 1.710     | 1.890     | 1.926     | 1.980
P0V9_E810        | 0.888      | Volts       | ok    | 0.810     | 0.837     | 0.855     | 0.945     | 0.963     | 0.990
PVCCD_HV         | 1.124      | Volts       | ok    | 0.990     | 1.030     | 1.050     | 1.192     | 1.220     | 1.270
P12V_S3_DIMM     | 12.060     | Volts       | ok    | 10.800    | 11.160    | 11.400    | 12.600    | 12.840    | 13.200
PCIE_Outlet_Temp | 27.000     | degrees C   | ok    | na        | na        | na        | 55.000    | 60.000    | 65.000
CPU_Outlet_Temp  | 33.000     | degrees C   | ok    | na        | na        | na        | na        | na        | na
SYS_Inlet_Temp   | 28.000     | degrees C   | ok    | na        | na        | na        | na        | na        | na
HDD_BP_Temp      | 22.000     | degrees C   | ok    | na        | na        | na        | 47.000    | 51.000    | 55.000
CPU_Temp         | 37.000     | degrees C   | ok    | na        | na        | na        | 91.000    | 95.000    | 99.000
CPU_TJMAX        | 97.000     | degrees C   | ok    | na        | na        | na        | na        | na        | na
PCH_Temp         | 31.000     | degrees C   | ok    | na        | na        | na        | na        | na        | na
DIMM_A1_Temp     | na         | degrees C   | na    | na        | na        | na        | 106.000   | 116.000   | 125.000
DIMM_B1_Temp     | na         | degrees C   | na    | na        | na        | na        | 106.000   | 116.000   | 125.000
DIMM_C1_Temp     | na         | degrees C   | na    | na        | na        | na        | 106.000   | 116.000   | 125.000
DIMM_E1_Temp     | 31.000     | degrees C   | ok    | na        | na        | na        | 106.000   | 116.000   | 125.000
DIMM_G1_Temp     | na         | degrees C   | na    | na        | na        | na        | 106.000   | 116.000   | 125.000
DIMM_H1_Temp     | na         | degrees C   | na    | na        | na        | na        | 106.000   | 116.000   | 125.000
ACPI_Power       | 0x0        | discrete    | 0x0180| na        | na        | na        | na        | na        | na
```

Other ipmitool Commands Related to Sensor Information

Below is a table summarizing additional ipmitool commands pertinent to sensor management and monitoring:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.2.2 Power Control

Using ipmitool commands, you can effectively control the power mode.

8.3.2.2.1 Power Control Method

Using ipmitool command, it can control the power, such as power on, power off, power cycle, power reset.

Command:

```
ipmitool power <on | off | cycle | reset>
```

Command Element	Description
ipmitool power on	Power on the chassis.
ipmitool power off	Power off the chassis.
ipmitool power cycle	Power off the chassis and power on the chassis.
ipmitool power reset	Restart the chassis.

Example:

```
root@bmc:/# ipmitool power on
Chassis Power Control: Up/On

root@bmc:/# ipmitool power off
Chassis Power Control: Down/Off

root@bmc:/# ipmitool power cycle
Chassis Power Control: Cycle

root@bmc:/# ipmitool power reset
Chassis Power Control: Reset
```

8.3.2.3 Network Configuration

8.3.2.3.1 Get the current configuration of the management port

```
ipmitool lan print [<channel number>]
```

Note: *To determine on which channel the LAN interface is located, issue the 'ipmitool channel info number' command until you come across a valid 802.3 LAN channel.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Example:

```
root@bmc:/# ipmitool lan print 8
Set in Progress         : Set Complete
Auth Type Support       :
Auth Type Enable        : Callback :
                        : User     :
                        : Operator :
                        : Admin    :
                        : OEM      :
IP Address Source       : DHCP Address
IP Address              : 192.168.1.12
Subnet Mask             : 255.255.255.0
MAC Address             : 00:30:64:a8:7b:04
SNMP Community String   : AMI
IP Header               : TTL=0x40 Flags=0x40 Precedence=0x00 TOS=0x10
BMC ARP Control         : ARP Responses Enabled, Gratuitous ARP Disabled
Gratituous ARP Intrvl   : 1.0 seconds
Default Gateway IP      : 192.168.1.1
Default Gateway MAC     : 50:7b:9d:25:56:a1
Backup Gateway IP       : 0.0.0.0
Backup Gateway MAC      : 00:00:00:00:00:00
802.1q VLAN ID          : Disabled
802.1q VLAN Priority    : 0
RMCP+ Cipher Suites     : 3,17
Cipher Suite Priv Max   : XXXaXXXXXXXaXXX
                        :     X=Cipher Suite Unused
                        :     c=CALLBACK
                        :     u=USER
                        :     o=OPERATOR
                        :     a=ADMIN
                        :     O=OEM
Bad Password Threshold  : 0
Invalid password disable: no
Attempt Count Reset Int.: 0
User Lockout Interval   : 0
```

8.3.2.3.2 Set the IP address source

```
ipmitool lan set <channel number> ipsrc <source>
```

source:

- ✧ static: manually configured static IP address
- ✧ dhcp: address obtained by BMC running DHCP

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.2.3.3 Set the IP Address

```
ipmitool lan set <channel number> ipaddr <x.x.x.x>
```

Example:

```
root@bmc:/# ipmitool lan set 8 ipaddr 192.168.1.100
Setting LAN IP Address to 192.168.1.100
```

8.3.2.3.4 Set the Netmask

```
ipmitool lan set <channel number> netmask <x.x.x.x>
```

8.3.2.3.5 Set the Default Gateway IP Address

```
ipmitool lan set <channel number> defgw ipaddr <x.x.x.x>
```

Note: *Make sure the gateway IP address is pingable.*

8.3.2.3.6 Set Network Configuration via BIOS

Enter **BIOS Setup > Server Mgmt > BMC network configuration**.

```
                              Aptio Setup - AMI
                                                                  Server Mgmt
 /-------------------------------------------------+-------------------------\
 |  --BMC network configuration--                  ^|Select to configure LAN ^|
 |  **********************                         *|channel parameters      *|
 |  Configure IPv4 support                         *|statically or           *|
 |  **********************                         *|dynamically(by BIOS or  *|
 |                                                 +|BMC). Unspecified       *|
 |  Lan channel 1                                  +|option will not modify  *|
 |  Configuration Address    [Unspecified]         +|any BMC network         +|
 |  Current Configuration    DynamicAddressBmcDhcp +|parameters during BIOS  v|
 |  Station IP address       0.0.0.0               +|                         |
 |  Subnet mask              0.0.0.0               +|-------------------------|
 |  Station MAC address      00-30-64-66-77-88     +|><: Select Screen        |
 |  Router IP address        0.0.0.0               +|^v: Select Item          |
 |  Router MAC address       00-00-00-00-00-00     +|Enter: Select            |
 |                                                 +|+/-: Change Opt.         |
 |  Lan channel 2                                  +|F1: General Help         |
 |  Configuration Address    [Unspecified]         +|F8: Previous Values      |
 |  Current Configuration    DynamicAddressBmcDhcp +|F9: Optimized Defaults   |
 |  Station IP address       192.168.1.12          v|F10: Save & Exit         |
 |                                                  |ESC: Exit                |
 \-------------------------------------------------+-------------------------/
                    Version 2.22.1289 Copyright (C) 2024 AMI
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000



BIOS Item	Options	Description
Configuration Address source	Static DynamicBmcDhcp	Set the IP address source
Station IP address	x.x.x.x	Set the IP address
Subnet mask	x.x.x.x	Set the netmask
Router IP address	x.x.x.x	Set the default gateway IP address
Router MAC address	xx:xx:xx:xx:xx:xx	Set the default gateway MAC address

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3.2.4 SOL


The serial over LAN (SOL) feature is very useful, and the SOL redirects the local serial interface via an IPMI session, allowing remote access to the console.

Open SOL functionality using ipmitool command:

Command:

```
ipmitool sol activate
```

Example:

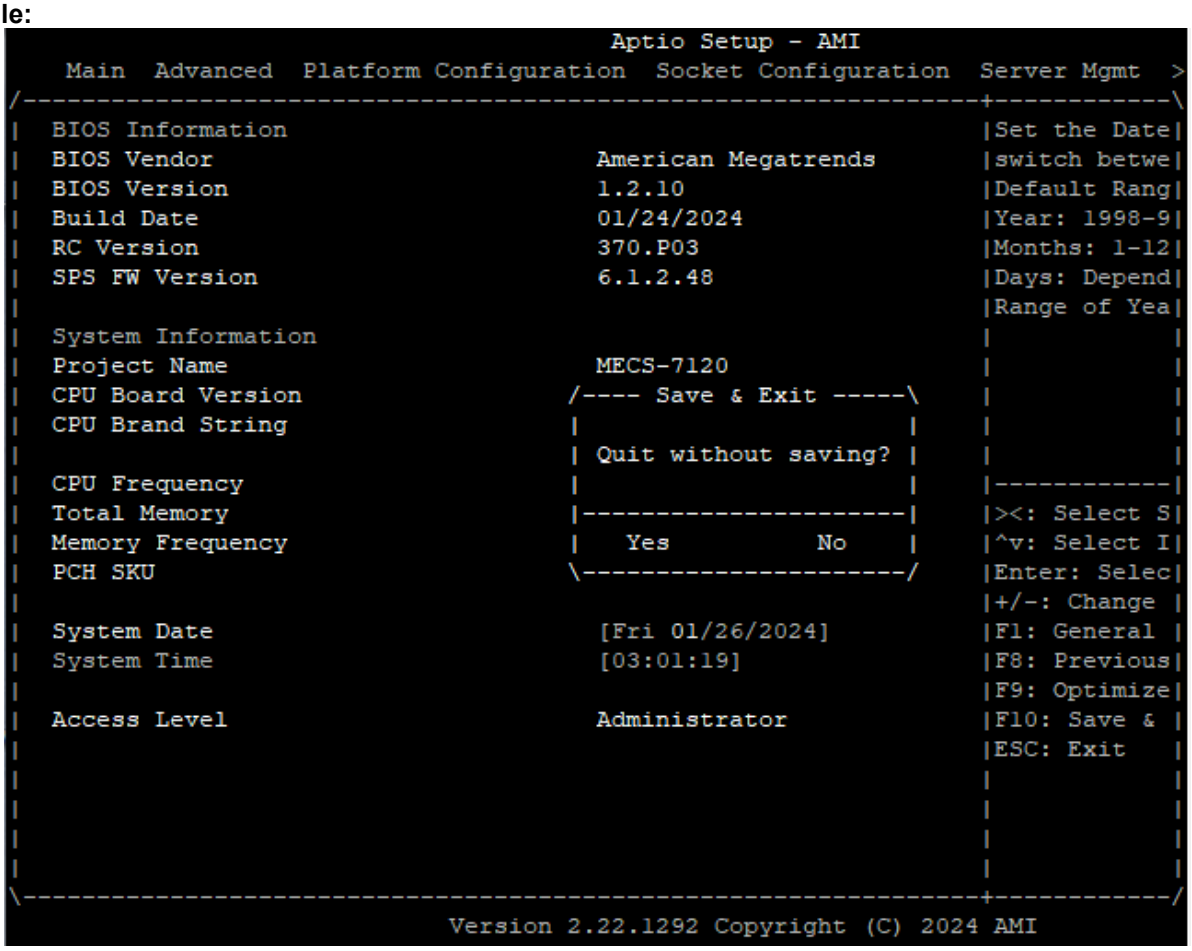

Enter the "ipmitool sol activate" command on CLI to enter the SOL output window, then enter the BIOS configuration interface, and the content of the BIOS field interface will be redirected to the local terminal, as shown in the above figure.

Other ipmitool Commands Related to SOL
Below is a table summarizing additional ipmitool commands related to SOL:

Command Element	Description
ipmitool sol deactivate	Close SOL functionality
ipmitool sol info	Show SOL detailed information
ipmitool sol set <set-in-progress | enabled | force-encryption | force-authentication | privilege-level | character-accumulate-level | character-send-threshold | retry-count | retry-interval | non-volatile-bit-rate | volatile-bit-rate> <value>	Set SOL parameter value

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Command Element	Description
ipmitool sol payload <enable | disable | status>	Set SOL payload value
ipmitool sol looptest	SOL connection stress test

8.3.2.5 BMC Information

To get the BMC information via ipmitool please refer to the following command:

```
ipmitool mc info
```

For example:

```
root@bmc:/# ipmitool mc info
Device ID                 : 32
Device Revision           : 1
Firmware Revision         : 1.03
IPMI Version              : 2.0
Manufacturer ID           : 24339
Manufacturer Name         : ADLINK Technology Inc.
Product ID                : 28960 (0x7120)
Product Name              : Unknown (0x7120)
Device Available          : yes
Provides Device SDRs      : yes
Additional Device Support :
Sensor Device
SDR Repository Device
SEL Device
FRU Inventory Device
IPMB Event Receiver
IPMB Event Generator
Chassis Device
Aux Firmware Rev Info     :
0x64
0x00
0x00
0x00
```

The full BMC version number is composed of the “**Firmware Revision**” and the “**Aux Firmware Rev Info**”. The Firmware Revision contains the major and minor version numbers. The Aux Firmware Rev Info contains the auxiliary version number, which is in little-endian format.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The full version number in the example above is as follows:

Major: 1

Minor: 3

Aux: 0x00000064 (hex) -> 100 (decimal)

8.3.2.6 CPLD Update

```
ipmitool -z 0x3fff hpm upgrade <hpm  file> component 5 force
```

Note: *If a CPLD firmware has been uploaded, it will print "Firmware upgrade procedure failed".*

Example:

```
root@bmc:/# ipmitool -I lanplus -H 172.20.2.18 -U admin -P admin.123 -z 0x3fff hpm upgrade
outputjbc_02b4.hpm component 5 force
Setting large buffer to 16383

PICMG HPM.1 Upgrade Agent 1.0.9:

Validating firmware image integrity...OK
Performing preparation stage...
Services may be affected during upgrade. Do you wish to continue? (y/n): y
OK

Performing upgrade stage:

--------------------------------------------------------------------------------
|ID  | Name        |                    Versions                        | %  |
|    |             |      Active     |      Backup     |      File       |    |
|----|-------------|-----------------|-----------------|-----------------|----|
|*  5|CPLD         |   0.00 00000000 | ---.-- -------- |   2.04 00002002 |100%|
|    |Upload Time: 00:00             | Image Size:  454924 bytes             |
--------------------------------------------------------------------------------
(*) Component requires Payload Cold Reset

Firmware upgrade procedure successful
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4 Redfish

Redfish is a modern, RESTful API used for the management of servers, storage, and networking equipment in data centers and large-scale enterprise environments. It's designed to replace older, less efficient management interfaces with a standardized, scalable, and secure approach.

8.4.1 Network Configuration

8.4.1.1 GET - Ethernet Interface Collection

Request:

```
GET https://{{bmc  ip}}/redfish/v1/Managers/Self/EthernetInterfaces
```

Response:

The response status is 200 OK.

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#EthernetInterfaceCollection.EthernetInterfaceCollection",
    "@odata.etag": "\"1705564980\"",
    "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces",
    "@odata.type": "#EthernetInterfaceCollection.EthernetInterfaceCollection",
    "Description": "Collection of Ethernet Interfaces for this Manager",
    "Members": [
        {
            "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces/eth0"
        },
        {
            "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces/eth1"
        },
        {
            "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces/usb0"
        }
    ],
    "Members@odata.count": 3,
    "Name": "Ethernet Network Interface Collection"
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.1.2 GET - Ethernet Interface Instance

Request:

```
GET https://{{bmc_ip}}/redfish/v1/Managers/Self/EthernetInterfaces/{{instance}}
```

Response:

The response status is 200 OK. The format is JSON.

Ethernet Interface Properties:

Name	Type	Read Only	Description
AutoNeg	Boolean	×	Auto negotiation of speed and duplex on this interface is enabled or not.
DHCPv4	Object	×	Refer to DHCPv4 properties.
DHCPv6	Object	×	Refer to DHCPv6 properties.
Description	String	√	
FullDuplex	Boolean	×	The value of this property shall represent the duplex status of the Ethernet connection on this interface.
HostName	String	×	DNS Hostname without any domain information. Maximum string size limit is 64. Minimum string size limit is 2.
IPv4Addresses	Array of Objects	√	Refer to IPv4 Address properties.
IPv4StaticAddresses	Array of Objects	×	Refer to IPv4 Address properties.
IPv6Addresses	Array of Objects	√	Refer to IPv6 Address properties.
IPv6StaticAddresses	Array of Objects	×	Refer to IPv6 Address properties.
IPv6DefaultGateway	String	√	
Id	String	√	
InterfaceEnabled	Boolean	×	
LinkStatus	String	√	
MACAddress	String	√	
MTUSize	Number	×	Maximum size limit is 1500. Minimum size limit is 576.
MaxIPv6StaticAddresses	Number	√	
Name	String	√	
NameServers	Array of Strings	√	
Oem	Object	√	
PermanentMACAddress	String	√	
SpeedMbps	Number	×	The current link speed of the interface in Mbps.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Name	Type	Read Only	Description
StatelessAddressAutoConfig	Object	×	This object shall contain the IPv4 and IPv6 Stateless Address Automatic Configuration (SLAAC) properties for this interface.
StaticNameServers	Array of Strings	×	Statically-defined set of DNS server IPv4 and IPv6 addresses.
Status	Object	√	
VLAN	Object	×	VLANId: 0~4094.

DHCPv4 properties:

Name	Type	Read Only	Description
DHCPEnabled	Boolean	×	Determines whether DHCPv4 is enabled on this interface.

DHCPv6 properties:

Name	Type	Read Only	Description
OperatingMode	Boolean	×	This property shall control the operating mode of DHCPv6 on this interface. DHCPv6 stateful mode is used to configure addresses, and when it is enabled, stateless mode is also implicitly enabled.

IPv4 Address properties:

Name	Type	Read Only	Description
Address	String	-	IPv4 address.
AddressOrigin	String	-	IPv4 address source.
Gateway	String	-	IPv4 default gateway IP address.
SubnetMask	String	-	IPv4 netmask.

IPv6 Address properties:

Name	Type	Read Only	Description
Address	String	-	IPv6 address.
AddressOrigin	String	-	IPv6 address source.
PrefixLength	String	-	IPv6 network prefix length in bits. Max is 128.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#EthernetInterface.EthernetInterface",
    "@odata.etag": "\"1705564980\"",
    "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces/eth1",
    "@odata.type": "#EthernetInterface.v1_6_2.EthernetInterface",
    "AutoNeg": true,
    "DHCPv4": {
        "DHCPEnabled": true
    },
    "DHCPv6": {
        "OperatingMode": "Stateless"
    },
    "Description": "Ethernet Interface eth1",
    "FullDuplex": true,
    "HostName": "AMI003064667788",
    "IPv4Addresses": [
        {
            "Address": "172.20.2.12",
            "AddressOrigin": "DHCP",
            "Gateway": "172.20.2.1",
            "SubnetMask": "255.255.255.0"
        }
    ],
    "IPv6Addresses": [
        {
            "Address": "fe80::230:64ff:fea1:b104",
            "AddressOrigin": "LinkLocal",
            "PrefixLength": 64
        }
    ],
    "IPv6DefaultGateway": null,
    "Id": "eth1",
    "InterfaceEnabled": true,
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
    "LinkStatus": "LinkUp",
    "MACAddress": "00:30:64:A1:B1:04",
    "MTUSize": 1500,
    "MaxIPv6StaticAddresses": 16,
    "Name": "eth1",
    "NameServers": [
        "192.168.1.213",
        "192.168.1.214"
    ],
    "Oem": {
        "Ami": {
            "@odata.type": "#AMIDNSConfiguration.v1_0_0.AMIDNSConfiguration",
            "DNSEnabled": true,
            "HostNameSetting": "Auto"
        }
    },
    "PermanentMACAddress": "00:30:64:A1:B1:04",
    "SpeedMbps": 100,
    "StatelessAddressAutoConfig": {
        "IPv4AutoConfigEnabled": false,
        "IPv6AutoConfigEnabled": false
    },
    "StaticNameServers": [
        null,
        null,
        null
    ],
    "Status": {
        "Health": "OK",
        "State": "Enabled"
    },
    "VLAN": {
        "VLANEnable": false,
        "VLANId": 0
    }
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.1.3 PATCH - Ethernet Interface Instance

Request:

```
PATCH https://{{bmc_ip}}/redfish/v1/Managers/Self/EthernetInterfaces/{{instance}}
```


Please refer to the **Ethernet Interface Properties** that are patchable for which Read Only is False that can be sent as Request body in JSON format.

Response:


The response status is 202 Accepted, with newly created Task details.

Example: Disable IPv4 DHCP and set static IPv4 address.

Add a key "**If-Match**" in request **Headers** tab. The value is your **ETag** value.

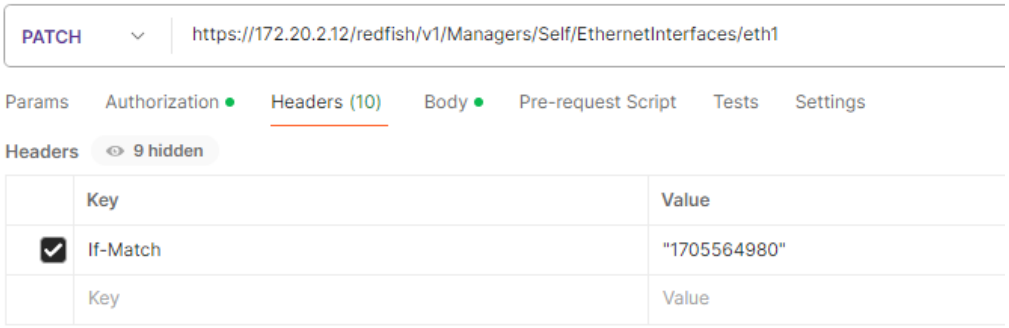

Add **raw** body data in request **Body** tab. The data format is **JSON**.




```
{
    "DHCPv4": {
        "DHCPEnabled": false
    },
    "IPv4StaticAddresses": [
        {
            "Address": "172.20.2.234",
            "Gateway": "172.20.2.1",
            "SubnetMask": "255.255.255.0"
        }
    ]
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Response body content.


```
{
    "@odata.context": "/redfish/v1/$metadata#Task.Task",
    "@odata.id": "/redfish/v1/TaskService/Tasks/1",
    "@odata.type": "#Task.v1_4_2.Task",
    "Description": "Task for EthernetInterface Action",
    "Id": "1",
    "Name": "EthernetInterface Action",
    "TaskMonitor": "/redfish/v1/TaskService/TaskMonitors/1",
    "TaskState": "New"
}
```


8.4.2 BIOS Configuration

8.4.2.1 GET - HostInterface Instance

Request:

```
GET https://{{bmc_ip}}/redfish/v1/Managers/Self/HostInterfaces/Self
```

Response:

The response status is 200 OK.

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#HostInterface.HostInterface",
    "@odata.etag": "\"1705997262\"",
    "@odata.id": "/redfish/v1/Managers/Self/HostInterfaces/Self",
    "@odata.type": "#HostInterface.v1_3_0.HostInterface",
    "AuthenticationModes": [
        "BasicAuth",
        "RedfishSessionAuth"
    ],
    "CredentialBootstrapping": {
        "EnableAfterReset": false,
        "Enabled": true,
        "RoleId": "HostInterfaceAdministrator"
    },
    "Description": "Host Interface",
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
    "ExternallyAccessible": false,
    "HostEthernetInterfaces": {
        "@odata.id": "/redfish/v1/Managers/Self/HostInterfaces/Self/HostEthernetInterfaces"
    },
    "HostInterfaceType": "NetworkHostInterface",
    "Id": "Self",
    "InterfaceEnabled": true,
    "Links": {
        "ComputerSystems": [
            {
                "@odata.id": "/redfish/v1/Systems/Self"
            }
        ],
        "ComputerSystems@odata.count": 1,
        "CredentialBootstrappingRole": {
            "@odata.id": "/redfish/v1/AccountService/Roles/HostInterfaceAdministrator"
        }
    },
    "ManagerEthernetInterface": {
        "@odata.id": "/redfish/v1/Managers/Self/EthernetInterfaces/usb0"
    },
    "Name": "Host Interface",
    "NetworkProtocol": {
        "@odata.id": "/redfish/v1/Managers/Self/NetworkProtocol"
    },
    "Status": {
        "Health": "OK",
        "State": "Enabled"
    }
}
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.2.2 GET – BIOS and BIOS/SD

Request:

Get current BIOS Settings:

```
GET https://{{bmc_ip}}/redfish/v1/Systems/Self/Bios
```

Get future BIOS Settings:

```
GET https://{{bmc_ip}}/redfish/v1/Systems/Self/Bios/SD
```

Response:

The response status is 200 OK.

Example:




```
{
    "@Redfish.Settings": {
        "@odata.type": "#Settings.v1_2_2.Settings",
        "SettingsObject": {
            "@odata.id": "/redfish/v1/Systems/Self/Bios/SD"
        }
    },
    "@odata.context": "/redfish/v1/$metadata#Bios.Bios",
    "@odata.etag": "\"1705640880\"",
    "@odata.id": "/redfish/v1/Systems/Self/Bios",
    "@odata.type": "#Bios.v1_2_0.Bios",
    "Actions": {
        "#Bios.ChangePassword": {
            "@Redfish.ActionInfo": "/redfish/v1/Systems/Self/Bios/ChangePasswordActionInfo",
            "target": "/redfish/v1/Systems/Self/Bios/Actions/Bios.ChangePassword"
        },
        "#Bios.ResetBios": {
            "target": "/redfish/v1/Systems/Self/Bios/Actions/Bios.ResetBios"
        }
    },
    "AttributeRegistry": "BiosAttributeRegistry22808.1.1.0",
    "Attributes": {
        "ACPI004": false,
        "CRCS005": "CRCS005Enable",
        "FBO001": "FBO001UEFI",
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
        "FBO101": "FBO101HardDisk",
        "FBO102": "FBO102NVME",
        ...
    },
    "Description": "Current BIOS Settings",
    "Id": "Bios",
    "Name": "Current BIOS Settings",
    "ResetBiosToDefaultsPending": false
}
```


8.4.2.3 POST – Reset BIOS Settings

Request:


POST https://{{bmc_ip}}/redfish/v1/Systems/Self/Bios/Actions/Bios.ResetBios

Response:

The response status is 204 No Content.

Example:

Add **raw** body data in request **Body** tab. The data format is **JSON**.

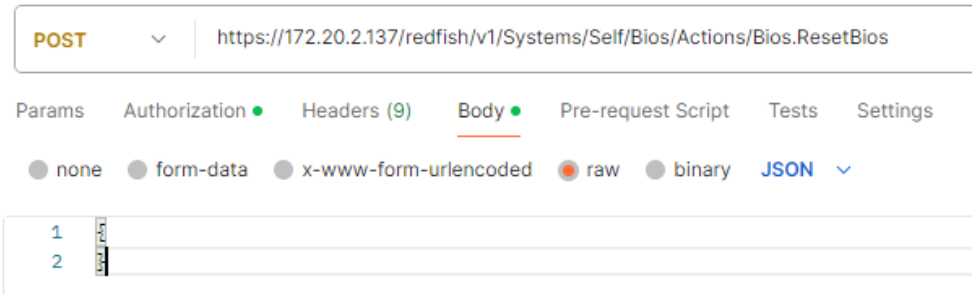

8.4.2.4 POST – Change BIOS Password

Request:


POST https://{{bmc_ip}}/redfish/v1/Systems/Self/Bios/Actions/Bios.ChangePassword

Response:

The response status is 204 No Content.

Example:

Add **raw** body data in request **Body** tab. The data format is **JSON**.

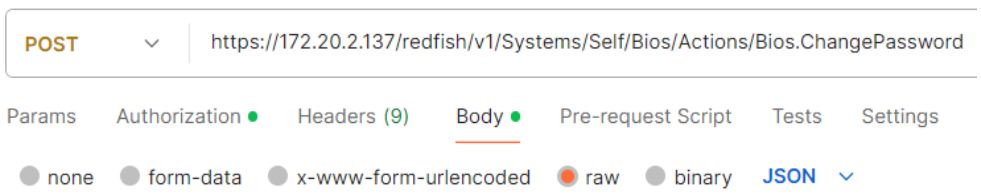

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
{
    "PasswordName": "SETUP001",
    "OldPassword": "old",
    "NewPassword": "new"
}
```


8.4.2.5 PATCH – BIOS SD

Change the values of the attributes.

Request:

```
PATCH https://{{bmc_ip}}/redfish/v1/Systems/Self/Bios/SD
```

Response:

The response status is 204 No Content.

Refer to **PATCH - BIOS Watchdog Configuration**.

8.4.3 Sensor Information

This section is dedicated to explaining how to obtain sensor information through Redfish.

Users can obtain the specific data of the required sensor through the following command.

Request:

```
GET https://{{bmc_ip}}/redfish/v1/Chassis/Self/Sensors/{{Sensor_ID}}
```

Response:

The response status is 200 OK.

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#Sensor.Sensor",
    "@odata.etag": "\"1708661966\"",
    "@odata.id": "/redfish/v1/Chassis/Self/Sensors/1",
    "@odata.type": "#Sensor.v1_0_2.Sensor",
    "Accuracy": null,
    "AdjustedMaxAllowableOperatingValue": null,
    "AdjustedMinAllowableOperatingValue": null,
    "ApparentVA": null,
    "Description": null,
    "ElectricalContext": null,
    "Id": "1",
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
"LoadPercent": null,
"Location": {
    "AltitudeMeters": null,
    "Contacts": [
        null
    ],
    "Latitude": null,
    "Longitude": null,
    "PartLocation": {
        "LocationOrdinalValue": null,
        "LocationType": null,
        "Orientation": null,
        "Reference": null,
        "ServiceLabel": null
    },
    "Placement": {
        "AdditionalInfo": null,
        "Rack": null,
        "RackOffset": null,
        "RackOffsetUnits": null,
        "Row": null
    },
    "PostalAddress": {
        "AdditionalCode": null,
        "AdditionalInfo": null,
        "Building": null,
        "City": null,
        "Community": null,
        "Country": null,
        "District": null,
        "Division": null,
        "Floor": null,
        "HouseNumber": null,
        "HouseNumberSuffix": null,
        "Landmark": null,
        "LeadingStreetDirection": null,
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
            "Name": null,
            "Neighborhood": null,
            "POBox": null,
            "PlaceType": null,
            "PostalCode": null,
            "Road": null,
            "RoadBranch": null,
            "RoadPostModifier": null,
            "RoadPreModifier": null,
            "RoadSection": null,
            "RoadSubBranch": null,
            "Room": null,
            "Seat": null,
            "Street": null,
            "StreetSuffix": null,
            "Territory": null,
            "TrailingStreetSuffix": null,
            "Unit": null
        }
    },
    "MaxAllowableOperatingValue": null,
    "MinAllowableOperatingValue": null,
    "Name": "P12V_PSU",
    "PeakReading": null,
    "PeakReadingTime": null,
    "PhysicalContext": "VoltageRegulator",
    "PhysicalSubContext": null,
    "PowerFactor": null,
    "Precision": null,
    "ReactiveVAR": null,
    "Reading": 12.22,
    "ReadingRangeMax": 13.25,
    "ReadingRangeMin": 10.7,
    "ReadingType": "Voltage",
    "ReadingUnits": null,
    "SensingFrequency": null,
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
"SensorResetTime": null,
"Status": {
    "Health": "OK",
    "HealthRollup": null,
    "State": "Enabled"
},
"Thresholds": {
    "LowerCaution": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 11.4
    },
    "LowerCritical": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 11.16
    },
    "LowerFatal": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 10.8
    },
    "UpperCaution": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 12.6
    },
    "UpperCritical": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 12.84
    },
    "UpperFatal": {
        "Activation": null,
        "DwellTime": null,
        "Reading": 13.2
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
        }
    },
    "VoltageType": null
}
```


Other commands to access sensor information using Redfish:

General Thermal Sensors Information

```
GET https://{{bmc_ip}}/redfish/v1/Chassis/Self/Thermal
```

Retrieves detailed information about the server's thermal sensors, including current temperature readings.

Temperature Sensor IDs

```
GET https://{{bmc_ip}}/redfish/v1/Chassis/Self/ThermalSubsystem/ThermalMetrics
```

Retrieves IDs and specific metrics of temperature-related sensors.

General Power Sensors Information

```
GET https://{{bmc_ip}}/redfish/v1/Chassis/Self/Power
```

Retrieves comprehensive data about power-related sensors, including power supply status and output power.

Power Sensor IDs

```
GET https://{{bmc_ip}}/redfish/v1/Chassis/Self/PowerSubsystem
```

Retrieves IDs and detailed metrics related to power sensors.

8.4.4 BMC Update

This section specifically explains how to obtain and upgrade BMC through Redfish.

Users can upgrade BMC and set Preserve Configuration through the following commands.

8.4.4.1 GET - Preserve Configuration

This section describes how to use redfish to **Get** Preserve Configuration before upgrading BMC.


Request:

```
GET https://{{bmc_ip}}/redfish/v1/UpdateService
```

Response:

The response status is 200 OK.

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#UpdateService.UpdateService",
    "@odata.etag": "\"1708925760\"",
    "@odata.id": "/redfish/v1/UpdateService",
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
"@odata.type": "#UpdateService.v1_6_0.UpdateService",
"Actions": {
    "#UpdateService.SimpleUpdate": {
        "@Redfish.ActionInfo": "/redfish/v1/UpdateService/SimpleUpdateActionInfo",
        "target": "/redfish/v1/UpdateService/Actions/SimpleUpdate"
    },
    "Oem": {
        "#UpdateService.UploadCABundle": {
            "@Redfish.ActionInfo": "/redfish/v1/UpdateService/UploadCABundleActionInfo",
            "target": "/redfish/v1/UpdateService/Actions/Oem/UpdateService.UploadCABundle"
        }
    }
},
"Description": "Redfish Update Service",
"FirmwareInventory": {
    "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory"
},
"Id": "UpdateService",
"MaxImageSizeBytes": 496611328,
"MultipartHttpPushUri": "/redfish/v1/UpdateService/upload",
"Name": "Update Service",
"Oem": {
    "AMIUpdateService": {
        "@odata.type": "#AMIUpdateService.v1_0_0.AMIUpdateService",
        "FlashPercentage": null,
        "PreserveConfiguration": {
            "Authentication": false,
            "EXTLOG": false,
            "FRU": false,
            "IPMI": false,
            "KVM": false,
            "NTP": false,
            "Network": false,
            "REDFISH": false,
            "SDR": false,
            "SEL": false,
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
                "SNMP": false,
                "SSH": false,
                "Syslog": false,
                "WEB": false
            },
            "UpdateStatus": null,
            "UpdateTarget": null
        },
        "BMC": {
            "@odata.type": "#AMIUpdateService.v1_0_0.BMC",
            "DualImageConfigurations": {
                "ActiveImage": "2",
                "BootImage": "2",
                "FirmwareImage1Name": "Image1",
                "FirmwareImage1Version": "13.05.010004",
                "FirmwareImage2Name": "Image2",
                "FirmwareImage2Version": "13.05.010003"
            }
        }
    },
    "ServiceEnabled": true,
    "Status": {
        "Health": "OK",
        "State": "Enabled"
    }
}
```


8.4.4.2 PATCH - Preserve Configuration

This section describes how to use redfish to **Set** Preserve Configuration before upgrading BMC.

Request:

```
PATCH https://{{bmc_ip}}/redfish/v1/UpdateService
```

Please refer to the **GET - Preserve Configuration**.


Response:

The response status is 204 No Content.


Example: Enable saving IPMI and SEL when upgrading BMC.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Add a key "**If-Match**" in request **Headers** tab. The value is your **ETag** value. This value can be obtained from **GET - Preserve Configuration**.

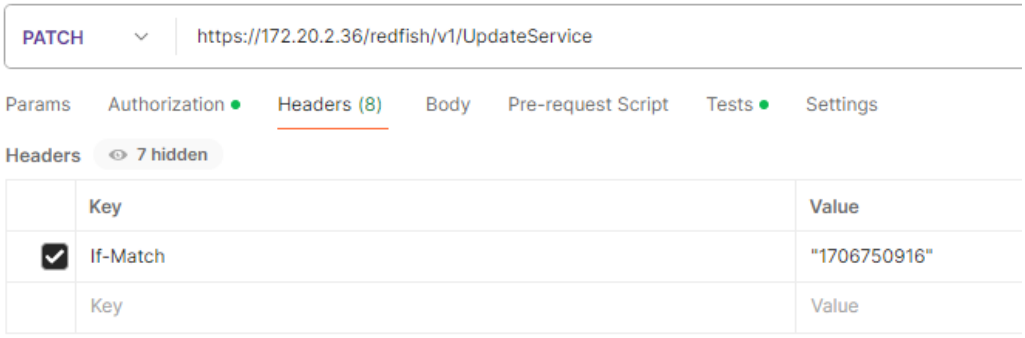

Add **raw** body data in request **Body** tab. The data format is **JSON**.




```
{
    "Oem": {
        "AMIUpdateService": {
            "PreserveConfiguration": {
                "IPMI": true,
                "SEL": true
            }
        }
    }
}
```

8.4.4.3 POST – Firmware Update

This section describes how to use redfish to **Update BMC firmware**.

Request:

```
POST https://{{bmc_ip}}/redfish/v1/UpdateService/upload
```

Response:


The response status is 202 Accepted.

Example:

Using POSTMAN, please follow the steps as given below.

1. Ensure that all necessary files mentioned in the subsequent steps are placed in your working directory. Go to the top right corner of POSTMAN and click on the **settings button**. In the general settings, make the necessary adjustments.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

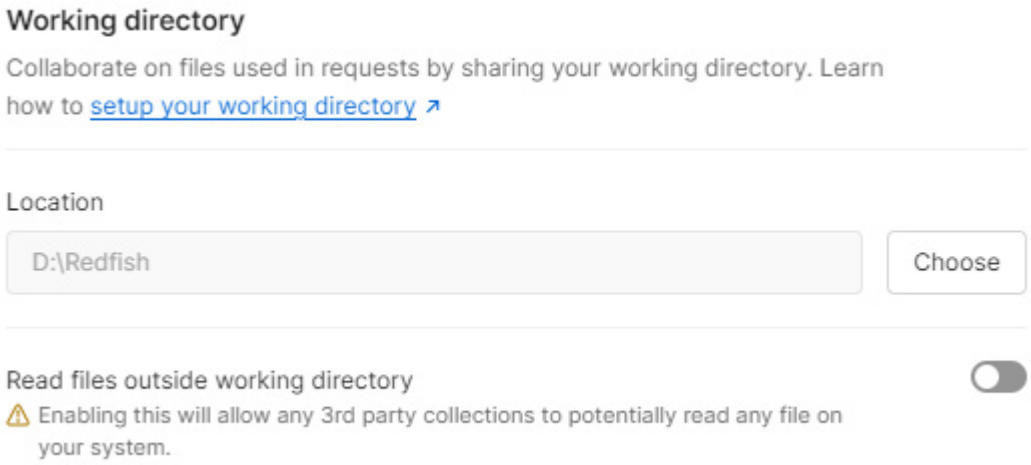


2. Create a JSON file **parameters.json** with content like below.

```
{
    "Targets" : [
        "/redfish/v1/UpdateService/FirmwareInventory/BMCImage1"
    ]
}
```

3. Create a JSON file **oem_parameters.json** with content like below.

```
{
    "ImageType" : "BMC"
}
```

4. Open POSTMAN and enter the **URI** to POST the request.
5. Select **POST** method.
6. In the **Authorization** tab, select Basic Auth and update request.
7. In the **Body** tab, select form-data and provide the key name as **UpdateFile** in the KEY section and change its type from **Text** to File.
8. Click on **Select File** in the **VALUE** section to select the signed image which is available in your local machine to update.
9. Like step 7 and 8, provide key name **UpdateParameters** and select **parameters.json** created in step 2.
10. Like step 7 and 8, provide key name **OemParameters** and select **oem_parameters.json** created in step 3.
11. Click **Send**.

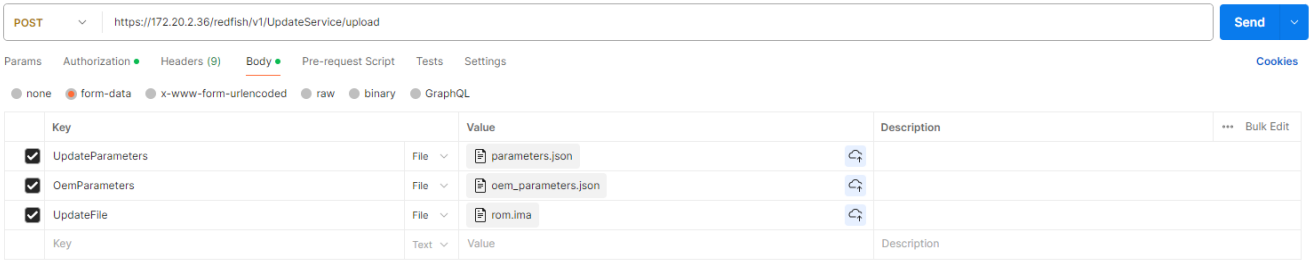

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Response:



Note:

The details of UpdateParameters are given in the table below.

Allowed value	Description
redfish/v1/UpdateService/FirmwareInventory/BMC	When the system does not support Dual Flash
redfish/v1/UpdateService/FirmwareInventory/BMCImage1	For systems with Dual Flash support, to upgrade Image 1
redfish/v1/UpdateService/FirmwareInventory/BMCImage2	For systems with Dual Flash support, to upgrade Image 2

8.4.5 BIOS Update

This section specifically explains how to obtain and upgrade BIOS through Redfish.

Users can upgrade BIOS through the following commands.

8.4.5.1 GET - BIOS Update Status

Request:

```
GET https://{{bmc  ip}}/redfish/v1/UpdateService
```

Response:

The response status is 200 OK.

Name	Type	Read Only	Description
BIOSFlashEffectStatus	String	√	Indicates the BIOS update effect status: Waiting: there is a BIOS update task waiting to take effect. Updating: someone is updating BIOS. null: no BIOS update task.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Example:




```
{
    "@odata.context": "/redfish/v1/$metadata#UpdateService.UpdateService",
    "@odata.etag": "\"1708587273\"",
    "@odata.id": "/redfish/v1/UpdateService",
    "@odata.type": "#UpdateService.v1_6_0.UpdateService",
    "Actions": {
        "#UpdateService.SimpleUpdate": {
            "@Redfish.ActionInfo": "/redfish/v1/UpdateService/SimpleUpdateActionInfo",
            "target": "/redfish/v1/UpdateService/Actions/SimpleUpdate"
        },
        "Oem": {
            "#UpdateService.UploadCABundle": {
                "@Redfish.ActionInfo": "/redfish/v1/UpdateService/UploadCABundleActionInfo",
                "target": "/redfish/v1/UpdateService/Actions/Oem/UpdateService.UploadCABundle"
            }
        }
    },
    "Description": "Redfish Update Service",
    "FirmwareInventory": {
        "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory"
    },
    "Id": "UpdateService",
    "MaxImageSizeBytes": 496717824,
    "MultipartHttpPushUri": "/redfish/v1/UpdateService/upload",
    "Name": "Update Service",
    "Oem": {
        "AMIUpdateService": {
            "@odata.type": "#AMIUpdateService.v1_0_0.AMIUpdateService",
            "BIOSFlashEffectStatus": null,
            "FlashPercentage": null,
            "PreserveConfiguration": {
                "Authentication": false,
                "EXTLOG": false,
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
                "FRU": false,
                "IPMI": false,
                "KVM": false,
                "NTP": false,
                "Network": false,
                "REDFISH": false,
                "SDR": false,
                "SEL": false,
                "SNMP": false,
                "SSH": false,
                "Syslog": false,
                "WEB": false
            },
            "UpdateStatus": null,
            "UpdateTarget": null
        },
        "BMC": {
            "@odata.type": "#AMIUpdateService.v1_0_0.BMC",
            "DualImageConfigurations": {
                "ActiveImage": "1",
                "BootImage": "1",
                "FirmwareImage1Name": "Image1",
                "FirmwareImage1Version": "13.05.010004",
                "FirmwareImage2Name": "Image2",
                "FirmwareImage2Version": "13.05.010003"
            }
        }
    },
    "ServiceEnabled": true,
    "Status": {
        "Health": "OK",
        "State": "Enabled"
    }
}
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.5.2 POST – Firmware Update

This section describes how to use redfish to **Update BIOS firmware**.

Request:

```
POST https://{{bmc_ip}}/redfish/v1/UpdateService/upload
```


Response:

The response status is 202 Accepted.

Example:

Using POSTMAN, please follow the steps as given below.

1. Ensure that all necessary files mentioned in the subsequent steps are placed in your working directory. Go to the top right corner of POSTMAN and click on the **settings button**. In the general settings, make the necessary adjustments.

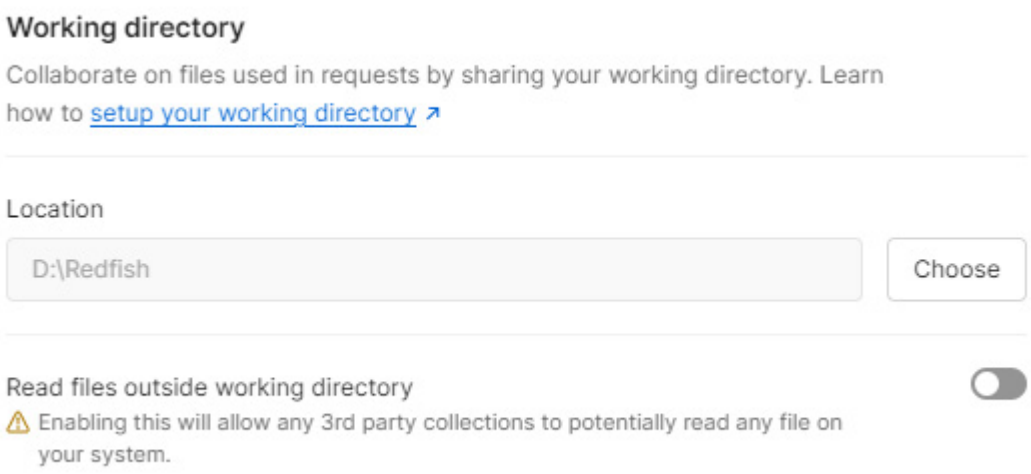

2. Create a JSON file **parameters.json** with content like below.

```
{
    "Targets" : [
        "/redfish/v1/UpdateService/FirmwareInventory/BIOS"
    ]
}
```


3. Create a JSON file **oem_parameters.json** with content like below.

```
{
    "ImageType" : "BIOS",
    "update_me" : false,
    "update_nvram" : false,
    "effect_poweroff" : false,
    "force_update" : false
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Name	Type	Description
update_me	Boolean	Optional. Default value is false. true: update ME. false: skip ME.
update_nvram	Boolean	Optional. Default value is false. true: update NVRAM. false: skip NVRAM.
effect_poweroff	Boolean	Optional. Default value is false. true: take effect when powered off. false: take effect immediately.
force_update	Boolean	Optional. Default value is false. true: force to update. false: do not update when other user is in in update mode or a BIOS firmware has been uploaded.

4. Open POSTMAN and enter the **URI** to POST the request.
5. Select **POST** method.
6. In the **Authorization** tab, select Basic Auth and update request.
7. In the **Body** tab, select form-data and provide the key name as **UpdateFile** in the KEY section and change its type from **Text** to File.
8. Click on **Select File** in the **VALUE** section to select the signed image which is available in your local machine to update.
9. Like step 7 and 8, provide key name **UpdateParameters** and select **parameters.json** created in step 2.
10. Like step 7 and 8, provide key name **OemParameters** and select **oem_parameters.json** created in step 3.
11. Click **Send**.

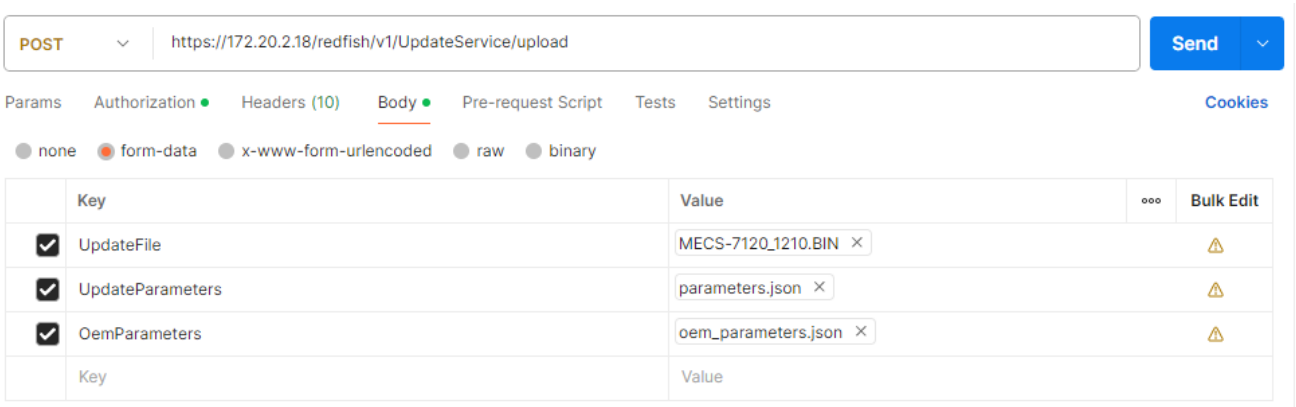

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Response:


```
{
    "@odata.type": "#UpdateService.v1_6_0.UpdateService",
    "Messages": [
        {
            "@odata.type": "#Message.v1_0_8.Message",
            "Message": "A new task /redfish/v1/TaskService/Tasks/1 was created.",
            "MessageArgs": [
                "/redfish/v1/TaskService/Tasks/1"
            ],
            "MessageId": "Task.1.0.New",
            "Resolution": "None",
            "Severity": "OK"
        },
        {
            "@odata.type": "#Message.v1_0_8.Message",
            "Message": "The action UpdateService.MultipartPush was submitted to do firmware update.",
            "MessageArgs": [
                "UpdateService.MultipartPush"
            ],
            "MessageId": "UpdateService.1.0.StartFirmwareUpdate",
            "Resolution": "None",
            "Severity": "OK"
        }
    ]
}
```


8.4.6 CPLD Update

This section specifically explains how to obtain and upgrade BIOS through Redfish.

Users can upgrade BIOS through the following commands.

8.4.6.1 GET - CPLD Update Status

Request:

```
GET https://{{bmc_ip}}/redfish/v1/UpdateService
```



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Response:

The response status is 200 OK.

Name	Type	Read Only	Description
CPLDFlashEffectStatus	String	√	Indicates the CPLD update effect status: Waiting: there is a CPLD update waiting to take effect. Updating: someone is updating Firmware. null: no CPLD update.

Example:




```
{
...
    "Oem": {
        "AMIUpdateService": {
            "@odata.type": "#AMIUpdateService.v1_0_0.AMIUpdateService",
            "BIOSFlashEffectStatus": null,
            "CPLDFlashEffectStatus": null,
            "FlashPercentage": null,
...
}
```


8.4.6.2 POST – Firmware Update

This section describes how to use redfish to **Update CPLD firmware**.

Request:

```
POST https://{{bmc  ip}}/redfish/v1/UpdateService/upload
```

Response:


The response status is 202 Accepted.

Example:

Using POSTMAN, please follow the steps as given below.

1. Ensure that all necessary files mentioned in the subsequent steps are placed in your working directory. Go to the top right corner of POSTMAN and click on the **settings button**. In the general settings, make the necessary adjustments.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

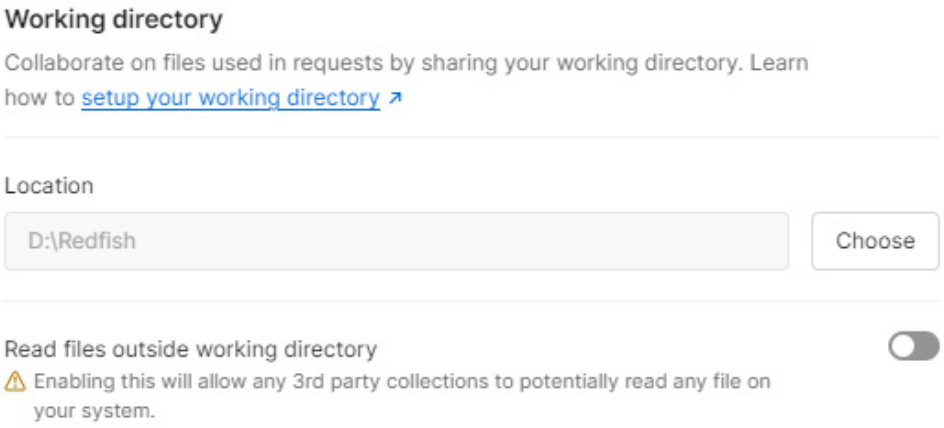

2. Create a JSON file **parameters.json** with content like below.

```
{
    "Targets" : [
        "/redfish/v1/UpdateService/FirmwareInventory/CPLD"
    ]
}
```


3. Create a JSON file **oem_parameters.json** with content like below.

```
{
    "ImageType" : "HPM",
    "force_update" : false
}
```

Name	Type	Description
force_update	Boolean	Optional. Default value is false. true: force to update. false: do not update when other user is in in update mode or a CPLD firmware has been uploaded.

4. Open POSTMAN and enter the **URI** to POST the request.
5. Select **POST** method.
6. In the **Authorization** tab, select Basic Auth and update request.
7. In the **Body** tab, select form-data and provide the key name as **UpdateFile** in the KEY section and change its type from **Text** to File.
8. Click on **Select File** in the **VALUE** section to select the signed image which is available in your local machine to update.
9. Like step 7 and 8, provide key name **UpdateParameters** and select **parameters.json** created in step 2.
10. Like step 7 and 8, provide key name **OemParameters** and select **oem_parameters.json** created in step 3.
11. Click **Send**.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

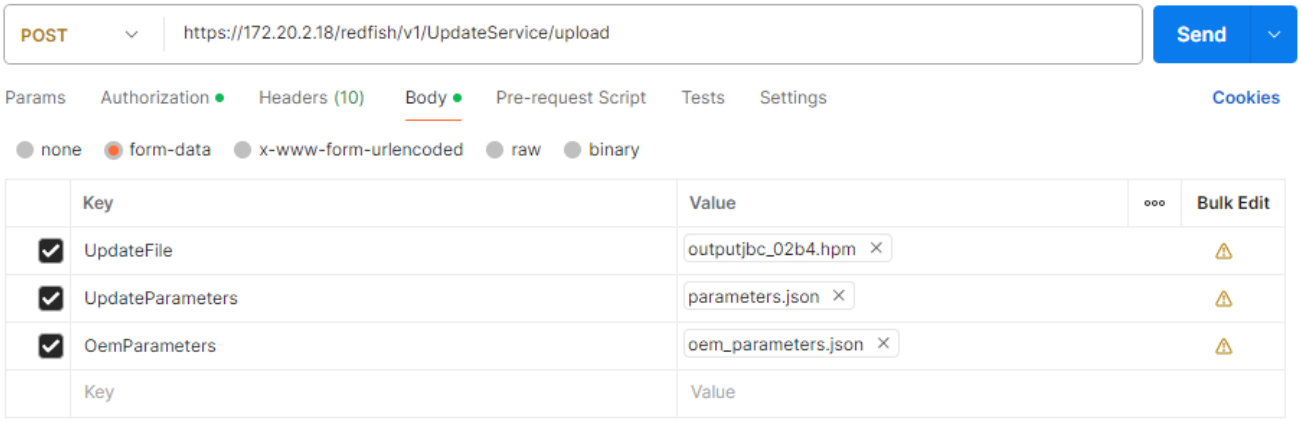

Response:


```
{
    "@odata.type": "#UpdateService.v1_6_0.UpdateService",
    "Messages": [
        {
            "@odata.type": "#Message.v1_0_8.Message",
            "Message": "A new task /redfish/v1/TaskService/Tasks/1 was created.",
            "MessageArgs": [
                "/redfish/v1/TaskService/Tasks/1"
            ],
            "MessageId": "Task.1.0.New",
            "Resolution": "None",
            "Severity": "OK"
        },
        {
            "@odata.type": "#Message.v1_0_8.Message",
            "Message": "The action UpdateService.MultipartPush was submitted to do firmware update.",
            "MessageArgs": [
                "UpdateService.MultipartPush"
            ],
            "MessageId": "UpdateService.1.0.StartFirmwareUpdate",
            "Resolution": "None",
            "Severity": "OK"
        }
    ]
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.7 Power Control

This section is dedicated to explaining how to control power through Redfish.


Request:

```
POST https://{{bmc  ip}}/redfish/v1/Chassis/Self/Actions/Chassis.Reset
```

Response:

The response status is 202 Accepted.

Example:

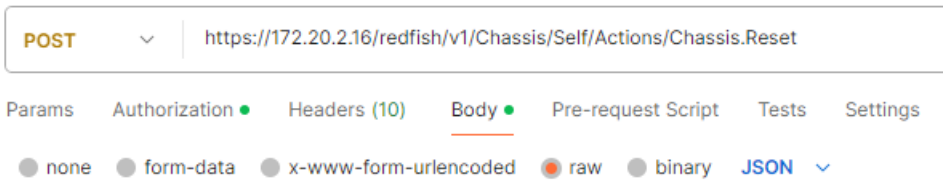


```
{
    "ResetType": "ForceRestart"
}
```

Note: *The ResetType can be one of the following values: "On", "ForceOff", "GracefulShutdown", "ForceRestart", "PowerCycle".*

Response:

```
{
    "@odata.context": "/redfish/v1/$metadata#Task.Task",
    "@odata.id": "/redfish/v1/TaskService/Tasks/1",
    "@odata.type": "#Task.v1_4_2.Task",
    "Description": "Task for Chassis Reset",
    "Id": "1",
    "Name": "Chassis Reset",
    "TaskMonitor": "/redfish/v1/TaskService/TaskMonitors/1",
    "TaskState": "New"
}
```


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.8 BMC Firmware Version

To get BMC version, use "Managers" class.


Request:

```
POST https://{{bmc_ip}}/redfish/v1/Managers/Self
```

Response:

The response status is 200 OK.

Example:

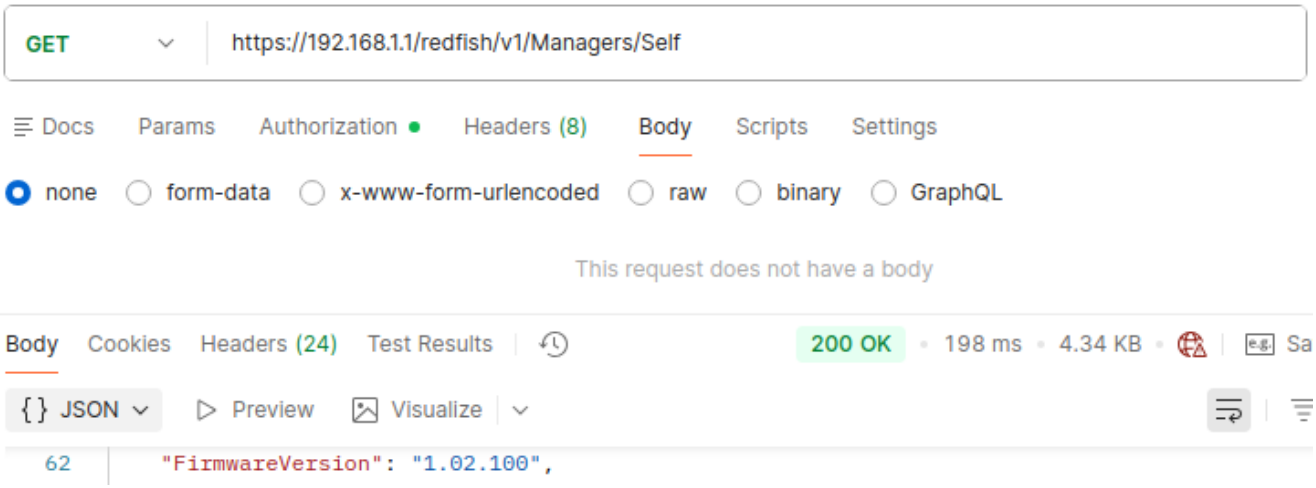

Member "FirmwareVersion" consists of:

BMC version - 1.02.100

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.4.9 BIOS Version

To get BIOS version, use "Systems" class.


Request:

```
POST https://{{bmc_ip}}/redfish/v1/Systems/Self
```

Response:

The response status is 202 OK.

Example:

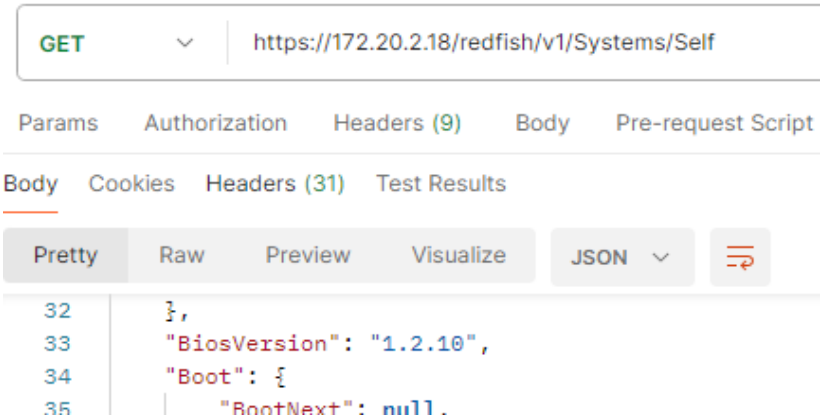

Member "BiosVersion" has the value.

"1.2.10" - Leading version.Major version.Minor version

Please note that **minor version** of BIOS is **always represented in hexadecimal number**.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS,** and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

1. Read these safety instructions carefully.
2. Keep this user's manual for future reference.
3. Read the specifications section of this manual for detailed information on the operating environment of this equipment.
4. The equipment can be operated at an ambient temperature of 55°C.
5. When installing/mounting or uninstalling/removing equipment; or when removal of the chassis lid required for user servicing (Section 3.1-3.5):
   - Turn off power and unplug any power cords/cables, and
   - Reinstall the chassis lid before restoring power.



Hazardous moving parts. Keep body parts out of the motion path.

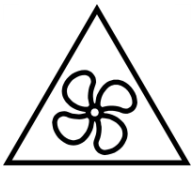

6. To avoid electrical shock and/or damage to equipment:
   - Keep equipment away from water or liquid sources;
   - Keep equipment away from high heat or high humidity;
   - Keep equipment properly ventilated (do not block or cover ventilation openings);
   - Make sure to use recommended voltage and power source settings;
   - Always install and operate equipment near an easily accessible electrical socket-outlet;
   - Secure the power cord (do not place any object on/over the power cord);
   - Only install/attach and operate equipment on stable surfaces and/or recommended mountings;
   - If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.
   - The power cord must be connected to a socket or outlet with a ground connection.
7. Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.
8. An RTC battery may be provided for uninterrupted, backup or emergency power.



Risk of explosion if battery is replaced with one of an incorrect type. Discard used batteries according to the manufacturer's instructions.

9. This equipment is not suitable for use in locations where children are likely to be present.
10. Equipment must be serviced by authorized technicians when:
    - The power cord or plug is damaged;
    - Liquid has penetrated the equipment;
    - It has been exposed to high humidity/moisture;
    - It is not functioning or does not function according to the user's manual;
    - It has been dropped and/or damaged; and/or,
    - It has an obvious sign of breakage.

11. Please pay strict attention to all warnings and advisories appearing on the device, to avoid injury or damage.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

12. The equipment may have more than one power supply input. To reduce the risk of electrical shock, trained personnel should disconnect all power supply inputs before servicing.

CAUTION:

Shock hazard! Disconnect all power supply inputs before servicing.



Shock hazard!



Multiple power sources

13. It is recommended that equipment be installed only in a server room or computer room where access is:
    - Restricted to qualified service personnel or users familiar with restrictions applied to the location, reasons therefor, and any precautions required;
    - Only afforded by the use of a tool or lock and key, or other means of security, and is controlled by the authority responsible for the location.
14. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.
15. This product is intended to be supplied by a certified DC power source providing reinforced/double insulation from AC mains with an output rating of 36V to 72V DC ,20A min., Tma = 55°C. All power connection wiring must be performed by a qualified electrician in accordance with National Electrical Code, ANSI/NFPA 70 and Canadian Electrical Code, Part I, CSA C22.1. The DC power supply should be well-grounded to ensure safe operation. The protective earthing conductor shall be minimum 14 AWG and having green-and-yellow insulation. The ground wire should be installed first (before "+" and "-") and then removed.
16. When using a Fiber Optic Small-Form Pluggable (SFP) module, ensure it is IEC 60825-1, IEC 60825-2 and IEC 60950-1 or IEC 62368-1 certified and a Class 1 Laser Product.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Consignes de Sécurité Importantes


*Pour assurer la sécurité de l'utilisateur, veuillez lire et suivre toutes les **directives**, ainsi que les **AVERTISSEMENTS**, **MISES EN GARDE** et **REMARQUES** de ce manuel et indiqués sur l'équipement associé avant de manipuler ou utiliser l'équipement.*

1. *Veuillez lire attentivement ces instructions de sécurité avec soin.*
2. *Veuillez conserver ce manuel pour référence future.*
3. *Veuillez lire la section des spécifications de ce manuel pour avoir des informations détaillées sur l'environnement d'exploitation de cet équipement.*
4. *L'équipement peut être utilisé à une température ambiante de 55 °C.*
5. *Lors de l'installation ou du montage et de la désinstallation ou de la dépose de l'équipement; ou lors de la dépose du couvercle du châssis pour procéder à l'entretien par l'utilisateur (Sections 3.1-3.5):*
   - *Coupez l'alimentation et débranchez les cordons et les câbles d'alimentation, et*
   - *Reposez le couvercle du châssis avant de remettre l'alimentation.*



AVERTISSEMENT

***Pièces mobiles dangereuses.** Gardez les parties du corps hors de la trajectoire.*

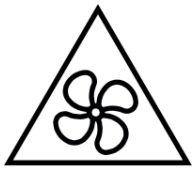

6. *Pour éviter un risque d'électrocution et pour éviter d'endommager l'équipement :*
   - *Éloignez l'équipement de l'eau et de toute source liquide;*
   - *Éloignez l'équipement de toute source de chaleur ou d'humidité élevée;*
   - *Gardez l'équipement correctement ventilé (ne pas bloquer ou couvrir les ouvertures de ventilation);*
   - *Veillez à utiliser la tension recommandée et les réglages adéquats pour la source d'alimentation;*
   - *Veuillez toujours installer et exploiter l'équipement à proximité d'une prise de courant facilement accessible;*
   - *Assurez-vous que le cordon d'alimentation est acheminé de manière sécuritaire (ne déposez aucun objet dessus);*
   - *Installez, fixez et utilisez l'équipement sur des surfaces stables ou sur les fixations recommandées uniquement;*
   - *Si l'équipement n'est pas utilisé pendant une longue période, éteignez-le et débranchez-le de sa source d'alimentation.*
   - *Le cordon d'alimentation doit être connecté à une prise ou à une prise de courant avec mise à la terre.*
7. *N'essayez jamais de réparer l'équipement. L'équipement ne doit être réparé que par du personnel qualifié.*
8. *Une pile au lithium peut être installée pour assurer l'alimentation de secours ou d'urgence en continu.*



mise en garde

***Risque d'explosio**n si la batterie est remplacée par une batterie d'un type incorrect. Jetez les piles usagées conformément aux instructions du fabricant.*

9. *Cet équipement ne convient pas à une utilisation dans des lieux pouvant accueillir des enfants.*
10. *L'équipement doit être entretenu par des techniciens agréés lorsque :*
    - *le cordon d'alimentation est endommagé ou lorsque la fiche électrique est endommagée;*
    - *du liquide a pénétré à l'intérieur de l'équipement;*
    - *l'équipement a été exposé à un taux d'humidité élevé;*
    - *l'équipement ne fonctionne pas ou ne fonctionne pas conformément au manuel de l'utilisateur;*
    - *l'équipement est tombé ou lorsqu'il a été endommagé;*
    - *l'équipement présente un signe évident de défaillance.*
11. *Veuillez porter une attention rigoureuse à tous les avertissements et à tous les avis figurant sur l'appareil, pour éviter des blessures ou des dommages.*

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

12. *L'équipement peut avoir plus d'une entrée d'alimentation. Pour réduire le risque d'électrocution, le personnel qualifié devrait déconnecter toutes les entrées d'alimentation avant de procéder à l'entretien.*



mise en garde

***Risque d'électrocution!** Débranchez toutes les entrées d'alimentation avant de procéder à l'entretien.*



Shock hazard!

Risque d'électrocution!



Multiple power sources

Sources d'alimentation multiples

13. *Il est recommandé que l'équipement soit installé que dans une salle de serveur ou de la salle informatique où:*
    - *L'accès est limité au personnel de maintenance qualifié ou utilisateurs familiers avec les restrictions appliquées à l'emplacement, motifs, et tout les précautions nécessaires, et;*
    - *L'accès est uniquement assurée par l'utilisation d'un outil ou clé, ou d'autres moyens de sécurité, et est contrôlé par l'autorité responsable de l'emplacement.*
14. *Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.*
15. *Ce produit est destiné à être alimenté par une source d'alimentation CC certifiée fournissant une isolation renforcée/double du secteur CA avec une puissance de sortie de -48 V à -60 V CC, 12 A min., Tma = 55°C. Tout le câblage de connexion d'alimentation doit être effectué par un électricien qualifié conformément au Code national de l'électricité, ANSI / NFPA 70 et au Code canadien de l'électricité, Partie I, CSA C22.1. L'alimentation CC doit être bien mise à la terre pour garantir un fonctionnement sûr. Le conducteur de mise à la terre de protection doit être au minimum 14 AWG et avoir une isolation verte et jaune. Le fil de terre doit être installé en premier (avant «+» et «-») puis retiré.*

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

FCC Warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for assistance.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service

Ask an Expert: https://www.adlinktech.com/en/Askanexpert

ADLINK Technology, Inc.
Address: No. 66, Huaya 1st Road, Guishan District
Taoyuan City 333, Taiwan
Tel: +886-3-216-5088
Fax: +886-3-328-5723
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.
Address: 6450 Via Del Oro, San Jose, CA 95119-1208, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-600-1189
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.
Address: 300 Fang Chun Rd., Zhangjiang Hi-Tech Park, Pudong New Area
Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology GmbH
Address: Hans-Thoma-Strasse 8-10, 68163 Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000