GPIB
Getting Started Guide
for
LPCI-3488A and USB-3488A





Manual Rev.	2.01
Revision Date:	October 30, 2009
Part No:	50-1Z025-2010

Recycled Paper

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Advance Technologies; Automate the World.

Copyright 2009 ADLINK TECHNOLOGY INC.

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Getting Started

This GPIB Getting Started User's Guide is for the following ADLINK GPIB products:


- LPCI-3488A
- USB-3488A


Step 1. Install the software and driver

1. Insert the ADLINK GPIB Driver CD (ADLINK provides drivers for the LPCI-3488A and USB-3488A).
2. Run **x:\Software Package\Setup.exe** to launch the setup program (x: denotes your optical disc drive). A wizard will automatically appear to guide you through the setup procedure.

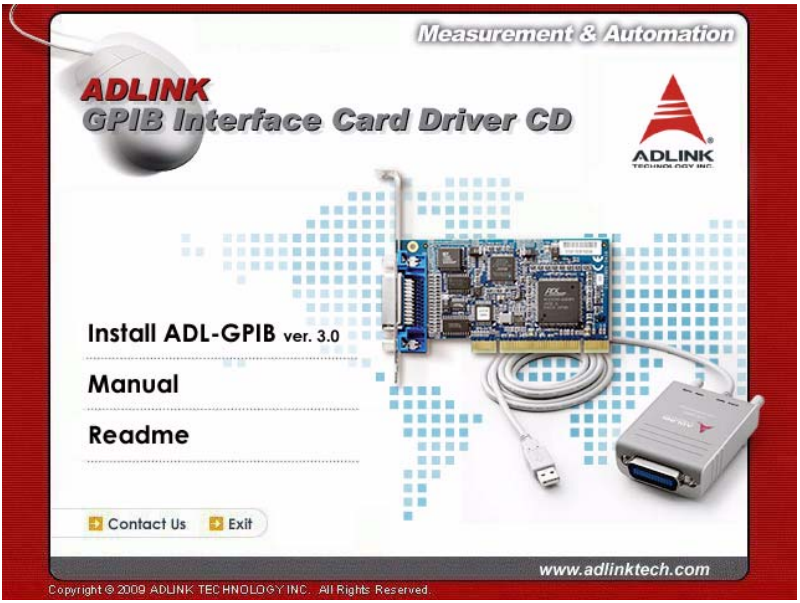



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

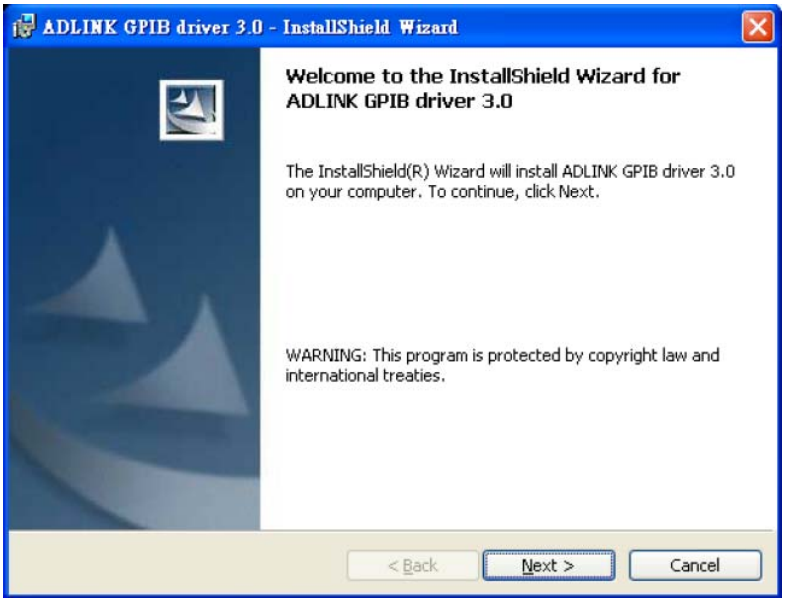

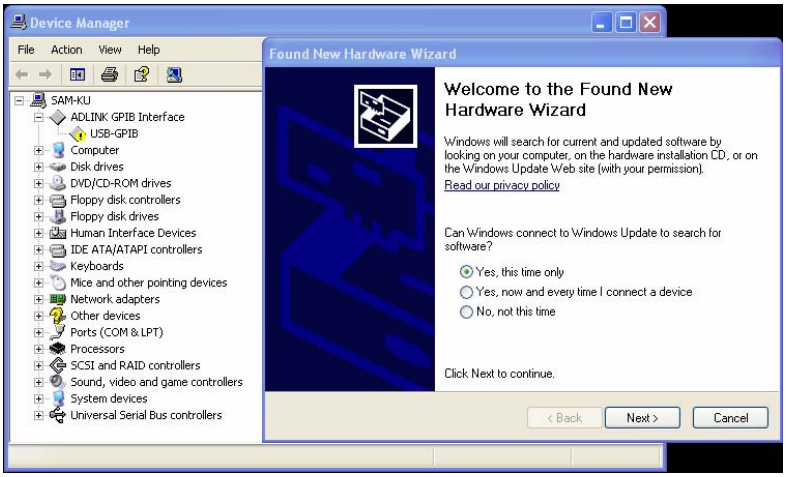

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

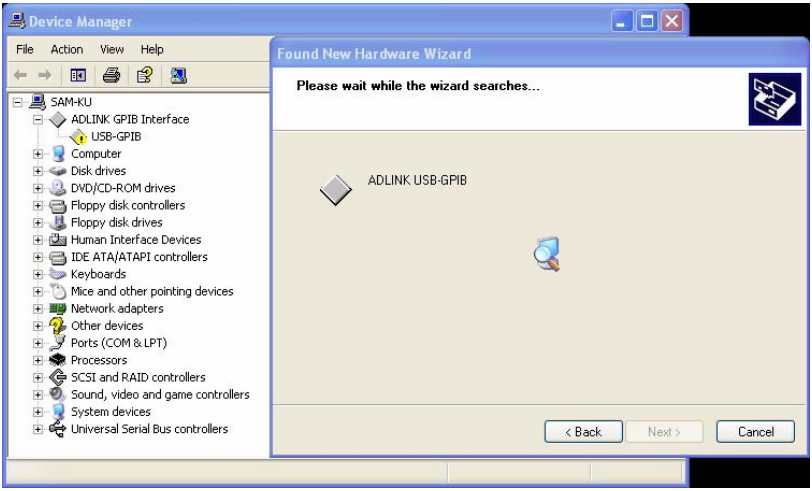

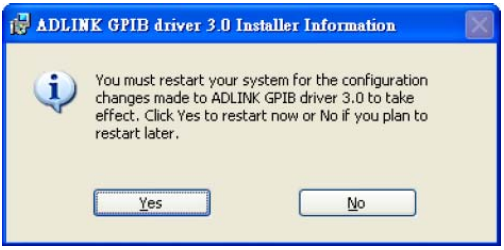

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2. Install ADLINK GPIB Products

LPCI-3488A Installation Procedures

Please follow the instructions to install the LPCI-3488A into your system.

1. Turn off the computer.
2. Turn off all accessories (printer, modem, monitor, etc.) connected to the computer.
3. Open the computer case.
4. Select a 32-bit PCI slot. PCI slots are shorter than ISA or EISA slots, and are usually white or ivory.
5. Before handling the PCI cards, discharge any static buildup on your body by touching the metal case of the computer. Hold the edge of the board and do not touch the components.
6. Position the board into the selected PCI slot.
7. Secure the card in place at the rear panel of the system.
8. Replace the computer case cover.
9. Restart the computer.



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

USB-3488A Installation Procedures

Please follow the instructions to install USB-3488A in your system.

1. Connect the USB-3488A to any USB port
2. After several seconds, the "Ready" LED turns green, the USB-3488A is ready.






Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 3. Use the GPIB Utility to check basic functionality


The ADL-GPIB driver package also provides an “ADLINK GPIB Utility” utility program to diagnose and verify GPIB connections. It is located on the ADL-GPIB installation directory: *C:\ADLINK\ADL-GPIB\Utility\GPIB Utility.exe*.


1. Launch the GPIB Utility.exe. A window appears to show all installed GPIB interfaces and instruments

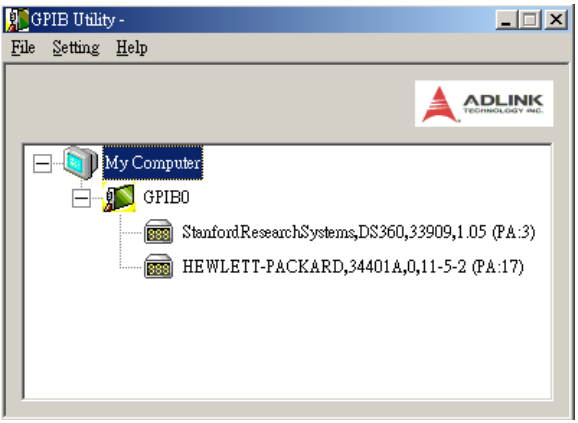

2. Click on a GPIB interface (GPIB0, GPIB1, etc.) and select “**Setting**” > “**GPIB Preference**”. A “*GPIB Interface & Bus Setting*” dialog appears to enable configuration of the GPIB interface.


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

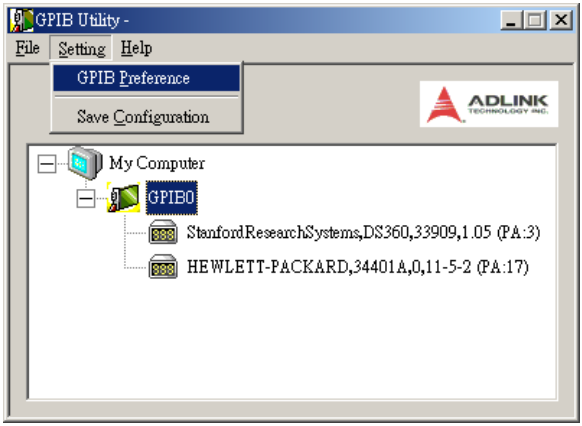

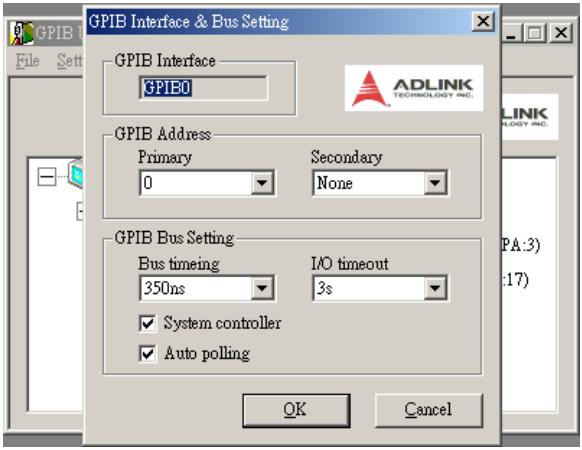

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Double click on a connected GPIB instrument. A '"*GPIB Interactive control*" dialog appears to allow write command strings to be inputted into the GPIB instrument and read the result.

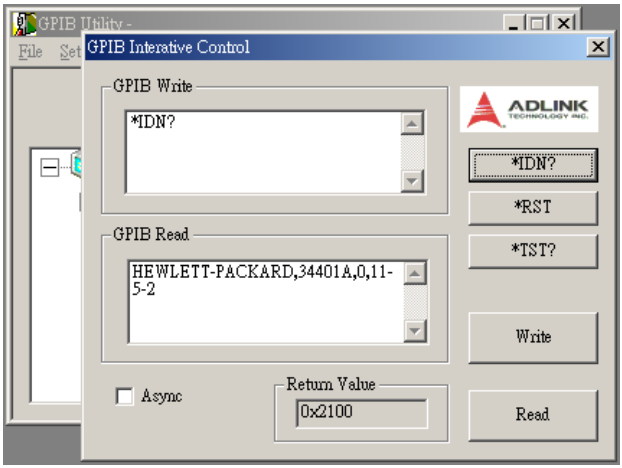


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 4. Troubleshooting


If any problems occur when testing your ADLINK GPIB product, please check the following two things:

1. To check if ADLINK GPIB is displayed in the Windows Device Manager.

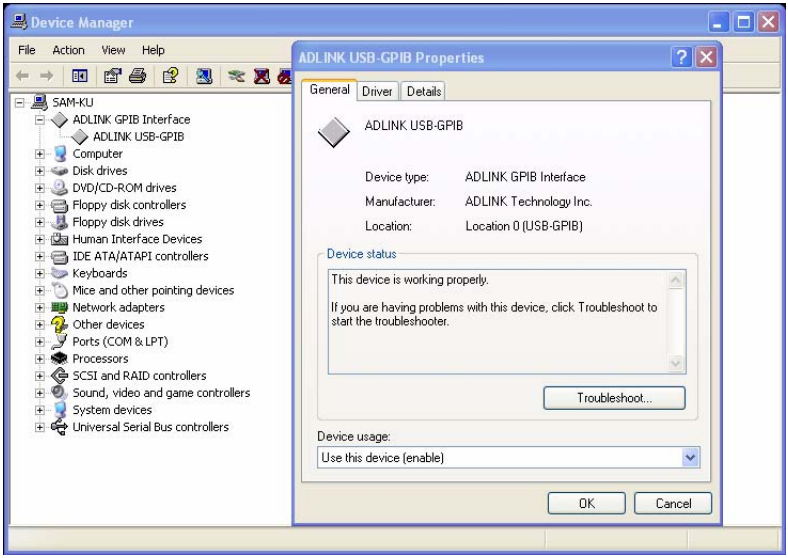

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. Check the file information of the gpib-32.dll. It should be from ADLINK

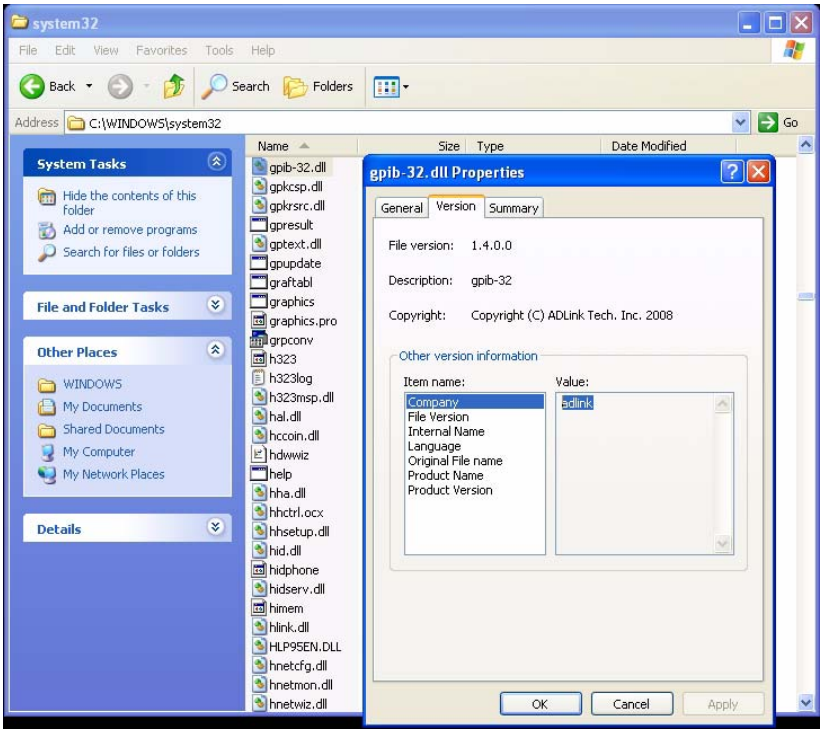


Note: If the gpib-32.dll version is correct and LPCI-3488A/USB-3488A is properly displayed in the Device Manager, please contact our technical support to get debug tool.


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Using ADLINK GPIB Products in LabVIEW® for NI-VISA® Application Development

ADLINK GPIB products are full compatible with NI-VISA. Existing NI-VISA programs can be used with ADLINK hardware with the following steps:


1. Install NI VISA. The ADLINK-GPIB driver is compatible with NI-VISA 2.6.1 up to 4.5 (NI VISA can be freely downloaded from the NI website).
2. Install the ADLINK GPIB driver (ADL-GPIB)
   - ▷ Obtain from the ADLINK GPIB CD
   - ▷ Download from the ADLINK website: http://www.adlinktech.com/GPIB/index.html
3. Directly use the NI VISA Interactive Control to check if the tool can detect ADLINK GPIB in the VISA I/O tab-sheet.

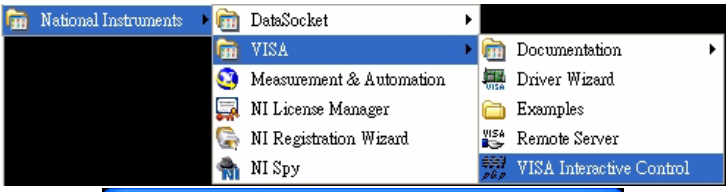

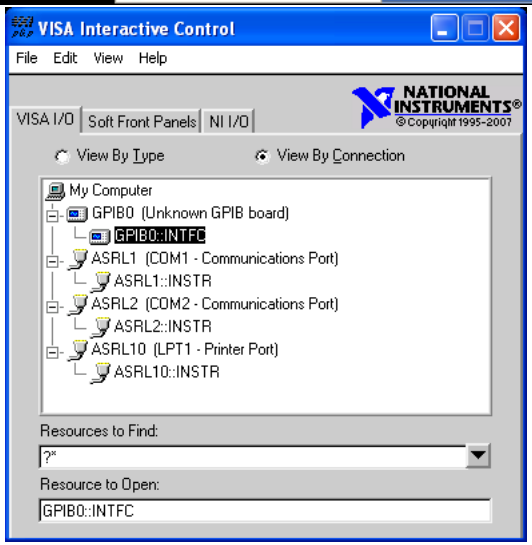


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. Double click the ADLINK GPIB device to launch its advanced I/O control panel. Execute *IDN? SCPI command in the viWrite panel and run viRead to retrieve the result. Below is an example showing a Keithley DMM Model 2000 detected by the ADLINK GPIB through NI-VISA:

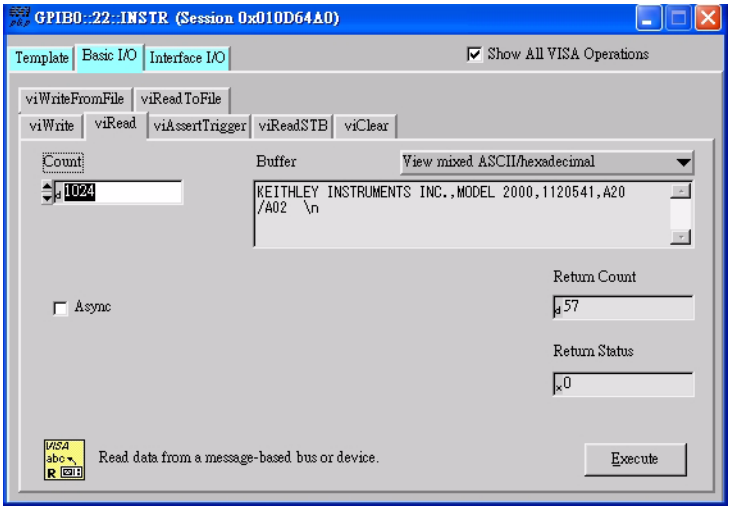


5. After performing basic tests, you can run a premade sample program provided by instrument vendor. Below is an example to control a Tektronic 540A digital scope through a VISA session.
   Existing applications under NI-VISA can also be executed through the ADLINK GPIB without needing to rewrite the program.

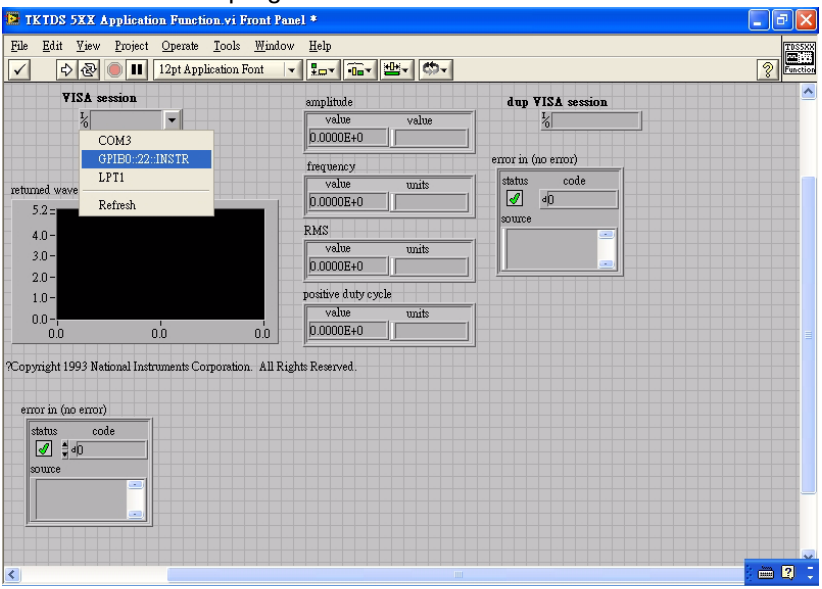

Using ADLINK GPIB Products in HP VEE Pro for Agilent-VISA Application Development


ADLINK GPIB products are full compatible with Agilent-VISA. Existing applications under Agilent-VISA can be used with ADLINK hardware with the following steps::

1. Install Agilent VISA. The ADLINK-GPIB driver is compatible with Agilent VISA.
2. Install the ADLINK GPIB driver (ADL-GPIB)
   - ▷ Obtain from ADLINK GPIB CD
   - ▷ Download from the ADLINK website http://www.adlinktech.com/GPIB/index.html
3. Use the Agilent Connection Expert to directly check if the tool can detect the ADLINK GPIB in the Treeview.

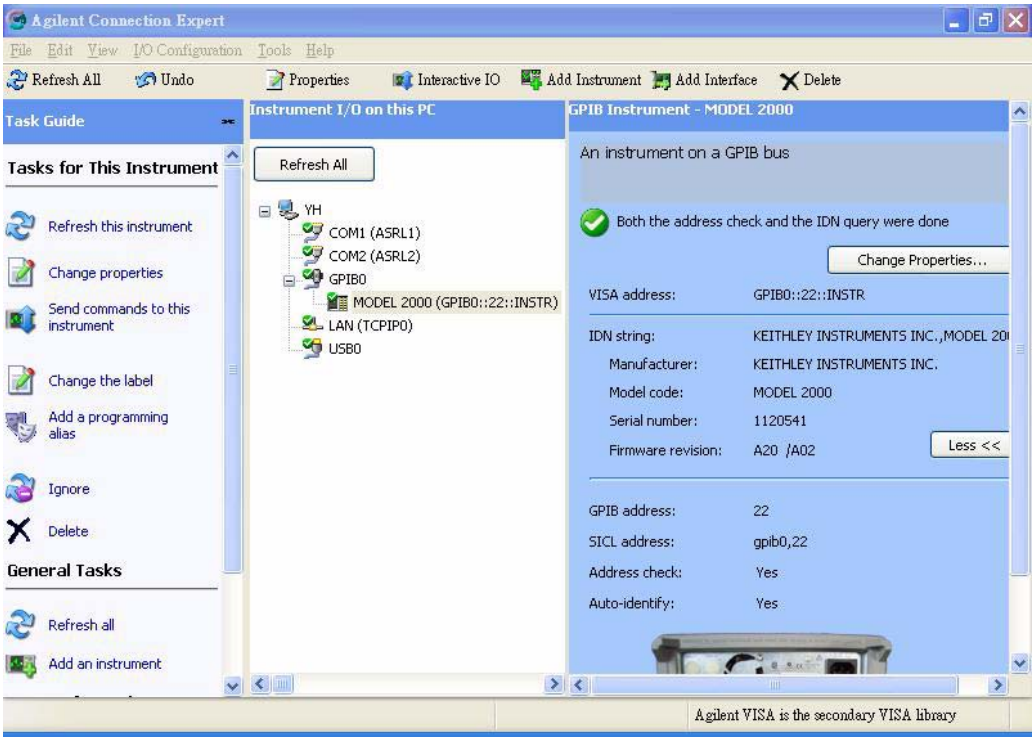

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4. Select the device detected by the GPIB and launch the advanced VISA Assistant utility from the "Tools" menu. Execute *IDN? SCPI command in the Formatted I/O tab-sheet to retrieve the result. Below is an example showing a Keithley DMM Model 2000 detected by the ADLINK GPIB through Agilent-VISA.

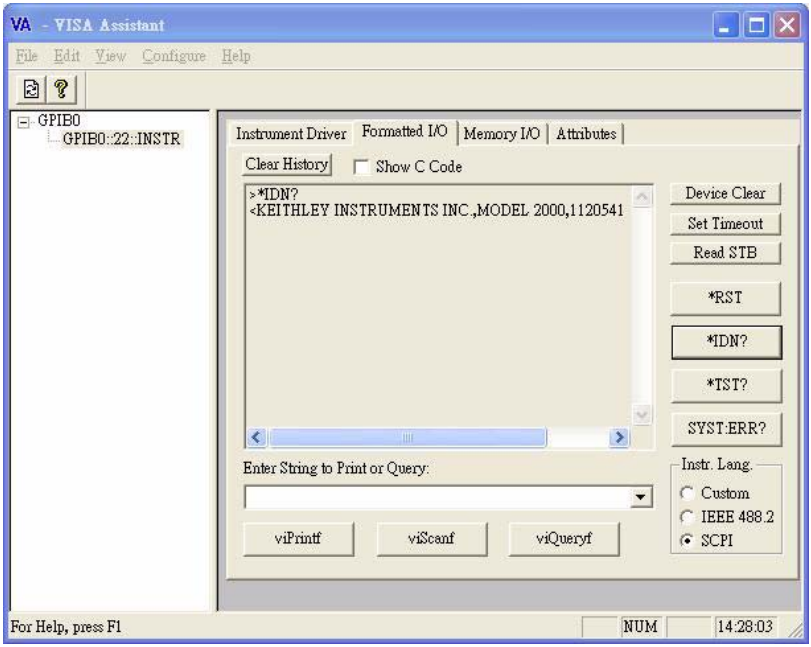

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000