NEON-2000-ONO Series

AI Smart Camera

User's Manual



Manual Rev.:	1.0
Revision Date:	May 8, 2024
Part No:	50M-51050-1000

LEADING EDGE COMPUTING

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Release Date	Description of Change(s)
1.0	2024-05-08	Official release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Preface

Copyright © 2024 ADLINK Technology, Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.


NOTE:

Additional information, aids, and tips that help users perform tasks.


CAUTION:

Information to prevent ***minor*** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.
ATTENTION: Informations destinées à prévenir les blessures corporelles mineures, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche.


WARNING:

Information to prevent ***serious*** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.
AVERTISSEMENT: Informations destinées à prévenir les blessures corporelles graves, les dommages aux composants, la perte de données et/ou la corruption de programme lors de l'exécution d'une tâche spécifique.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Revision History ii

Preface iii

List of Figures vii

List of Tables ix

1 Introduction 1

1.1 Overview 1
1.2 Features 2
1.3 General Specifications 3
1.4 Mechanical Dimensions 6
1.4.1 Camera Dimensions 6
1.4.2 USB Type-C Screw Lock Location and Dimensions 6
1.4.3 LED Light Mounting Thread 7
1.5 Accessories 8

2 Connectors and I/O 9

2.1 Bottom Side I/O and Connector Description 10
2.1.1 D-sub I/O Connector 11
2.1.2 DC Jack 12
2.2 Top Side I/O and Connector Description 13
2.2.1 Wafer Connector 14
2.3 Front Side I/O and Connector Description 15

3 Getting Started 17

3.1 Mounting 17
3.2 Digital I/O Connection Example 18
3.3 Attaching a Lens 19
3.4 Power and Peripheral Connections 20

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.5 Login 22
3.6 Image Capture and Inference 23
3.7 Neon-20XA Trigger Control 24
3.7.1 Trigger API Function 24
3.7.2 Trigger API Example 25

Important Safety Instructions 27

Consignes de Sécurité Importante 29

Getting Service 31

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Figures

Figure 2-1: NEON-2000-ONO Orientation 9
Figure 2-2: Bottom Side I/O and Connectors 10
Figure 2-3: D-sub I/O Connector 11
Figure 2-4: DC Jack Connector 12
Figure 2-5: Top Side I/O and Connectors 13
Figure 2-6: Wafer Connector 14
Figure 2-7: Front Side I/O and Connectors 15
Figure 3-1: NEON-2000-ONO Mounting Holes 17
Figure 3-2: Digital Input Schematic Diagram 18
Figure 3-3: Digital Output Schematic Diagram 18
Figure 3-4: Lens Attachment Assembly 19
Figure 3-5: Separate Power and Peripheral Connections 20
Figure 3-6: Combined Power and Peripheral Connections 21
Figure 3-7: Neon-20XA Trigger API Function Options 24

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Tables

Table 1-1: NEON-2000-ONO Model and Sensor Specifications . 1
Table 2-1: Bottom Side I/O and Connectors 10
Table 2-2: D-sub I/O Connector Pin Definitions 11
Table 2-3: D-sub I/O Connector Specification 12
Table 2-4: DC Jack Pin Definitions 12
Table 2-5: Top Side I/O and Connectors 13
Table 2-6: Wafer Connector Pin Definitions 14
Table 2-7: Front Side I/O and Connectors 15

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Introduction

1.1 Overview

The NEON-2000-ONO series is an open camera platform equipped with an NVIDIA® Jetson™ Orin Nano module supporting a series of image sensors providing industrial DI/O capabilities. It is designed for deep learning inference or other vision applications that requires a GPU at the edge. The system has Jetpack, camera driver, and utilities pre-installed to save integration effort and avoid compatibility issues.

The following table describes the current NEON-2000-ONO models with their respective sensor specifications.

Model Name	Image Sensor	Sensor Vendor	Sensor Model	Sensor Output	Image Capture
NEON-202B-ONO	1/1.8”, 1.9M, Global Shutter, 1600x1200, 60fps, Color	E2v	EV76C570	USB3	Basler Pylon
NEON-203B-ONO	1/3.7”, 2M, Rolling Shutter, 1920x1080, 30fps, Color	Onsemi	MT9P031	USB3	Basler Pylon
NEON-201A-ONO	1/2.6”, 2M, Global Shutter, 1920x1200, 60fps, Color	Onsemi	AR0234	MIPI	V4L2/ Gstreamer
NEON-202A-ONO	1/1.8”, 8M, Rolling Shutter, 3840x2160, 60fps, Color	Sony	IMX334	MIPI	V4L2/ Gstreamer

Table 1-1: NEON-2000-ONO Model and Sensor Specifications

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.2 Features

- Provides rich sample code and AI development, quick to start
- SOM: NVIDIA Jetson Orin Nano 4GB
- CPU: 6-core Arm Cortex-A78AE v8.2 64-bit
- GPU: NVIDIA Ampere architecture with 512 NVIDIA CUDA cores and 16 Tensor cores
- Storage: Embedded 128GB M.2 SSD
- USB3 and MIPI sensor interface, compatible with most machine version software
- Type-C connector supporting DC power, DisplayPort and USB signal
- Vertical I/O, including lighting control, image sensor trigger, communication port, etc.
- Highly-integrated and compact system, easy to deploy

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3 General Specifications

- Lens mount: C-mount
- Total weight: <700g (without lens)
- Operating temperature
  - NEON-20XB-ONO series: 0°C to 45°C with 0.6 m/s airflow at 10W mode
  - NEON-20XA-ONO series: 0°C to 55°C with 0.6 m/s airflow at 10W mode
- Power consumption: <30W
- Computing module: NVIDIA Jetson Orin Nano 4GB
  - CPU: 6-core Arm® Cortex®-A78AE v8.2 64-bit
  - GPU: NVIDIA Ampere™ architecture with 512 NVIDIA CUDA® cores and 16 Tensor cores
  - Memory and Storage: 4GB 64-bit LPDDR5 and embedded 128G SSD
- Camera I/O and connectors
  - 1x Type-C for power input, DisplayPort and USB signals
  - 1x DC Jack for 12-24V DC input
  - 1x GbE Ethernet port
  - 1x 15-pin D-sub for DI/O and COM which includes:
    - 4x GPI/O, including 1x Camera Trigger In and 1x Trigger Out
    - 1x COM
  - 1x wafer connector and 1x Micro-USB for system flashing and debugging

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

NOTE:

1. When powering from the DC Jack, the Type-C connector can provide 3W of power to an external device such as a Type-C hub. Devices requiring more than 3W cannot be used.
2. DC power can be from the Type-C connector or DC jack.
3. Use only recommended ADLINK power adapters.
4. Due to I/O configuration variance, do not use NVIDIA official image to upgrade and/or re-flash the device. To change OS, please contact our ADLINK representative.

	NEON-202B-ONO	NEON-203B-ONO	NEON-201A-ONO	NEON-202A-ONO
System Spec				
Processor	NVIDIA® Jetson™ Orin Nano 4GB			
CPU	6-core Arm Cortex-A78AE v8.2 64-bit			
OS Support	Ubuntu			
GPU	NVIDIA Ampere™ architecture with 512 NVIDIA CUDA® cores and 16 Tensor cores			
Storage	128GB SSD			
Memory	4GB			
Image Sensor Spec				
Resolution (HxV)	1600x1200	1920x1080	1920x1200	3840x2160
Resolution	1.9M	2M	2M	8M
Frame Rate (fps)	60	30	60	30
Shutter	Global	Rolling	Global	Rolling
Sensor Size	1/1.8"	1/3.7"	1/2.6"	1/1.8"
Pixel Size (µm)	4.5x4.5	2.2x2.2	3.0x3.0	2.0x2.0
Sensor Vendor	e2v	Onsemi	Onsemi	Sony
Sensor Model	EV76C570	MT9P031	AR0234	IMX334
Image Capturing Software	Basler Pylon		V4L2 & Gstreamer	
Image Sensor Trigger Mode	External hardware trigger, software trigger, free run		software trigger, free run	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	NEON-202B-ONO	NEON-203B-ONO	NEON-201A-ONO	NEON-202A-ONO
Lens Mount	C Mount			
Connectors and Functions				
Ethernet	10/100/1000 Mbps			
Type-C	DisplayPort Alternative Mode, 1920x1080 @ 30fps			
	USB 3.2 Gen1 (5Gbps)			
	Power supply for the camera (when connected to the Type C charger or adaptor)			
	Power supply (5W) for external Type-C USB Hub			
D-Sub	4xDI and 4xDO			
	1xUART (TXD, RXD, GND)			
Micro USB	USB OTG (for system flash)			
Wafer Connector	For system flash			
Mechanical and Power				
Dimensions	123.3 x 77.5 x 66.81 mm			
Weight	700g			
Power Input	DC Jack (DC12 to 24V) or Type C (DC20V)			
Power Consumption	<40W (camera only)			
Environmental and Certification				
Operating Temp.	0 to 45°C		0 to 55°C	
Storage Temp.	-20 to 70°C			
Humidity	40 to 75% (non-condensing)			
Vibration	Operating, 5 to500 Hz, 5 Grms, 3 axes			
Shock	Operating, 11ms duration, 30G, half sine, 3 axes			
ESD	Contact +/- 4kV, Air +/- 8kV			
EMC	CE and FCC Class A (EN61000-4/-2)			
Safety	UL and cB			


NOTE:


The DC power can be sourced either through the DC jack or the USB Type-C.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4 Mechanical Dimensions


This section provides dimensions and related mechanical information for the NEON-2000-ONO.

1.4.1 Camera Dimensions

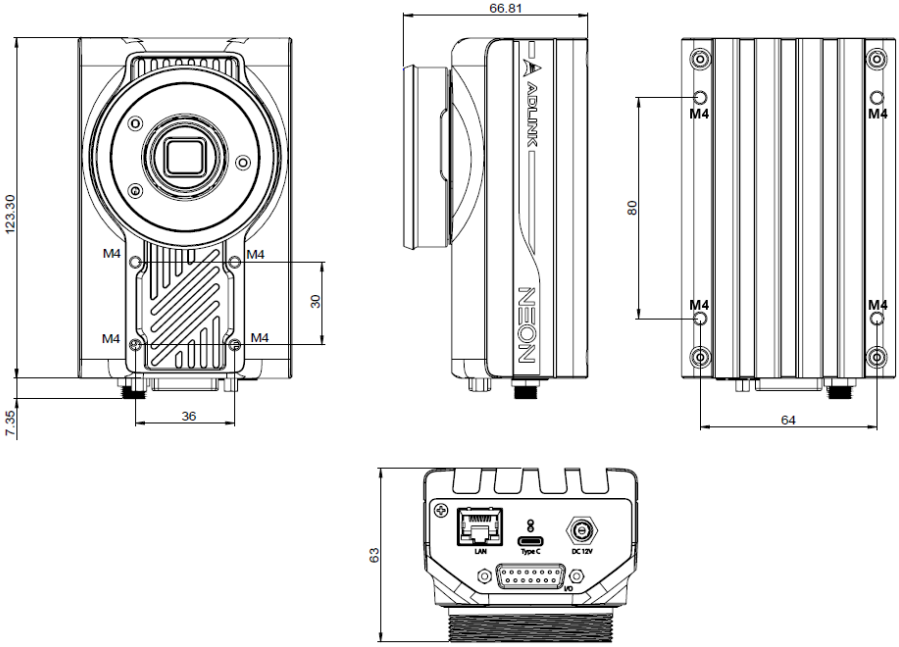

Dimensions: mm


1.4.2 USB Type-C Screw Lock Location and Dimensions

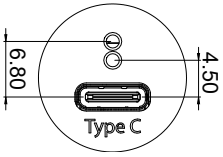

Dimensions: mm

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4.3 LED Light Mounting Thread

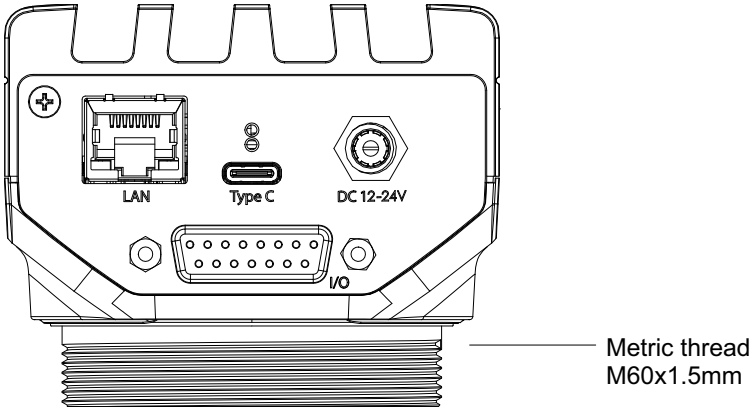

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.5 Accessories

Use ADLINK recommended accessories for optimum system performance. The table below includes ADLINK verified accessories.

Accessory	Part Number	Description
USB Type-C cable	30-01284-0030-A0	USB Type-C (M) to USB Type-C (M), length 1.8M, with screw lock
USB Type-C Hub & Adapter	92-99090-1010	AC 100-240V, USB – C PD2.0, DC 15V/2.3A
DI/O cable	30-01332-0010-A0	DB15P (M) to DB37P (M), length 3M, connected to DIN-37D-01
DIN-37D-01 DI/O extension board	91-14025-1020	DI/O extension board with one 37-pin D-sub connector and DIN-rail mount
8mm lens	92-15731-0010	Focal length 8mm, F1.4, 2/3", 3MP
AC/DC adaptor	31-62156-1000-A0	AC 100-240V DC, 12V/5A, DC jack

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Connectors and I/O

This chapter includes the locations and descriptions of the connectors and I/O found on the NEON-2000-ONO.

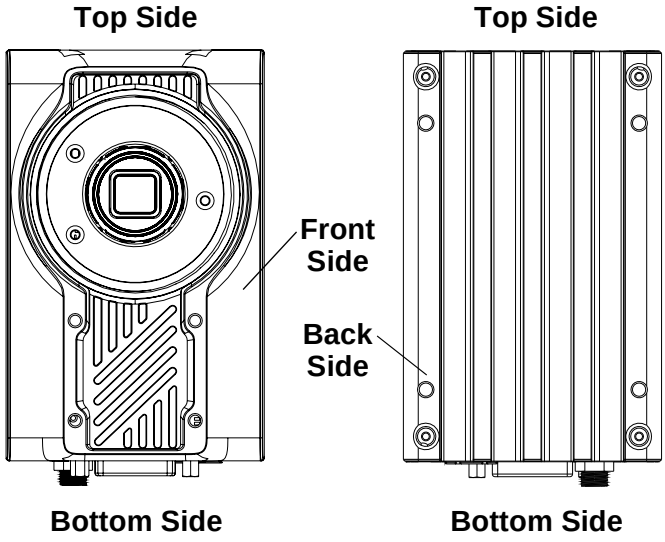


Figure 2-1: NEON-2000-ONO Orientation

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1 Bottom Side I/O and Connector Description

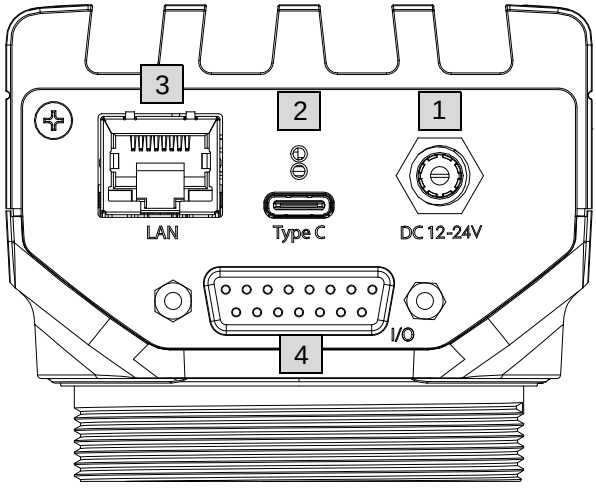


Figure 2-2: Bottom Side I/O and Connectors

Item	Description
1	• DC Jack for DC input with included ADLINK AC/DC adaptor (P/N 31-62156-1000-A0) • Power input: 12-24V DC at >30 W
2	• USB Type-C connector w/ screw lock • Supports DisplayPort (up to 1080P @ 30 fps) • The NEON-2000-ONO can be powered via this port or the DC jack
3	1 GbE LAN at 10/100/1000 Mbit/s
4	15-pin D-sub I/O connector for the digital I/O and UART. Use to connect external I/O devices such as sensors, COM and LED/strobe controllers.

Table 2-1: Bottom Side I/O and Connectors

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.1 D-sub I/O Connector

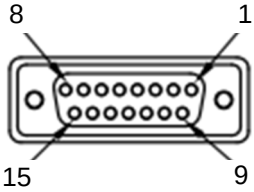


Figure 2-3: D-sub I/O Connector

Pin	Function	Pin	Function
1	UART - TX	2	DI/O GND
3	Digital output 0/Strobe output 0 (see note 2)	4	Digital output 1
5	Digital output 2	6	Digital output 3
7	UART GND	8	Reserved
9	UART – RX	10	DI/O GND
11	Digital input 0/Trigger input 0 (see note 1)	12	Digital Input 1
13	Digital Input 2	14	Digital Input 3
15	Reserved		

Table 2-2: D-sub I/O Connector Pin Definitions

NOTE:

1. Pin 11 (Digital input 0/Trigger input 0) is programmable. When configured for trigger input, it is used for hardware triggering of the image sensor. Connect an external sensor signal to pin 11 and set the camera to hardware trigger mode to enable realtime or hardware triggered image capture.

2. Pin 3 (Digital output 0/Strobe output 0) is programmable. When configured for strobe output, it can be connected to an LED light/strobe controller to adjust the timing latency/delay according to the camera connected to pin 11.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

I/O Category	Maximum Throughput	Specification		
UART	-	Baud rate: 9600bps @ 8N1		
Digital Input	10 KHz	Common sharing:	1 common for sharing ground	
		Input range:	0-5 VDC	
		High level threshold:	2-5 VDC	
		Low level threshold:	0-0.8 VDC	
Digital Output	10KHz	Open-collector	Input voltage range:	3.3-30 VDC
			Maximum sink current	100 mA

Table 2-3: D-sub I/O Connector Specification

2.1.2 DC Jack

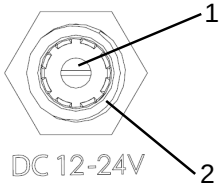


Figure 2-4: DC Jack Connector

Pin	Function	Description
1	Power	Power input
2	Ground	Reference ground

Table 2-4: DC Jack Pin Definitions

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Top Side I/O and Connector Description

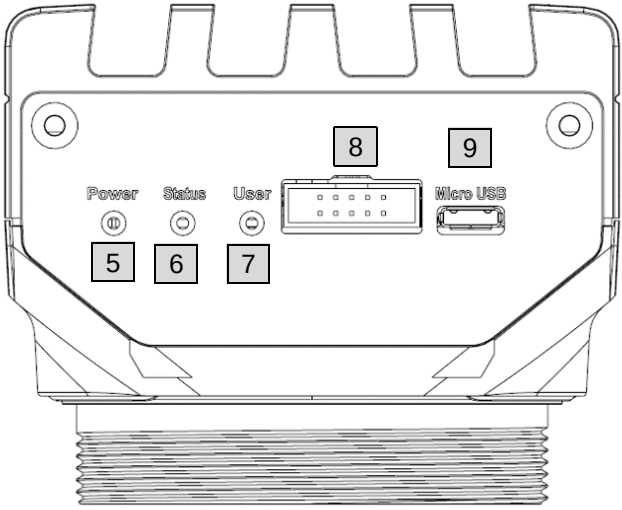


Figure 2-5: Top Side I/O and Connectors

Item	Description
5	Power status LED. Lights green when power is connected.
6	Operating system status LED. Flashes orange when the system is booting, and lights when the system has booted successfully.
7	Please refer to NEON LFR (Function Library Reference) for the LED control APIs.
8	Wafer connector, used to update the NEON-2000-ONO.
9	Micro-USB port, used to update the NEON-2000-ONO.

Table 2-5: Top Side I/O and Connectors

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2.1 Wafer Connector

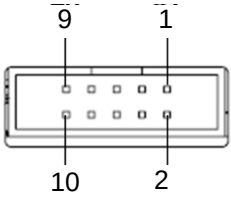


Figure 2-6: Wafer Connector

Pin	Function	Pin	Function
1	Reserved	2	Reserved
3	System Reset	4	GND
5	RECOVERY	6	GND
7	Reserved	8	GND
9	Reserved	10	GND

Table 2-6: Wafer Connector Pin Definitions

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3 Front Side I/O and Connector Description

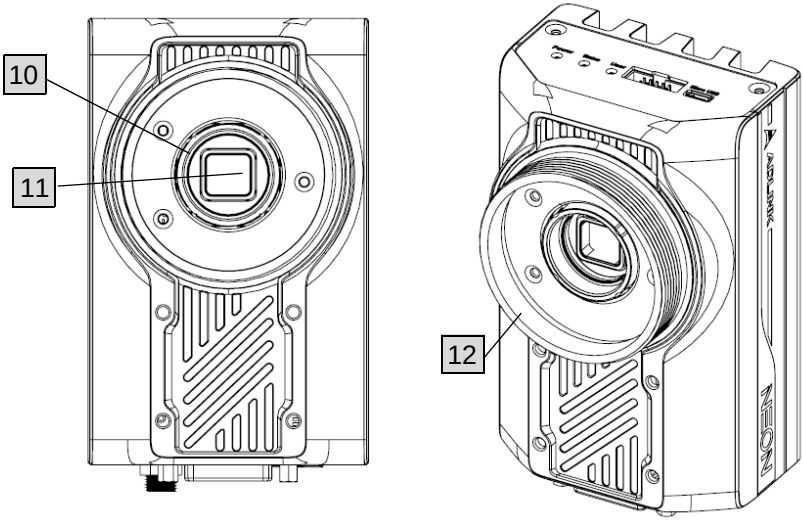


Figure 2-7: Front Side I/O and Connectors

Item	Description
10	C-type lens mount
11	Image sensor
12	Strobe/LED light mounting thread. See “LED Light Mounting Thread” on page 7.

Table 2-7: Front Side I/O and Connectors

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Getting Started

3.1 Mounting

The NEON-2000-ONO can be mounted using the mounting screw holes on either the front (A) or back (B) sides.

Le NEON-2000-ONO peut être monté à l'aide des trous de vis de montage sur les côtés avant (A) ou arrière (B).

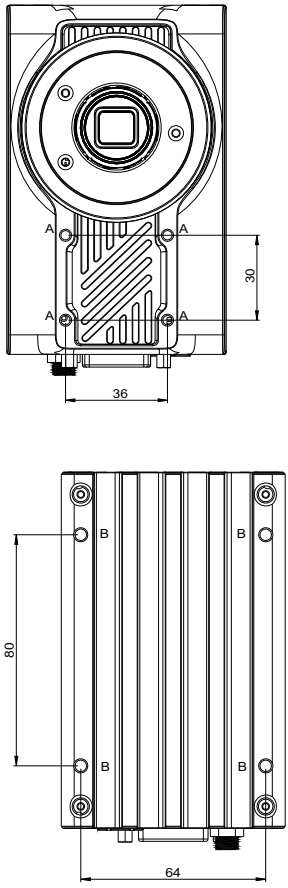


Figure 3-1: NEON-2000-ONO Mounting Holes

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2 Digital I/O Connection Example

External devices such as trigger sensors, LED light controllers or relays can be connected to the NEON-2000-ONO to implement different applications. This section shows an example of how to connect such devices.

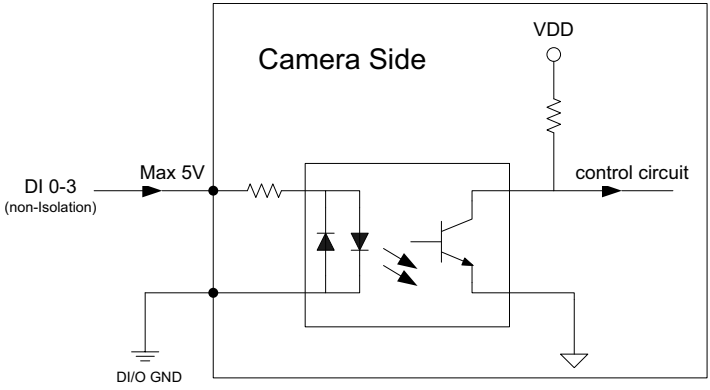


Figure 3-2: Digital Input Schematic Diagram

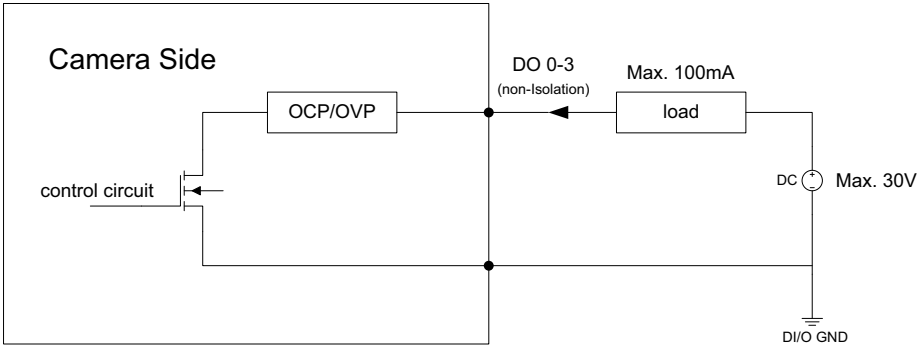


Figure 3-3: Digital Output Schematic Diagram

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3 Attaching a Lens

The NEON-2000-ONO is compatible with C-mount type lenses.

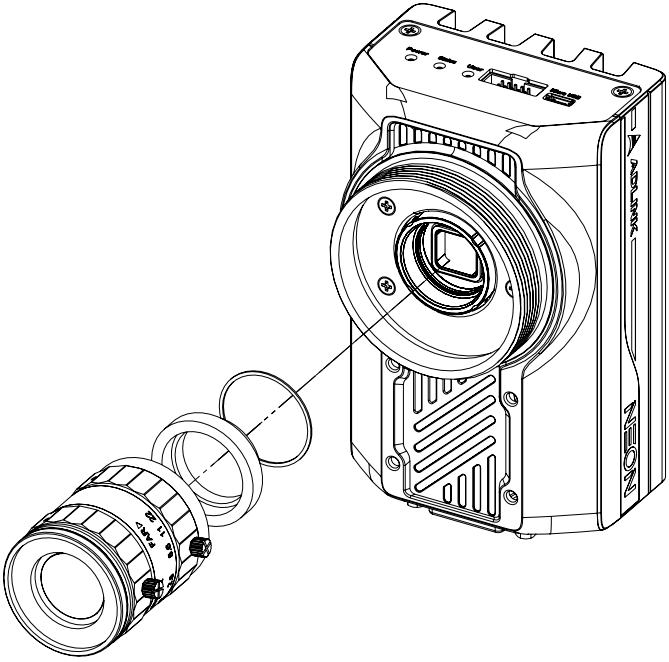


Figure 3-4: Lens Attachment Assembly


NOTE:

The transfer ring is installed before shipping. The washer is used only with the NEON-202B-JNX.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4 Power and Peripheral Connections


The NEON-2000-ONO DC power source can be either from a USB Type-C adaptor or DC jack. The USB Type-C connector also supports a DisplayPort video signal and USB3, which can be used to connect a keyboard and mouse. The following figures show examples of possible power and peripheral connection configurations.

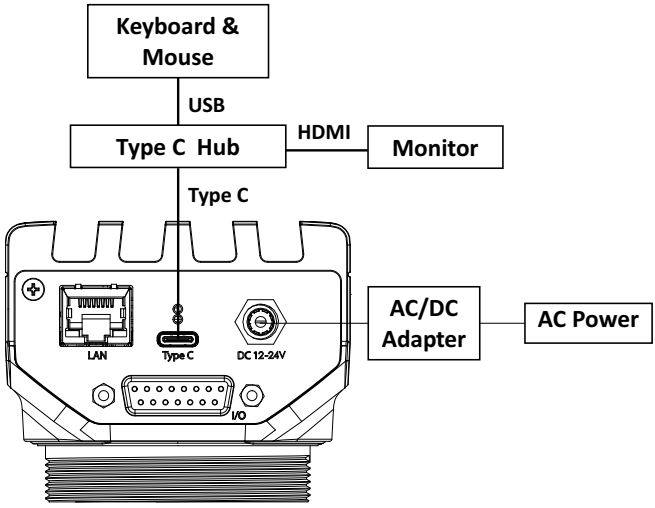

NOTE: This configuration requires an ADLINK AC/DC power adapter (P/N 31-62156-1000-A0). Ensure that the power adapter cord of the device connects to a socket outlet with a ground/earth connection.

Figure 3-5: Separate Power and Peripheral Connections

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

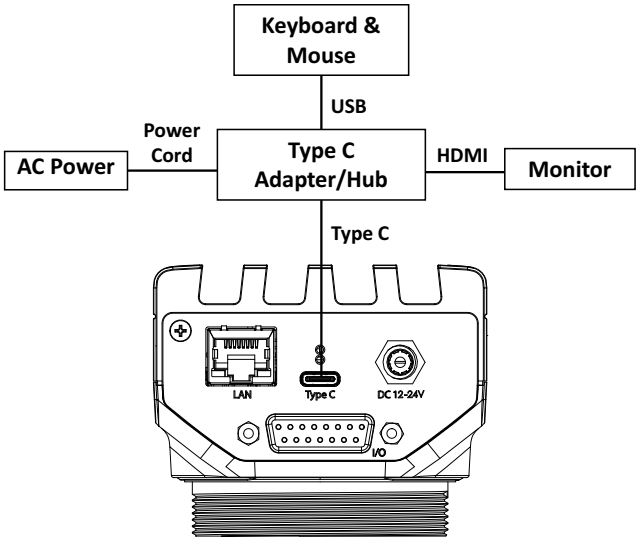

NOTE:

This configuration requires an ADLINK USB Type-C hub/adapter (P/N 92-99090-1010).

Figure 3-6: Combined Power and Peripheral Connections

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.5 Login


Log in to the NEON-2000-ONO with the following credentials:

- Default account: adlink
- Default password: adlink

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.6 Image Capture and Inference

ADLINK provides sample files for testing the NEON-2000-ONO image capturing functions. The files are located in the **Samples** folder on the Desktop.

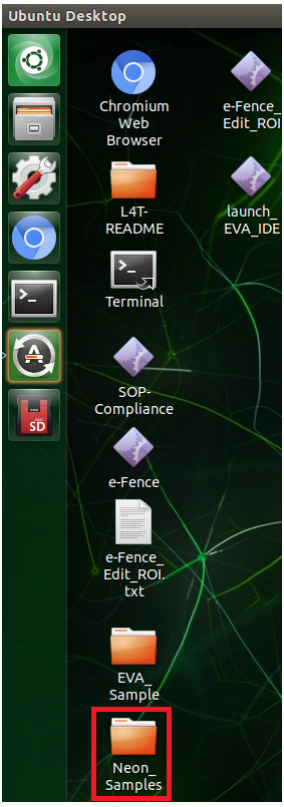

To get the latest sample code, go to https://github.com/AIoT-IST/Samples

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.7 Neon-20XA Trigger Control

3.7.1 Trigger API Function

You can adjust image features or control a lens by using the v4l2-ctl command as follows:

```
v4l2-ctl --set-ctrl=<ctrl>=<val>
```

To list the all the options, enter:

```
v4l2-ctl --all
```

The following table list all the Trigger API Function options and their descriptions.

<ctrl>	<ctrl> description	<val> type	<val> description
trigger_mode	enable/disable the trigger mode	Menu 0: OFF 1: PULSED 2: AUTOMATIC SOFTWARE 3: AUTOMATIC EXTERNAL	min=0 max=3 default=0
trigger_gain	set the gain at trigger mode	int	min=10000 max=1280000 step=1000 default=10000
trigger_wb_mode	choose the white balance mode at trigger mode	Menu 0: Manual Gain 1: Manual Color Temperature 2: Sunny 3: Shadow 4: Indoor 5: Lamp	min=0 max=5 default=1

Figure 3-7: Neon-20XA Trigger API Function Options

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


<ctrl>	<ctrl> description	<val> type	<val> description
trigger_wb_rgain	set the r gain of white balance at trigger mode	int	min=1 max=4095 step=1 default=1024
trigger_wb_bgain	set the b gain of white balance at trigger mode	int	min=1 max=4095 step=1 default=1024
trigger_wb_colortemp	set the color temperature at trigger mode	int	min=2000 max=12000 step=1 default=5500
trigger_start_stop	start trigger/stop trigger	button	
external_trigger_polarity	choose to trigger externally at falling edge or rising edge	Menu 0: Falling 1: Rising	min=0 max=1 default=1

Figure 3-7: Neon-20XA Trigger API Function Options

3.7.2 Trigger API Example

Step 1: Open a terminal and enter the following command to start streaming.

```
gst-launch-1.0 v4l2src io-mode=4 device=/dev/
     video0 do-timestamp=true ! 'video/x-raw,
     width=1920, height=1080,framerate=60/1,
     format=UYVY' ! xvimagesink sync=false&
```

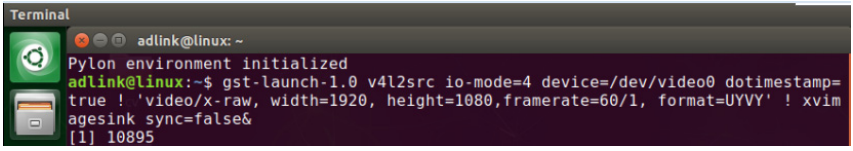

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 2: To test the functionality of the **software trigger** of the pulsed trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=1
v4l2-ctl --set-ctrl=low_latency_mode=1
v4l2-ctl --set-ctrl=trigger_start_stop=1
```

Step 3: To test the functionality of the **hardware trigger** of the pulsed trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=1
v4l2-ctl --set-ctrl=low_latency_mode=1
```

Step 4: To test the functionality of the **software trigger** of the automatic trigger mode, enter:

```
v4l2-ctl --set-ctrl=trigger_mode=2
v4l2-ctl --set-ctrl=trigger_start_stop=1
v4l2-ctl --set-ctrl=trigger_start_stop=1
```

In automatic trigger mode, the first **trigger_start_stop** command will trigger continuously while the second **trigger_start_stop** command will stop the trigger.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Important Safety Instructions

For user safety, please read and follow all instructions, Warnings, Cautions, and Notes marked in this manual and on the associated device before handling/operating the device, to avoid injury or damage.

- Read these safety instructions carefully
- Keep the User's Manual for future reference
- Read the Specifications section of this manual for detailed information on the recommended operating environment
- Operating temperature: 35ºC with USB Type C Adaptor/Hub or 40ºC with the adapter supply.
- When installing/mounting or uninstalling/removing device; or when removal of a chassis cover is required for user servicing:
  - Turn off power and unplug any power cords/cables
  - Reinstall all chassis covers before restoring power
- To avoid electrical shock and/or damage to device:
  - Keep device away from water or liquid sources
  - Keep device away from high heat or humidity
  - Keep device properly ventilated (do not block or cover-ventilation openings)
  - Always use recommended voltage and power source settings
  - Always install and operate device near an easily accessible electrical outlet
  - Secure the power cord (do not place any object on/over the power cord)
  - Only install/attach and operate device on stable surfaces and/or recommended mountings
- If the device will not be used for long periods of time, turn off and unplug from its power source
- Never attempt to repair the device, which should only be serviced by qualified technical personnel using suitable tools

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- A Lithium-type battery may be provided for uninterrupted backup or emergency power.



Risk of explosion if battery is replaced with one of an incorrect type; please dispose of used batteries appropriately.

- The device must be serviced by authorized technicians when:
  - The power cord or plug is damaged
  - Liquid has entered the device interior
  - The device has been exposed to high humidity and/or moisture
  - The device is not functioning or does not function according to the User's Manual
  - The device has been dropped and/or damaged and/or shows obvious signs of breakage
- Disconnect the power supply cord before loosening the thumbscrews and always fasten the thumbscrews with a screwdriver before starting the system up
- Ensure that the power adapter cord of the device connects to a socket outlet with a ground/earth connection.
- It is recommended that the device be installed only in a server room or computer room where access is:
  - Restricted to qualified service personnel or users familiar with restrictions applied to the location, reasons therefor, and any precautions required
  - Only afforded by the use of a tool or lock and key, or other means of security, and controlled by the authority responsible for the location

	***BURN HAZARD*** Touching this surface could result in bodily injury. To reduce risk, allow the surface to cool before touching.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Consignes de Sécurité Importante

S'il vous plaît prêter attention stricte à tous les avertissements et mises en garde figurant sur l'appareil, pour éviter des blessures ou des dommages.

- *Lisez attentivement ces consignes de sécurité.*
- *Conservez le manuel de l'utilisateur pour pouvoir le consulter ultérieurement.*
- *Lisez la section Spécifications de ce manuel pour des informations détaillées sur l'environnement d'exploitation recommandé.*
- *Température de fonctionnement: 35 ° C avec adaptateur / concentrateur USB Type C ou 40 ° C avec l'adaptateur.*
- *Lors de l'installation / du montage ou de la désinstallation / suppression du périphérique; ou lorsque le retrait d'un capot de châssis est requis pour l'entretien par l'utilisateur:*
  - *Coupez l'alimentation et débranchez tous les cordons / câbles d'alimentation*
  - *Réinstallez tous les couvercles de châssis avant de rétablir l'alimentation*
- *Pour éviter les chocs électriques et / ou les dommages à l'appareil:*
  - *Gardez l'appareil éloigné de l'eau ou des sources de liquide*
  - *Gardez l'appareil loin de la chaleur ou de l'humidité élevée*
  - *Gardez l'appareil correctement ventilé (ne bloquez pas et ne couvrez pas les ouvertures de ventilation)*
  - *Utilisez toujours les paramètres de tension et de source d'alimentation recommandés*
  - *Installez et utilisez toujours l'appareil à proximité d'une prise électrique facilement accessible*
  - *Fixez le cordon d'alimentation (ne placez aucun objet sur / par-dessus le cordon d'alimentation)*
  - *Installez / fixez et utilisez l'appareil uniquement sur des surfaces stables et / ou des supports recommandés*
- *Si l'appareil n'est pas utilisé pendant de longues périodes, éteignez-le et débranchez-le de sa source d'alimentation*
- *N'essayez jamais de réparer l'appareil, qui ne doit être entre-*

tenu que par du personnel technique qualifié à l'aide d'outils appropriés.

- *Une batterie de type lithium peut être fournie pour une alimentation de secours ou une alimentation de secours ininterrompue.*



Risque d'explosion si la pile est remplacée par une autre de type incorrect. Veuillez jeter les piles usagées de façon appropriée.

- *L'appareil doit être réparé par des techniciens autorisés lorsque:*
  - *Le cordon d'alimentation ou la fiche est endommagé*
  - *Du liquide a pénétré à l'intérieur de l'appareil*
  - *L'appareil a été exposé à une humidité élevée et / ou à l'humidité*
  - *L'appareil ne fonctionne pas ou ne fonctionne pas selon le manuel de l'utilisateur*
  - *L'appareil est tombé et / ou endommagé et / ou montre des signes évidents de casse*
- *Débranchez le cordon d'alimentation avant de desserrer les vis moletées et fixez toujours les vis moletées avec un tournevis avant de démarrer le système*
- *Assurez-vous que le cordon de l'adaptateur secteur de l'appareil est connecté à une prise de courant avec une connexion terre / terre.*
- *Il est recommandé d'installer l'appareil uniquement dans une salle de serveurs ou une salle informatique où l'accès est:*
  - *Réservé au personnel de service qualifié ou aux utilisateurs familiers avec les restrictions appliquées à l'emplacement, les raisons de celles-ci et les précautions nécessaires*
  - *Seulement permis par l'utilisation d'un outil ou d'une serrure et d'une clé, ou d'autres moyens de sécurité, et contrôlé par l'autorité responsable de l'emplacement*

	***RISQUE DE BRÛLURES*** *Ne touchez pas cette surface, cela pourrait entraîner des blessures.* *Pour éviter tout danger, laissez la surface refroidir avant de la toucher.*

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service

Ask an Expert: https://www.adlinktech.com/en/Askanexpert

ADLINK Technology, Inc.
No.66 Huaya 1st Road, Guishan District
Taoyuan City 333, Taiwan
Tel: +886-3-216-5088
Fax: +886-3-328-5706
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.
5215 Hellyer Avenue, #110
San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.
300 Fang Chun Rd., Zhangjiang Hi-Tech Park
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology GmbH
Hans-Thoma-Strasse 11
D-68163 Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000