NuDAQ®
cPCI-7248/7249R
PCI-7224/7248/7296
24/48/96-CH Digital I/O Card
Users' Guide



Recycled Paper

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

©Copyright 2004 ADLINK Technology Inc.

All Rights Reserved.

Manual Rev. 2.60: May 25, 2004

Part No. 50-11104-201

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

NuDAQ, NuIPC, DAQBench are registered trademarks of ADLINK Technology Inc.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting service from ADLINK

Customer Satisfaction is top priority for ADLINK TECHNOLOGY INC. If you need any help or service, please contact us.

ADLINK TECHNOLOGY INC.			
Web Site	http://www.adlinktech.com		
Sales & Service	Service@adlinktech.com		
TEL	+886-2-82265877	FAX	+886-2-82265717
Address	9F, No. 166, Jian Yi Road, Chungho City, Taipei, 235 Taiwan		

Please email or FAX your detailed information for prompt, satisfactory, and consistent service.

Detailed Company Information			
Company/Organization			
Contact Person			
E-mail Address			
Address			
Country			
TEL		FAX	
Web Site			
Questions			
Product Model			
Environment	OS: Computer Brand: M/B: Chipset: Video Card: NIC: Other:	CPU: BIOS:	
Detail Description			
Suggestions for ADLINK			

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Chapter 1 Introduction 1

1.1 Features 2
1.2 Applications 2
1.3 Specifications 3
1.4 Software Support 5

Chapter 2 Installation 9

2.1 What You Have 9
2.2 Unpacking 10
2.3 PCB Layout 11
2.4 Hardware Installation 13
2.5 Device Installation for Windows Systems 14
2.6 Connector Pin Assignment 15
2.7 Jumpers Description 19
2.8 Termination Boards Connection 20

Chapter 3 Registers Format 23

3.1 PCI Plug and Play Registers 23
3.2 I/O Address Map 24

Chapter 4 Operation Theorem 25

4.1 Digital I/O Ports 25
4.2 Timer/Counter Operation 28
4.3 Interrupt Multiplexing 29
4.4 12V and 5V Power Supply 31

Chapter 5 C/C++ Libraries 33

5.1 Libraries Installation 33
5.2 Programming Guide 34
5.3 _7248/96_Initial 35
5.4 Digital Input 36
5.5 Digital Output 38
5.6 Configuration Port 39
5.7 Configuration Channel 40
5.8 Set Interrupt Control 42
5.9 Timer Start 43

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.10 Timer Read 44
5.11 Timer Stop 45
5.12 Cascaded Timer 46
5.13 Get IRQ Status 47
5.14 Clear IRQ 48
5.15 Software Reset 48
5.16 Interrupt Start under Windows 49
5.17 Interrupt Stop under Windows 50

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

How to Use This Guide

This manual is designed to help you use the 7248/96 series products. It describes how to modify and control various functions on the cards to meet your requirements. It is divided into five chapters:

- **Chapter 1, Introduction**, gives an overview of the product features, applications, and specifications.
- **Chapter 2, Installation**, describes how to install the 7248/96 series products. The layout of the card is shown; as well as the description for the jumper settings, connectors specifications, and installation.
- **Chapter 3, Registers Format**, describes the low-level register structure and format of the PCI-7224/7248/7296.
- **Chapter 4, Operation Theorem**, describes in further detail of the system's versatile functions, including DIO, timer / counter, and interrupt systems.
- **Chapter 5, C/C++ Library** specifies the software library of C language under DOS environment allowing the ease of use of the functions on this card for the user.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1

Introduction

The 7248/7296 series products are general purpose digital I/O cards. This series includes four cards:

- PCI-7224: 24-CH DIO card
- PCI-7248: 48-CH DIO card
- PCI-7296: 96-CH DIO card
- cPCI-7248: 3U CompactPCI 48-CH DIO card
- cPCI-7249R: 3U CompactPCI 48-CH DIO card with Rear I/O

The 7248 series products are multi-function digital I/O boards used for industrial PC with PCI bus or CompactPCI bus. The cards are Plug and Play therefore it is not necessary to set any jumper for configuration of I/O address or interrupt resources.

PCI-7248 and PCI-7296 are 48-channel and 96-channel DIO cards respectively. PCI-7224 is a reduced version of PCI-7248, where all functions are exactly the same as PCI-7248 with the exception that there are only 24 channels. The cPCI-7248 is the 3U CompactPCI version of the PCI-7248. The software is fully compatible with the PCI-7248. In this manual, if the specifications for PCI-7224 and cPCI-7248's are not specified, they are the same as that of PCI-7248.

The PCI-7248 emulates two industry standard 8255 Programmable Peripheral Interface (PPI) chips operated under mode zero configuration. The PCI-7296 emulates four PPI chips. These two cards are compatible not only on hardware connectors but also on software programming.

The cPCI-7248 is the CompactPCI version of PCI-7248. All the functions are exactly the same as PCI-7248. The cPCI-7249 is an extended version of cPCI-7248, with an additional latch register and rear I/O capability.

Every PPI connector has 3 ports: PA, PB, and PC. The PC can also be subdivided into 2 nibble-wide (4-bit) ports - PC Upper and PC Low. Each connector corresponds to one PPI chip with 24 DIO points. PCI-7224/7248/7296 are equipped with one, two, and four 50-pin male ribbon connectors respectively. The cPCI-7248 is equipped with one 100-pin SCSI-type connector.

LRi Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.1 Features

The 7248/96 series products provide the following advanced features:

1.1.1 Digital I/O Ports

- 24/48/96 TTL/DTL compatible with digital I/O lines
- Emulates industry standard mode 0 of 8255 PPI
- Buffered circuits for higher driving
- Direct interface with OPTO-22 compatible I/O module
- Output status read-back

1.1.2 Timer/Counter and Interrupt System

- A 32 bits timer to generate watchdog timer interrupt
- A 16 bits event counter to generate event interrupt
- Programmable interrupt source
- Dual interrupt system

1.1.3 Miscellaneous

- Provide 12V and 5V power supply on OPTO-22 connectors
- On board reset-able fuses to protect power supply for external devices

1.2 Applications

- Programmable mixed digital input & output
- Industrial monitoring and control
- Digital I/O control
- Contact closure, switch/keyboard monitoring
- Connects with OPTO-22 compatible modules
- Useful with A/D and D/A to implement a data acquisition and control system

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3 Specifications

I/O channels	24-bit for PCI-7224 48-bit for PCI-7248 96-bit for PCI-7296 48-bit for cPCI-7248 and cPCI-7249R
Digital Input Signal	Logic High Voltage: 2.0 V to 5.25V Logic Low Voltage: 0.0 V to 0.80V Logic High Current: 20.0 uA Logic Low Current: -0.2 mA
Digital Output Signal (Port A & B)	Logic High Voltage: Minimum 2.4 V Logic Low Voltage: Maximum 0.5V Logic High Current: -2.6 mA Logic Low Current: 24.0 mA
Digital Output Signal (Port C)	Logic High Voltage: Minimum 2.4 V Logic Low Voltage: Maximum 0.4V Logic High Current: -15.0 mA Logic Low Current: 24.0 mA
Operating Temperature	0 °C - 60°C
Storage Temperature	-20°C - 80°C
Humidity	5% - 95% non-condensing
I/O Connectors	50-pin male ribbon cable connectors for PCI-7224/7248/7296 or 100-pin SCSI-type connectors for cPCI-7248
Bus	PCI bus for PCI-7224/7248/7296 3U 32-bit CompactPCI Bus for cPCI-7248
Power Consumption (without external devices)	**PCI-7224:** 330mA @ 5VDC (Typical) 350mA @ 5VDC (Maximum) **PCI-7248:** 500mA @ 5VDC (Typical) 540mA @ 5VDC (Maximum) **PCI-7296:** 860mA @ 5VDC (Typical) 940mA @ 5VDC (Maximum) **cPCI-7248:** 470mA @ 5VDC (Typical) 560mA @ 5VDC (Maximum) **cPCI-7249R:** 700mA @ 5VDC (Typical)
Transfer Rate	500 K bytes/s (Maximum)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

PCB Dimension	**PCI-7224:** 148mm x 102mm **PCI-7248:** 148mm x 102mm **PCI-7296:** 16mm x 102mm **cPCI-7248:** 3U CompactPCI form factor **cPCI-7249R:** 3U CompactPCI form factor, J2 with Rear I/O option

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4 Software Support

ADLINK provides versatile software drivers and packages for different approaches to building systems. We not only provide programming libraries such as DLL for many Windows systems, but also provide drivers for many software packages such as LabVIEW®, HP VEE™, DASYLab™, InTouch™, InControl™, ISaGRAF™, and many more.

All the software options are included in the ADLINK CD. The non-free software drivers are protected by serial licensed codes. Without the software serial number, the user can still install them and run the demo version for two hours for demonstration purpose. Please contact your dealer to purchase the formal license serial code.

1.4.1 Programming Library

For customers who are writing their own programs, we provide function libraries for many different operating systems, including:

- DOS Library: Borland C/C++ and Microsoft C++, the functions descriptions are included in this user's guide.
- Windows 95 DLL: For VB, VC++, Delphi, BC5, the functions descriptions are included in this user's guide.
- PCIS-DASK: Include device drivers and DLL for **Windows 98, Windows NT and Windows 2000**. DLL is binary compatible across Windows 98, Windows NT and Windows 2000. In other words, all applications developed with PCIS-DASK are compatible across Windows 98, Windows NT and Windows 2000. The developing environment can be VB, VC++, Delphi, BC5, or any Windows programming language that allows calls to a DLL. The user's guide and function reference manual of PCIS-DASK are in the CD. Please refer the PDF manual files under the following directory: \\Manual_PDF\Software\PCIS-DASK
- PCIS-DASK/X: Include device drivers and shared library for **Linux**. The developing environment can be Gnu C/C++ or any programming language that allows linking to a shared library. The user's guide and function reference manual of PCIS-DASK/X are in the CD. (\Manual_PDF\Software\PCIS-DASK-X.)
- The above software drivers are shipped with the board. Please refer to the "Software Installation Guide" to install these drivers.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4.2 PCIS-LVIEW: LabVIEW® Driver

PCIS-LVIEW contains the VIs, which are used to interface with NI's LabVIEW® software package. The PCIS-LVIEW supports Windows 95/98/NT/2000. The LabVIEW® drivers are shipped free of charge with the board. You can install and use them without license. For more detailed information about PCIS-LVIEW, please refer to the user's guide in the CD.

(\\Manual_PDF\Software\PCIS-LVIEW)

1.4.3 PCIS-VEE: HP-VEE Driver

The PCIS-VEE includes user objects, which are used to interface with HP VEE software package. PCIS-VEE supports Windows 95/98/NT. The HP-VEE drivers are shipped free of charge with the board. You can install and use them without license. For detail information about PCIS-VEE, please refer to the user's guide in the CD.

(\\Manual_PDF\Software\PCIS-VEE)

1.4.4 DAQBench™: ActiveX Controls

We suggest the customers who are familiar with ActiveX controls and VB/VC++ programming to use the DAQBench™ ActiveX Control components library for developing applications. The DAQBench™ is designed under Windows NT/98. For more detailed information about DAQBench, please refer to the user's guide in the CD.

(\\Manual_PDF\Software\DAQBench\DAQBench Manual.PDF)

1.4.5 DASYLab™ PRO

DASYLab is an easy-to-use software package, providing easy to setup instrument functions such as FFT analysis. Please contact ADLINK Technology to obtain DASYLab PRO, which includes DASYLab and ADLink hardware drivers.

1.4.6 PCIS-DDE: DDE Server and InTouch™

DDE stands for Dynamic Data Exchange specifications. The PCIS-DDE includes the PCI cards' DDE server. The PCIS-DDE server is included in the ADLINK CD. A license is required. The DDE server can be used in conjunction with any DDE client under Windows NT.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4.7 PCIS-ISG: ISaGRAF™ driver

The ISaGRAF WorkBench is an IEC1131-3 SoftPLC control program development environment. The PCIS-ISG includes ADLink products' target drivers for ISaGRAF under Windows NT environment. The PCIS-ISG is included in the ADLINK CD. A license is required.

1.4.8 PCIS-ICL: InControl™ Driver

PCIS-ICL is the InControl driver which supports the Windows NT. The PCIS-ICL is included in the ADLINK CD. A license is required.

1.4.9 PCIS-OPC: OPC Server

PCIS-OPC is an OPC Server, which can be linked with OPC clients. There are now many software packages on the market that can provide OPC clients. PCIS-OPC supports Windows NT and a license is required.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2

Installation

This chapter describes how to install the 7248/96 series products. Please take note of the packing and unpacking instructions as described below:

- Check what you have (section 2.1)
- Unpacking (section 2.2)
- Check the PCB (section 2.3)
- Hardware installation (section 2.4)
- Device Installation for Windows System (section 2.5)
- Connector pin assignment (section 2.6)
- Jumpers setup (section 2.7)
- Termination boards connection (section 2.8)

2.1 What You Have

In addition to this *User's Manual*, the package also includes:

- The PCI or CompactPCI board
- ADLINK CD
- Software Installation Guide
- In the cPCI-7249R box, a rear I/O transition board DB-100RU is included

If any of these items are missing or damaged, please contact the dealer from whom you purchased the product. Keep the shipping materials and box in case you want to ship or store the product in the future.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Unpacking

Your card contains sensitive electronic components that can be easily damaged by static electricity.

The card should be placed on a grounded anti-static mat. The operator should wear an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card module carton for obvious damage. Shipping and handling may cause damage to your module. Ensure there is no shipping and handling damage on the module before processing.

After opening the card module carton, remove the system module and place only on a grounded anti-static surface with components side up.

Again inspect the module for damages. Press down on all the socketed IC's to make sure they are properly seated. Only do this with the module placed on a firm flat surface.

Note: DO NOT APPLY POWER TO THE CARD IF IT HAS BEEN DAMAGED.

You are now ready to install your 7248/96 series product.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3 PCB Layout

2.3.1 PCI-7248/7224 PCB Layout

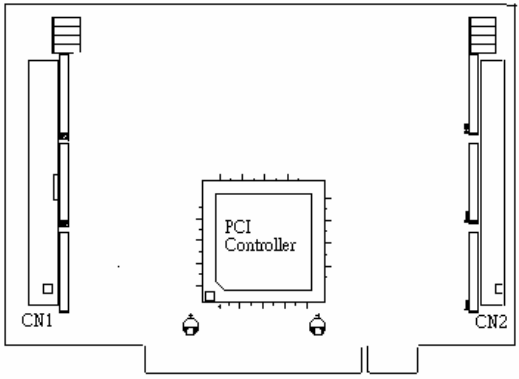


Figure 2.3.1 PCI-7248/7224 PCB Layout

2.3.2 PCI-7296 PCB Layout

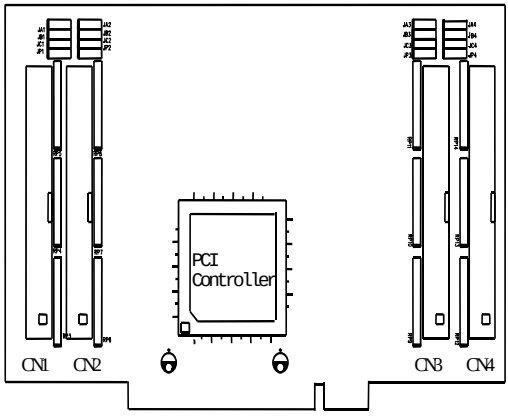


Figure 2.3.2 PCI-7296 PCB Layout

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3.3 cPCI-7248 PCB Layout

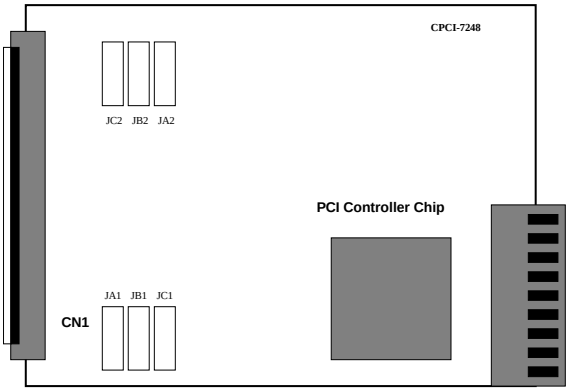


Figure 2.3.3 cPCI-7248 PCB Layout

2.3.4 cPCI-7249R PCB Layout

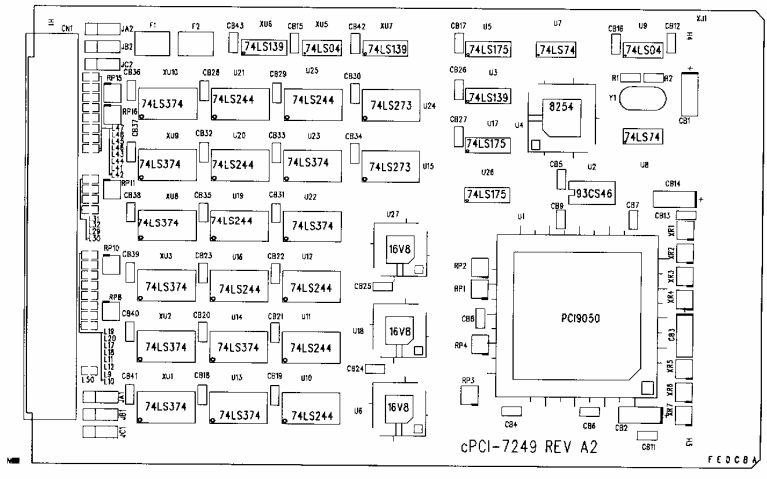


Figure 2.3.4 cPCI-7249R Layout

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.4 Hardware Installation

PCI configuration

The PCI cards (or CompactPCI cards) are equipped with Plug and Play PCI controller, it can request base addresses and interrupt according to PCI standard. The system BIOS will install the system resources based on the PCI cards' configuration registers and system parameters (which are set by system BIOS). Interrupt assignment and memory usage (I/O port locations) of the PCI cards can be assigned by system BIOS only. These system resource assignments are done on an individual board basis. It is not recommended to assign the system resource by any other methods.

PCI slot selection

The PCI card can be inserted into any PCI slot without any configuration for system resource. Please note that the PCI system board and slot must provide bus-mastering capability to operate this board well.

PCI Installation Procedures

1. Turn off your computer.
2. Turn off all peripherals (printer, modem, monitor, etc.) connected to your computer.
3. Remove the cover from your computer.
4. Set up jumpers on the PCI or CompactPCI card.
5. Select the 32-bit PCI slot. PCI slots are shorter than the ISA or EISA slots and are usually white or ivory.
6. Before handling the PCI cards, discharge any static buildup on your body by touching the metal case of the computer. Hold the edge and do not touch the components.
7. Position the board into the PCI slot you have selected.
8. Secure the card in place at the rear panel of the system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

CompactPCI Installation Procedures

1. Read through this manual, and set the jumpers according to your application.
2. Turn off your computer and turn off all accessories connected to computer.
3. Remove the slot cover from the CompactPCI.
4. Select a 32-bit CompactPCI slot on the back plane for cPCI-7248 board. Select a 32-bit CompactPCI slot with rear I/O extension for cPCI-7249R.
5. Before handling the boards, discharge any static buildup on your body by touching the metal case of the computer. Hold the edge and do not touch the components.
6. Position the board into the slot you selected.
7. Secure the card on the back plane by using the screw removed from the slot.
8. Install the rear I/O transition board for cPCI-7249R.

2.5 Device Installation for Windows Systems

Once Windows 95/98/2000 has started, the Plug and Play function of Windows system will find the new NuDAQ/NuIPC cards. If this is the first time you are installing NuDAQ/NuIPC cards on your Windows system, you will be informed to input the device information source. Please refer to the "***Software Installation Guide***" for the steps of installing the device.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.6 Connector Pin Assignment

2.6.1 PCI-7224/7248/7296 Pin Assignment

The I/O ports of PCI-7224/7248/7296 emulate the mode 0 configuration of the 8255 general purpose programmable peripheral interface. The cards come equipped with 50-pin male IDC connectors that interface with OPTO-22. Figure 2.4 shows the circuits and pinout of PCI-7224/7248/7296's connectors (CN1-CN4).

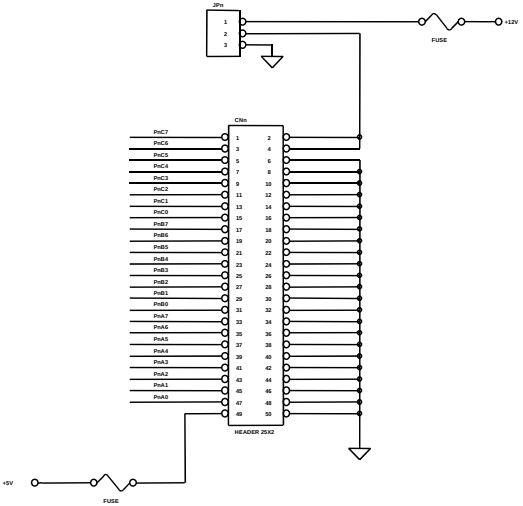


Figure 2.6.1 Pin assignments and power signals of PCI-7224/7248/7296

The DIO pin names are specified as PnXb, where

n	: means the connector reference number n=1-4.
X	: means the port name, X=A, B or C
b	: means the bit number of a port, b=0-7

For example, P1C4 means bit 4 of port C on connector CN1.


Note:

1. The pinout of the CN1-CN4 connectors are identical.
2. The power supply pins are protected by resettable fuses. Refer to section 4.4 for details on power supply.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.6.2 cPCI-7248 Pin Assignment

The cPCI-7248 is equipped with a SCSI-type 100-pin connector. The pin assignment is described in Figure 2.6.2.

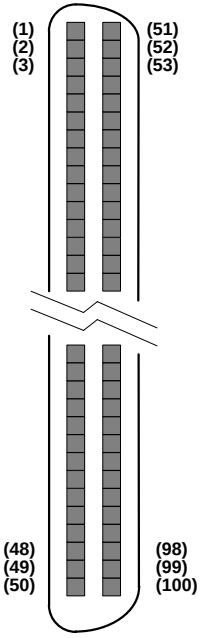

(1) P1A0	(26) P2A0	(51) EVENT	(76) GND
(2) P1A1	(27) P2A1	(52) GND	(77) GND
(3) P1A2	(28) P2A2	(53) GND	(78) GND
(4) P1A3	(29) P2A3	(54) GND	(79) GND
(5) P1A4	(30) P2A4	(55) GND	(80) GND
(6) P1A5	(31) P2A5	(56) GND	(81) GND
(7) P1A6	(32) P2A6	(57) GND	(82) GND
(8) P1A7	(33) P2A7	(58) GND	(83) GND
(9) P1B0	(34) P2B0	(59) GND	(84) GND
(10)P1B1	(35) P2B1	(60) GND	(85) GND
(11)P1B2	(36) P2B2	(61) GND	(86) GND
(12) P1B3	(37) P2B3	(62) GND	(87) GND
(13) P1B4	(38) P2B4	(63) GND	(88) GND
(14) P1B5	(39) P2B5	(64) GND	(89) GND
(15) P1B6	(40) P2B6	(65) GND	(90) GND
(16) P1B7	(41) P2B7	(66) GND	(91) GND
(17) P1C0	(42) P2C0	(67) GND	(92) GND
(18) P1C1	(43) P2C1	(68) GND	(93) GND
(19) P1C2	(44) P2C2	(69) GND	(94) GND
(20) P1C3	(45) P2C3	(70) GND	(95) GND
(21) P1C4	(46) P2C4	(71) GND	(96) GND
(22) P1C5	(47) P2C5	(72) GND	(97) GND
(23) P1C6	(48) P2C6	(73) GND	(98) GND
(24) P1C7	(49) P2C7	(74) GND	(99) GND
(25) V5V	(50) +12V	(75) V5V	(100) +12V

Figure 2.6.2 Pinout and power signals of cPCI-7248

The DIO pin names are specified as PnXb, where

- n : means the connector reference number n=1-2.
- X : means the port name, X=A, B or C
- b : means the bit number of a port, b=0-7

For example, P1C4 means bit 4 of port C on connector CN1.


Note:

1. The pinout of the CN1-CN4 connectors are identical.
2. The power supply pins are protected by resettable fuses. Refer to section 4.4 for details on power supply.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.6.3 cPCI-7249R Pin Assignment

The I/O ports of cPCI-7249R emulate the mode 0 configuration of the 8255 general purpose programmable peripheral interface. This card comes equipped with a SCSI-100 Pin connector. The cPCI-7249R supports a R7249 daughter board for rear I/O and includes two OPTO-22 connectors as well as a SCSI -100 connector.

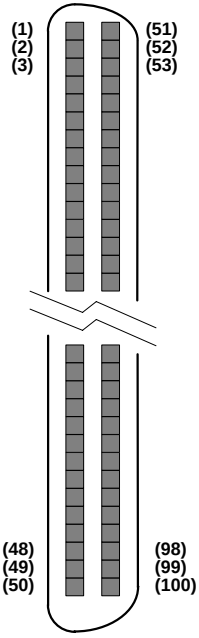

(1) P1A0	(26) P2A0	(51) EVENT	(76) GND
(2) P1A1	(27) P2A1	(52) GND	(77) GND
(3) P1A2	(28) P2A2	(53) GND	(78) GND
(4) P1A3	(29) P2A3	(54) GND	(79) GND
(5) P1A4	(30) P2A4	(55) GND	(80) GND
(6) P1A5	(31) P2A5	(56) GND	(81) GND
(7) P1A6	(32) P2A6	(57) GND	(82) GND
(8) P1A7	(33) P2A7	(58) GND	(83) GND
(9) P1B0	(34) P2B0	(59) GND	(84) GND
(10)P1B1	(35) P2B1	(60) GND	(85) GND
(11)P1B2	(36) P2B2	(61) GND	(86) GND
(12) P1B3	(37) P2B3	(62) GND	(87) GND
(13) P1B4	(38) P2B4	(63) GND	(88) GND
(14) P1B5	(39) P2B5	(64) GND	(89) GND
(15) P1B6	(40) P2B6	(65) GND	(90) GND
(16) P1B7	(41) P2B7	(66) GND	(91) GND
(17) P1C0	(42) P2C0	(67) GND	(92) GND
(18) P1C1	(43) P2C1	(68) GND	(93) GND
(19) P1C2	(44) P2C2	(69) GND	(94) GND
(20) P1C3	(45) P2C3	(70) GND	(95) GND
(21) P1C4	(46) P2C4	(71) GND	(96) GND
(22) P1C5	(47) P2C5	(72) GND	(97) GND
(23) P1C6	(48) P2C6	(73) GND	(98) GND
(24) P1C7	(49) P2C7	(74) GND	(99) EXTCLK
(25) V5V	(50) +12V	(75) V5V	(100) +12V

The DIO pin names are specified as PnXb, where

n : means the connector reference number n=1-2
X : means the port name, X= A, B or C
b : means the bit number of a port, b=0-7

For example, P1C4 means bit 4 of port C on connector CN1

***EXTCLK*:** External edge trigger signal for latch digital input data
***EVENT* :** External clock source for counter 0
***V5V* :** Onboard un-regulated 5V power supply output
***+12V* :** Onboard un-regulated +12V power supply output

LRi Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.6.4 R7249 OPTO-22 Connectors

The cPCI-7249R's rear I/O transition board R7249 is equipped with two 50 pin male IDC connectors: XCN2; XCN3 that interface with OPTO-22.

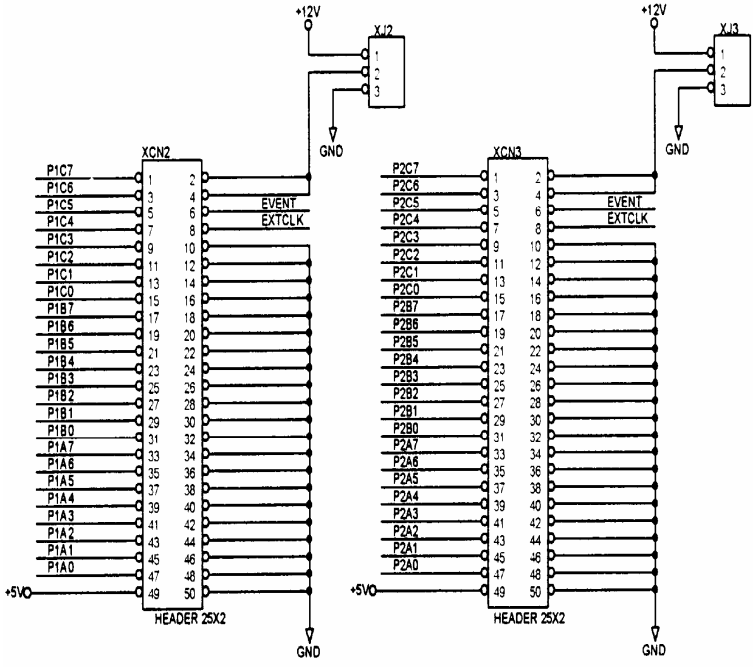


Figure 2.3 R7249 OPTO-22 Connectors Pin Assignment

Note : The power supply pins are protected by resettable fuses.

Refer to section 3.7 for details of the power supply.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.7 Jumpers Description

The 7248/96 DIO cards are Plug and Play, thus it is not necessary to set up the card configurations to fit the computer system. However, to fit different users' versatile operating environment, there are still a few jumpers to set the power-on status of ports and the usage of the +12V output pins.

2.7.1 Power on Status of Ports


For every port on the 7248/96 cards, the power-on status is set as input therefore, the voltage could be pulled high, pulled low, or floating. It is dependent on the jumper setting. Table 2.1 lists the reference number of the jumpers and the corresponding port names.

Jumper	Port Name	Remarks
JA1	P1A (Port A of CN1)	for PCI-7224/7248/7296, cPCI-7248
JB1	P1B (Port B of CN1)	for PCI-7224/7248/7296, cPCI-7248
JC1	P1C (Port C of CN1)	for PCI-7224/7248/7296, cPCI-7248
JA2	P2A (Port A of CN2)	for PCI-7248/96, cPCI-7248
JB2	P2B (Port B of CN2)	for PCI-7248/96, cPCI-7248
JC2	P2C (Port C of CN2)	for PCI-7248/96, cPCI-7248
JA3	P3A (Port A of CN3)	for PCI-7296
JB3	P3B (Port B of CN3)	for PCI-7296
JC3	P3C (Port C of CN3)	for PCI-7296
JA4	P4A (Port A of CN4)	for PCI-7296
JB4	P4B (Port B of CN4)	for PCI-7296
JC4	P4C (Port C of CN4)	for PCI-7296


Table 2.1 Jumpers and Port names list

The physical meaning of all the jumpers are identical. The power-on status of each port can be set independently. The default is to pull all signals high. The following diagram use JA1 as an example to show the possible configurations.


1. Port A of CN1 are power-on pulled high. 'H'



2. Port A of CN1 are power-on pulled low. 'L'




3. Port A of CN1 are power-on floating. (The jumper is removed)



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.7.2 12V Power Supply Configuration

The pin 2 and pin 4 of the CN1-CN4 50-pin OPTO-22 connectors can be configured as 12V power supply or ground. Please refer to Figure 2.4 for the 12 volts power supply position. JP1-JP4 of 12V power are for CN1-CN4 respectively. Connections with ground are set as default. The following diagram shows the setting of JP2, connecting pin 2 and pin 4 of CN2 to ground.




2.8 Termination Boards Connection

There are many termination boards that can be connected with PCI-7248/7296 for isolated I/O expansion.


1. TB-24R, DIN-24R

The TB-24R and DIN-24R provide 24 Form C relays for digital output control.

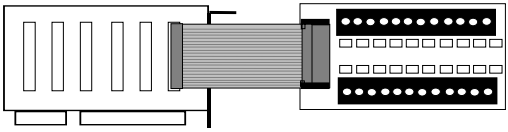

2. TB-24 P, DIN-24P


The TB-24P and DIN-24P provide 24 opto-isolated digital input channels.

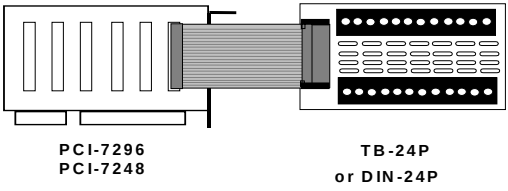

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. TB-16P8R

The TB-16P8R provides 16 opto-isolated digital input channels and 8 relay outputs.

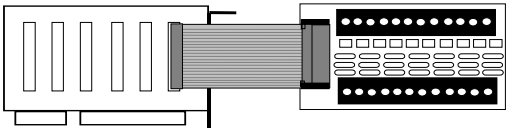

PCI-7296
PCI-7248

TB-16P8R

4. TB-24, DIN-50S

TB-24 and DIN-50S are termination boards with 50 pin ribbon connector. They are used for general-purpose applications.

5. DIN-100S

DIN-100S is equipped with 100-pin SCSI-type connector. It can be connected with cPCI-7248 and cPCI-7249R.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3

Registers Format

The detailed description of the registers format are specified in this chapter. This information is useful for the programmers who wish to handle the card by low-level programming. However, it is strongly recommended that the user has a more in depth understanding of the PCI interface before starting any low-level programming. In addition, the contents of this chapter can help the user understand how to use the software driver to manipulate this card.

3.1 PCI Plug and Play Registers

This PCI card functions as a 32-bit PCI target device to any master on the PCI bus. There are three types of registers: PCI Configuration Registers (PCR), Local Configuration Registers (LCR) and PCI-6308 registers.

The PCR, which is compliant to the PCI-bus specifications, is initialized and controlled by the Plug and Play PCI BIOS. Users can study the PCI BIOS specification to understand the operation of the PCR. Please contact PCISIG to acquire the specifications of the PCI interface.

The PCI bus controller PCI-9050 is provided by PLX Technology, Inc. (www.plxtech.com). For more detailed information on LCR, please visit the PLX technology website to download the relative information. Users are not required to understand the details of the LCR if they are using the software library. The PCI Plug and Play BIOS assigns the base address of the LCR. The assigned address is located at offset 14h of PCR.

The PCI-6308 registers are shown in the next section. The base address, which is also assigned by the PCI Plug and Play BIOS, is located at offset 18h of PCR. Therefore, users can read the 18h of PCR to find the base address by using the BIOS function call.

Please do not try to modify the base address and interrupt which are assigned by the PCI Plug and Play BIOS as it may cause resource conflict in your system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2 I/O Address Map

All the 724X registers are 8 bits. The users can access these registers only by 8 bits I/O instructions. The following table shows the registers map, including descriptions and their offset addresses relative to the base address. Please refer to chapter 4 of this manual for a more detailed description on the operation of different registers.

Offset	Write	Read		Boards
0x00	P1A	P1A		PCI-7224
0x01	P1B	P1B		PCI-7248
0x02	P1C	P1C		PCI-7296
0x03	P1Ctrl	Not used		cPCI-7248/49R
0x04	P2A	P2A		PCI-7248
0x05	P2B	P2B		PCI-7296
0x06	P2C	P2C		cPCI-7248/49R
0x07	P2Ctrl	Not used		
0x08	P3A	P3A	P1AE (1)	PCI-7296
0x09	P3B	P3B	P1BE (1)	
0x0A	P3C	P3C	P1CE (1)	(1) for
0x0B	P3Ctrl	Not used	Not used	cPCI-7249R
0x0C	P4A	P4A	P2AE (1)	Only
0x0D	P4B	P4B	P2BE (1)	
0x0E	P4C	P4C	P2CE (1)	
0x0F	P4Ctrl	Not used	Not used	
0x10	Timer/Counter #0	Timer/Counter #0		PCI-7224
0x11	Timer/Counter #1	Timer/Counter #1		PCI-7248
0x12	Timer/Counter #2	Timer/Counter #2		PCI-7296
0x13	Timer/Counter Mode Control	Timer/Counter Mode Status		cPCI-7248/49R
0x20	ISC: Interrupt Source Control	Not used		
0x30	Clear Interrupt	Not used		

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4

Operation Theorem

4.1 Digital I/O Ports

4.1.1 Introduction

The 7248/96 products can emulate one/two/four mode 0 configuration of 8255 programmable peripheral interface (PPI) chips. There are 24 DIO signals for every PPI.

4.1.2 8255 Mode 0

The basic functions of 8255 mode 0 are:

- Two 8-bit I/O ports-port A (PA) and port B (PB)
- Two nibble-wide (4-bit) ports C-PC upper and PC lower
- Each port can be used as either input or output
- Outputs are latched whereas inputs are buffered
- 16 different input/output configurations are available

4.1.3 Special Function of the DIO Signals

Two I/O signals (PC0 and PC3) of CN1 and CN2 can be used to generate hardware interrupt. Refer to section 4.3 for details on the interrupt control. In addition, the P1C4 signals can be used as input signal of event counter.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.1.4 Digital I/O Port Programming

Users can write the digital output value to or read back the digital signal level from the PPI ports by using the software library. The port names are defined in Table 4.1. These port names are used throughout this manual as well as in the software library. The programming for PCI-7224/7248/7296 and cPCI-7248 are fully compatible.

Connector Numbers	CN1	CN2	CN3	CN4
Port Names	P1A	P2A	P3A	P4A
	P1B	P2B	P3B	P4B
	P1C	P2C	P3C	P4C
	P1CTRL	P2CTRL	P3CTRL	P4CTRL

Table 4.1 I/O Port Names

There are four ports on every 8255 PPI, including ports A, B, C, and the control port. PA, PB, and PC could be written or read but the control port is write only. Refer to chapter 5 for more details on the programming of DIO ports.

4.1.5 Control Word

The control word written in the control port is used to setup PA, PB, and PC as input or output port. Figure 4.1 shows the format of the control word. Table 4.2 shows the 16 possible control words and the respective I/O configurations.

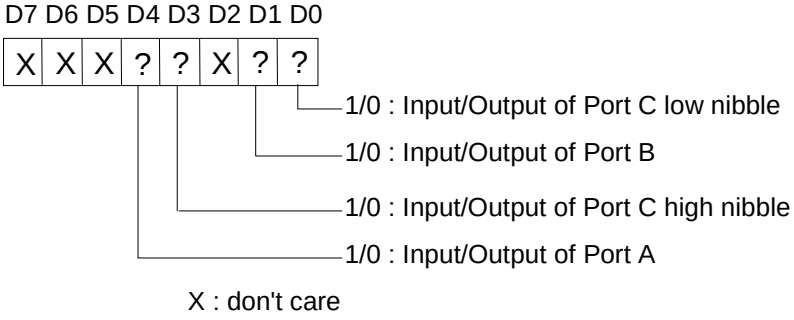


Figure 4.1 Control Word Format

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Control Word	D 4	D 3	D 1	D 0	PORT A	PORT C UPPER	PORT B	PORT C LOWER
00H	0	0	0	0	O/P	O/P	O/P	O/P
01H	0	0	0	1	O/P	O/P	O/P	I/P
02H	0	0	1	0	O/P	O/P	I/P	O/P
03H	0	0	1	1	O/P	O/P	I/P	I/P
08H	0	1	0	0	O/P	I/P	O/P	O/P
09H	0	1	0	1	O/P	I/P	O/P	I/P
0AH	0	1	1	0	O/P	I/P	I/P	O/P
0BH	0	1	1	1	O/P	I/P	I/P	I/P
10H	1	0	0	0	I/P	O/P	O/P	O/P
11H	1	0	0	1	I/P	O/P	O/P	I/P
12H	1	0	1	0	I/P	O/P	I/P	O/P
13H	1	0	1	1	I/P	O/P	I/P	I/P
18H	1	1	0	0	I/P	I/P	O/P	O/P
19H	1	1	0	1	I/P	I/P	O/P	I/P
1AH	1	1	1	0	I/P	I/P	I/P	O/P
1BH*	1	1	1	1	I/P	I/P	I/P	I/P

Table 4.2 Summary of control word (D0-D4)

(* power on default configuration)

4.1.6 Power On Configuration

The default configuration after power on, hardware reset, or software reset sets all ports as input ports. Therefore, users do not need to worry about damaging external devices when system is on. In addition, the default signal level can be pulled high or pulled low by setting the jumpers. Refer to section 2.7 for setting the power on status of the DIO ports.

4.1.7 Note for Output Data

Be careful of the initial condition of digital output signals. If users set the control word as output port after power on, the previous uncertain output value will be put on the output pins immediately. Therefore, **BE SURE TO WRITE A SAFE VALUE TO THE PORTS BEFORE CONFIGURING THEM AS OUTPUT PORTS.**

4.1.8 Note for cPCI-7249R

The P1AE, P1BE, P1CE, P2AE, P2BE, and P2CE registers latch data from P1A, P1B, P1C, P2A, P2B, and P2C respectively. The latch signal is from Pin 99 of the 100-pin connector.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2 Timer/Counter Operation

4.2.1 Introduction

One 8254 programmable timer/counter chip is installed in the 7248/96 series. There are three counters in one 8254 chip and six possible operation modes for each counter. The block diagram of the timer/counter system is shown in Figure 4.2.

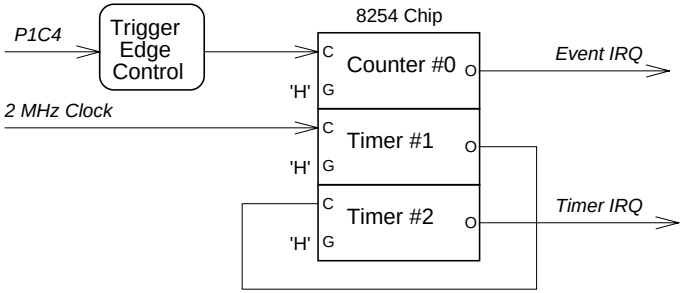


Figure 4.2 Timer/counter system of 7248/96 series.

Timers #1 and #2 of the 8254 chip are cascaded as a 32-bit programmable timer. In the software library, Timers #1 and #2 are always set as mode 2 (rate generator).

In software library, counter #0 is used as an event counter that is, interrupt on terminal count of 8254 mode 0. Please refer to chapter 5 for programming the timer/counter functions.

4.2.2 General Purpose Timer/Counter

The counter 0 is a general purpose timer/counter for users applications. It can be used as an event counter, for measuring frequency, or other functions. The following Modes are provided by the 82C54 chip.

- **Mode 0**: Interrupt on Terminal Count
- **Mode 1**: Programmable One-Shot
- **Mode 2**: Rate Generator
- **Mode 3**: Square Wave Rate Generator
- **Mode 4**: Software Triggered Strobe
- **Mode 5**: Hardware Triggered Strobe

LRi Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The 8254 timer/counter IC occupies four I/O addresses. Users can refer to Tundra's or Intel®'s data sheet for a full description of the 8254 features. You can download the 8254 data sheet from the following web site:

http://support.intel.com/support/controllers/peripheral/231164.htm

or

http://www.tundra.com (for Tundra's 82C54 datasheet)

4.2.2 Cascaded 32 Bits Timer

The input clock frequency of the cascaded timers is 2MHz. The output of the timer is sent to the interrupt circuit (refer to section 4.3). Therefore, the maximum and minimum watchdog timer interrupt frequency is (2MHz)/(2*2)=500KHz and (2MHz)/(65535*65535)= 0.000466Hz respectively.

4.2.3 Event Counter and Edge Control

The counter #0 of the 8254 chip can be used as an event counter. The input of counter #0 is PC4 of CN1 (P1C4). The counter clock trigger direction (H to L or L to H) is programmable. The gate control is always enabled. The output is sent to interrupt system which is named as event IRQ. If counter #0 is set as 8254 mode 0, the event counter IRQ will generate when the counter value is counting down to zero.

4.3 Interrupt Multiplexing

4.3.1 Architecture

The 7248/96 series products have a powerful and flexible interrupt multiplexing circuit which is suitable for many applications. The board is capable of accepting ***Dual Interrupts***. The dual interrupt means that the hardware can generate two interrupt request signals at the same time and the software can service these two request signals by ISR. Note that the dual interrupts do not imply the card occupies two IRQ levels.

The two interrupt request signals (INT1 and INT2) come from digital input signals or the timer/counter output. An interrupt source multiplexer (MUX) is used to select the IRQ sources. Fig 4.3 shows the interrupt system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3.2 IRQ Level Setting

There is only one IRQ level requested by this card, although it is a dual interrupt system. The motherboard circuits will transfer INTA# to one of the PC IRQ levels. The IRQ level is set by the PCI Plug and Play BIOS and saved in the PCI controller. Users can obtain the IRQ level setting in software library.

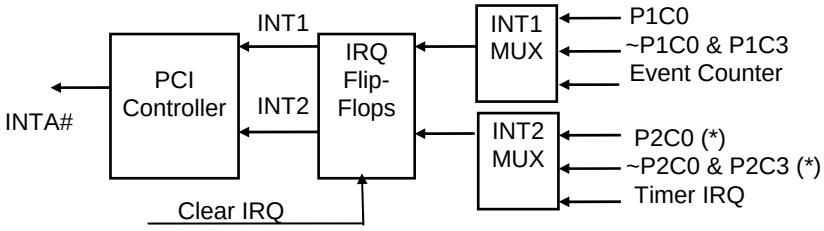


Fig 4.3 Dual Interrupt System of PCI-7224/7248/96

(*) Note: This interrupt is not available in PCI-7224

4.3.3 Note for Dual Interrupts

The PCI controller of PCI-7224/7248/96 can receive two hardware IRQ sources. However, a PCI controller can generate only one IRQ to PCI bus, the two IRQ sources must be distinguished by ISR of the application software if the two IRQ are all used.

The application software can use the "_72xx_Get_Irq_Status" function to distinguish which interrupt is inserted. After an ISR is completed, users must check if another IRQ is also asserted, then clear the current IRQ to allow room for the next IRQ.

The two IRQs are called INT1 and INT2. In PCI-7224/7248/7296, INT1 comes from P1C0, P1C3 or the event counter interrupt. INT2 comes from P2C0, P2C3 or the timer interrupt. However in PCI-7224, INT2 only comes from timer interrupt. The sources of INT1 and INT2 are selectable by the Interrupt Source Control (ISC) Register.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3.4 Interrupt Source Control

In ISC register (offset 0x20), there are four bits to control the IRQ sources of INT1 and INT2.

If the application requires only one IRQ, one of the IRQ sources can be disabled by software. If no IRQ source is required, both interrupts can be disabled. However if the user only disables the IRQ source without changing the initial condition of the PCI controller, the PCI BIOS will still assign a IRQ level to the PCI card and occupy the PC resource.

It is not recommended to change the initial condition of the PCI card by the user's own application software. If the user wishes to disable the IRQ level, they can use ADLINK's utility 'INIT7248.EXE' or 'INIT7296.EXE' to change power on interrupt setting.

Table 4.3 shows the register format of the ISC (address offset 0x20). This register is write only. The four LSBs are used to control the source of INT1 and INT2.

INT1	D3	D2	D1	D0	IRQ Source	IRQ Trigger Condition
Disable	X	X	0	0	INT1 disable	--
Mode 1	X	X	0	1	~P1C0	falling edge of P1C0
Mode 2	X	X	1	0	P1C0 OR ~P1C3	(see following)
Mode 3	X	X	1	1	Event Counter	Counter count down to 0
INT2	D3	D2	D1	D0	IRQ Source	IRQ Trigger Condition
Disable	0	0	X	X	INT2 disable	--
Mode 1	0	1	X	X	~P2C0	falling edge of P2C0(*)
Mode 2	1	0	X	X	P2C0 OR ~P2C3	(see following) (*)
Mode 3	1	1	X	X	Timer Output	Timer count down to 0

Table 4.3 ISC register format

(*) Note: Not available on PCI-7224.

When the IRQ source is set as P1C0 OR P1C3, the IRQ trigger conditions are summarized in table 4.4.

P1/2C0	P1/2C3	IRQ Trigger Condition
High	X	PC0=H disable all IRQ
X	Low	PC3=L disable all IRQ
Low	1->0	PC3 falling edge trigger when PC0=L
0->1	High	PC0 rising edge trigger when PC3=H

Table 4.4 IRQ Trigger conditions

Because P1/P2C0 and P1/P2C3 are external signals, the user can utilize the combination of the four signals to generate a proper IRQ.

4.4 12V and 5V Power Supply

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

The OPTO-22 compatible connectors provide external devices for +12V and +5V power supply. To avoid shorting or overloading the power supply, the ***resettable fuses*** are added on all the output power. Refer to Figure 2.6.1

The maximum current for 5V on every connector is 0.5A. If the load current is larger than this, the resistance of the resettable fuse will increase due to the rise in temperature. This in turn will cause the power supply to drop and reduce its current. If the shorting or overloading problem is eliminated, the fuse will return to its normal condition. It is not necessary to repair or re-install the fuse.

The maximum current for 12V on all four connectors is also 0.5A. The action of the fuse is the same as that used for +5V power. The limitation is more restrictive than 5V power supply because the PCI bus can not provide large amounts of current.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5

C/C++ Libraries

This chapter describes the software library for operating this card. Only the functions in DOS library and Windows 95 DLL are described. A description of Windows 98/NT/2000 DLL functions can be found in the PCIS-DASK function reference manual located in the ADLINK CD. The functions of PCI-7248 can also be applied to PCI-7224 and cPCI-7248. Therefore in the following section, there are no special functions for PCI-7224 and cPCI-7248. The software driver of PCI-7224 is fully compatible with that of PCI-7248. In the sections below, all function calls referring to "7248" can also be applied to PCI-7224.

The function prototypes and some useful constants are defined in the header files LIB directory (DOS) and INCLUDE directory (Windows 95). For Windows 95 DLL, the developing environment can be Visual Basic 4.0 or above, Visual C/C++ 4.0 or above, Borland C++ 5.0 or above, Borland Delphi 2.x (32-bit) or above, or any Windows programming language that allows calls to a DLL. It provides the C/C++, VB, and Delphi include files.

5.1 Libraries Installation

Please refer to the "***Software Installation Guide***" for detailed installation information on the software libraries for DOS, Windows 95 DLL, or PCIS-DASK for Windows 98/NT/2000.

The device drivers and DLL functions of Windows 98/NT/2000 are included in the PCIS-DASK. Please refer to the PCIS-DASK user's guide and function reference for detailed programming information in the ADLINK CD.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2 Programming Guide

5.2.1 Naming Convention

The functions of the NuDAQ PCI cards or NuIPC CompactPCI cards' software driver use full-names to represent the functions' real meaning. The naming convention rules are:

In DOS Environment:

_{hardware_model}_{action_name}. **e.g. `_7248_Initial().`**

All functions in PCI-7248 driver are with 7248 as {hardware_model}. But they can be used by PCI-7248, PCI-7224 and cPCI-7248.

In order to recognize the difference between DOS library and Windows 95 library, a capital **`W`** is placed in the beginning of each function name of the Windows 95 DLL driver, e.g. **`W_7248_Initial().`**

5.2.2 Data Types

We defined some data type in Pci_7248.h (DOS) and Acl_pci.h (Windows 95). These data types are used by NuDAQ Cards' library. ADLINK Technology Inc. suggests these data types to be used in the application programs. The following table gives the data type names and their range.

Type Name	Description	Range
U8	8-bit ASCII character	0 to 255
I16	16-bit signed integer	-32768 to 32767
U16	16-bit unsigned integer	0 to 65535
I32	32-bit signed integer	-2147483648 to 2147483647
U32	32-bit single-precision floating-point	0 to 4294967295
F32	32-bit single-precision floating-point	-3.402823E38 to 3.402823E38
F64	64-bit double-precision floating-point	-1.797683134862315E308 to 1.797683134862315E309
Boolean	Boolean logic value	TRUE, FALSE

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3 _7248/96_Initial

@ *Description*

The cards are initialized by this function. The software library could be used to control multiple cards.

@ *Syntax*

C/C++ (DOS)

```
U16  _7248_Initial (U16 *existCards, PCI_INFO *pciInfo)
U16  _7249_Initial (U16 *existCards, PCI_INFO *pciInfo)
U16  _7296_Initial (U16 *existCards, PCI_INFO *pciInfo)
```

C/C++ (Windows 95)

```
U16  W_7248_Initial (U16 *existCards, PCI_INFO *pciInfo)
U16  W_7249_Initial (U16 *existCards, PCI_INFO *pciInfo)
U16  W_7296_Initial (U16 *existCards, PCI_INFO *pciInfo)
```

Visual Basic (Windows 95)

```
W_7248_Initial (existCards As Integer, pciInfo As
      PCI_INFO) As Integer
W_7249_Initial (existCards As Integer, pciInfo As
      PCI_INFO) As Integer
W_7296_Initial (existCards As Integer, pciInfo As
      PCI_INFO) As Integer
```

@ *Argument*

existCards: The number of installed PCI-7224/7248/7296 cards. The returned value shows how many PCI-7224/7248/7296 cards are installed in your system.

pciinfo: It is a format to record the PCI bus Plug and Play initialization information which is decided by the Plug and Play BIOS. The PCI_INFO structure is defined in ACL_PCI.H. The base I/O address and the interrupt channel number are stored in pciinfo.

@ *Return Code*

ERR_NoError
ERR_PCIBiosNotExist

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.4 Digital Input

@ *Description*

This function is used to read 8-bit digital input data from digital input ports. You can get the 8-bit data from _7248_DI by using this function. The written data and read-in data is 8-bit data. Each data is mapped to a signal as shown below.

D7	D6	D5	D4	D3	D2	D1	D0
PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
PB7	PB6	PB5	PB4	PB3	PB2	PB1	PB0
PC7	PC6	PC5	PC4	PC3	PC2	PC1	PC0

@ *Syntax*

PCI-7224/7248, cPCI-7248, cPCI-7249R:

C/C++ (DOS)

```
U16  _7248_DI (U16 cardNo, U16 channelPort, U8 *diData)
U16  _7249_DI (U16 cardNo, U16 channelPort, U8 *diData)
U16  _7296_DI (U16 cardNo, U16 channelPort, U8 *diData)
```

C/C++ (Windows 95)

```
U16  W_7248_DI (U16 cardNo, U16 channelPort, U16
       *diData)
U16  W_7249_DI (U16 cardNo, U16 channelPort, U16
       *diData)
U16  W_7296_DI (U16 cardNo, U16 channelPort, U16
       *diData)
```

Visual Basic (Windows 95)

```
W_7248_DI (ByVal cardNo As Integer, ByVal channelPort
      As Integer, diData As Integer) As Integer
W_7249_DI (ByVal cardNo As Integer, ByVal channelPort
      As Integer, diData As Integer) As Integer
W_7296_DI (ByVal cardNo As Integer, ByVal channelPort
      As Integer, diData As Integer) As Integer
```

@ *Argument*

cardNo: Card number to select board

diData: Returns a 8-bit value from digital port.

channelPort: Port of each channel

- PCI_CH0_PA: CH1's Port A
- PCI_CH0_PB: CH1's Port B
- PCI_CH0_PC: CH1's Port C
- PCI_CH0_PCU: CH1's Port C Upper Nibble
- PCI_CH0_PCL: CH1's Port C Low Nibble
- PCI_CH1_PA: CH2's Port A
- PCI_CH1_PB: CH2's Port B
- PCI_CH1_PC: CH2's Port C
- PCI_CH1_PCU: CH2's Port C Upper Nibble
- PCI_CH1_PCL: CH2's Port C Low Nibble
- PCI_CH2_PA: CH2's Port A

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

```
PCI_CH2_PB: CH2’s Port B
PCI_CH2_PC: CH2’s Port C
PCI_CH2_PCU: CH2’s Port C Upper Nibble
PCI_CH2_PCL: CH2’s Port C Low Nibble
PCI_CH3_PA: CH3’s Port A
PCI_CH3_PB: CH3’s Port B
PCI_CH3_PC: CH3’s Port C
PCI_CH3_PCU: CH3’s Port C Upper Nibble
PCI_CH3_PCL: CH3’s Port C Low Nibble
PCI_CH0_PAE: CH1’s Port A uses External Latch
PCI_CH0_PBE: CH1’s Port B uses External Latch
PCI_CH0_PCE: CH1’s Port C uses External Latch
PCI_CH1_PAE: CH2’s Port A uses External Latch
PCI_CH1_PBE: CH2’s Port B uses External Latch
PCI_CH1_PCE: CH2’s Port C uses External Latch
```

```
Note:  1.CH2 and CH3 are only available for PCI-7296.
       2.Only CH0 is available for PCI-7224.
```

@ Return Code

```
ERR_NoError
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.5 Digital Output

@ *Description*

This function is used to write data to digital output ports.

@ *Syntax*

C/C++ (DOS)

```
U16  _7248_DO (U16 cardNo, U16 channelPort, U8 doData)
U16  _7249_DO (U16 cardNo, U16 channelPort, U8 doData)
U16  _7296_DO (U16 cardNo, U16 channelPort, U8 doData)
```

C/C++ (Windows 95)

```
U16  W_7248_DO (U16 cardNo, U16 channelPort, U16 doData)
U16  W_7249_DO (U16 cardNo, U16 channelPort, U16 doData)
U16  W_7296_DO (U16 cardNo, U16 channelPort, U16 doData)
```

Visual Basic (Windows 95)

```
W_7248_DO (ByVal cardNo As Integer, ByVal channelPort
      As Integer, ByVal doData As Integer) As Integer
W_7249_DO (ByVal cardNo As Integer, ByVal channelPort
      As Integer, ByVal doData As Integer) As Integer
W_7296_DO (ByVal cardNo As Integer, ByVal channelPort
      As Integer, ByVal doData As Integer) As Integer
```

@ *Argument*

cardNo: Card number to select board
channelPort: The same as channelPort in section 5.5
doData: Value will be written to digital output port

@ *Return Code*

ERR_NoError

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.6 Configuration Port

@ *Description*

This function is used to configure the Input or Output of each Port. Each I/O Port of PCI-7224/7248/7296 is either input or output, so it has to be configured as input or output before I/O operations are applied.

@ *Syntax*

C/C++ (DOS)

```
U16  _7248_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction);
U16  _7249_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction);
U16  _7296_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction)
```

C/C++ (Windows 95)

```
U16  W_7248_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction);
U16  W_7249_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction);
U16  W_7296_Config_Port (U16 cardNo, U16 channelPort,
       U16 direction)
```

Visual Basic (Windows 95)

```
W_7248_Config_Port (ByVal cardNo As Integer, ByVal
      channelPort As Integer, ByVal direction As
      Integer) As Integer
W_7249_Config_Port (ByVal cardNo As Integer, ByVal
      channelPort As Integer, ByVal direction As
      Integer) As Integer
W_7296_Config_Port (ByVal cardNo As Integer, ByVal
      channelPort As Integer, ByVal direction As
      Integer) As Integer
```

@ *Argument*

cardNo: Card number to select board
channelPort: The same as channelPort in section 5.5
direction: Port I/O direction
INPUT_PORT: The port is configure as INPUT
OUTPUT_PORT: The port is configure as OUTUT

@ *Return Code*

ERR_NoError

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.7 Configuration Channel

@ *Description*

This function is used to configure the Input or Output of each Channel. Each I/O Port of PCI-7224/7248/7296 is either input or output, so it has to be configured as input or output before I/O operations are applied.

@ *Syntax*

C/C++ (DOS)

```
U16  _7248_Config_Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
U16  _7249_Config_Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
U16  _7296_Config_ Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
```

C/C++ (Windows 95)

```
U16  W_7248_Config_Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
U16  W_7249_Config_Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
U16  W_7296_Config_ Channel (U16 cardNo, U16 channelNo,
       U16 ctrlValue)
```

Visual Basic (Windows 95)

```
W_7248_Config_Channel (ByVal cardNo As Integer, ByVal
      channelNo As Integer, ByVal ctrlValue As Integer)
      As Integer
W_7249_Config_Channel (ByVal cardNo As Integer, ByVal
      channelNo As Integer, ByVal ctrlValue As Integer)
      As Integer
W_7296_Config_ Channel (ByVal cardNo As Integer, ByVal
      channelNo As Integer, ByVal ctrlValue As Integer)
      As Integer
```

@ *Argument*

cardNo: Card number to select board
channelNo: PCI_CH0, PCI_CH1, PCI_CH2, or PCI_CH3
ctrlValue: The control value to set up PA, PB, and PC as input or output port.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

ctrlValue	Port A	Port CU	Port B	Port CL
PORT_OOOO	OUT	OUT	OUT	OUT
PORT_OOOI	OUT	OUT	OUT	IN
PORT_OOIO	OUT	OUT	IN	OUT
PORT_OOII	OUT	OUT	IN	IN
PORT_OIOO	OUT	IN	OUT	OUT
PORT_OIOI	OUT	IN	OUT	IN
PORT_OIIO	OUT	IN	IN	OUT
PORT_OIII	OUT	IN	IN	IN
PORT_IOOO	IN	OUT	OUT	OUT
PORT_IOOI	IN	OUT	OUT	IN
PORT_IOIO	IN	OUT	IN	OUT
PORT_IOII	IN	OUT	IN	IN
PORT_IIOO	IN	IN	OUT	OUT
PORT_IIOI	IN	IN	OUT	IN
PORT_IIIO	IN	IN	IN	OUT
PORT_IIII	IN	IN	IN	IN

The ctrlValue constants are defined in acl_pci.h and acl_pci.bas.

@ Return Code

ERR_NoError

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.8 Set Interrupt Control

@ Description

This function is used to set the interrupt configuration. The interrupt should be configured before the function starts.

@ Syntax

C/C++ (DOS)

```
void _7248_Set_INT_Control(U16 cardNo, U16 ctrlValue);
void _7249_Set_INT_Control(U16 cardNo, U16 ctrlValue);
void _7296_Set_INT_Control(U16 cardNo, U16 ctrlValue);
```

C/C++ (Windows 95)

```
void W_7248_Set_INT_Control(U16 cardNo, U16 ctrlValue);
void W_7249_Set_INT_Control(U16 cardNo, U16 ctrlValue);
void W_7296_Set_INT_Control(U16 cardNo, U16 ctrlValue);
```

Visual Basic (Windows 95)

```
W_7248_Set_INT_Control (ByVal cardNo As Integer, ByVal
      ctrlValue As Integer)
W_7249_Set_INT_Control (ByVal cardNo As Integer, ByVal
      ctrlValue As Integer)
W_7296_Set_INT_Control (ByVal cardNo As Integer, ByVal
      ctrlValue As Integer)
```

@ Argument

cardNo: Card number to select board

ctrlValue: The valid values of configuring the interrupt are

INT1:

0x00 → disable
0x01 → mode1
0x02 → mode2
0x03 → mode3

INT2:

0x00 → disable
0x04 → mode1
0x08 → mode2
0x0c → mode3

Please refer to the section 4.3.4 for detailed description.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.9 Timer Start

@ *Description*

This function is used to set and start timer 0 of on-board timer 8254 .

@ *Syntax*

C/C++ (DOS)

```
void _7248_Timer_Start(U16 cardNo, U16 timer0Mode, U16 c0)
void _7249_Timer_Start(U16 cardNo, U16 timer0Mode, U16 c0)
void _7296_Timer_Start(U16 cardNo, U16 timer0Mode, U16 c0)
```

C/C++ (Windows 95)

```
void  W_7248_Timer_Start(U16 cardNo, U16 timer0Mode,
      U16 c0)
void  W_7249_Timer_Start(U16 cardNo, U16 timer0Mode,
      U16 c0)
void  W_7296_Timer_Start(U16 cardNo, U16 timer0Mode,
      U16 c0)
```

Visual Basic (Windows 95)

```
W_7248_Timer_Start(ByVal cardNo As Integer, ByVal
      timer0Mode As Integer, ByVal c0 As Integer)
W_7249_Timer_Start(ByVal cardNo As Integer, ByVal
      timer0Mode As Integer, ByVal c0 As Integer)
W_7296_Timer_Start(ByVal cardNo As Integer, ByVal
      timer0Mode As Integer, ByVal c0 As Integer);
```

@ *Argument*

cardNo: Card number to select board

timer0Mode: The six modes of 8254, please refer to section 4.2.2 for detailed description

c0: The counter/timer value of time0.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.10 Timer Read

@ Description

This function is used to read the current count of timer 0 of the on-board timer 8254.

@ Syntax

PCI-7224/7248, CPCI-7248:

C/C++ (DOS)

```
void _7248_Timer_Read(U16 cardNo, U16 *counterValue);
void _7249_Timer_Read(U16 cardNo, U16 *counterValue);
void _7296_Timer_Read(U16 cardNo, U16 *counterValue);
```

C/C++ (Windows 95)

```
void W_7248_Timer_Read(U16 cardNo, U16 *counterValue);
void W_7249_Timer_Read(U16 cardNo, U16 *counterValue);
void W_7296_Timer_Read(U16 cardNo, U16 *counterValue);
```

Visual Basic (Windows 95)

```
W_7248_Timer_Read(ByVal cardNo As Integer, counterValue
      As Integer);
W_7249_Timer_Read(ByVal cardNo As Integer, counterValue
      As Integer);
W_7296_Timer_Read (ByVal cardNo As Integer,
      counterValue As Integer);
```

@ Argument

cardNo: card number to select board
counterValue: the value of the current count

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.11 Timer Stop

@ *Description*

This function is used to stop timer 0 of the on-board timer 8254.

@ *Syntax*

C/C++ (DOS)

```
void _7248_Timer_Stop(U16 cardNo, U16 *counterValue);
void _7249_Timer_Stop(U16 cardNo, U16 *counterValue);
void _7296_Timer_Stop(U16 cardNo, U16 *counterValue);
```

C/C++ (Windows 95)

```
void W_7248_Timer_Stop(U16 cardNo, U16 *counterValue);
void W_7249_Timer_Stop(U16 cardNo, U16 *counterValue);
void W_7296_Timer_Stop(U16 cardNo, U16 *counterValue);
```

Visual Basic (Windows 95)

```
W_7248_Timer_Stop (ByVal cardNo As Integer,
      counterValue As Integer);
W_7249_Timer_Stop (ByVal cardNo As Integer,
      counterValue As Integer);
W_7296_Timer_Stop (ByVal cardNo As Integer,
      counterValue As Integer);
```

@ *Argument*

cardNo: Card number to select board

counterValue: The value of current count when the counter is stopped

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.12 Cascaded Timer

@ Description

This function is used to set and start the cascaded timer 1 and timer 2 of on-board timer 8254.

@ Syntax

C/C++ (DOS)

```
void _7248_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
void _7249_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
void _7296_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
```

C/C++ (Windows 95)

```
void W_7248_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
void W_7249_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
void W_7296_Cascaded_Timer(U16 cardNo, U16 c1, U16 c2);
```

Visual Basic (Windows 95)

```
W_7248_Cascaded_Timer (ByVal cardNo As Integer, ByVal
      c1 As Integer, ByVal c2 As Integer)
W_7249_Cascaded_Timer (ByVal cardNo As Integer, ByVal
      c1 As Integer, ByVal c2 As Integer)
W_7296_Cascaded_Timer (ByVal cardNo As Integer, ByVal
      c1 As Integer, ByVal c2 As Integer)
```

@ Argument

cardNo: Card number to select board
c1: The value of divisor used in timer 1
c2: The value of divisor used in timer 2

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.13 Get IRQ Status

@ Description

This function is used to read back the status of interrupt when interrupt is inserted.

@ Syntax

C/C++ (DOS)

```
void _7248_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
void _7249_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
void _7296_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
```

C/C++ (Windows 95)

```
void W_7248_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
void W_7249_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
void W_7296_Get_IRQ_Status(U16 cardNo, U16 *int1Status,
      U16 *int2Status);
```

Visual Basic (Windows 95)

```
W_7248_Get_IRQ_Status (ByVal cardNo As Integer,
      int1Status As Integer, int2Status As Integer);
W_7249_Get_IRQ_Status (ByVal cardNo As Integer,
      int1Status As Integer, int2Status As Integer);
W_7296_Get_IRQ_Status (ByVal cardNo As Integer,
      int1Status As Integer, int2Status As Integer);
```

@ Argument

cardNo: Card number to select board

int1Status: The status of INT1,
int1Status = 0 → no interrupt
int1Status = 1 → interrupt 1 inserted

int2Status: The status of INT2
int2Status = 0 → no interrupt
int2Status = 1 → interrupt 2 inserted

Please refer to section 4.3 for a more detailed description.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.14 Clear IRQ

@ Description

This function is used to clear the interrupt generated from the 7248/96 series.

@ Syntax

C/C++ (DOS)

```
void _7248_CLR_IRQ(U16 cardNo);
void _7249_CLR_IRQ(U16 cardNo);
void _7296_CLR_IRQ(U16 cardNo);
```

C/C++ (Windows 95)

```
void W_7248_CLR_IRQ(U16 cardNo);
void W_7249_CLR_IRQ(U16 cardNo);
void W_7296_CLR_IRQ(U16 cardNo);
```

Visual Basic (Windows 95)

```
W_7248_CLR_IRQ (ByVal cardNo As Integer);
W_7249_CLR_IRQ (ByVal cardNo As Integer);
W_7296_CLR_IRQ (ByVal cardNo As Integer);
```

@ Argument

cardNo: card number to select board

5.15 Software Reset

@ Description

This function is used to reset the I/O port configuration. After resetting PCI-7224/7248/7296, all ports will be set as input ports. Note that this function cannot re-start the PCI bus nor will all hardware settings be changed.

@ Syntax

PCI-7224/7248, CPCI-7248:

C/C++ (DOS)

```
U16  _7248_Software_Reset (U16 cardNo)
U16  _7249_Software_Reset (U16 cardNo)
U16  _7296_Software_Reset (U16 cardNo)
```

C/C++ (Windows 95)

```
U16  W_7248_Software_Reset (U16 cardNo)
U16  W_7249_Software_Reset (U16 cardNo)
U16  W_7296_Software_Reset (U16 cardNo)
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Visual Basic (Windows 95)

```
W_7248_Software_Reset (ByVal cardNo As Integer) As
      Integer
W_7249_Software_Reset (ByVal cardNo As Integer) As
      Integer
W_7296_Software_Reset (ByVal cardNo As Integer) As
      Integer
```

@ Argument

cardNo: Card number which the DIO will be reset.

@ Return Code

ERR_NoError

5.16 Interrupt Start under Windows

@ Description

This function is only available in the Windows 95/98 driver. This function is used to initialize and start up the interrupt control. Please refer to section 4.3 for a detailed description of the interrupt system. After calling this function, every time an interrupt requests a signal to be generated, a software event is signaled. This implies that in the program, the user can use wait the operation to wait for the event. When the event is signaled, it means an interrupt is generated. Please refer to sample program 7248int.c or 7296int.c.

@ Syntax

C/C++ (Windows 95)

```
void  W_7248_INT_Start (U16 cardNo, U16 c1, U16 c2, U16
       ctrlValue, HANDLE *hIntEvent)
void  W_7249_INT_Start (U16 cardNo, U16 c1, U16 c2, U16
       ctrlValue, HANDLE *hIntEvent)
void  W_7248_INT_Start (U16 cardNo, U16 c1, U16 c2, U16
       ctrlValue, HANDLE *hIntEvent)
```

Visual Basic (Windows 95)

```
W_7248_INT_Start (ByVal cardNo As Integer, ByVal c1 As
      Integer, ByVal c2 As Integer, ByVal ctrlValue As
      Integer, hIntEvent As Long)
W_7249_INT_Start (ByVal cardNo As Integer, ByVal c1 As
      Integer, ByVal c2 As Integer, ByVal ctrlValue As
      Integer, hIntEvent As Long)
W_7296_INT_Start (ByVal cardNo As Integer, ByVal c1 As
      Integer, ByVal c2 As Integer, ByVal ctrlValue As
      Integer, hIntEvent As Long)
```


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

@ *Argument*

cardNo:	Card number which the DIO will be reset.
c1:	If the interrupt source is set as internal timer source, this value is the frequency divider of Timer#1.
c2:	If the interrupt source is set as internal timer source, this value is the frequency divider of Timer#2.
ctrlValue:	The value for INT mode setting. The value can be set for INT1 is INT1_OFF, INT1_P1C0, INT1_P1C3C0, or INT1_EVENT_IRQ. The value can be set for INT2 is INT2_OFF, INT2_P2C0, INT2_P2C3C0, or INT2_TIMER_IRQ. Please refer to section 3.3.4 for detailed description.
hIntEvent:	The handle of the event for interrupt signals.

@ *Return Code*

ERR_NoError

5.17 Interrupt Stop under Windows

@ *Description*

This function is only available in Windows 95/98 driver. This function is used to disable the interrupt signal generation.

@ *Syntax*

C/C++ (Windows 95)

```
void  W_7248_INT_Stop (U16 cardNo)
void  W_7249_INT_Stop (U16 cardNo)
void  W_7296_INT_Stop (U16 cardNo)
```

Visual Basic (Windows 95)

```
W_7248_INT_Stop (ByVal cardNo As Integer)
W_7249_INT_Stop (ByVal cardNo As Integer)
W_7296_INT_Stop (ByVal cardNo As Integer)
```

@ *Argument*

cardNo: The card number which the DIO will reset.

@ *Return Code*

ERR_NoError

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully:

1. Before using ADLINK's products please read the user manual and follow the instructions exactly.
2. When sending in damaged products for repair, please attach an RMA application form.
3. All ADLINK products come with a two-year guarantee, repaired free of charge.
   - The warranty period starts from the product's shipment date from ADLINK's factory.
   - Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
   - End users requiring maintenance services should contact their local dealers. Local warranty conditions will depend on local dealers.
4. This warranty will not cover repair costs due to:
   a. Damage caused by not following instructions.
   b. Damage caused by carelessness on the users' part during product transportation.
   c. Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
   d. Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals.
   e. Damage caused by leakage of battery fluid.
   f. Damage from improper repair by unauthorized technicians.
   g. Products with altered and/or damaged serial numbers.
   h. Other categories not protected under our guarantees.
5. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
6. To ensure the speed and quality of product repair, please download a RMA application form from our company website: www.adlinktech.com. Damaged products with attached RMA forms receive priority.

For further questions, please contact our FAE staff.

ADLINK: service@adlinktech.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000