
Express-BL

User's Manual

COM Express Basic Size Type 6 module with 5th Gen Intel® Core™ i7 and Xeon® E3-1200L v4 processors

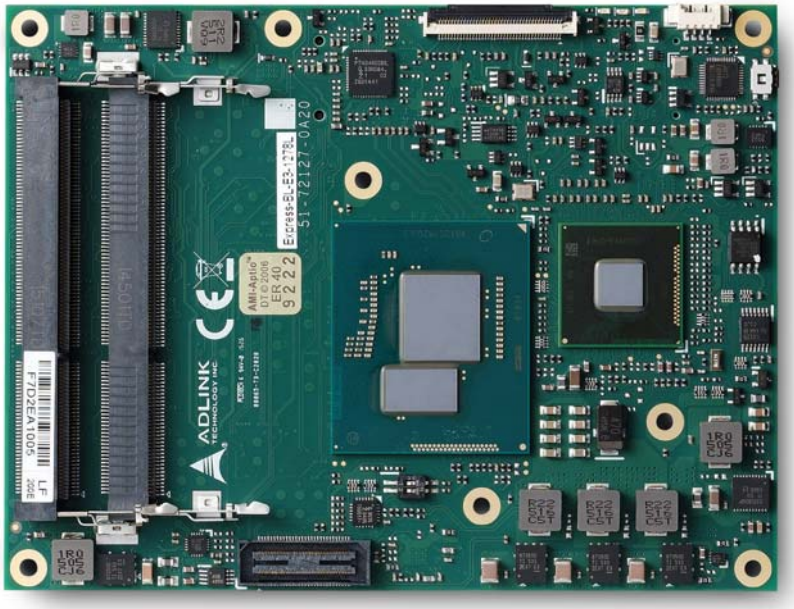

COM Express®

Manual Rev.: 1.3
Revision Date: July 29, 2019
Part Number: 50-1J067-1030

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000
Leading EDGE COMPUTING

Revision History

Revision	Description	Date	By
1.00	Initial release	2015-09-03	JC
1.01	Update memory capacity to 32GB, typos; add 2x PCIe x1 by build option, LVDS DE mode and H/V-Sync mode; add FAN_PWMOUT, SER0_TX, SER1_TX, LID#, SLEEP#, PCIE_TX7/RX7 comments; correct DDI pin D16, C33, C37 signals to _CTRLDATA_AUX-; correct PCIe Adapter Card description; correct Bottom Mounting standoff descriptions.	2016-04-21	JC
1.2	Update switch information	2018-01-02	JC
1.3	Update PCIe spec, functional diagram, mechanical dimensions, pinouts and descriptions, BIOS.	2019-07-29	JC

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Preface

Copyright © 2015, 2016, 2018, 2019 ADLINK Technology, Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Revision History **2**

Preface **3**

1. Introduction **8**

2. Specifications **9**

2.1. Core System 9
2.2. Expansion Busses 9
2.3. Video 10
2.4. Audio 10
2.5. LAN 10
2.6. Multi I/O and Storage 10
2.7. Serial I/O on Module 11
2.8. Trusted Platform Module (TPM) 11
2.9. SEMA Board Controller 11
2.10. Debug Headers 11
2.11. Power Specifications 12
2.12. Power Consumption 12
2.13. Operating Temperatures 12
2.14. Environmental 12
2.15. Specification Compliance 12
2.16. Operating Systems 12
2.17. Functional Diagram 13
2.18. Mechanical Dimensions 14

3. Pinouts and Signal Descriptions **15**

3.1. AB/CD Pin Definitions 15
3.2. Signal Description Terminology 18
3.3. AB Signal Descriptions 19
3.3.1. Audio Signals 19
3.3.2. Analog VGA 19
3.3.3. LVDS 20
3.3.4. eDP 21
3.3.5. Gigabit Ethernet 21
3.3.6. SATA 22
3.3.7. PCI Express 23

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.8. Express Card 23
3.3.9. LPC Bus 24
3.3.10. USB 24
3.3.11. USB Root Segmentation 25
3.3.12. SPI (BIOS only) 25
3.3.13. Miscellaneous 26
3.3.14. SMBus 26
3.3.15. I2C Bus 26
3.3.16. General Purpose I/O (GPIO) 27
3.3.17. Serial Interface Signals 27
3.3.18. Power and System Management 28
3.3.19. Power and Ground 29
3.4. CD Signal Descriptions 30
3.4.1. USB 3.0 Extension 30
3.4.2. PCI Express x1 30
3.4.3. DDI Channels 31
3.4.4. DDI to DP/HDMI Mapping 34
3.4.5. PCI Express Graphics x16 (PEG) 35
3.4.6. Module Type Definition 36
3.4.7. Power and Ground 36
4. Module Interfaces and Configuration 37
4.1. Connector, Switch and LED Locations 37
4.1.1. Express-BL and the DB40 Module connected 37
4.2. 40-pin Multipurpose Connector 38
4.3. Status LEDs 39
4.4. Fan Connector 40
4.5. BIOS Setup Defaults Reset Button 41
4.6. Express-BL Switch Settings 42
4.6.1. Switch Locations 42
4.6.2. PCI Express Configuration Switch 43
4.6.3. BIOS Select and Mode Configuration Switch 43
4.7. PCIe x16-to-two-x8 Adapter Card 44
5. Smart Embedded Management Agent (SEMA) 45
5.1. Board Specific SEMA Functions 46
5.1.1. Voltages 46
5.1.2. Main Current 46
5.1.3. BMC Status 46

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.4. Exception Codes 47
5.1.5. BMC Flags 47
6. System Resources 48
6.1. System Memory Map 48
6.2. Direct Memory Access Channels 48
6.3. I/O Map 49
6.4. Interrupt Request (IRQ) Lines 51
6.4.1. PIC Mode 51
6.4.2. APIC Mode 52
6.5. PCI Configuration Space Map 53
6.6. PCI Interrupt Routing Map 54
6.7. SMBus Address Table 54
7. BIOS Setup 55
7.1. Menu Structure 55
7.2. Main 56
7.2.1. System Information 56
7.2.2. Processor Information 56
7.2.3. PCH Information 56
7.2.4. System Management 57
7.2.5. System Date and Time 60
7.3. Advanced 61
7.3.1. CPU 61
7.3.2. Memory 63
7.3.3. Graphics 64
7.3.4. SATA 66
7.3.5. USB 67
7.3.6. Network 69
7.3.7. PCI and PCIe 70
7.3.8. Super IO 74
7.3.9. ACPI and Power Management 76
7.3.10. Sound 76
7.3.11. Serial Port Console 77
7.3.12. ICC Configuration 78
7.3.13. Thermal 80
7.3.14. Miscellaneous 80
7.4. Security 82
7.4.1. Password Description 82

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.5. Boot 83
7.5.1. Boot Configuration 83
7.5.2. CSM Configuration 83
7.6. Save & Exit 84
7.6.1. Reset Options 84
7.6.2. Save Options 84
8. BIOS Checkpoints, Beep Codes 85
8.1. Status Code Ranges 86
8.2. Standard Status Codes 87
8.2.1. SEC Status Codes 87
8.2.2. SEC Beep Codes 87
8.2.3. PEI Status Codes 87
8.2.4. PEI Beep Codes 90
8.2.5. DXE Status Codes 90
8.2.6. DXE Beep Codes 93
8.2.7. ACPI/ASL Checkpoint 93
8.3. OEM-Reserved Checkpoint Ranges 94
9. Mechanical Information 95
9.1. Board-to-Board Connectors 95
9.2. Thermal Solution (PM check) 96
9.2.1. Heat Spreaders 96
9.2.2. Heat Sinks 96
9.2.3. Installation 96
9.3. Mounting Methods 99
9.4. Standoff Types 100
Safety Instructions 101
Getting Service 102

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1. Introduction

The Express-BL is a COM Express® COM.0 R2.1 Basic Size Type 6 module supporting the 64-bit 5th Generation Intel® Core™ i7 and Xeon® E3-1200L v4 processors (codename “Broadwell-H”) with Intel® QM87 Chipset. The Express-BL is specifically designed for customers who need excellent graphics performance and high-level processing performance in a long product life solution.

The Express-BL features Intel® Hyper-Threading Technology (up to 4 cores, 8 threads) and DDR3L non-ECC dual-channel memory at 1333/1600 MHz to provide excellent overall performance. Intel® Flexible Display Interface and Direct Media Interface provide high speed connectivity from the CPU to the Intel® QM87 Chipset.

Integrated Intel® Generation 8 Graphics includes features such as OpenGL 4.0, DirectX 11, Intel® Clear Video HD Technology, Advanced Scheduler 2.0, 1.0, XPDM support, and DirectX Video Acceleration (DXVA) support for full AVC/VC1/MPEG2 hardware decode. Graphics outputs include VGA, LVDS and three DDI ports supporting HDMI/DVI/DisplayPort and eDP as a build option. The Express-BL is specifically designed for customers with high-performance processing graphics requirements who want to outsource the custom core logic of their systems for reduced development time.

The Express-BL has dual stacked SODIMM sockets for up to 32 GB non-ECC type DDR3L memory. In addition to the onboard integrated graphics, a multiplexed PCIe x16 graphics bus is available for discrete graphics expansion. Input/output features include a single onboard Gigabit Ethernet port, USB 3.0 ports and USB 2.0 ports, and SATA 6 Gb/s ports. Support is provided for SMBus and I^2C. The module is equipped with SPI AMI EFI BIOS with CMOS backup, supporting embedded features such as remote console, hardware monitor, and watchdog timer.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2. Specifications

2.1. Core System

- **CPU:** 5th Generation Intel® Core™ and Xeon® E3-1200L v4 processor (formerly “Broadwell-H”)
  - Intel® Xeon® E3-1278L v4 2.0/3.3GHz (Turbo), 0.8/1.0GHz (Turbo), 47W (4C/GT3e)
  - Intel® Xeon® E3-1258L v4 1.8/3.2GHz (Turbo), 0.7/1.0GHz (Turbo), 47W (4C/GT2)
  - Intel® Core™ i7-5850EQ 2.7/3.4GHz (Turbo), 0.3/1.0GHz (Turbo), 47W/37W (cTDP) (4C/GT3e)
  - Intel® Core™ i7-5700EQ 2.6/3.4GHz (Turbo), 0.3/1.0GHz (Turbo), 47W/37W (cTDP) (4C/GT2)

  Supporting: Intel® VT, Intel® TXT, Intel® SSE4.2, Intel® HT Technology, Intel® 64 Architecture, Execute Disable Bit, Intel® Turbo Boost Technology 2.0, Intel® AVX2, Intel® AES-NI, PCLMULQDQ Instruction, Intel® Device Protection Technology with Intel® Secure Key, Intel® TSXNI

  Note: The availability of the features may vary between processor SKUs.

- **Cache**: 6MB for i7-5850EQ, i7-5700EQ, E3-1278L and E3-1258L
- **Memory**: Dual channel non-ECC 1333/1600 MHz DDR3L memory up to 32 GB in dual stacked SODIMM sockets
- **Chipset**: Mobile Intel® QM87 Chipset
- **Embedded BIOS**: AMI EFI with CMOS backup in 8 MB SPI BIOS with Intel® AMT 10.0 support

2.2. Expansion Busses

- PCI Express x 16 Gen3 (can be configured to 2 x8 or 1 x8 with 2 x4)
- 6 PCI Express x1 (AB): Lanes 0/1/2/3/4/5
- 2 PCI Express x1 (CD): Lanes 6/7 (Lane 7 by build option, in place of GbE)

  Note: PCIe lanes 0/1/2/3 can also be configured to x2, x4 with custom BIOS.
- LPC bus, SMBus (system), I^2C (user)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3. Video

- **Integrated on Processor**: Intel® Generation 8 Graphics core architecture
- **GPU Feature Support**:
  - 3 independent and simultaneous combinations of DisplayPort/HDMI/VGA/LVDS graphics outputs (eDP optional in place of LVDS and VGA)
  - Encode/transcode HD content
  - Playback of high definition content including Blu-ray Disc
  - Playback of Blu-ray Disc 3D content using HDMI (1.4a spec compliant with 3D)
  - DirectX Video Acceleration (DXVA) support for accelerated video processing
  - Full AVC/VC1/MPEG2 HW decode
  - Advanced Scheduler 2.0, 1.0, XPDM support
  - DirectX 11.1, DirectX 11.1+, DirectX 11, DirectX 10.1, DirectX 10, DirectX 9 support
  - OpenGL 4.0, OpenGL 4.2 support

  Note: the availability of the features may vary between OS (Win 7/8.1, WES 7, WE8 Std., Linux)

- **Display Interface support**
  - **VGA:** 300MHz DAC analog monitor support up to QXGA (2048 x 1536)
  - **LVDS**: single/dual channel 18/24-bit LVDS through eDP to LVDS (NXP IC), supports DE and H/V-Sync modes
  - **eDP:** up to 4 lane support, in place of LVDS and VGA (build option)
  - **Digital Display Ports x3:**
    - DDI1/2/3 support DisplayPort/HDMI/DVI

2.4. Audio

- **Integrated**: Intel® HD Audio integrated in PCH QM87
- **Audio Codec:** located on carrier Express-BASE6 (ALC886 standard support)

2.5. LAN

- **Integrated**: MAC integrated in PCH QM87
- **Intel PHY**: Intel® i218LM Ethernet controller
- **Interface:** 10/100/1000 Mbit/s connection

2.6. Multi I/O and Storage

- Integrated in Intel® QM87 Chipset
- **USB**: 4x USB 3.0 (USB 0,1,2,3), 8x USB 2.0 (USB 0,1,2,3,4,5,6,7)
- **SATA**: 4x SATA 6Gb/s (SATA 0,1,2,3)
- **GPIO**: 4 GPO and 4 GPI

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.7. Serial I/O on Module

- **Chipset**: Nuvoton NCT5104D
- **Ports**: 2x UARTs Rx/Tx only
- **Console Redirection:** COM 1 or COM 2 selectable in BIOS

COM Port	Description	IRQ	Address	Console redirection support
COM 1	Supported by module (SER0, A98/A99), via NCT5104D	10	0x240	Yes
COM 2	Supported by module (SER1, A101/A102), via NCT5104D	11	0x248	Yes
COM 3	Supported by Super I/O (W83627DHG) on carrier board	4	0x3F8	Yes
COM 4	Supported by Super I/O (W83627DHG) on carrier board	3	0x2F8	Yes

2.8. Trusted Platform Module (TPM)

- Chipset: Atmel AT97SC3204
- Type: TPM 1.2

2.9. SEMA Board Controller

- Type: ADLINK Smart Embedded Management Agent (SEMA)
- Supports:
  - Voltage/Current monitoring
  - Power sequence debug support
  - AT/ATX mode control
  - Logistics and Forensic information
  - Flat Panel Control
  - General Purpose I2C
  - Failsafe BIOS (dual BIOS)
  - Watchdog Timer and Fan Control

2.10. Debug Headers

- 40-pin multipurpose flat cable connector, used in combination with DB-40 debug module providing BIOS POST code LED, BMC access, SPI BIOS flashing, power testpoints, debug LEDs
- 60-pin XDP header for ICE debug of CPU/chipset

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.11. Power Specifications

- Power Modes: AT and ATX mode (AT mode startup controlled by SEMA)
- Standard Voltage Input: ATX @ 12V±5%,/ 5Vsb ±5% or AT @ 12V ±5%
- Wide Voltage Input: ATX @ 8.5-20V, 5Vsb ±5% or AT @ 8.5-20V
- Power Management: ACPI 5.0 compliant, Smart Battery support
- Power States: supports C1-C6, S0, S4, S5, S5 ECO mode (Wake-on-USB S3/S4, WOL S3/S4/S5)
- ECO mode: supports deep S5 for 5Vsb power saving

2.12. Power Consumption

Please contact your ADLINK representative for the document “COM Express Module Power Consumption”.

2.13. Operating Temperatures

- Standard: °C to 60°C (wide voltage input)
- Extreme Rugged: -40°C to 85°C (standard voltage input)

2.14. Environmental

- Humidity: 5-90% RH operating, non-condensing
  5-95% RH storage (and operating with conformal coating).
- Shock and Vibration: IEC 60068-2-64 and IEC-60068-2-27, MIL-STD-202F, Method 213B, Table 213-I, Condition A and Method 214A, Table 214-I, Condition D
- Halt: Thermal Stress, Vibration Stress, Thermal Shock and Combined Test

2.15. Specification Compliance


- PICMG COM.0: Rev 2.1 Type 6, Basic size 125 x 95 mm

2.16. Operating Systems

- Standard Support: Windows 7 32/64-bit, Windows 8.1 Update 64-bit, Linux 64-bit
- Extended Support (BSP): WES 7 32/64-bit, WE8 Std. 64-bit, Linux 64-bit, VxWorks 64-bit


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.17. Functional Diagram

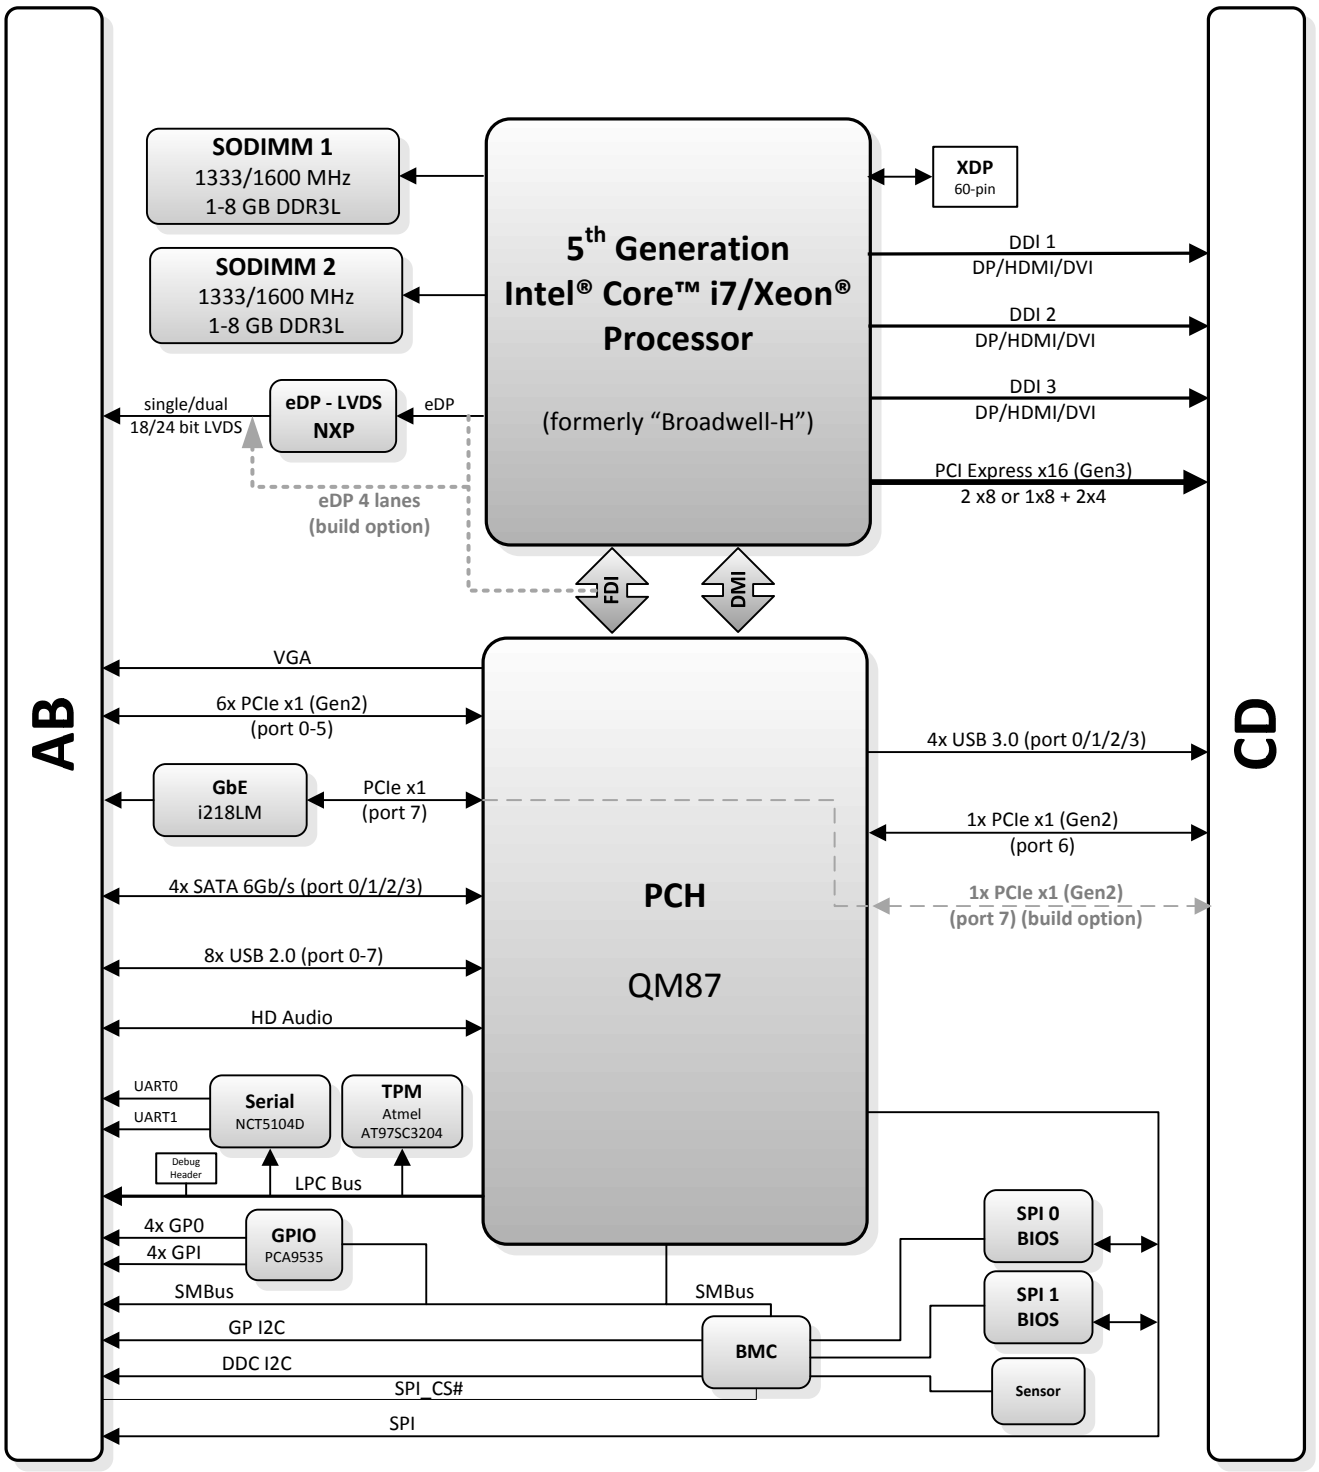

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.18. Mechanical Dimensions

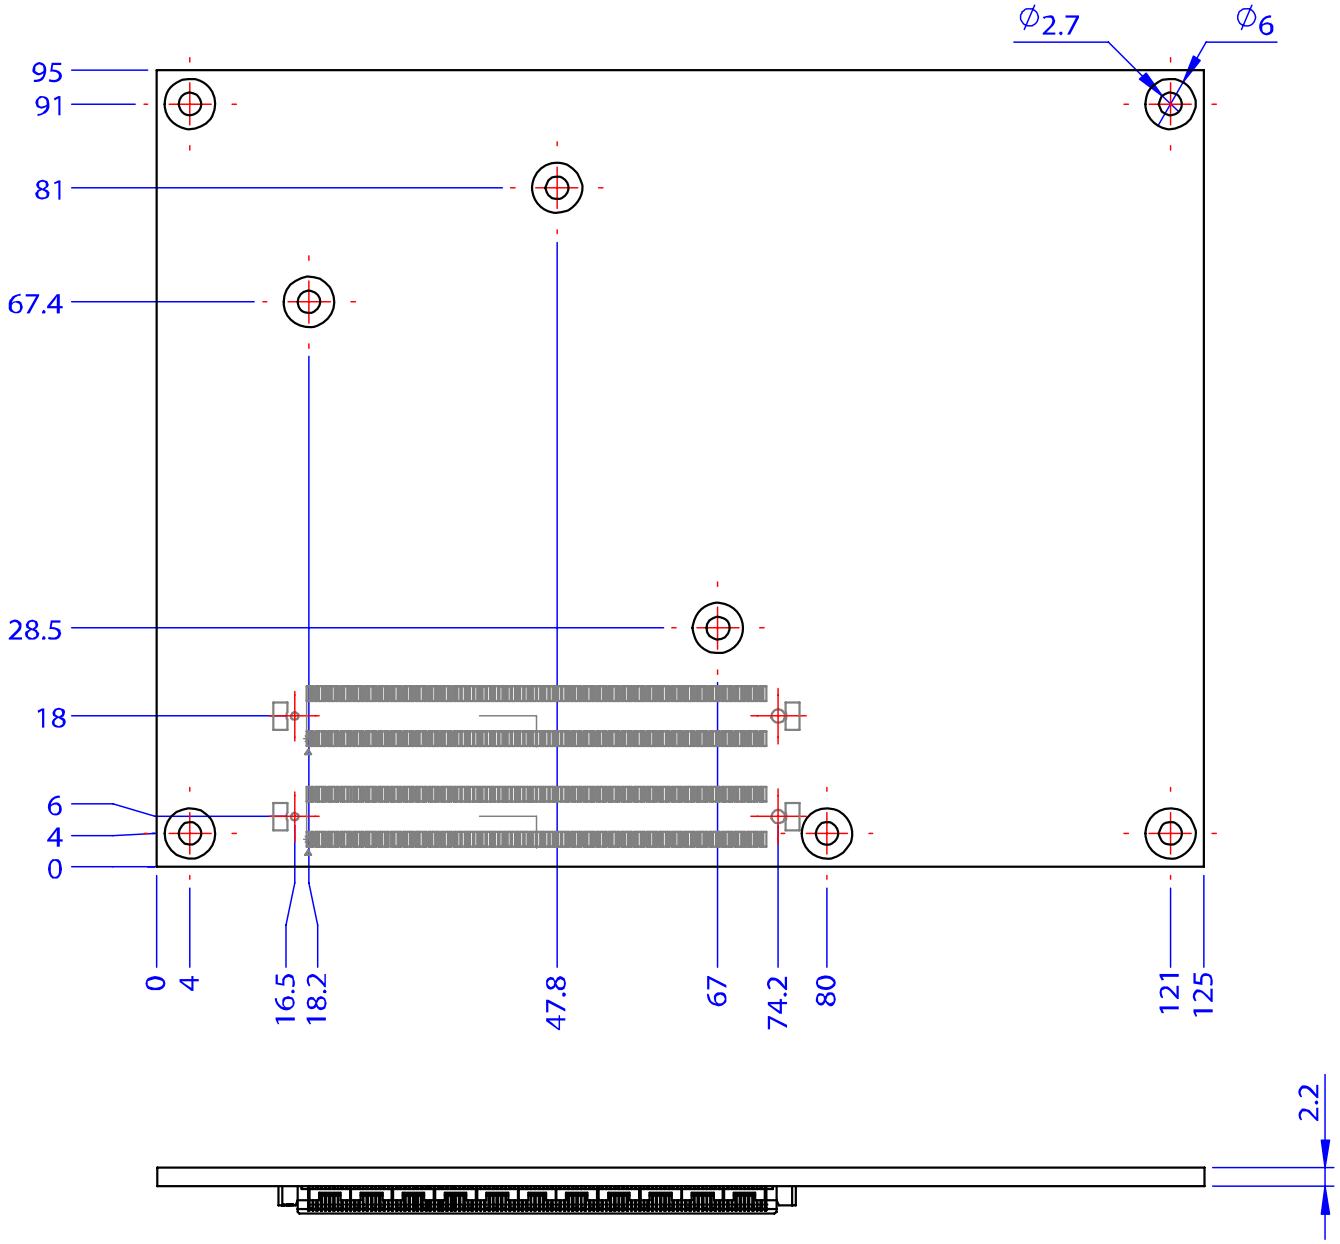

All dimensions are shown in millimeters. Tolerances should be ± 0.25mm, unless otherwise noted.
The tolerances on the module connector locating peg holes (dimensions [16.50, 6.00] and [16.50, 18.00]) should be ± 0.10mm.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. Pinouts and Signal Descriptions

3.1. AB/CD Pin Definitions

The Express-BL is a Type 6 module supporting USB 3.0 and DDI channels on the CD connector. In the table below, all standard pins of the COM Express specification are described, including those not supported on the Express-BL.

Note: Signals not supported on the Express-BL module are ~~crossed out~~.

	Row A		Row B		Row C		Row D
Pin	**Name**	**Pin**	**Name**	**Pin**	**Name**	**Pin**	**Name**
A1	GND (fixed)	**B1**	GND (fixed)	**C1**	GND (fixed)	**D1**	GND (fixed)
A2	GBE0_MDI3-	**B2**	GBE0_ACT#	**C2**	GND	**D2**	GND
A3	GBE0_MDI3+	**B3**	LPC_FRAME#	**C3**	USB_SSRX0-	**D3**	USB_SSTX0-
A4	GBE0_LINK100#	**B4**	LPC_AD0	**C4**	USB_SSRX0+	**D4**	USB_SSTX0+
A5	GBE0_LINK1000#	**B5**	LPC_AD1	**C5**	GND	**D5**	GND
A6	GBE0_MDI2-	**B6**	LPC_AD2	**C6**	USB_SSRX1-	D6	USB_SSTX1-
A7	GBE0_MDI2+	**B7**	LPC_AD3	**C7**	USB_SSRX1+	D7	USB_SSTX1+
A8	GBE0_LINK#	**B8**	LPC_DRQ0#	**C8**	GND	D8	GND
A9	GBE0_MDI1-	**B9**	LPC_DRQ1#	**C9**	USB_SSRX2-	D9	USB_SSTX2-
A10	GBE0_MDI1+	**B10**	LPC_CLK	**C10**	USB_SSRX2+	D10	USB_SSTX2+
A11	GND (fixed)	**B11**	GND (fixed)	**C11**	GND (fixed)	D11	GND (fixed)
A12	GBE0_MDI0-	**B12**	PWRBTN#	**C12**	USB_SSRX3-	D12	USB_SSTX3-
A13	GBE0_MDI0+	**B13**	SMB_CK	**C13**	USB_SSRX3+	D13	USB_SSTX3+
A14	GBE0_CTREF	**B14**	SMB_DAT	**C14**	GND	**D14**	GND
A15	SUS_S3#	**B15**	SMB_ALERT#	**C15**	~~DDI1_PAIR6+~~	**D15**	DDI1_CTRLCLK_AUX+
A16	SATA0_TX+	**B16**	SATA1_TX+	**C16**	~~DDI1_PAIR6-~~	**D16**	DDI1_CTRLDATA_AUX
A17	SATA0_TX-	**B17**	SATA1_TX-	**C17**	RSVD	**D17**	RSVD
A18	SUS_S4#	**B18**	SUS_STAT#	**C18**	RSVD	**D18**	RSVD
A19	SATA0_RX+	**B19**	SATA1_RX+	**C19**	PCIE_RX6+	D19	PCIE_TX6+
A20	SATA0_RX-	**B20**	SATA1_RX-	**C20**	PCIE_RX6-	D20	PCIE_TX6-
A21	GND (fixed)	**B21**	GND (fixed)	**C21**	GND (fixed)	**D21**	GND (fixed)
A22	SATA2_TX+	**B22**	SATA3_TX+	**C22**	PCIE_RX7+	**D22**	PCIE_TX7+
A23	SATA2_TX-	**B23**	SATA3_TX-	**C23**	PCIE_RX7-	**D23**	PCIE_TX7-
A24	SUS_S5#	**B24**	PWR_OK	**C24**	DDI1_HPD	**D24**	RSVD
A25	SATA2_RX+	**B25**	SATA3_RX+	**C25**	~~DDI1_PAIR4+~~	**D25**	RSVD
A26	SATA2_RX-	**B26**	SATA3_RX-	**C26**	~~DDI1_PAIR4-~~	**D26**	DDI1_PAIR0+
A27	BATLOW#	**B27**	WDT	**C27**	RSVD	**D27**	DDI1_PAIR0-
A28	(S)ATA_ACT#	**B28**	AC/HDA_SDIN2	**C28**	RSVD	**D28**	RSVD
A29	AC/HDA_SYNC	**B29**	AC/HDA_SDIN1	**C29**	~~DDI1_PAIR5+~~	**D29**	DDI1_PAIR1+
A30	AC/HDA_RST#	**B30**	AC/HDA_SDIN0	**C30**	~~DDI1_PAIR5-~~	**D30**	DDI1_PAIR1-
A31	GND (fixed)	**B31**	GND (fixed)	**C31**	GND (fixed)	**D31**	GND (fixed)
A32	AC/HDA_BITCLK	**B32**	SPKR	**C32**	DDI2_CTRLCLK_AUX+	**D32**	DDI1_PAIR2+
A33	AC/HDA_SDOUT	**B33**	I2C_CK	**C33**	DDI2_CTRLDATA_AUX-	**D33**	DDI1_PAIR2-
A34	BIOS_DIS0#	**B34**	I2C_DAT	**C34**	DDI2_DDC_AUX_SEL	**D34**	DDI1_DDC_AUX_SEL
A35	THRMTRIP#	**B35**	THRM#	**C35**	RSVD	**D35**	RSVD

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Row A		Row B		Row C		Row D
Pin	Name	Pin	Name	Pin	Name	Pin	Name
A36	USB6-	B36	USB7-	C36	DDI3_CTRLCLK_AUX+	D36	DDI1_PAIR3+
A37	USB6+	B37	USB7+	C37	DDI3_CTRLDATA_AUX-	D37	DDI1_PAIR3-
A38	USB_6_7_OC#	B38	USB_4_5_OC#	C38	DDI3_DDC_AUX_SEL	D38	RSVD
A39	USB4-	B39	USB5-	C39	DDI3_PAIR0+	D39	DDI2_PAIR0+
A40	USB4+	B40	USB5+	C40	DDI3_PAIR0-	D40	DDI2_PAIR0-
A41	GND (fixed)	B41	GND (fixed)	C41	GND (fixed)	D41	GND (fixed)
A42	USB2-	B42	USB3-	C42	DDI3_PAIR1+	D42	DDI2_PAIR1+
A43	USB2+	B43	USB3+	C43	DDI3_PAIR1-	D43	DDI2_PAIR1-
A44	USB_2_3_OC#	B44	USB_0_1_OC#	C44	DDI3_HPD	D44	DDI2_HPD
A45	USB0-	B45	USB1-	C45	RSVD	D45	RSVD
A46	USB0+	B46	USB1+	C46	DDI3_PAIR2+	D46	DDI2_PAIR2+
A47	VCC_RTC	B47	EXCD1_PERST#	C47	DDI3_PAIR2-	D47	DDI2_PAIR2-
A48	EXCD0_PERST#	B48	EXCD1_CPPE#	C48	RSVD	D48	RSVD
A49	EXCD0_CPPE#	B49	SYS_RESET#	C49	DDI3_PAIR3+	D49	DDI2_PAIR3+
A50	LPC_SERIRQ	B50	CB_RESET#	C50	DDI3_PAIR3-	D50	DDI2_PAIR3-
A51	GND (fixed)	B51	GND (fixed)	C51	GND (fixed)	D51	GND (fixed)
A52	PCIE_TX5+	B52	PCIE_RX5+	C52	PEG_RX0+	D52	PEG_TX0+
A53	PCIE_TX5-	B53	PCIE_RX5-	C53	PEG_RX0-	D53	PEG_TX0-
A54	GPI0	B54	GPO1	C54	TYPE0#	D54	PEG_LANE_RV#
A55	PCIE_TX4+	B55	PCIE_RX4+	C55	PEG_RX1+	D55	PEG_TX1+
A56	PCIE_TX4-	B56	PCIE_RX4-	C56	PEG_RX1-	D56	PEG_TX1-
A57	GND	B57	GPO2	C57	TYPE1#	D57	TYPE2#
A58	PCIE_TX3+	B58	PCIE_RX3+	C58	PEG_RX2+	D58	PEG_TX2+
A59	PCIE_TX3-	B59	PCIE_RX3-	C59	PEG_RX2-	D59	PEG_TX2-
A60	GND (fixed)	B60	GND (fixed)	C60	GND (fixed)	D60	GND (fixed)
A61	PCIE_TX2+	B61	PCIE_RX2+	C61	PEG_RX3+	D61	PEG_TX3+
A62	PCIE_TX2-	B62	PCIE_RX2-	C62	PEG_RX3-	D62	PEG_TX3-
A63	GPI1	B63	GPO3	C63	RSVD	D63	RSVD
A64	PCIE_TX1+	B64	PCIE_RX1+	C64	RSVD	D64	RSVD
A65	PCIE_TX1-	B65	PCIE_RX1-	C65	PEG_RX4+	D65	PEG_TX4+
A66	GND	B66	WAKE0#	C66	PEG_RX4-	D66	PEG_TX4-
A67	GPI2	B67	WAKE1#	C67	RSVD	D67	GND
A68	PCIE_TX0+	B68	PCIE_RX0+	C68	PEG_RX5+	D68	PEG_TX5+
A69	PCIE_TX0-	B69	PCIE_RX0-	C69	PEG_RX5-	D69	PEG_TX5-
A70	GND (fixed)	B70	GND (fixed)	C70	GND (fixed)	D70	GND (fixed)
A71	LVDS_A0+	B71	LVDS_B0+	C71	PEG_RX6+	D71	PEG_TX6+
A72	LVDS_A0-	B72	LVDS_B0-	C72	PEG_RX6-	D72	PEG_TX6-
A73	LVDS_A1+	B73	LVDS_B1+	C73	GND	D73	GND
A74	LVDS_A1-	B74	LVDS_B1-	C74	PEG_RX7+	D74	PEG_TX7+
A75	LVDS_A2+	B75	LVDS_B2+	C75	PEG_RX7-	D75	PEG_TX7-
A76	LVDS_A2-	B76	LVDS_B2-	C76	GND	D76	GND
A77	LVDS_VDD_EN	B77	LVDS_B3+	C77	RSVD	D77	RSVD
A78	LVDS_A3+	B78	LVDS_B3-	C78	PEG_RX8+	D78	PEG_TX8+
A79	LVDS_A3-	B79	LVDS_BKLT_EN	C79	PEG_RX8-	D79	PEG_TX8-

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Row A		Row B		Row C		Row D
Pin	**Name**	**Pin**	**Name**	**Pin**	**Name**	**Pin**	**Name**
A80	GND (fixed)	**B80**	GND (fixed)	**C80**	GND (fixed)	**D80**	GND (fixed)
A81	LVDS_A_CK+	**B81**	LVDS_B_CK+	**C81**	PEG_RX9+	D81	PEG_TX9+
A82	LVDS_A_CK-	**B82**	LVDS_B_CK-	**C82**	PEG_RX9-	D82	PEG_TX9-
A83	LVDS_I2C_CK	**B83**	LVDS_BKLT_CTRL	**C83**	RSVD	D83	RSVD
A84	LVDS_I2C_DAT	**B84**	VCC_5V_SBY	**C84**	GND	D84	GND
A85	GPI3	**B85**	VCC_5V_SBY	**C85**	PEG_RX10+	D85	PEG_TX10+
A86	RSVD	**B86**	VCC_5V_SBY	**C86**	PEG_RX10-	D86	PEG_TX10-
A87	RSVD	**B87**	VCC_5V_SBY	**C87**	GND	D87	GND
A88	PCIE0_CK_REF+	**B88**	BIOS_DIS1#	**C88**	PEG_RX11+	D88	PEG_TX11+
A89	PCIE0_CK_REF-	**B89**	VGA_RED	**C89**	PEG_RX11-	D89	PEG_TX11-
A90	GND (fixed)	**B90**	GND (fixed)	**C90**	GND (fixed)	D90	GND (fixed)
A91	SPI_POWER	**B91**	VGA_GRN	**C91**	PEG_RX12+	D91	PEG_TX12+
A92	SPI_MISO	**B92**	VGA_BLU	**C92**	PEG_RX12-	D92	PEG_TX12-
A93	GPO0	**B93**	VGA_HSYNC	**C93**	GND	D93	GND
A94	SPI_CLK	**B94**	VGA_VSYNC	**C94**	PEG_RX13+	D94	PEG_TX13+
A95	SPI_MOSI	**B95**	VGA_I2C_CK	**C95**	PEG_RX13-	D95	PEG_TX13-
A96	TPM_PP	**B96**	VGA_I2C_DAT	**C96**	GND	D96	GND
A97	TYPE10#	**B97**	SPI_CS#	**C97**	RSVD	D97	RSVD
A98	SER0_TX / ~~CAN_TX~~	**B98**	RSVD	**C98**	PEG_RX14+	D98	PEG_TX14+
A99	SER0_RX / ~~CAN_RX~~	**B99**	RSVD	**C99**	PEG_RX14-	D99	PEG_TX14-
A100	GND (fixed)	**B100**	GND (fixed)	**C100**	GND (fixed)	D100	GND (fixed)
A101	SER1_TX	**B101**	FAN_PWMOUT	**C101**	PEG_RX15+	D101	PEG_TX15+
A102	SER1_RX	**B102**	FAN_TACHIN	**C102**	PEG_RX15-	D102	PEG_TX15-
A103	LID# **		SLEEP# **	**C103**	GND	D103	GND
A104	VCC_12V	**B104**	VCC_12V	**C104**	VCC_12V	**D104**	VCC_12V
A105	VCC_12V	**B105**	VCC_12V	**C105**	VCC_12V	**D105**	VCC_12V
A106	VCC_12V	**B106**	VCC_12V	**C106**	VCC_12V	**D106**	VCC_12V
A107	VCC_12V	**B107**	VCC_12V	**C107**	VCC_12V	**D107**	VCC_12V
A108	VCC_12V	**B108**	VCC_12V	**C108**	VCC_12V	**D108**	VCC_12V
A109	VCC_12V	**B109**	VCC_12V	**C109**	VCC_12V	**D109**	VCC_12V
A110	GND (fixed)	**B110**	GND (fixed)	**C110**	GND (fixed)	**D110**	GND (fixed)

Notes:

(1) 4-lane eDP is available as build option in place of LVDS and VGA

(2) PCIe port 7 is available by build option in place of GbE

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2. Signal Description Terminology

The following terms are used in the COM Express AB/CD Signal Descriptions below.

I	Input to the Module
O	Output from the Module
I/O	Bi-directional input/output signal
OD	Open drain output
I 3.3V	Input 3.3V tolerant
I 5V	Input 5V tolerant
O 3.3V	Output 3.3V signal level
O 5V	Output 5V signal level
I/O 3.3V	Bi-directional signal 3.3V tolerant
I/O 5V	Bi-directional signal 5V tolerant
I/O 3.3Vsb	Input 3.3V tolerant active in standby state
P	Power Input/Output
REF	Reference voltage output that may be sourced from a module power plane.
PDS	Pull-down strap. This is an output pin on the module that is either tied to GND or not connected. The signal is used to indicate the PICMG module type to the Carrier Board.
PU	ADLINK implemented pull-up resistor on module
PD	ADLINK implemented pull-down resistor on module

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3. AB Signal Descriptions

3.3.1. Audio Signals

Signal	Pin #	Description	I/O	PU/PD	Comment
AC_RST# / HDA_RST#	A30	Reset output to CODEC, active low.	O 3.3VSB		
AC_SYNC / HDA_SYNC	A29	Sample-synchronization signal to the CODEC(s).	O 3.3VSB		
AC_BITCLK / HDA_BITCLK	A32	Serial data clock generated by the external CODEC(s).	I/O 3.3VSB		
AC _SDOUT / HDA_SDOUT	A33	Serial TDM data output to the CODEC.	O 3.3VSB		Boot strap pin, no external pull-up or pull-down resistor on carrier board is recommended to avoid change the configuration of this signal
AC _SDIN[2:0] HDA_SDIN[2:0]	B28 B29 B30	Serial TDM data inputs from up to 3 CODECs.	I 3.3VSB		AC_SDIN0: supported AC_SDIN1: supported AC_SDIN2: supported

3.3.2. Analog VGA

Signal	Pin #	Description	I/O	PU/PD	Comment
VGA_RED	B89	Red for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_GRN	B91	Green for monitor Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_BLU	B92	Blue for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_HSYNC	B93	Horizontal sync output to VGA monitor	O 5V		
VGA_VSYNC	B94	Vertical sync output to VGA monitor	O 5V		
VGA_I2C_CK	B95	DDC clock line (I²C port dedicated to identify VGA monitor capabilities)	I/O OD 3.3V	PU 2k2 3.3V	
VGA_I2C_DAT	B96	DDC data line.	I/O OD 3.3V	PU 2k2 3.3V	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.3. LVDS

Signal	Pin #	Description	I/O	PU/PD	Comment
LVDS_A0+ / eDP_TX2+ LVDS_A0- / eDP_TX2- LVDS_A1+ / eDP_TX1+ LVDS_A1- / eDP_TX1- LVDS_A2+ / eDP_TX0+ LVDS_A2- / eDP_TX0- LVDS_A3+ LVDS_A3-	A71 A72 A73 A74 A75 A76 A78 A79	LVDS Channel A differential pairs	O LVDS		
LVDS_A_CK+ / eDP_TX3+ LVDS_A_CK- / eDP_TX3-	A81 A82	LVDS Channel A differential clock	O LVDS		
LVDS_B0+ LVDS_B0- LVDS_B1+ LVDS_B1- LVDS_B2+ LVDS_B2- LVDS_B3+ LVDS_B3-	B71 B72 B73 B74 B75 B76 B77 B78	LVDS Channel B differential pairs	O LVDS		
LVDS_B_CK+ LVDS_B_CK-	B81 B82	LVDS Channel B differential clock	O LVDS		
LVDS_VDD_EN	A77	LVDS panel power enable	O 3.3V	PD 10K	
LVDS_BKLT_EN	B79	LVDS panel backlight enable	O 3.3V	PD 10K	
LVDS_BKLT_CTRL	B83	LVDS panel backlight brightness control	O 3.3V	PD 100K	
LVDS_I2C_CK	A83	DDC lines used for flat panel detection and control.	I/O OD 3.3V	PU 2k2 3.3V	
LVDS_I2C_DAT	A84	DDC lines used for flat panel detection and control.	I/O OD 3.3V	PU 2k2 3.3V	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.4. eDP

Note: eDP is a build option, in place of LVDS and VGA

Signal	Pin #	Description	I/O	PU/PD	Comment
eDP_TX2+ eDP_TX2- eDP_TX1+ eDP_TX1- eDP_TX0+ eDP_TX0--	A71 A72 A73 A74 A75 A76	eDP differential pairs	O eDP		AC coupled off module
eDP_TX3+ eDP_TX3--	A81 A82	eDP differential pairs	O eDP		AC coupled off module
eDP_VDD_EN	A77	eDP power enable	O 3.3V	PD 10K	
eDP_BKLT_EN	B79	eDP backlight enable	O 3.3V	PD 10K	
eDP_BKLT_CTRL	B83	eDP backlight brightness control	O 3.3V	PD 100K	
eDP_AUX+	A83	eDP AUX+	I/O eDP		AC coupled off module
eDP_AUX-	A84	eDP AUX-	I/O eDP		AC coupled off module
eDP_HPD	A87	Detection of Hot Plug / Unplug and notification of the link layer	I 3.3V	PD 100K	PD 100K on this pin when eDP is supported

3.3.5. Gigabit Ethernet

Gigabit Ethernet	Pin #	Description	I/O	PU/PD	Comment
GBE0_MDI0+ GBE0_MDI0- GBE0_MDI1+ GBE0_MDI1- GBE0_MDI2+ GBE0_MDI2- GBE0_MDI3+ GBE0_MDI3-	A13 A11 A10 A9 A7 A6 A3 A2	Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0, 1, 2, 3. The MDI can operate in 1000, 100, and 10Mbit/sec modes. Some pairs are unused in some modes according to the following: **1000 100 10** MDI[0]+/- B1_DA+/- TX+/- TX+/- MDI[1]+/- B1_DB+/- RX+/- RX+/- MDI[2]+/- B1_DC+/- MDI[3]+/- B1_DD+/-	I/O Analog		Twisted pair signals for external transformer.
GBE0_ACT#	B2	Gigabit Ethernet Controller 0 activity indicator, active low.	O 3.3VSB		
GBE0_LINK#	A8	Gigabit Ethernet Controller 0 link indicator, active low.	O 3.3VSB		
GBE0_LINK100#	A4	Gigabit Ethernet Controller 0 100Mbit/sec link indicator, active low.	O 3.3VSB		
GBE0_LINK1000#	A5	Gigabit Ethernet Controller 0 1000Mbit/sec link indicator, active low.	O 3.3VSB		
GBE0_CTREF	A14	Reference voltage for Carrier Board Ethernet channel 1 and 2 magnetics center tap. The reference voltage is determined by the requirements of the Module PHY and may be as low as 0V and as high as 3.3V. The reference voltage output shall be current limited on the Module. In the case in which the reference is shorted to ground, the current shall be 250 mA or less.	GND min 3.3V max		NC pin

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.6. SATA

Signal	Pin #	Description	I/O	PU/PD	Comment
SATA0_TX+ SATA0_TX-	A16 A17	Serial ATA channel 0, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA0_RX+ SATA0_RX-	A19 A20	Serial ATA channel 0, Receive Input differential pair.	I SATA		AC coupled on Module
SATA1_TX+ SATA1_TX-	B16 B17	Serial ATA channel 1, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA1_RX+ SATA1_RX-	B19 B20	Serial ATA channel 1, Receive Input differential pair.	I SATA		AC coupled on Module
SATA2_TX+ SATA2_TX-	A22 A23	Serial ATA channel 2, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA2_RX+ SATA2_RX-	A25 A26	Serial ATA channel 2, Receive Input differential pair.	I SATA		AC coupled on Module
SATA3_TX+ SATA3_TX-	B22 B23	Serial ATA channel 3, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA3_RX+ SATA3_RX-	B25 B26	Serial ATA channel 3, Receive Input differential pair.	I SATA		AC coupled on Module
(S)ATA_ACT#	A28	ATA (parallel and serial) or SAS activity indicator, active low.	O 3.3V	PU 10K 3.3V	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.7. PCI Express

Signal	Pin #	Description	I/O	PU/PD	Comment
PCIE_TX0+ PCIE_TX0-	A68 A69	PCI Express channel 0, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX0+ PCIE_RX0-	B68 B69	PCI Express channel 0, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX1+ PCIE_TX1-	A64 A65	PCI Express channel 1, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX1+ PCIE_RX1-	B64 B65	PCI Express channel 1, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX2+ PCIE_TX2-	A61 A62	PCI Express channel 2, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX2+ PCIE_RX2-	B61 B62	PCI Express channel 2, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX3+ PCIE_TX3-	A58 A59	PCI Express channel 3, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX3+ PCIE_RX3-	B58 B59	PCI Express channel 3, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX4+ PCIE_TX4-	A55 A56	PCI Express channel 4, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX4+ PCIE_RX4-	B55 B56	PCI Express channel 4, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX5+ PCIE_TX5-	A52 A53	PCI Express channel 5, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX5+ PCIE_RX5-	B52 B53	PCI Express channel 5, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_CLK_REF+ PCIE_CLK_REF-	A88 A89	PCI Express Reference Clock output for all PCI Express and PCI Express Graphics Lanes.	O PCIE		

3.3.8. Express Card

Signal	Pin #	Description	I/O	PU/PD	Comment
EXCD0_CPPE# EXCD1_CPPE#	A49 B48	PCI ExpressCard: PCI Express capable card request	I 3.3V	PU 10k 3.3V	
EXCD0_PERST# EXCD1_PERST#	A48 B47	PCI ExpressCard: reset	O 3.3V		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.9. LPC Bus


Signal	Pin #	Description	I/O	PU/PD	Comment
LPC_AD[0:3]	B4-B7	LPC multiplexed address, command and data bus	I/O 3.3V	PU 10K 3.3V	
LPC_FRAME#	B3	LPC frame indicates the start of an LPC cycle	O 3.3V		
LPC_DRQ0# LPC_DRQ1#	B8 B9	LPC serial DMA request	I 3.3V		
LPC_SERIRQ	A50	LPC serial interrupt	I/O OD 3.3V	PU 8k2 3.3V	
LPC_CLK	B10	LPC clock output –33MHz nominal	O 3.3V		

3.3.10. USB

Signal	Pin #	Description	I/O	PU/PD	Comment
USB0+ USB0-	A46 A45	USB differential data pairs for Port 0	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB1+ USB1-	B46 B45	USB differential data pairs for Port 1	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB2+ USB2-	A43 A42	USB differential data pairs for Port 1	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB3+ USB3-	B43 B42	USB differential data pairs for Port 2	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB4+ USB4-	A40 A39	USB differential data pairs for Port 3	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB5+ USB5-	B40 B39	USB differential data pairs for Port 4	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB6+ USB6-	A37 A36	USB differential data pairs for Port 5	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB7+ USB7-	B37 B36	USB differential data pairs for Port 6	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB_0_1_OC#	B44	USB over-current sense, USB ports 0 and 1. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_2_3_OC#	A44	USB over-current sense, USB ports 2 and 3. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low. .	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_4_5_OC#	B38	USB over-current sense, USB ports 4 and 5. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_6_7_OC#	A38	USB over-current sense, USB ports 6 and 7. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.11. USB Root Segmentation

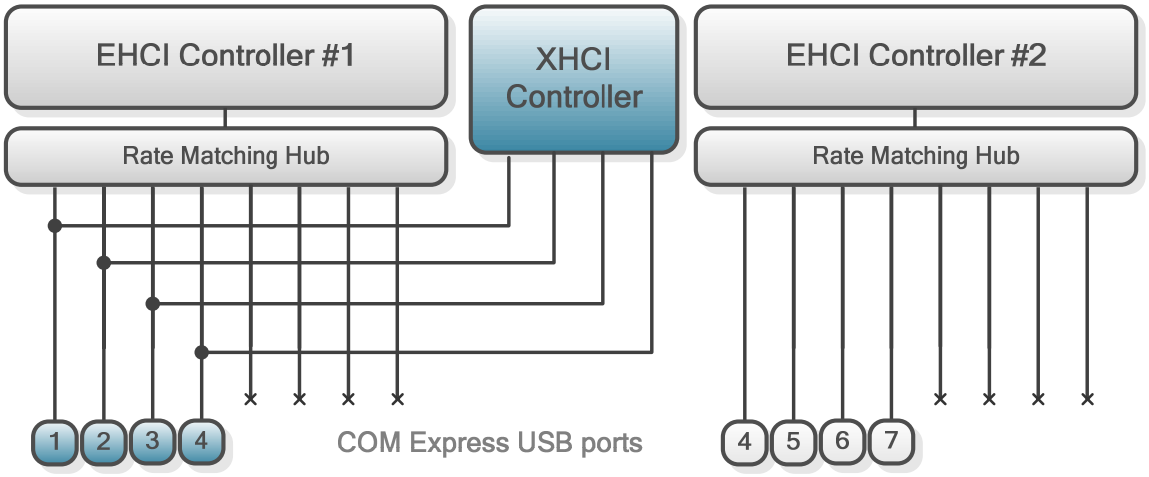

3.3.12. SPI (BIOS only)

Signal	Pin #	Description	I/O	PU/PD	Comment
SPI_CS#	B97	Chip select for Carrier Board SPI BIOS Flash.	O 3.3VSB	PU 10K 3.3VSB	
SPI_MISO	A92	Data in to module from carrier board SPI BIOS flash.	I 3.3VSB		
SPI_MOSI	A95	Data out from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_CLK	A94	Clock from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_POWER	A91	Power supply for Carrier Board SPI – sourced from Module – nominally 3.3V. The Module shall provide a minimum of 100mA on SPI_POWER. Carriers shall use less than 100mA of SPI_POWER. SPI_POWER shall only be used to power SPI devices on the Carrier	O P 3.3VSB		
BIOS_DIS0#	A34	Selection strap to determine the BIOS boot device.	I	PU 10K 3.3VSB	Carrier shall pull to GND or leave not-connected.
BIOS_DIS1#	B88	Selection strap to determine the BIOS boot device.	I	PU 10K 3.3VSB	Carrier shall pull to GND or leave not-connected

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.13. Miscellaneous

Signal	Pin #	Description	I/O	PU/PD	Comment
SPKR	B32	Output for audio enunciator, the “speaker” in PC-AT systems	O 3.3V		
WDT	B27	Output indicating that a watchdog time-out event has occurred.	O 3.3V		
THRM#	B35	Input from off-module temp sensor indicating an over-temp situation.	I 3.3VSB	PU 10K 3.3VSB	
THRMTRIP#	A35	Active low output indicating that the CPU has entered thermal shutdown.	O 3.3V	PU 330ohm 3.3V	
FAN_PWMOUT	B101	Fan speed control. Uses the Pulse Width Modulation (PWM) technique to control the fan’s RPM.	O OD 3.3V	PU 2.2K 3.3V	There shall be PD on carrier board
FAN_TACHIN	B102	Fan tachometer input for a fan with a two pulse output.	I OD 3.3V	PU 10k 3.3V	
TPM_PP	A96	Trusted Platform Module (TPM) Physical Presence pin. Active high. TPM chip has an internal pull down. This signal is used to indicate Physical Presence to the TPM.	I 3.3V	PD 100k 3.3V	PD only when TPM on module

3.3.14. SMBus

Signal	Pin #	Description	I/O	PU/PD	Comment
SMB_CK	B13	System Management Bus bidirectional clock line. Power sourced through 5V standby rail and main power rails.	I/O OD 3.3VSB	PU 8.2K 3.3VSB	
SMB_DAT#	B14	System Management Bus bidirectional data line. Power sourced through 5V standby rail and main power rails.	I/O OD 3.3VSB	PU 8.2K 3.3VSB	
SMB_ALERT#	B15	System Management Bus Alert – active low input can be used to generate an SMI# (System Management Interrupt) or to wake the system. Power sourced through 5V standby rail and main power rails.	I 3.3VSB	PU 10k 3.3VSB	

3.3.15. I2C Bus

Signal	Pin #	Description	I/O	PU/PD	Comment
I2C_CK	B33	General purpose I²C port clock output/input	I/O OD 3.3VSB	PU 2k2 3.3VSB	Source SEMA BMC
I2C_DAT	B34	General purpose I²C port data I/O line	I/O OD 3.3VSB	PU 2k2 3.3VSB	Source SEMA BMC

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.16. General Purpose I/O (GPIO)

Signal	Pin #	Description	I/O	PU/PD	Comment
GPO[0]	A93	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[1]	B54	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[2]	B57	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[3]	B63	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPI[0]	A54	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[1]	A63	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[2]	A67	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[3]	A85	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	

3.3.17. Serial Interface Signals

Signal	Pin #	Description	I/O	PU/PD	Comment
SER0_TX	A98	General purpose serial port transmitter (TTL level output)	O CMOS 5V		Power rail tolerance 5V, 12V There shall be PD on carrier board
SER0_RX	A99	General purpose serial port receiver (TTL level input)	I CMOS 5V		Power rail tolerance 5V, 12V
SER1_TX	A101	General purpose serial port transmitter (TTL level output)	O CMOS 5V		Power rail tolerance 5V, 12V There shall be PD on carrier board
SER1_RX	A102	General purpose serial port receiver (TTL level input)	I CMOS 5V		Power rail tolerance 5V, 12V

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.18. Power and System Management

Signal	Pin #	Description	I/O	PU/PD	Comment
PWRBTN#	B12	Power button to bring system out of S5 (soft off), active on falling edge.	I 3.3VSB	PU 10k 3.3VSB	
SYS_RESET#	B49	Reset button input. Active low request for module to reset and reboot. May be falling edge sensitive. For situations when SYS_RESET# is not able to reestablish control of the system, PWR_OK or a power cycle may be used.	I 3.3V	PU 10k 3.3V	
CB_RESET#	B50	Reset output from module to Carrier Board. Active low. Issued by module chipset and may result from a low SYS_RESET# input, a low PWR_OK input, a VCC_12V power input that falls below the minimum specification, a watchdog timeout, or may be initiated by the module software.	O 3.3V	PU 1K 3.3V	
PWR_OK	B24	Power OK from main power supply. A high value indicates that the power is good. This signal can be used to hold off Module startup to allow carrier based FPGAs or other configurable devices time to be programmed.	I 3.3V	PU 100k 3.3VSB	Should have weak pull up
SUS_STAT#	B18	Indicates imminent suspend operation; used to notify LPC devices.	O 3.3VSB		
SUS_S3#	A15	Indicates system is in Suspend to RAM state. Active-low output. An inverted copy of SUS_S3# on the carrier board (also known as “PS_ON”) may be used to enable the non-standby power on a typical ATX power supply.	O 3.3VSB		
SUS_S4#	A18	Indicates system is in Suspend to Disk state. Active low output.	O 3.3VSB		
SUS_S5#	A24	Indicates system is in Soft Off state.	O 3.3VSB		
WAKE0#	B66	PCI Express wake up signal.	I 3.3VSB	PU 10k 3.3VSB	
WAKE1#	B67	General purpose wake up signal. May be used to implement wake-up on PS/2 keyboard or mouse activity.	I 3.3VSB	PU 10k 3.3VSB	
BATLOW#	A27	Battery low input. This signal may be driven low by external circuitry to signal that the system battery is low, or may be used to signal some other external power-management event.	I 3.3VSB	PU 8.2k 3.3VSB	
LID#	A103	LID button. Low active signal used by the ACPI operating system for a LID switch.	I OD 3.3VSB	PU 10k 3.3VSB	Emulated on GPIO (BIOS)
SLEEP#	B103	Sleep button. Low active signal used by the ACPI operating system to bring the system to sleep state or to wake it up again.	I OD 3.3VSB	PU 10K 3.3VSB	Emulated on GPIO (BIOS)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.19. Power and Ground

Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	A104-A109 B104-B109	Primary power input: +12V nominal (wide range 5 ~ 20V). All available VCC_12V pins on the connector(s) shall be used.	P		8.5~20 V
VCC_5V_SBY	B84-B87	Standby power input: +5.0V nominal. See section 7 “Electrical Specifications“ for allowable input range. If VCC5_SBY is used, all available VCC_5V_SBY pins on the connector(s) shall be used. Only used for standby and suspend functions. May be left unconnected if these functions are not used in the system design.	P		5Vsb ±5%
VCC_RTC	A47	Real-time clock circuit-power input. Nominally +3.0V.	P		
GND	A1, A11, A21, A31, A41, A51, A57, A60, A66, A70, A80, A90, A100, A110, B1, B11, B21, B31, B41, B51, B60, B70, B80, B90, B100, B110	Ground - DC power and signal and AC signal return path.	P		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4. CD Signal Descriptions

3.4.1. USB 3.0 Extension

Signal	Pin #	Description	I/O	PU/PD	Comment
USB_SSRX0- USB_SSRX0+	C3 C4	Additional Receive signal differential pairs for the SuperSpeed USB data path on USB0	I PCIE		AC coupled off module
USB_SSTX0- USB_SSTX0+	D3 D4	Additional Transmit signal differential pairs for the SuperSpeed USB data path on USB0	O PCIE		AC coupled on module
USB_SSRX1- USB_SSRX1+	C6 C7	Additional Receive signal differential pairs for the SuperSpeed USB data path on USB1	I PCIE		AC coupled off module
USB_SSTX1- USB_SSTX1+	D6 D7	Additional Transmit signal differential pairs for the SuperSpeed USB data path on USB1	O PCIE		AC coupled on module
USB_SSRX2- USB_SSRX2+	C9 C10	Additional Receive signal differential pairs for the SuperSpeed USB data path on USB2	I PCIE		AC coupled off module
USB_SSTX2- USB_SSTX2+	D9 D10	Additional Transmit signal differential pairs for the SuperSpeed USB data path on USB2	O PCIE		AC coupled on module
USB_SSRX3- USB_SSRX3+	C12 C13	Additional Receive signal differential pairs for the SuperSpeed USB data path on USB3	I PCIE		AC coupled off module
USB_SSTX3- USB_SSTX3+	D12 D13	Additional Transmit signal differential pairs for the SuperSpeed USB data path on USB3	O PCIE		AC coupled on module

3.4.2. PCI Express x1

Signal	Pin #	Description	I/O	PU/PD	Comment
PCIE_TX6+ PCIE_TX6-	D19 D20	PCI Express channel 6, Transmit Output differential pair.	O PCIE		AC coupled on module
PCIE_RX6+ PCIE_RX6-	C19 C20	PCI Express channel 6, Receive Input differential pair.	I PCIE		AC coupled off module
PCIE_TX7+ PCIE_TX7-	D22 D23	PCI Express channel 7, Transmit Output differential pair.	O PCIE		Support by build option in place of GbE
PCIE_RX7+ PCIE_RX7-	C22 C23	PCI Express channel 7, Receive Input differential pair.	I PCIE		Support by build option in place of GbE

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4.3. DDI Channels

DDI 1

Signal	Pin #	Description	I/O	PU/PD	Comment
DDI1_PAIR0+ DDI1_PAIR0- DDI1_PAIR1+ DDI1_PAIR1- DDI1_PAIR2+ DDI1_PAIR2- DDI1_PAIR3+ DDI1_PAIR3- DDI1_PAIR4+ DDI1_PAIR4- DDI1_PAIR5+ DDI1_PAIR5- DDI1_PAIR6+ DDI1_PAIR6-	D26 D27 D29 D30 D32 D33 D36 D37 C25 C26 C29 C30 C15 C16	Digital Display Interface1 differential pairs	O PCIE		Pair 4 to Pair 6 Not supported
DDI1_HPD	C24	Digital Display Interface Hot-Plug Detect	I 3.3V	PD 100K	
DDI1_CTRLCLK_AUX+	D15	IF DDI1_DDC_AUX_SEL is floating	I/O PCIE	PD 100K	DP1_AUX+
		IF DDI1_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI1_CTRLCLK PD 100K & PU 2.2k to 3.3V when DDC_AUX_SEL is high
DDI1_CTRLDATA_AUX-	D16	IF DDI1_DDC_AUX_SEL is floating	I/O PCIE	PU 100K 3.3V	DP1_AUX-
		IF DDI1_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI1_CTRLDATA PU 100K & 2.2K 3.3V when DDC_AUX_SEL is high
DDI1_DDC_AUX_SEL	D34	Selects the function of DDI1_CTRLCLK_AUX+ and DDI1_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the Module. If this input is floating the AUX pair is used for the DP AUX+/- signals. If pulled-high the AUX pair contains the CRTLCLK and CTRLDATA signals.	I 3.3V	PD 1M	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

DDI 2

Signal	Pin #	Description	I/O	PU/PD	Comment
DDI2_PAIR0+ DDI2_PAIR0- DDI2_PAIR1+ DDI2_PAIR1- DDI2_PAIR2+ DDI2_PAIR2- DDI2_PAIR3+ DDI2_PAIR3-	D39 D40 D42 D43 D46 D47 D49 D50	Digital Display Interface2 differential pairs	O PCIE		
DDI2_HPD	D44		I 3.3V	PD 100K	
DDI2_CTRLCLK_AUX+	C32	IF DDI2_DDC_AUX_SEL is floating	I/O PCIE	PD 100K	DP2_AUX+
		IF DDI2_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI2_CTRLCLK PD 100K & PU 2.2k to 3.3V when DDC_AUX_SEL is high
DDI2_CTRLDATA_AUX-	C33	IF DDI2_DDC_AUX_SEL is floating	I/O PCIE	PU 100K 3.3V	DP2_AUX-
		IF DDI2_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI2_CTRLDATA PU 100K & 3.3V when DDC_AUX_SEL is high
DDI2_DDC_AUX_SEL	C34	Selects the function of DDI2_CTRLCLK_AUX+ and DDI2_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the Module. If this input is floating the AUX pair is used for the DP AUX+/- signals. If pulled-high the AUX pair contains the CRTLCLK and CTRLDATA signals.	I 3.3V	PD 1M	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

DDI 3

Signal	Pin #	Description	I/O	PU/PD	Comment
DDI3_PAIR0+ DDI3_PAIR0- DDI3_PAIR1+ DDI3_PAIR1- DDI3_PAIR2+ DDI3_PAIR2- DDI3_PAIR3+ DDI3_PAIR3-	C39 C40 C42 C43 C46 C47 C49 C50	Digital Display Interface3 differential pairs	O PCIE		
DDI3_HPD	C44		I 3.3V	PD 100K	
DDI3_CTRLCLK_AUX+	C36	IF DDI3_DDC_AUX_SEL is floating	I/O PCIE	PD 100K	DP3_AUX+
		IF DDI3_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI3_CTRLCLK PU PD 100K & PU 2.2k to 3.3V when DDC_AUX_SEL is high
DDI3_CTRLDATA_AUX-	C37	IF DDI3_DDC_AUX_SEL is floating	I/O PCIE	PU 100K 3.3V	DP3_AUX-
		IF DDI3_DDC_AUX_SEL pulled high	I/O OD 3.3V		HDMI3_CTRLDATA PU 100K & 2.2K 3.3V when DDC_AUX_SEL is high
DDI3_DDC_AUX_SEL	C38	Selects the function of DDI3_CTRLCLK_AUX+ and DDI3_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the Module. If this input is floating the AUX pair is used for the DP AUX+/- signals. If pulled-high the AUX pair contains the CRTLCLK and CTRLDATA signals.	I 3.3V	PD 1M	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4.4. DDI to DP/HDMI Mapping

Pin #	Pin Name	DP	HDMI \ DVI
D26	DDI1_PAIR0+	DP1_LANE0+	TMDS1_DATA2+
D27	DDI1_PAIR0-	DP1_LANE0-	TMDS1_DATA2-
D29	DDI1_PAIR1+	DP1_LANE1+	TMDS1_DATA1+
D30	DDI1_PAIR1-	DP1_LANE1-	TMDS1_DATA1-
D32	DDI1_PAIR2+	DP1_LANE2+	TMDS1_DATA0+
D33	DDI1_PAIR2-	DP1_LANE2-	TMDS1_DATA0-
D36	DDI1_PAIR3+	DP1_LANE3+	TMDS1_CLK+
D37	DDI1_PAIR3-	DP1_LANE3-	TMDS1_CLK-
C25	DDI1_PAIR4+		
C26	DDI1_PAIR4-		
C29	DDI1_PAIR5+		
C30	DDI1_PAIR5-		
C15	DDI1_PAIR6+		
C16	DDI1_PAIR6-		
C24	DDI1_HPD	DP1_HPD	HDMI1_HPD
D15	DDI1_CTRLCLK_AUX+	DP1_AUX+	HMDI1_CTRLCLK
D16	DDI1_CTRLDATA_AUX-	DP1_AUX-	HMDI1_CTRLDATA
D34	DDI1_DDC_AUX_SEL		
D39	DDI2_PAIR0+	DP2_LANE0+	TMDS2_DATA2+
D40	DDI2_PAIR0-	DP2_LANE0-	TMDS2_DATA2-
D42	DDI2_PAIR1+	DP2_LANE1+	TMDS2_DATA1+
D43	DDI2_PAIR1-	DP2_LANE1-	TMDS2_DATA1-
D46	DDI2_PAIR2+	DP2_LANE2+	TMDS2_DATA0+
D47	DDI2_PAIR2-	DP2_LANE2-	TMDS2_DATA0-
D49	DDI2_PAIR3+	DP2_LANE3+	TMDS2_CLK+
D50	DDI2_PAIR3-	DP2_LANE3-	TMDS2_CLK-
D44	DDI2_HPD	DP2_HPD	HDMI2_HPD
C32	DDI2_CTRLCLK_AUX+	DP2_AUX+	HDMI2_CTRLCLK
C33	DDI2_CTRLDATA_AUX-	DP2_AUX-	HDMI2_CTRLDATA
C34	DDI2_DDC_AUX_SEL		
C39	DDI3_PAIR0+	DP3_LANE0+	TMDS3_DATA2+
C40	DDI3_PAIR0-	DP3_LANE0-	TMDS3_DATA2-
C42	DDI3_PAIR1+	DP3_LANE1+	TMDS3_DATA1+
C43	DDI3_PAIR1-	DP3_LANE1-	TMDS3_DATA1-
C46	DDI3_PAIR2+	DP3_LANE2+	TMDS3_DATA0+
C47	DDI3_PAIR2-	DP3_LANE2-	TMDS3_DATA0-
C49	DDI3_PAIR3+	DP3_LANE3+	TMDS3_CLK+
C50	DDI3_PAIR3-	DP3_LANE3-	TMDS3_CLK-
C44	DDI3_HPD	DP3_HPD	HDMI3_HPD
C36	DDI3_CTRLCLK_AUX+	DP3_AUX+	HDMI3_CTRLCLK
C37	DDI3_CTRLDATA_AUX-	DP3_AUX-	HDMI3_CTRLDATA
C38	DDI3_DDC_AUX_SEL		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4.5. PCI Express Graphics x16 (PEG)

Signal	Pin #	Description	I/O	PU/PD	Comment
PEG_RX0+	C52	PCI Express Graphics transmit differential pairs.	I PCIE		AC couple off module
PEG_RX0-	C53				
PEG_RX1+	C55				
PEG_RX1-	C56				
PEG_RX2+	C58				
PEG_RX2-	C59				
PEG_RX3+	C61				
PEG_RX3-	C62				
PEG_RX4+	C65				
PEG_RX4-	C66				
PEG_RX5+	C68				
PEG_RX5-	C69				
PEG_RX6+	C71				
PEG_RX6-	C72				
PEG_RX7+	C74				
PEG_RX7-	C75				
PEG_RX8+	C78				
PEG_RX8-	C79				
PEG_RX9+	C81				
PEG_RX9-	C82				
PEG_RX10+	C85				
PEG_RX10-	C86				
PEG_RX11+	C88				
PEG_RX11-	C89				
PEG_RX12+	C91				
PEG_RX12-	C92				
PEG_RX13+	C94				
PEG_RX13-	C95				
PEG_RX14+	C98				
PEG_RX14-	C99				
PEG_RX15+	C101				
PEG_RX15	C102				
PEG_TX0+	D52	PCI Express Graphics receive differential pairs.	O PCIE		AC couple on module
PEG_TX0-	D53				
PEG_TX1+	D55				
PEG_TX1-	D56				
PEG_TX2+	D58				
PEG_TX2-	D59				
PEG_TX3+	D61				
PEG_TX3-	D62				
PEG_TX4+	D65				
PEG_TX4-	D66				
PEG_TX5+	D68				
PEG_TX5-	D69				
PEG_TX6+	D71				
PEG_TX6-	D72				
PEG_TX7+	D74				
PEG_TX7-	D75				
PEG_TX8+	D78				
PEG_TX8-	D79				
PEG_TX9+	D81				
PEG_TX9-	D82				
PEG_TX10+	D85				
PEG_TX10-	D86				
PEG_TX11+	D88				
PEG_TX11-	D89				
PEG_TX12+	D91				
PEG_TX12-	D92				
PEG_TX13+	D94				
PEG_TX13-	D95				
PEG_TX14+	D98				
PEG_TX14-	D99				
PEG_TX15+	D101				
PEG_TX15-	D102				
PEG_LANE_RV#	D54	PCI Express Graphics lane reversal input strap. Pull low on the Carrier board to reverse lane order.	I 3.3V	PU 10K 3.3V	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4.6. Module Type Definition

Signal	Pin #	Description	I/O	Comment
TYPE0# TYPE1# TYPE2#	C54 C57 D57	The TYPE pins indicate to the Carrier Board the Pin-out Type that is implemented on the module. The pins are tied on the module to either ground (GND) or are no-connects (NC). For Pinout Type 1, these pins are don't care (X). TYPE2# TYPE1# TYPE0# X X X Pinout Type 1 NC NC NC Pinout Type 2 NC NC GND Pinout Type 3 (no IDE) NC GND NC Pinout Type 4 (no PCI) NC GND GND Pinout Type 5 (no IDE, no PCI) **GND NC NC Pinout Type 6 (no IDE, no PCI)** The Carrier Board should implement combinatorial logic that monitors the module TYPE pins and keeps power off (e.g deactivates the ATX_ON signal for an ATX power supply) if an incompatible module pin-out type is detected. The Carrier Board logic may also implement a fault indicator such as an LED.		Type 6

3.4.7. Power and Ground


Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	C104-C109 D104-D109	Primary power input: +12V nominal (wide range 5 ~ 20V). All available VCC_12V pins on the connector(s) shall be used	P		8.5 ~ 20V
GND	C1, C2, C5, C8, C11, C14, C21, C31, C41, C51, C60, C70, C73, C76, C80, C84, C87, C90, C93, C96, C100, C103, C110, D1, D2, D5, D8, D11, D14, D21, D31, D41, D51, D60, D67, D70, D73, D76, D80, D84, D87, D90, D93, D96, D100, D103, D110	Ground - DC power and signal and AC signal return path. All available GND connector pins shall be used and tied to carrier board GND plane.	P		

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


4. Module Interfaces and Configuration

This chapter describes connectors and pinouts, LEDs and switches that are used on the module but are not included in the standard PICMG specification.

4.1. Connector, Switch and LED Locations

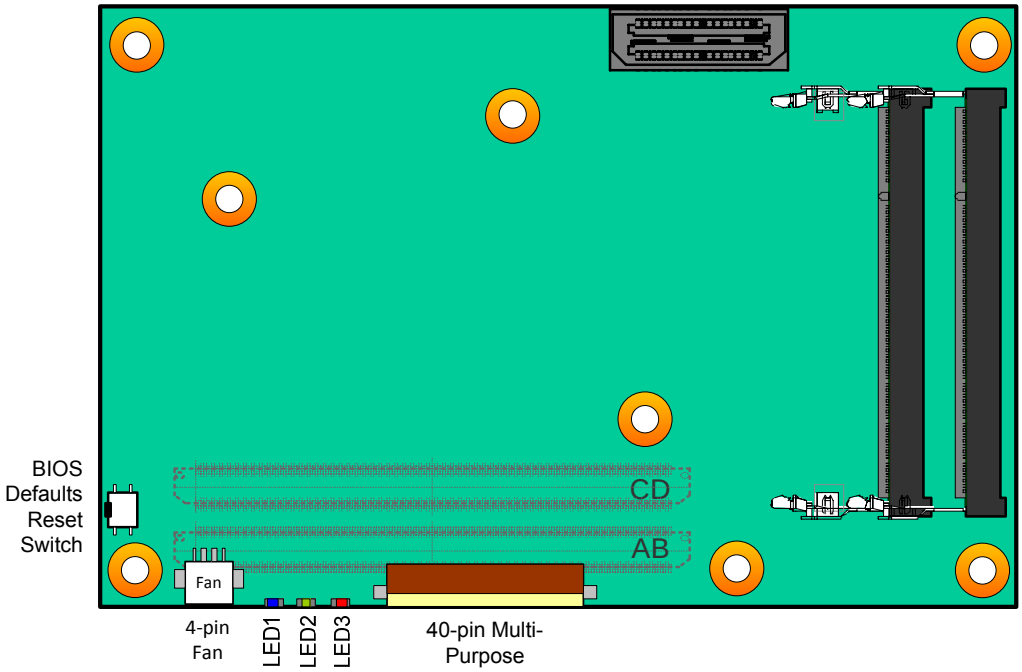

4.1.1. Express-BL and the DB40 Module connected

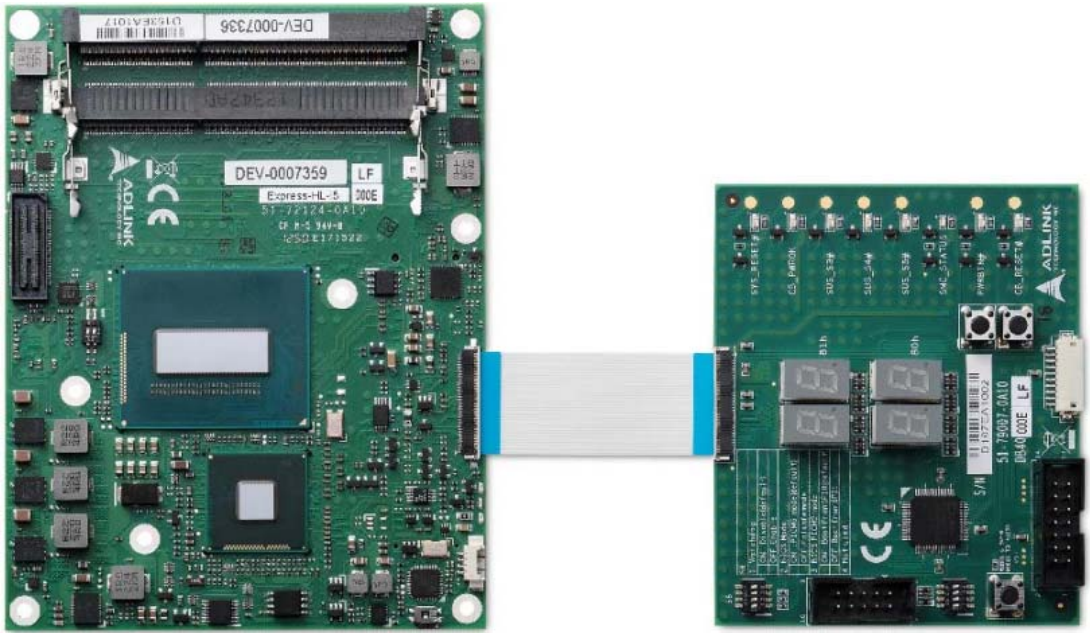


For illustration purposes only.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2. 40-pin Multipurpose Connector

- FPC Connector type: FCI 59GF Flex 10042867
- Pin Orientation:



1 40

Pin Definitions (on COMe module)

Pin	Interface	Signal	Remark
40	SPI Program interface	VCC_SPI_IN	SPI Power Input from flash tool to module. HW need add MOS FET to switch SPI power for SPI ROM
39		GND	
38		SPI_BIOS_CS0#	
37		SPI_BIOS_CS1#	
36		SPI_BIOS_MISO	
35		SPI_BIOS_MOSI	
34		SPI_BIOS_CLK	
33	LPC Bus	3V3_LPC	System power 3.3V provide from COM module
32		GND	
31		BIOS_DIS0	
30		RST#	
29		CLK33_LPC	
28		LPC_FRAME#	
27		LPC_AD3	
26		LPC_AD2	
25		LPC_AD1	always power 3.3V provide from COM module
24		LPC_AD0	
23	BMC Program interface	3.3V_BMC	always power 3.3V provide from COM module
22		3.3V_BMC	always power 3.3V provide from COM module
21		GND	

Pin	Interface	Signal	Remark
20	BMC Program interface (continued)	TXD6	
19		RXD6	
18		FUMD0	
17		RESET_IN#	
16		DATA	
15		CLK	
14		OCD0A	Include a jumper to connect OCD0A via 1K0 pull-up to 3.3V_BMC
13		OCD0B	Include a jumper to connect OCD0A via 1K0 pull-up to 3.3V_BMC
12	Test points	PWRBTN#	
11		SYS_RESET#	
10		CB_RESET#	
9		CB_PWROK	
8		SUS_S3#	
7		SUS_S4#	
6		SUS_S5#	
5	BMC Debug signals	POSTWDT_DIS#	Connect to Jumper for Debug
4		SEL_BIOS	Connect to Jumper for Debug
3		BIOS_MODE	Connect to Jumper for Debug
2		BMC_STATUS	
1	Reserved		

Note: The pin description on the Debug Module is the inverse of that on the COM Express module.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3. Status LEDs

To facilitate easier maintenance, status LED's are mounted on the board.



LED1 LED2 LED3

LED Descriptions:

Name	Color	Connection	Function
LED1	Blue	BMC output	Power Sequence Status Code (BMC) Power Changes, RESET (see 5.1.4 Exception Codes below)
LED2	Green	Power Source 3Vcc	S0 LED ON S3/S4/S5 LED OFF ECO mode LED OFF
LED3	Red	BMC output and same signal as WDT (B27) on BtB connector	Module power up LED OFF Watchdog counting LED OFF Watchdog timed out LED ON Watchdog RESET LED ON Rebooted after WD RESET LED ON Rebooted after PWRBTN LED ON Rebooted after RESET BTN LED OFF **Note:** only a RESET not initiated by the BMC can clear the WD LED (user action)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.4. Fan Connector

- Connector Type: JVE 24W1125A-04M00
- Pin Orientation:



1 2 3 4

Pin Definitions:

Pin	Signal
1	FAN_PWMOUT
2	FAN_TACHIN
3	Ground
4	5V

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.5. BIOS Setup Defaults Reset Button



To perform a hardware reset of BIOS default settings, perform the following steps:

1. Shut down the system.
2. Press the BIOS Setup Defaults Reset Button continuously and boot up the system. You can release the button when the BIOS prompt screen appears





3. The BIOS prompt screen will display a confirmation that BIOS defaults have been reset and request that you reboot the system.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.6. Express-BL Switch Settings

4.6.1. Switch Locations

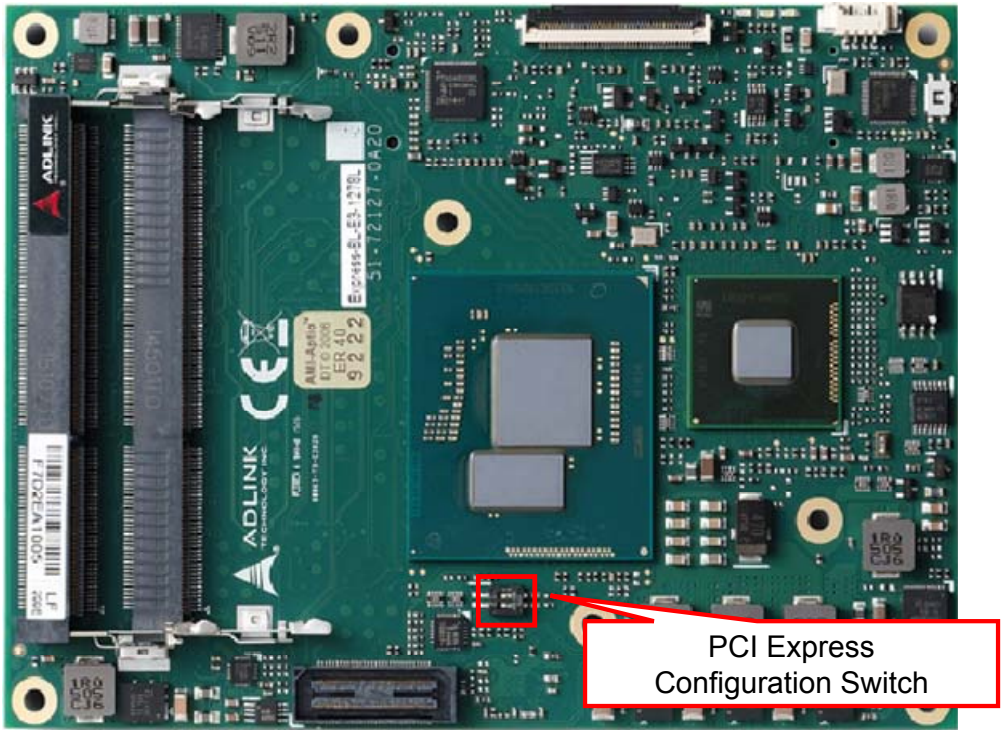

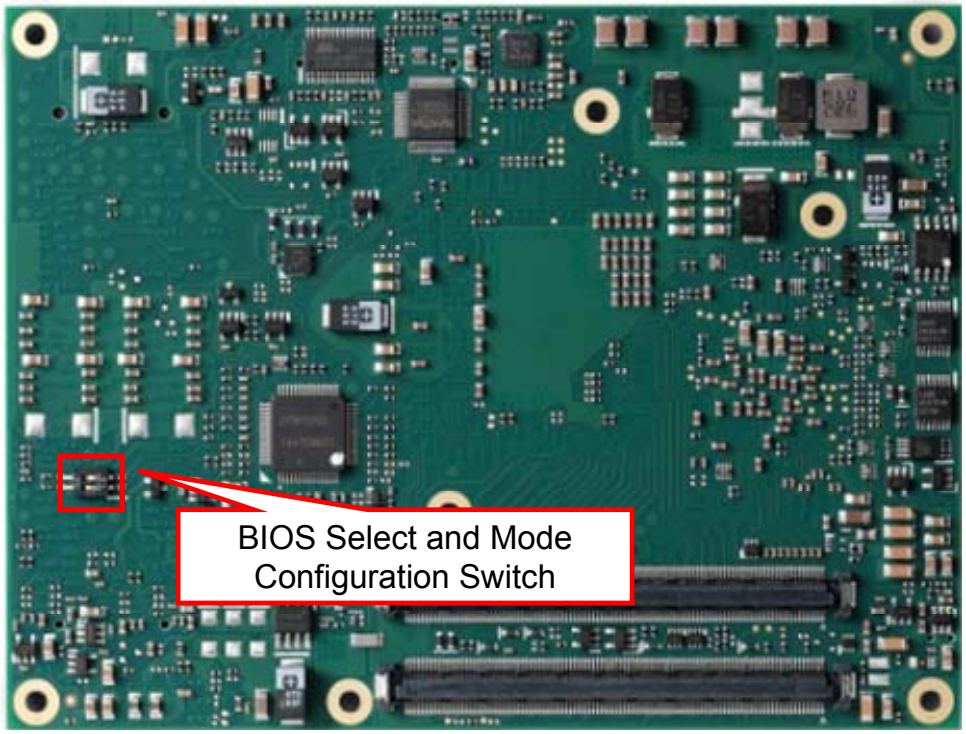

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.6.2. PCI Express Configuration Switch

The PCI Express Configuration Switch allows you to configure the PCI Express x16 lanes from the CPU as 1 PCIe x16, 2 PCIe x8, or 1 PCIe x8 + 2 PCIe x4.

Mode	Pin 1	Pin 2
1x PCIe x16 (default)	Off	Off
2x PCIe x8	On	Off
1x PCIe x8 + 2x PCIe x4	On	On
Reserved	Off	On

4.6.3. BIOS Select and Mode Configuration Switch

The module has two BIOS chips and BIOS operation can be configured to "PICMG" and dual-BIOS "Failsafe" modes using the BIOS Select and Mode Configuration Switch, Pin 2.

Setting the module to PICMG mode will configure the BIOS chips on the module as SPI0 and SPI1. In PICMG mode, a BIOS chip cannot be placed in the SPI0 slot on the carrier.

In dual-BIOS Failsafe mode, both BIOS chips on the module are configured as SPI1. Only one of the two is connected to the SPI bus at any given time. In case of failure of the primary SPI1 BIOS, the system will reboot and switch to the secondary SPI1 BIOS on the module. In Failsafe mode, the SPI0 BIOS socket on the carrier can be populated.

In either mode, BIOS Select and Mode Configuration Switch, Pin 1 is used to select whether to boot from SPI0 or SPI1.

Mode	Pin 1	Pin 2
Boot from SPI0 (default)	On	—
Boot from SPI1	Off	—
Set BIOS to PICMG mode	—	On
Set BIOS to Failsafe BIOS mode (default)	—	Off

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.7. PCIe x16-to-two-x8 Adapter Card

The Express-BL can be used with the PCIe x16-to-two-x8 Adapter Card on the Express-BASE6 Reference Carrier to support bifurbication of the CPU's PEG interface (PCIe x16). The card reroutes the PCIe x16 to two x8 and allows testing of two independent PCIe add-on cards with x8/x4/x2/x1 width. To use the card, refer to 4.6.2 PCI Express Configuration Switch and set the switch to "2x PCIe x8".



PCIex16-to-two-x8 Adapter Card
(Model: P16TO28, Part No.: 91-79301-0010)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5. Smart Embedded Management Agent (SEMA)

The onboard microcontroller (BMC) implements power sequencing and Smart Embedded Management Agent (SEMA) functionality.

The microcontroller communicates via the System Management Bus with the CPU/chipset.

The following functions are implemented

- Total operating hours counter counts the number of hours the module has been run in minutes.
- On-time minutes counter counts the seconds since last system start.
- Temperature monitoring of CPU and board temperature minimum and maximum temperature values of CPU and board are stored in flash.
- Power cycles counter
- Boot counter counts the number of boot attempts.
- Watchdog Timer (Type-II) Set, Reset, Disable Watchdog Timer. Features auto-reload at power-up.
- System Restart Cause Power loss, BIOS Fail, Watchdog, Internal Reset, External Reset
- Fail-safe BIOS support In case of a boot failure, hardware signals tells external logic to boot from fail-safe BIOS.
- Flash area 1kB Flash area for customer data
- 128 Bytes Protected Flash area Keys, IDs, etc. can be stored in a write- and clear-protectable region.
- Board Identify Vendor, Board, Serial number, Production Date
- Main-current & voltage monitors drawn current and main voltages

For a detailed description of SEMA features and functionality, please refer to the **SEMA Technical Manual** and **SEMA Software Manual**, downloadable at: http://www.adlinktech.com/PD/web/PD_detail.php?cKind=&pid=1274

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1. Board Specific SEMA Functions

5.1.1. Voltages

The BMC of the Express-BL implements a voltage monitor and samples several onboard voltages. The voltages can be read by calling the SEMA function “Get Voltages”. The function returns a 16-bit value divided into high-byte (MSB) and low-byte (LSB).

ADC Channel	Voltage Name	Voltage Formula [V]
0	Not used	
1	+V3.3V	(MSB<<8 + LSB) x 1.1 x 3.3 / 1024
2	+V1.05S	(MSB<<8 + LSB) x 3.3 / 1024
3	+V3.3V	(MSB<<8 + LSB) x 1.1 x 3.3 / 1024
4	+VMEM	(MSB<<8 + LSB) x 3.3 / 1024
5	+V5.0V	(MSB<<8 + LSB) x 1.833 x 3.3 / 1024
6	+VIN	(MSB<<8 + LSB) x 6.000 x 3.3 / 1024
7	(MAIN CURRENT)	Use Main Current Function

5.1.2. Main Current

The BMC of the Express-BL implements a current monitor. The current can be read by calling the SEMA function “Get Main Current”. The function returns four 16-bit values divided in high-byte (MSB) and low-byte (LSB). These 4 values represent the last 4 currents drawn by the board. The values are sampled every 250ms. The order of the 4 values is NOT in chronological order. Access by the BMC may increase the drawn current of the whole system. In this case, there are still 3 samples not influenced by the read access.

Main Current = (MSB_n<<8 + LSB_n) x 8.06mA

5.1.3. BMC Status

This register shows the status of BMC controlled signals on the Express-BL.

Status Bit	Signal
0	WDT_OUT
1	LVDS_VDDEN
2	LVDS_BKLTEN
3	BIOS_MODE
4	POSTWDT_DISn
5	SEL_BIOS
6	BIOS_DIS0n
7	BIOS_DIS1n

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.4. Exception Codes

In case of an error, the BMC drives a blinking code on the blue Status LED (LED1). The same error code is also reported by the BMC Flags register. The Exception Code is not stored in the Flash Storage and is cleared when the power is removed. Therefore, a “Clear Exception Code” command is not needed or supported.

Exception Code	Error Message
0	NOERROR
2	NO_SUSCLK
3	NO_SLP_S5
4	NO_SLP_S4
5	NO_SLP_S3
6	BIOS_FAIL
7	RESET_FAIL
8	POWER_FAIL
9	LOW_VIN
10	
11	V3.3V
12	V1P05S
13	+V3.3V
14	+VMEM
15	+V5.0V
16	
18	CRITICAL_TEMP
19	NO_CB_PWROK
20	NO_SYS_GD
21	NO_VCORE_GD
22	NO_XDP_PIN47
23	WRONG_MEMORY_TYPE

5.1.5. BMC Flags

The BMC Flags register returns the last detected Exception Code since power-up and shows the BIOS in use and the power mode.

Bit	Description
[0 ~ 4]	Exception Code
[6]	0 = AT mode 1 = ATX mode
[7]	0 = Standard BIOS 1 = Fail-safe BIOS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6. System Resources

6.1. System Memory Map

Address Range (decimal)	Address Range (hex)	Size	Description
(4GB-2MB)	FFE00000 – FFFFFFFF	2 MB	High BIOS Area
(4GB-18MB) – (4GB-17MB-1)	FEE00000 – FEEFFFFF	1 MB	MSI Interrupts
(4GB-20MB) – (4GB-19MB-1)	FEC00000 – FECFFFFF	1 MB	APIC Configuration Space
15MB – 16MB	F00000 – FFFFFF	1 MB	ISA Hole
1MB -15MB	100000 - EFFFFF	14MB	Main Memory
0K –1MB	00000 – FFFFFF	1MB	DOS Compatibility Memory

6.2. Direct Memory Access Channels

Channel Number	Data Width	System Resource
0	8-bits	Generic
1	8-bits	Generic
2	8-bits	Generic
3	8-bits	Generic
4		Reserved - cascade channel
5	16-bits	Open
6	16-bits	Open

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.3. I/O Map

Hex Range	Device
000-01F	DMA Controller
020-02D and 030-03F	Interrupt controller 1, 8259 equivalent
02E-02F	LPC SIO () configuration index/data registers
040-043	Timer, 8254-2 equivalent
04e-04f	LPC SIO () configuration index/data registers
050-053	Timer, 8254-2 equivalent
060, 064,	8742 equivalent (keyboard)
061	NMI control and status
070-077	Real Time Clock Controller(bit 7 -NMI mask)
080-090	DMA Controller and LPC,PCI, or PCIe
092	Reset (Bit 0)/ Fast Gate A20 (Bit 1)
091，93-9F	DMA Controller
0A0-0B1 and 0B4-0BD	Interrupt controller 2, 8259 equivalent
0B2 and 0B3	APM control and status port respectively
0C0-0DF	DMA Controller
0E0-0EF	N/A
0F0	Co-processor error register
0F1-0FF	N/A
100-169	N/A
170-177	Sata Controller
178-1EF	N/A
1F0-1F7	Sata Controller
1F8-2DF	N/A
2E0 -2F7	Serial Port 3/4
2F8-2FF	Serial Port 2
300-36F	Available
376	Sata Controller
378-37F	Available
380-3AF	Available
3B0-3BB and 3BF	Mono/VGA mode video
3BC-3BE	Reserved for parallel port
3C0-3DF	VGA registers
3E0-3EF	Available
3F0-3F5	Available
3F6	Sata Controller
3F7	Available
3F8-3FF	Serial port 1

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Hex Range	Device
4D0,4D1	Interrupt controller
CF8-CFB	PCI configuration address register (32 bit I/O only)
CF9	Reset Control register (8 bit I/O)
CFC-CFF	PCI configuration data register
F040	Smbus base address for SB.
1C00	GPIO Base Address for SB
1800	PM (ACPI) Base Address for SB
1860	Alias for ICH TCO base address.
0A00~0AFF	Reserved for SIO functions base address (ex: PME /GPIO etc)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.4. Interrupt Request (IRQ) Lines

6.4.1. PIC Mode

IRQ#	Typical Intterupt Resource	Connected to Pin	Available
0	Counter 0	N/A	No
1	Keyboard controller	IRQ1 via SERIRQ	No
2	Cascade interrupt from slave PIC	N/A	No
3	Serial Port 2 (COM2)	IRQ3 via SERIRQ / PIRQ	Note (1)
4	Serial Port 1 (COM1)	IRQ4 via SERIRQ / PIRQ	Note (1)
5	Generic	IRQ5 via SERIRQ / PIRQ	Note (1)
6	Generic	IRQ6 via SERIRQ / PIRQ	No
7	Generic	IRQ7 via SERIRQ / PIRQ	Note (1)
8	Real-time clock	N/A	No
9	Generic	N/A	Note (1)
10	Serial Port 3 (COM3)	IRQ10 via SERIRQ / PIRQ	Note (1)
11	Serial Port 4 (COM4)	IRQ11 via SERIRQ / PIRQ	Note (1)
12	PS/2 Mouse	IRQ12 via SERIRQ / PIRQ	Note (1)
13	FERR# logic	N/A	No
14	SATA Primary	IRQ14 via SERIRQ / PIRQ	Note (1)
15	SATA Secondary	IRQ15 via SERIRQ / PIRQ	Note (1)

Note (1): These IRQs can be used for PCI devices when onboard device is disabled.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.4.2. APIC Mode

IRQ#	Typical Intterupt Resource	Connected to Pin	Available
0	Counter 0	N/A	No
1	Keyboard controller	IRQ1 via SERIRQ	No
2	Cascade interrupt from slave PIC	N/A	No
3	Serial Port 2 (COM2)	IRQ3 via SERIRQ	Note (1)
4	Serial Port 1 (COM1	IRQ4 via SERIRQ	Note (1)
5	N/A	N/A	Note (1)
6	N/A	N/A	Note (1)
7	N/A	N/A	Note (1)
8	Real-time clock	N/A	No
9	N/A	IRQ9 via SERIRQ	Note (1)
10	Serial Port 3 (COM3)	IRQ10 via SERIRQ	Note (1)
11	Serial Port 4 (COM4)	IRQ11 via SERIRQ	Note (1)
12	PS/2 Mouse	IRQ12 via SERIRQ	Note (1)
13	FERR# logic	N/A	Note (1)
14	SATA Primary	IRQ14 via SERIRQ	Note (1)
15	SATA Secondary	IRQ15 via SERIRQ	Note (1)
16	N/A	P.E.G Root Port,Intel HDA, PCIE Port 0/1/2/3/4/5/6, EHCI Conterller #2, I.G.D, XHCI Controller	Note (1)
17	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port	Note (1)
18	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port, SMBus Controller, EHCI Controller #2	Note (1)
19	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port	Note (1)
20	N/A	GbE Controller	Note (1)
21	N/A		Note (1)
22	N/A	Intel HDA	Note (1)
23	N/A	EHCI Controller #1	Note (1)

Note (1): These IRQs can be used for PCI devices when onboard device is disabled.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.5. PCI Configuration Space Map

Bus Number	Device Number	Function Number	Routing	Description
00h	00h	00h	N/A	Intel host Bridge
00h	01h	00h	Internal	Intel P.E.G Controller
00h	02h	00h	Internal	Intel I.G.D
00h	03h	00h	Internal	HD Audio Device
00h	13h	00h	Internal	Instel Smart Sound Technology Controller
00h	14h	00h	Internal	xHCI Controller
00h	15h	00h	Internal	Intel Serial I/O DMA Controller
00h	15h	01h	Internal	Intel Serial I/O I2C Controller #0
00h	15h	02h	Internal	Intel Serial I/O I2C Controller #1
00h	15h	03h	Internal	Intel Serial I/O GSPI Controller #0
00h	15h	04h	Internal	Intel Serial I/O GSPI Controller #1
00h	15h	05h	Internal	Intel Serial I/O UART Controller #0
00h	15h	06h	Internal	Intel Serial I/O UART Controller #1
00h	16h	00h	Internal	Intel Management Engine Interface #1
00h	16h	01h	Internal	Intel Management Engine Interface #2
00h	17h	00h	Internal	SDIO Controller
00h	19h	00h	Internal	Gigabit Etherent Controller
00h	1Bh	00h	Internal	High Definition Audio controller
00h	1Ch	00h	Internal	Intel PCI Express Root port 1
00h	1Ch	01h	Internal	Intel PCI Express Root port 2
00h	1Ch	02h	Internal	Intel PCI Express Root port 3
00h	1Ch	03h	Internal	Intel PCI Express Root port 4
00h	1Ch	04h	Internal	Intel PCI Express Root port 5
00h	1Ch	05h	Internal	Intel PCI Express Root port 6
00h	1Dh	00h	Internal	Intel USB EHCI Controller #1
00h	1Fh	00h	N/A	Intel LPC Interface Bridge
00h	1Fh	02h	Internal	SATA Host Controller #1
00h	1Fh	03h	Internal	SMBus Controller
00h	1Fh	06h	Internal	Thermal Controller

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.6. PCI Interrupt Routing Map

INT Line	P.E.G Root Port	xHCI Controller	ME Controller #1	ME Controller #2	IDE-R	KT	GbE Controller	HD Audio Controller
Int0	INTA:16	INTA:16	INTA:16				INTE:20	INTG:22
Int1	INTB:17		INTD:19					
Int2	INTC:18		INTC:18					
Int3	INTD:19		INTB:17					

INT Line	PCIE Port1	PCIE Port 2	PCIE Port 3	PCIE Port 4	PCIE Port 5	PCIE Port 6	PCIE Port 7	PCIE Port 8	EHCI #1	EHCI #2
Int0	INTA:16	INTB:17	INTC:18	INTD:19	INTA:16	INTB:17	INTC:18	INTD:19	INTH:23	INTA:16
Int1	INTB:17	INTC:18	INTD:19	INTA:16	INTB:17	INTC:18	INTD:19	INTA:16		
Int2	INTC:18	INTD:19	INTA:16	INTB:17	INTC:18	INTD:19	INTA:16	INTB:17		
Int3	INTD:19	INTA:16	INTB:17	INTC:18	INTD:19	INTA:16	INTB:17	INTC:18		

INT Line	LPC Controller	SATA Controller #1	SMBus Controller	SATA Controller #2	Thermal Subsystem	SDIO Controller	Intel® Smart Sound Technology Controller
Int0	INTF:21					INTG:22	INTH:23
Int1	INTD:19	INTD:19		INTD:19			
Int2	INTC:18		INTC:18		INTC:18		
Int3	INTA:16						

6.7. SMBus Address Table

Device	Address
DIMMA	A0h
DIMMB	A4h
BMC	50h
Extend GPIO	40h
NXP (eDP to LVDS transmitter)	C0h

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7. BIOS Setup

7.1. Menu Structure

This section presents the six primary menus of the BIOS Setup Utility. Use the following table as a quick reference for the contents of the BIOS Setup Utility. The subsections in this section describe the submenus and setting options for each menu item. The default setting options are presented in bold, and the function of each setting is described in the right hand column of the respective table.

Main	Advanced	Security	Boot	Save & Exit
- System Information - Processor Information - PCH Information - System Management ► - System Date - System Time	- CPU ► - Memory ► - Graphics ► - SATA ► - USB ► - Network ► - PCI and PCIe ► - Super IO ► - ACPI and Power Management ► - Sound ► - Serial Port Console ► - ICC Configuration ► - Thermal ► - Miscellaneous ►	- Password Description ►	- Boot Configuration ► - CSM Configuration ►	- Reset Options ► - Save Options ►

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2. Main

The Main Menu provides read-only information about your system and also allows you to set the System Date and Time. Refer to the tables below the screen shot of this menu for details of the submenus and settings.

7.2.1. System Information

Feature	Options	Description
BIOS Version	Info only	ADLINK BIOS version.
Board Revision	Info only	Hardware revision.
Build Date and Time	Info only	ADLINK date the BIOS was build.

7.2.2. Processor Information

Feature	Options	Description
CPU Brand String	Info only	Display CPU Brand Name.
Frequency	Info only	Display CPU Frequency.
Processor ID	Info only	Display CPU ID.
Stepping	Info only	Display CPU Stepping.
Number of Processors	Info only	Display number of Processors.
GT Info	Info only	Display GT info of Intel Graphics.
IGFX VBIOS Version	Info only	Display VBIOS Version.
Total Memory	Info only	Display installed memory size.

7.2.3. PCH Information

Feature	Options	Description
PCH NAME	Info only	Display PCH name.
PCH SKU	Info only	Display PCH SKU.
Stepping	Info only	Display PCH stepping.
ME FW Version	Info only	Display version of ME.
ME Firmware SKU	Info only	Display ME Firmware Kit SKU number.
System Management	Submenu	

7.2.3.1. PCH Information System Management

Feature	Options	Description
System Management	Info only	
Version	Info only	Display version.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.4. System Management

7.2.4.1. System Management > Board Information

Board Information	Info only	Description
SMC Firmware	Read only	Display SMC Firmware.
Build Date	Read only	Display SMC firmware build date.
SMC Boot loader	Read only	Display SMC boot loader.
Build Date	Read only	Display SMC boot loader build date.
Hardware Version	Read only	Display SMC hardware Version.
Serial Number	Read only	Display SMC serial Number.
Manufacturing Date	Read only	Display SMC manufacturing date.
Last Repair Date	Read only	Display SMC last repair date.
MAC ID	Read only	Display SMC MAC ID

7.2.4.2. System Management > Temperatures and Fan Speed

Feature	Options	Description
Temperatures and Fan	Info only	
CPU Temperature	Info only	
Current	Read only	Display CPU current temperature.
Startup	Read only	Display CPU startup temperature.
Min	Read only	Display CPU min temperature.
Max	Read only	Display CPU max temperature.
Board Temperatures	Info only	
Current	Read only	Display board current temperature.
Startup	Read only	Display board startup temperature.
Min	Read only	Display board min temperature.
Max	Read only	Display board max temperature.
CPU Fan Speed	Read only	Display CPU fan speed.
System Fan Speed	Read only	Display system fan speed.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.4.3. System Management > Power Consumption

Feature	Options	Description
Power Consumption	Info only	
Current Input Current	Read only	Display input current.
Current Input Power	Read only	Display input power.
V3.30	Read only	Display actual voltage of the V3.30.
V1.05	Read only	Display actual voltage of the V1.05.
Vtt	Read only	Display actual voltage of the VTT.
V1.35	Read only	Display actual voltage of the V1.35.
V5.00	Read only	Display actual voltage of the V5.00.
V3.30	Read only	Display actual voltage of the V3.30.
AIN7	Read only	Display actual voltage of the AIN7.

7.2.4.4. System Management > Runtime Statistics

Feature	Options	Description
Runtime Statistics	Info only	
Total Runtime	Read only	The returned value specifies the total time in minutes the system is running in S0 state.
Current Runtime	Read only	The returned value specifies the time in seconds the system is running in S0 state. This counter is cleared when the system is removed from the external power supply.
Power Cycles	Read only	The returned value specifies the number of times the external power supply has been shut down
Boot Cycles	Read only	The Bootcounter is increased after a HW- or SW-Reset or after a successful power-up.
Boot Reason	Read only	The boot reason is the event which causes the reboot of the system.

7.2.4.5. System Management > Flags

Feature	Options	Description
Flags	Info only	
BMC Flags	Read only	
BIOS Select	Read only	Display the selection of current BIOS ROM.
ATX/AT-Mode	Read only	Display ATX/AT-Mode.
Exception Code	Read only	System exception reason.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.4.6. System Management > Power Up

Feature	Options	Description
Power Up	Info only	
Power Up watchdog Attention: F12 disables the Power Up Watchdog.	Enabled **Disabled**	The Power-Up Watchdog resets the system after a certain amount of time after power-up.
ECO Mode	**Disabled** Enable	Reduces the power consumption of the system.
Power-up Mode Attention: The Power-Up Mode only has effect, if the module is in ATX-Mode.	Turn on **Remain off** Last State	Turn On: The machine starts automatically when the power supply is turned on. Remain Off :To start the machine the power button has to be pressed. Last State: when powered on during a power failure the system will automatically power on when power is restored

7.2.4.7. System Management > LVDS Backlight

Feature	Options	Description
LVDS Backlight	Info only	
LVDS Backlight Bright	255	The value range starts by 0 and ends by 255.

7.2.4.8. System Management > Smart Fan

Feature	Options	Description
Smart Fan	Info only	
CPU Smart FanTemperature Source	**CPU Sensor** System Sensor	Select CPU smart fan source.
CPU Fan Mode	**AUTO (Smart Fan)** Fan Off Fan On	Select CPU Fan Mode.
CPU Trigger Point 1	Read only	
Trigger Temperature	15	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	30	Select PWM level.
CPU Trigger Point 2	Read only	
Trigger Temperature	60	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	40	Select PWM level.
CPU Trigger Point 3	Read only	
Trigger Temperature	70	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	63	Select PWM level.
CPU Trigger Point 4	Read only	
Trigger Temperature	80	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	100	Select PWM level.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.5. System Date and Time

Feature	Options	Description
System Date	Weekday, MM/DD/YYYY	Requires the alpha-numeric entry of the day of the week, day of the month, calendar month, and all 4 digits of the year, indicating the century and year (Fri XX/XX/20XX)
System Time	HH/MM/SS	Presented as a 24-hour clock setting in hours, minutes, and seconds

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3. Advanced

This menu contains the settings for most of the user interfaces in the system

7.3.1. CPU

Feature	Options	Description
CPU	Info only	Manufacturer, model, speed
CPU Signature	Info only	Display CPU Signature.
Processor Family	Info only	Display Processor Family.
Microcode Patch	Info only	Display Microcode Patch.
Max CPU speed	Info only	Display Max CPU speed.
Min CPU speed	Info only	Display Min CPU speed.
CPU Speed	Info only	Display CPU Speed.
Processor Cores	Info only	Display Processor Cores.
Intel HT Technology	Info only	Display Intel HT Technology support or not.
Intel VT-x Technology	Info only	Display Intel VT-x Technology support or not.
VT-d Capability	Info only	Display VT-d Capability support or not.
Intel SMX Technology	Info only	Display Intel SMX Technology support or not.
64-bit	Info only	Display 64-bit support or not.
L1 Data Cache	Info only	Display cache info.
L1 Code Cache	Info only	Display cache info.
L2 Cache	Info only	Display cache info.
L3 Cache	Inf o only	Display cache info.
Limit CPUID Maximum	**Disabled** Enabled	When Enabled, the processor will limit the maximum CPUID input value to 03h when queried, even if the processor supports a higher CPUID input value. When Disabled, the processor will return the actual maximum CPUID input value
Execute Disable Bit	Disabled **Enabled**	Enable/Disable the Execute Disable Bit (XD) of the processor. With the XD bit set to enabled certain classes of malicious buffer overflow attacks can be prevented when combined with a supporting OS.
Intel Virtualization Technology	Disabled **Enabled**	Enable/Disable support for the Intel virtualization technology.
VT-d	Disabled **Enabled**	Check to enable VT-d function on MCH.
SB CRID	**Disabled** Enabled	Enable/Disable SB Compatible Revision ID.
CPU Processor Power Managemnt (PPM)	Info only	
EIST	Disabled **Enabled**	Disabled: No SpeedStep, stick to CPU ratio Enabled: CPU speed is controlled by the operating system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Turbo Mode	Disabled **Enabled**	Enable/Disable turbo mode.
CPU C3 Report	Disabled **Enabled**	Enable/Disable CPU C3 report to OS.
CPU C6 Report	Disabled **Enabled**	Enable/Disable CPU C6 report to OS.
CPU C7 Report	Disabled CPU C7 **CPU C7S**	Enable/Disable CPU C7 report to OS.
Configurable TDP	**TDP Nominal** TDP Down TDP Up Disabled	Allow reconfiguration of TDP levels base on current power and thermal delivery capabilities of the system.
Config TDP LOCK	**Disabled** Enabled	Lock the Config TDP Control register
ACPI T State	Disabled **Enabled**	Enable/Disable ACPI T state support.
CPU DTS	Disabled **Enabled**	Enable/Disable CPU DTS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.2. Memory

Feature	Options	Description
Memory RC Version	Info only	Display Memory Reference Code Version.
Memory Frequency	Info only	Display Memory Frequency.
Total Memory	Info only	Display Total Memory.
Memory Voltage	Info only	Display Memory Voltage.
DIMM#0/1	Info only	Display DIMM#0/1.
CAS Latency (tCL)	Info only	Display CAS Latency (tCL).
Minimum delay time	Info only	Display Minimum delay time.
CAS to RAS (tRCDmin)	Info only	Display CAS to RAS (tRCDmin).
Row Precharge (tRPmin)	Info only	Display Row Precharge (tRPmin).
Active to Precharge (tRASmin)	Info only	Display Active to Precharge (tRASmin).
XMP Profile 1	Info only	Display XMP Profile 1 support or not.
XMP Profile 2	Info only	Display XMP Profile 2 support or not.
SPD Write Protect	**Enabled** Disabled	Enable:Writes to SMBus slave addresses A0h - AEh are disabled.
Memory Frequency Limiter	**Auto** 1333 1600	Maximum Memory Frequency Selections in Mhz.
Max TOLUD	**Dynamic**	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller.
MRC Fast Boot	**Enabled** Disabled	Enable/Disable MRC fast boot.
Memory Remap	**Enabled** Disabled	Enable/Disable e memory remap above 4G.
Memory Thermal Management	Enabled **Disabled**	Enable or disable Memory Thermal Management

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.3. Graphics

Feature	Options	Description
Graphics	Info only	
IGFX VBIOS Version	Info only	Display VBIOS Version.
IGfx Frequency	Info only	Display IGfx Frequency.
Graphics Turbo IMON Current	Number entry field	Graphics turbo IMON current values supported (14-31).
Primary Display	**Auto** IGFX PEG PCIE	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.
Primary PEG	**Auto** PEG1 PEG2	Select PEG0/PEG1/PEG2/PEG3 Graphics device should be Primary PEG.
Primary PCIE	**Auto** PCIE1 PCIE2 PCIE3 PCIE4 PCIE5 PCIE6 PCIE7	Select PCIE0/PCIE1/PCIE2/PCIE3/PCIE4/PCIE5/PCIE6/PCIE 7 Graphics device should be Primary PCIE.
Internal Graphics	**Auto** Disabled Enable	Keep IGD enabled based on the setup options.
Aperture Size	128MB **256MB** 512MB	Select the Aperture Size.
DVMT Pre-Allocated	**XXM**	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	**XXXM**	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.
Gfx Low Power Mode	**Enabled** Disabled	This option is applicable for SFF only.
EDP to LVDS Bridge Configuration	**Info only**	
Data Format and Color Depth	VESA 24 bpp JEIDA 24 bpp **JEIDA/VESA 18 bpp**	Data format and color depth select
LVDS Output Mode	**Single LVDS bus** Dual LVDS bus	Single/Dual mode select
DE Polarity	**Active High** Active Low	DE Polarity select
Vsync Polarity	**Active High** Active Low	Vsync Polarity select
Hsync Polarity	**Active High** Active Low	Hsync Polarity select

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
LVDS/eDP Backlight Mode	**BMC Mode** GTT Mode	Select LVDS Backlight control function.
GTT LVDS/eDP Backlight Control	0% 20% 40% 60% 80% **100%**	Actual backlight value in percent of the maximum setting.
DDI function choose	Display Port **HDMI**	Select DDI function choose to display port or HDMI.
Primary IGFX Boot Display	**VBIOS Default**	Select the Video Device which will be activated during POS.
Select Secondary Display	**Disabled**	Select Secondary Display Device.
LCD Panel Type	**VBIOS Default** 640X480 800X600 1024X768 1280X1024 1400X1050 1600X1200 1366X768 1680X1050 1920X1200 1440X900 1600X900 1024X768 LVDS2 1280X800 1920X1080 2048X1536	Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.
Active LFP	**No LVDS** Edp Port-A	Select the Active LFP Configuration.
Panel Scaling	**Auto** Off Force Scaling	Select the LCD panel scaling option used by the Internal Graphics Device.
GT – Power Management Control	Info only	
GT Info	Info only	Display GT info of Intel Graphics.
RC6 (Render Standby)	**Enabled** Disabled	Check to enable render standby support.
GT OverClocking Support	Enabled **Disabled**	Enable/Disable GT OverClocking Support.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.4. SATA

Feature	Options	Description
SATA Controller(s)	**Enabled** Disabled	Enable/Disable SATA Device.
SATA Mode Selection	IDE **AHCI** RAID	Determines how SATA controller(s) operate.
Aggressive LPM Support	**Enabled** Disabled	Enable PCH to aggressively enter link power state.
SATA Controller Speed	Default Gen1 **Gen2** Gen3	Indicates the maximum speed the SATA controller can support.
SATA Port Configuration	Submenu	
Software Feature Mask Configuration	Info only	
RAID0	**Enabled** Disabled	Enable/Disable RAID0 feature.
RAID1	**Enabled** Disabled	Enable/Disable RAID1 feature.
RAID10	**Enabled** Disabled	Enable/Disable RAID10 feature.
RAID5	**Enabled** Disabled	Enable/Disable RAID5 feature.
Intel Rapid Recovery Technology	**Enabled** Disabled	Enable/Disable Intel Rapid Recovery Technology.
OROM UI and BANNER	**Enabled** Disabled	If enabled, then the OROM UI is shown. Otherwise, no OROM banner or information will be displayed if all disks and RAID volumes are Normal.
HDD Unlock	**Enabled** Disabled	If enabled, indicates that the HDD password unlock in the OS is enabled.
LED Locate	**Enabled** Disabled	If enabled, indicates that the LED/SGPIO hardware is attached and ping to locate feature is enabled on the OS.
IRRT Only on ESATA	**Enabled** Disabled	If enabled, then only IRRT volumes can span internal and eSATA drives. If disabled, then any RAID volume can span internal and eSATA drives.
Smart Response Technology	**Enabled** Disabled	Enable/Disable Smart Response Technology.
OROM UI Delay	**2 Seconds** 4 Seconds 6 Seconds 8 Seconds	If enabled, indicates the delay of the OROM UI Splash Screen in a normal status.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.4.1. SATA > SATA Port Configuration

Feature	Options	Description
SATA Port Configuration	Info only	
Port X	Disabled **Enabled**	Enable/Disable SATA Port.
Hot Plug	Disabled **Enabled**	Designates this port as Hot Pluggable.
External SATA	**Disabled** Enabled	External SATA Support.
SATA Device Type	**Hard Disk Drive** Sold State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.
Spin up Device	**Disabled** Enabled	On an edge detect from 0 to 1, the PCH starts a COMRESET initialization sequence to the device.

7.3.5. USB

Feature	Options	Description
USB Module Version	Info only	
USB Devices	Info only	X Drive, X Keyboards, X Mouse, X Hubs
Legacy USB Support	**Enabled** Disabled Auto	Enables legacy USB support. Auto option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications and setup.
XHCI Hand-off	**Enabled** Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by the XHCI OS driver.
EHCI Hand-off	**Enabled** Disabled	This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by the EHCI OS driver.
USB Mass Storage Driver Support	**Enabled** Disabled	Enable/Disable USB Mass Storage Driver Support.
PCH USB Configuration	Submenu	
USB hardware delays and time-outs:	Info only	
USB transfer time-out	1 sec 5 sec 10 sec **20 sec**	The time-out value for Control, Bulk, and Interrupt transfers
Device reset time-out	10 sec **20 sec** 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	**Auto** Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.
Mass Storage Devices	Info only	List current USB max stroge device.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.5.1. USB > PCH USB Configuration

Feature	Options	Description
USB Precondition	**Disabled** Enabled	Precondition work on USB host controller and root ports for faster enumeration.
XHCI Mode	**Smart Auto** Auto Disabled Enabled	Mode of operation of xHCI controller.
BTCG	Disabled **Enable**	Enable/Disable trunk clock gating.
USB Precondition	**Disabled** Enabled	Precondition work on USB host controller and root ports for faster enumeration.
USB Port #0~13	Disabled **Enabled**	Control each of the USB ports (0~13) disabling.
USB30 Port #0~5	Disabled **Enabled**	Enable or Disable USB 3.0 Port.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.6. Network

Feature	Options	Description
Network Stack	Info only	
Network Stack	Enabled **Disabled**	Enable/Disable UEFI network stack.
PCH LAN Controller	**Enabled** Disabled	Enable/Disable onboard NIC.
Wake on LAN	Enabled **Disabled**	Enable/Disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.
Intel AMT	Enabled **Disabled**	Enable/Disable Intel (R) Active Management Technology BIOS Extension.
BIOS Hotkey Pressed	Enabled **Disabled**	Enable/Disable BIOS hotkey press.
MEBx Selection Screen	Enabled **Disabled**	Enable/Disable MEBx selection screen.
Hide Un-Configure ME Confirmation Prompt	Enabled **Disabled**	Hide Un-Configure ME without password Confirmation Prompt.
MEBx Debug Message Output	Enabled **Disabled**	Enable MEBx debug message output.
Un-Configure ME	Enabled **Disabled**	Un-Configure ME without password.
Amt Wait Timer	0	Set timer to wait before sending ASF_GET_BOOT_OPTIONS.
Disable ME	Enabled **Disabled**	Set ME to Soft Temporary Disabled.
ASF	**Enabled** Disabled	Enable/Disable Alert Specification Format.
Activate Remote Assistance Process	Enabled **Disabled**	Trigger CIRA boot.
USB Configure	**Enabled** Disabled	Enable/Disable USB Configure function.
PET Progress	**Enabled** Disabled	User can Enable/Disable PET Events progress to recieve PET events or not.
AMT CIRA Timeout	0	OEM defined timeout for MPS connection to be established. 0 - use the default timeout value of 60 seconds. 255 - MEBX waits until the connection succeeds.
Watchdog	Enabled **Disabled**	Enable/Disable WatchDog Timer.
OS Timer		Set OS watchdog timer.
BIOS Timer		Set BIOS watchdog timer.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.7. PCI and PCIe

Feature	Options	Description
PCI Common Settings	Info only	
PCI Latency Timer	**32 PCI Bus Clocks** 64 PCI Bus Clocks 96 PCI Bus Clocks 128 PCI Bus Clocks 160 PCI Bus Clocks 192 PCI Bus Clocks 224 PCI Bus Clocks 248 PCI Bus Clocks	Select the PCI latency defined in PCI Bus clock cycles
VGA Palette Snoop	**Disabled** Enabled	Allow PCI cards that do not contain their own VGA color palette to access the video core's palette
PERR# Generation	**Disabled** Enabled	Enables or Disables PCI Device to Generate PERR#.
SERR# Generation	**Disabled** Enabled	Enables/Disables PCI Device to Generate SERR#.
PCI Express Settings		
Relaxed Ordering	**Disabled** Enabled	Enables/Disables PCI Express Device Relaxed Ordering.
Extended Tag	**Disabled** Enabled	If ENABLED allows Device to use 8-bit Tag field as a requester.
No Snoop	Disabled **Enabled**	Enables/Disables PCI Express Snoop option
Maximum Payload	**Auto** 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Select Maximum Payload size or let BIOS decide (Auto)
Maximum Read Request	**Auto** 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Set Maximum Read Request Size of PCI Express Device or allow System BIOS to select the value.
ASPM Support Warning: Enabling ASPM may cause some PCI-E devices to fail	**Disabled** Auto Force L0S	Set the ASPM Level. Disabled - Disables ASPM. Auto - BIOS auto configure Force L0S - Force all links to L0s State
Extended Synch	Enabled **Disabled**	If enabled the generation of PCI Express synchronization patterns is allowed
Link Training Retry	Disabled 2 3 **5**	Defines number of Retry Attempts software will take to retrain the link if previous training attempt was unsuccessful.
Link Training Timeout (uS)	**1000**	Defines number of microseconds software will wait before polling 'Link Training' bit in Link Status register. Value range from 10 to 10000 uS.
Unpopulated Links	**Keep Link ON** Disable	In order to save power, software will disable unpopulated PCI Express links, if this option set to 'Disable Link'.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Restore PCIE Registers	Enabled **Disabled**	On non-PCI Express aware OS's (Pre Windows Vista) some devices may not be correctly reinitialized after S3. Enabling this restors PCI Express device configurations on S3 resume. Warning: Enabling this may cause issues with other hardware after S3 resume.
PEG Configuration (System Agent)	Submenu	
PCH-PCIe Configuration	Submenu	

7.3.7.1. PCI and PCIe > PEG Configuration (System Agent)

Feature	Options	Description
PEG Configuration (System Agen)	Info only	
PEG0	**Not Present**	Display PEG0 present or not.
PEG0 – Gen X	**Auto** Gen1 Gen2 Gen3	Configure PEG0 B0:D1:F0 Gen1-Gen3
Enable PEG	**Disabled** Enabled Auto	Enable/Disable the PEG.
Detect Non-compliance Device	**Disabled** Enable	Detect Non-Compliance PCI Express Device in PEG.
PEG Sampler Calibrate	**Auto** Enabled Disable	Enable/Disable PEG Sampler Calibrate\nAuto means Disabled for SNB MB/DT, Enabled for IVB A0 B0.
Swing Control	**Half** Full	Perform PEG Swing Control, on IVB C0 and Later.
PEG Gen3 Equalization	**Enabled** Disable	Perform PEG Gen3 Equalization steps.
Gen3 Eq Preset Search	**Enabled** Disable	Perform PEG Gen3 Preset Search algorithm, on IVB C0 and Later.
PEG RxCEM LoopBack Mode	**Disabled** Enable	Enabled/Disabled PEG RxCEM Loopback Mode.
PEG Gen3 RxCTLE Control 0~7	**8**	PEG Gen3 RxCTLE Control per Bundle

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.7.2. PCI and PCIe > PCH-PCIe Configuration

Feature	Options	Description
PCH-PCIe Configuration	Info only	
PCI Express Clock Gating	Disabled **Enable**	Enable/Disable PCI Express Clock Gating for each root port.
DMI Link ASPM Control	Disabled **Enable**	The control of Active State Power Management on both NB side and SB side of the DMI Link.
DMI Link Extended Synch Control	**Disabled** Enable	The control of Extended Synch on SB side of the DMI Link.
PCIe-USB Glitch W/A	**Disabled** Enable	PCIe-USB Glitch W/A for bad USB device(s) connected behind PCIE/PEG Port.
PCIE Root Port Function Swapping	**Disabled** Enable	Enable/Disable PCI Express PCI Express Root Port Function Swapping.
Subtractive Decode	**Disabled** Enable	Enable/Disable PCI Express Subtractive Decode.
PCIE Ports 1-4 Configuration	**4x1 Port** 1X2 2X1 Port 2X2 Port 1X4 Port	To configure PCI-E Port 1-4 of PCH. [4X1]: Port 1-4 (x1) and Port 8 (x1) [1x2 2x1]: Port 1 (x2), Port 2 (disabled), Ports 3 and Port 4 (x1) [2x2]: Port 1-2 (x2) and Port 3-4 (x2)/[1x4]:Port 1 (x4), Ports 2-4 (disable)
PCIE Ports 5-8 Configuration	**4x1 Port** 1X2 2X1 Port	To configure PCI-E Port 5-7 of PCH. [4X1] : Port 5-8 (x1) and Port 8 (x1) [1x2 2x1]: Port 5 (x2), Port 6 (disabled), Ports 7 and Port 8 (x1)
PCI Express Root Port 1~7	Submenu	Configure PCI Express Root Port 1~7 setting.

PCI and PCIe > PCH-PCIe Configuration > PCI Express Root Port

Feature	Options	Description
PCI Express Root Port	Disabled **Enable**	Control the PCI Express Root Port.
ASPM Support	**Disabled** Enable	Set the ASPM Level: Force L0s - Force all links to L0s State: AUTO - BIOS auto configure: DISABLE - Disables ASPM
L1 Substates	**Disabled** Enable	PCI Express L1 Substates settings.
URR	**Disabled** Enable	Enable/Disable PCI Express Unsupported Request Reporting.
FER	**Disabled** Enable	Enable/Disable PCI Express Device Fatal Error Reporting.
NFER	**Disabled** Enable	Enable/Disable PCI Express Device Non-Fatal Error Reporting.
CER	**Disabled** Enable	Enable/Disable PCI Express Device Correctable Error Reporting.
CTO	**Disabled** Enable	Enable/Disable PCI Express Completion Timer TO.
SEFE	**Disabled** Enable	Enable/Disable Root PCI Express System Error on Fatal Error.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
SENFE	**Disabled** Enable	Enable/Disable Root PCI Express System Error on Non-Fatal Error.
SECE	**Disabled** Enable	Enable/Disable Root PCI Express System Error on Correctable Error.
PME SCI	Disabled **Enable**	Enable/Disable PCI Express PME SCI.
Hot Plug	Disabled **Enable**	Enable/Disable PCI Express Hot Plug.
PCIe Speed	**Auto** Gen1 Gen2	Select PCI Express port speed.
Detect Non-Compiance	**Disabled** Enable	Detect Non-Compliance PCI Express Device. If enabled, it will take more time at POST time.
Extra Bus Reserved	**0**	Extra Bus Reserved (0-7) for bridges behind this Root Bridge.
Reseved Memory	**10**	Reserved Memory Range for this Root Bridge.
Prefetchable Memory	**10**	Prefetchable Memory Range for this Root Bridge.
Reserved I/O	**4**	Reserved I/O (4K/8K/12K/16K/.../48K) Range for this Root Bridge.
PCIE LTR	**Disabled** Enable	PCIE Latency Reporting Enable/Disable.
PCIE LTR Lock	**Disabled** Enable	PCIE LTR Configuration Lock.
Snoop Latency Ocerrid	Disabled Manual **Auto**	Snoop Latency Ocerride for PCH PCIE.
Non Snoop Latency Ocerrid	Disabled Manual **Auto**	Non Snoop Latency Ocerride for PCH PCIE.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.8. Super IO

Feature	Options	Description
Super IO Chip	Info only	
W83627DHG Super IO Configuration	Info only	
Serial Port 1 Configuration Serial Port	**Enabled** Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=3F8h; IRQ=4	Fixed configuration of serial port.
Change Settings	**Auto** IO=3F8h; IRQ=4 IO=3F8h; IRQ=3,4,5,6,7,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,10,11,12	Select an optimal setting for Super IO device.
Serial Port 2 Configuration Serial Port	**Enabled** Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=2F8h; IRQ=3	Fixed configuration of serial port.
Change Settings	**Auto** IO=2F8h; IRQ=3 IO=3F8h; IRQ=3,4,5,6,7,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,10,11,12	Select an optimal setting for Super IO device.
Device Mode	**Standard Serial Port Mode** IrDA Active pulse 1.6 uS IrDA Active pulse 3/16 bit time ASKIR Mode	
N5104D Super IO Configuration	Info only	
Serial Port 1 Configuration Serial Port	**Enabled** Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=240h; IRQ=10	Fixed configuration of serial port.
Change Settings	**Auto** IO=240h; IRQ=10 IO=240h; IRQ=10,11,12 IO=248h; IRQ=10,11,12 IO=250h; IRQ=10,11,12 IO=258h; IRQ=10,11,12	Select an optimal setting for Super IO device.
Serial Port 2 Configuration Serial Port	**Enabled** Disabled	Enable/Disable Serial Port (COM).

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Device Settings	IO=248h; IRQ=11	Fixed configuration of serial port.
Change Settings	**Auto** IO=248h; IRQ=11 IO=240h; IRQ=10,11,12 IO=248h; IRQ=10,11,12 IO=250h; IRQ=10,11,12 IO=258h; IRQ=10,11,12	Select an optimal setting for Super IO device.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.9. ACPI and Power Management

Feature	Options	Description
ACPI and Power Management	Info only	
Enable ACPI Auto Configuration	Enabled **Disabled**	Enables or Disables BIOS ACPI Auto Configuration.
Enable Hibernation	**Enabled** Disabled	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
Emulation AT/ATX	Emulation AT **ATX**	Select Emulation AT or ATX function. If this option set to [Emulation AT], BIOS will report no suspend functions to ACPI OS. In windows XP, it will make OS show shutdown message during system shutdown.
ACPI Sleep State	Suspend Disabled **S3(Suspend to RAM)**	Select ACPI sleep state the system will enter when the SUSPEND button is pressed.

7.3.10. Sound

Feature	Options	Description
Sound	Info only	
Azalia	Disabled **Enabled** Auto	Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally enabled. Auto = Azalia will be enabled if present, disabled other.
Azalia Docking Support	**Enabled** Disabled	Enable/Disable Azalia Docking Support of Audio Controller.
Azalia PME	Enabled **Disabled**	Enable/Disable Power Management capability of Audio Controller.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.11. Serial Port Console

Feature	Options	Description
Serial Port Console	Info only	
COM1	Info only	
Console Redirection	Enabled **Disabled**	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM2	Info only	
Console Redirection	Enabled **Disabled**	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM3	Info only	
Console Redirection	Enabled **Disabled**	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM4	Info only	
Console Redirection	Enabled **Disabled**	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	

7.3.11.1. Serial Port Console > Console Redirection Settings

Feature	Options	Description
Console Redirection Settings	Info only	
Terminal Type	VT100 VT100+ VT-UTF8 **ANSI**	Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Bits per second	9600 19200 38400 57600 **115200**	Selects serial port transmission speed.
Data Bits	7 **8**	Select Data Bits.
Parity	**None** Even Odd Mark Space	Select Parity.
Stop Bits	1 **2**	Select number of stop bits.
Flow Control	**None** Hardware RTS/CTS	Select flow control.
VT-UTF8 Combo Key Support	Disabled	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Enable	
Recorder Mode	**Disabled** Enable	With this mode enabled only text will be sent. This is to capture Terminal data.
Resolution 100x31	**Disabled** Enable	Enables or disables extended terminal resolution
Legacy OS Redirection	**80x24** 80x25	On Legacy OS, the Number of Rows and Columns supported redirection
Putty KeyPad	**VT100** LINUX XTERMR6 SCO ESCN VT400	Select FunctionKey and KeyPad on Putty.
Redirection After BIOS Post	**Always Enabled** BootLoader	The Settings specify if BootLoader is selected than Legacy console redirection is disabled before booting to Legacy OS. Default value is Always Enable which means Legaacy console Redirection is enabled for Legacy OS.

7.3.12. ICC Configuration

Feature	Options	Description
Turn off unused PCI/PCIe clocks	Disabled **Enable**	Disabled: all clocks turned on. Enabled: clocks for empty PCI/PCIe slots will be turned off to save power. Platform must be powered off for changes to take effect.
Clock Manipulation	Info only	
ICC Overclocking Lib	Info only	
Clock3	Submenu *Note1	
CLKRUN# Logic	Enabled **Disabled**	Enable the CLKRUN# logic to stop the PCI clock.

Note1: The item is view only in standard BIOS default, the options can be opened by customer request if neccessary.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.12.1. Clock3

Feature	Options	Description
Clock3	info only	Requested SSC mode. Changes will not be applied unless 'Accept changes' is pressed.
BCLK, DMI, PEG, PCIe, PCI33, SATA, USB3	info only	
Maximum supported frequency	info only	
Minimum supported frequency	info only	
Current frequency	info only	
Supported SSC modes	info only	
Current SSC mode	info only	
New SSC Mode:	**Down** Center Up	Requested SSC mode. Changes will not be applied unless 'Accept changes' is pressed.
Maximum supported SSC %	info only	
"Current SSC %"	info only	
New SSC spread percent [0.01%]	value	Requested SSC percent in 0.01% increments. Changes will not be applied unless 'Accept changes' is pressed.
Apply settings immediately	Apply item	Changes will be applied immediately, but forgotten after reboot. This mode of making changes is more likely to cause platform instability and spontaneous restart.
Apply settings permanently after reboot	Apply item	Changes will be applied permanently, starting after the next reboot. Use it to provide changes that are verified and safe.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.13. Thermal

Feature	Options	Description
Thermal	Info only	
Automatic Thermal Reporting	Enabled **Disabled**	Configure _CRT, _PSV and _AC0 automatically based on values recommended in BWG's Thermal Reporting for Thermal Management settings. Set to Disabled for manual conmfiguration.
Critical Trip Point	**Disabled** 85 C 95 C	This value controls the temperature of the ACPI Critical Trip Point - the point in which the OS will shut the system off. NOTE: 100C is the Plan Of Record (POR) for all Intel mobile processors.
Active Trip Point	Disabled 40 C 50 C 60 C 70 C **BMC Default**	This value controls the temperature of the ACPI Active Trip Point - the point in which the OS will turn the processor fan on Active Trip Point Fan Speed.
Passive Trip Point	**Disabled** 80 C 90 C	This value controls the temperature of the ACPI Passive Trip Point - the point in which the OS will begin throttling the processor.
Passive TC1 Value	**1**	This value sets the TC1 value for the ACPI Passive Cooling Formula. Range 1 – 16.
Passive TC2 Value	**5**	This value value sets the TC2 value for the ACPI Passive Cooling Formula. Range 1 - 16
Passive TSP Value	**10**	This item sets the TSP value for the ACPI Passive Cooling Formula. It represents in tenths of a second how often the OS will read the temperature when passive cooling is enabled. Range 2 – 32.
Watchdog ACPI Even Shutdown	**Disabled** Enable	Enable/Disable Watchdog ACPI Even Shutdown.

7.3.14. Miscellaneous

Feature	Options	Description
High Precision Timer	**Enabled** Disabled	Enable/Disable the High Precision Event Timer.
Security		
BIOS Security Configuration	Submenu	
Trusted Computing	Submenu	
GPI with interrupt	Enabled **Disabled**	GPI with interrupt Enabled/Disabled
Intel TXT(LT) Configuration	Enabled **Disabled**	Enables or Disables the High Precision Event Timer.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.14.1. Miscellaneous > BIOS Security Configuration

Feature	Options	Description
SMI Lock	**Enabled** Disabled	Enable or Disable the SMI Lock
BIOS Lock	Enabled **Disabled**	Enable or Disable the BIOS lock enable (BLE) bit
GPIO Lock	Enabled **Disabled**	Enable or Disable the GPIO lockdown
BIOS Interface Lock	**Enabled** Disabled	Enable or Disable the BIOS interface lockdown
RTC RAM Lock	**Enabled** Disabled	Enable or Disable bytes 38h-2Fh in the upper and lower 128-byte bank of the RTC RAM lockdown

7.3.14.2. Miscellaneous > Trusted Computing

Feature	Options	Description
Configuration	info only	
Security Device Support	**Enabled** Disabled	Enables or Disables BIOS support for security device. When disabled OS wil not show Security Device. TCG EFI protocol and INT1A interface will not be available
TPM State	**Disabled** Enable	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
Pending operation	info only	
Device Select	**Auto** TPM1.2 TPM2.0	TPM 1.2 will restrict support to TPM 1.2 devices, TPM 2.0 will restrict support to TPM 2.0 devices, Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated
Current Status Information	info only	
TPM Enabled Status:	info only	
TPM Active Status:	info only	
TPM Owner Status:	info only	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.4. Security

7.4.1. Password Description

Feature	Options	Description
Administrator Password	Enter password	
User Password	Enter password	
HDD Security Configuration:	Info only	
Px: xxxxxxxx	Info only	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.5. Boot

7.5.1. Boot Configuration

Feature	Options	Description
Boot Configuration	Info only	
Setup Prompt Timeout	**1**	Enable/Disable the onboard SATA controllers.
Bootup NumLock State	**On**	Select SATA controller mode.
Quiet Boot	**Disabled** Enabled	Enable/Disable the PATA port. In fact this enables or disables the SATA channel on which the onboard SATA to PATA converter is attached. When set to enabled the system boot will be delayed for the time specified in PATA Port Detection Timeout if no PATA device is connected. Auto: Scan for PATA device and enable per default.
Fast Boot	**Disabled** Enabled	Define the maximum time to wait for drive detection on PATA port.
Boot Option Priorities	Info only	
CSM Configuration	Submenu	

7.5.2. CSM Configuration

Feature	Options	Description
CSM Support	**Enabled** Disable	This option controls if CSM will be launched.
CSM16 Module Version	Info only	
GateA20 Active	**Upon Request** Always	UPON REQUEST - GA20 can be disabled using BIOS services. ALWAYS - do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.
Option ROM Messages	**Force BIOS** Keep Current	Set display mode for Option ROM.
Boot Option filter	**UEFI and Legacy** Legacy only UEFI only	This option controls what devices system can to boot.
Option ROM execution	Info only	
Network	**Do not launch** Legacy UEFI	Controls the execution of UEFI and Legacy PXE OpROM.
Storage	Do not launch UEFI **Legacy**	Controls the execution of UEFI and Legacy Storage OpROM.
Video	Do not launch UEFI **Legacy**	Controls the execution of UEFI and Legacy Video OpROM.
Other PCI devices	Do not launch UEFI Legacy	For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.6. Save & Exit

7.6.1. Reset Options

Feature	Options	Description
Save Changes and Reset	Save changes and reset the system.	Save Changes and Reset
Discard Changes and Reset	Reset the system without saving any changes.	Discard Changes and Reset

7.6.2. Save Options

Feature	Options	Description
Save Changes		Save Changes done so far to any of the setup options.
Discard Changes		Discard Changes done so far to any of the setup options.
Restore Defaults		Restore/Load Default values for all the setup options.
Save as User Defaults		Save the changes done so far as User Defaults.
Restore User Defaults		Restore the User Defaults to all the setup options.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8. BIOS Checkpoints, Beep Codes

This section of this document lists checkpoints and beep codes generated by AMI Aptio BIOS. The checkpoints defined in this document are inherent to the AMIBIOS generic core, and do not include any chipset or board specific checkpoint definitions.

Checkpoints and Beep Codes Definition

A checkpoint is either a byte or word value output to I/O port 80h. The BIOS outputs checkpoints throughout bootblock and Power-On Self Test (POST) to indicate the task the system is currently executing. Checkpoints are very useful for debugging problems that occur during the preboot process.

Beep codes are used by the BIOS to indicate a serious or fatal error. They are used when an error occurs before the system video has been initialized, and generated by the system board speaker.

Aptio Boot Flow

While performing the functions of the traditional BIOS, Aptio 5.x core follows the firmware model described by the Intel Platform Innovation Framework for EFI (“the Framework”). The Framework refers the following “boot phases”, which may apply to various status code & checkpoint descriptions:

- Security (SEC) – initial low-level initialization
- Pre-EFI Initialization (PEI) – memory initialization[1]
- Driver Execution Environment (DXE) – main hardware initialization[2]
- Boot Device Selection (BDS) – system setup, pre-OS user interface & selecting a bootable device (CD/DVD, HDD, USB, Network, Shell, …)

Viewing BIOS Checkpoints

Viewing all checkpoints generated by the BIOS requires a checkpoint card, also referred to as a □OST Card or POST Diagnostic Card. These are PCI add-in cards that show the value of I/O port 80h on a LED display.

Some computers display checkpoints in the bottom right corner of the screen during POST. This display method is limited, since it only displays checkpoints that occur after the video card has been activated.

Keep in mind that not all computers using AMI Aptio BIOS enable this feature. In most cases, a checkpoint card is the best tool for viewing AMI Aptio BIOS checkpoints.

[1]Analogous to “bootblock” functionality of legacy BIOS
[2]Analogous to “POST” functionality in legacy BIOS

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1. Status Code Ranges

Status Code Range	Description
0x01 – 0x0F	SEC Status Codes & Errors
0x10 – 0x2F	PEI execution up to and including memory detection
0x30 – 0x4F	PEI execution after memory detection
0x50 – 0x5F	PEI errors
0x60 – 0xCF	DXE execution up to BDS
0xD0 – 0xDF	DXE errors
0xE0 – 0xE8	S3 Resume (PEI)
0xE9 – 0xEF	S3 Resume errors (PEI)
0xF0 – 0xF8	Recovery (PEI)
0xF9 – 0xFF	Recovery errors (PEI)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2. Standard Status Codes

8.2.1. SEC Status Codes

Status Code	Description
0x0	Not used
Progress Codes	
0x1	Power on. Reset type detection (soft/hard).
0x2	AP initialization before microcode loading
0x3	North Bridge initialization before microcode loading
0x4	South Bridge initialization before microcode loading
0x5	OEM initialization before microcode loading
0x6	Microcode loading
0x7	AP initialization after microcode loading
0x8	North Bridge initialization after microcode loading
0x9	South Bridge initialization after microcode loading
0xA	OEM initialization after microcode loading
0xB	Cache initialization
SEC Error Codes	
0xC – 0xD	Reserved for future AMI SEC error codes
0xE	Microcode not found
0xF	Microcode not loaded

8.2.2. SEC Beep Codes

None

8.2.3. PEI Status Codes

Status Code	Description
Progress Codes	
0x10	PEI Core is started
0x11	Pre-memory CPU initialization is started
0x12	Pre-memory CPU initialization (CPU module specific)
0x13	Pre-memory CPU initialization (CPU module specific)
0x14	Pre-memory CPU initialization (CPU module specific)
0x15	Pre-memory North Bridge initialization is started
0x16	Pre-Memory North Bridge initialization (North Bridge module specific)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0x17	Pre-Memory North Bridge initialization (North Bridge module specific)
0x18	Pre-Memory North Bridge initialization (North Bridge module specific)
0x19	Pre-memory South Bridge initialization is started
0x1A	Pre-memory South Bridge initialization (South Bridge module specific)
0x1B	Pre-memory South Bridge initialization (South Bridge module specific)
0x1C	Pre-memory South Bridge initialization (South Bridge module specific)
0x1D – 0x2A	OEM pre-memory initialization codes
0x2B	Memory initialization. Serial Presence Detect (SPD) data reading
0x2C	Memory initialization. Memory presence detection
0x2D	Memory initialization. Programming memory timing information
0x2E	Memory initialization. Configuring memory
0x2F	Memory initialization (other).
0x30	Reserved for ASL (see ASL Status Codes section below)
0x31	Memory Installed
0x32	CPU post-memory initialization is started
0x33	CPU post-memory initialization. Cache initialization
0x34	CPU post-memory initialization. Application Processor(s) (AP) initialization
0x35	CPU post-memory initialization. Boot Strap Processor (BSP) selection
0x36	CPU post-memory initialization. System Management Mode (SMM) initialization
0x37	Post-Memory North Bridge initialization is started
0x38	Post-Memory North Bridge initialization (North Bridge module specific)
0x39	Post-Memory North Bridge initialization (North Bridge module specific)
0x3A	Post-Memory North Bridge initialization (North Bridge module specific)
0x3B	Post-Memory South Bridge initialization is started
0x3C	Post-Memory South Bridge initialization (South Bridge module specific)
0x3D	Post-Memory South Bridge initialization (South Bridge module specific)
0x3E	Post-Memory South Bridge initialization (South Bridge module specific)
0x3F-0x4E	OEM post memory initialization codes
0x4F	DXE IPL is started

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
PEI Error Codes	
0x50	Memory initialization error. Invalid memory type or incompatible memory speed
0x51	Memory initialization error. SPD reading has failed
0x52	Memory initialization error. Invalid memory size or memory modules do not match.
0x53	Memory initialization error. No usable memory detected
0x54	Unspecified memory initialization error.
0x55	Memory not installed
0x56	Invalid CPU type or Speed
0x57	CPU mismatch
0x58	CPU self test failed or possible CPU cache error
0x59	CPU micro-code is not found or micro-code update is failed
0x5A	Internal CPU error
0x5B	reset PPI is not available
0x5C-0x5F	Reserved for future AMI error codes
S3 Resume Progress Codes	
0xE0	S3 Resume is stared (S3 Resume PPI is called by the DXE IPL)
0xE1	S3 Boot Script execution
0xE2	Video repost
0xE3	OS S3 wake vector call
0xE4-0xE7	Reserved for future AMI progress codes
0xE0	S3 Resume is stared (S3 Resume PPI is called by the DXE IPL)
S3 Resume Error Codes	
0xE8	S3 Resume Failed in PEI
0xE9	S3 Resume PPI not Found
0xEA	S3 Resume Boot Script Error
0xEB	S3 OS Wake Error
0xEC-0xEF	Reserved for future AMI error codes
Recovery Progress Codes	
0xF0	Recovery condition triggered by firmware (Auto recovery)
0xF1	Recovery condition triggered by user (Forced recovery)
0xF2	Recovery process started
0xF3	Recovery firmware image is found
0xF4	Recovery firmware image is loaded
0xF5-0xF7	Reserved for future AMI progress codes

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
Recovery Error Codes	
0xF8	Recovery PPI is not available
0xF9	Recovery capsule is not found
0xFA	Invalid recovery capsule
0xFB – 0xFF	Reserved for future AMI error codes

8.2.4. PEI Beep Codes

# of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXEIPL was not found
3	DXE Core Firmware Volume was not found
7	Reset PPI is not available
4	Recovery failed
4	S3 Resume failed

8.2.5. DXE Status Codes

Status Code	Description
0x60	DXE Core is started
0x61	NVRAM initialization
0x62	Installation of the South Bridge Runtime Services
0x63	CPU DXE initialization is started
0x64	CPU DXE initialization (CPU module specific)
0x65	CPU DXE initialization (CPU module specific)
0x66	CPU DXE initialization (CPU module specific)
0x67	CPU DXE initialization (CPU module specific)
0x68	PCI host bridge initialization
0x69	North Bridge DXE initialization is started
0x6A	North Bridge DXE SMM initialization is started
0x6B	North Bridge DXE initialization (North Bridge module specific)
0x6C	North Bridge DXE initialization (North Bridge module specific)
0x6D	North Bridge DXE initialization (North Bridge module specific)
0x6E	North Bridge DXE initialization (North Bridge module specific)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0x6F	North Bridge DXE initialization (North Bridge module specific)
0x70	South Bridge DXE initialization is started
0x71	South Bridge DXE SMM initialization is started
0x72	South Bridge devices initialization
0x73	South Bridge DXE Initialization (South Bridge module specific)
0x74	South Bridge DXE Initialization (South Bridge module specific)
0x75	South Bridge DXE Initialization (South Bridge module specific)
0x76	South Bridge DXE Initialization (South Bridge module specific)
0x77	South Bridge DXE Initialization (South Bridge module specific)
0x78	ACPI module initialization
0x79	CSM initialization
0x7A – 0x7F	Reserved for future AMI DXE codes
0x80 – 0x8F	OEM DXE initialization codes
0x90	Boot Device Selection (BDS) phase is started
0x91	Driver connecting is started
0x92	PCI Bus initialization is started
0x93	PCI Bus Hot Plug Controller Initialization
0x94	PCI Bus Enumeration
0x95	PCI Bus Request Resources
0x96	PCI Bus Assign Resources
0x97	Console Output devices connect
0x98	Console input devices connect
0x99	Super IO Initialization
0x9A	USB initialization is started
0x9B	USB Reset
0x9C	USB Detect
0x9D	USB Enable
0x9E – 0x9F	Reserved for future AMI codes
0xA0	IDE initialization is started
0xA1	IDE Reset
0xA2	IDE Detect
0xA3	IDE Enable
0xA4	SCSI initialization is started
0xA5	SCSI Reset
0xA6	SCSI Detect

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0xA7	SCSI Enable
0xA8	Setup Verifying Password
0xA9	Start of Setup
0xAA	Reserved for ASL (see ASL Status Codes section below)
0xAB	Setup Input Wait
0xAC	Reserved for ASL (see ASL Status Codes section below)
0xAD	Ready To Boot event
0xAE	Legacy Boot event
0xAF	Exit Boot Services event
0xB0	Runtime Set Virtual Address MAP Begin
0xB1	Runtime Set Virtual Address MAP End
0xB2	Legacy Option ROM Initialization
0xB3	System Reset
0xB4	USB hot plug
0xB5	PCI bus hot plug
0xB6	Clean-up of NVRAM
0xB7	Configuration Reset (reset of NVRAM settings)
0xB8 – 0xBF	Reserved for future AMI codes
0xC0 – 0xCF	OEM BDS initialization codes
DXE Error Codes	
0xD0	CPU initialization error
0xD1	North Bridge initialization error
0xD2	South Bridge initialization error
0xD3	Some of the Architectural Protocols are not available
0xD4	PCI resource allocation error. Out of Resources
0xD5	No Space for Legacy Option ROM
0xD6	No Console Output Devices are found
0xD7	No Console Input Devices are found
0xD8	Invalid password
0xD9	Error loading Boot Option (LoadImage returned error)
0xDA	Boot Option is failed (StartImage returned error)
0xDB	Flash update is failed
0xDC	Reset protocol is not available

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.6. DXE Beep Codes

# of Beeps	Description
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
1	Invalid password
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

8.2.7. ACPI/ASL Checkpoint

Status Code	Description
0x01	System is entering S1 sleep state
0x02	System is entering S2 sleep state
0x03	System is entering S3 sleep state
0x04	System is entering S4 sleep state
0x05	System is entering S5 sleep state
0x10	System is waking up from the S1 sleep state
0x20	System is waking up from the S2 sleep state
0x30	System is waking up from the S3 sleep state
0x40	System is waking up from the S4 sleep state
0xAC	System has transitioned into ACPI mode. Interrupt controller is in PIC mode.
0xAA	System has transitioned into ACPI mode. Interrupt controller is in APIC mode.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.3. OEM-Reserved Checkpoint Ranges

Status Code	Description
0x05	OEM SEC initialization before microcode loading
0x0A	OEM SEC initialization after microcode loading
0x1D – 0x2A	OEM pre-memory initialization codes
0x3F – 0x4E	OEM PEI post memory initialization codes
0x80 – 0x8F	OEM DXE initialization codes
0xC0 – 0xCF	OEM BDS initialization codes

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9. Mechanical Information

9.1. Board-to-Board Connectors

To allow for different stacking heights, the receptacles for COM Express carrier boards are available in two heights: 5 mm and 8 mm. When 5 mm receptacles are chosen, the carrier board should be free of components.

Tyco 3-1827253-6

Foxconn QT002206-2131-3H

- 220-pin board-to-board connector with 0.5mm for a stacking height of 5 mm.
- This connector can be used with 5 mm through-hole standoffs (SMT type).



Tyco 3-6318491-6

Foxconn QT002206-4141-3H

- 220-pin board-to-board connector with 0.5mm for a stacking height of 8 mm.
- This connector can be used with 8 mm through-hole standoffs (SMT type).



Common Specifications

- Current capacity: 0.5A per pin
- Rated voltage: 50 VAC
- Insulation resistance: 100M or greater @ 500 VDC
- Temperature rating: -40°C ~ 85°C
- UL certification (ECBT2.E28476)
- Copper alloy (contacts)
- Housing: thermo-plastic molded compound (L.C.P.)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.2. Thermal Solution

9.2.1. Heat Spreaders

The function of the heat spreader is to ensure an identical mechanical profile for all COM Express modules. By using a heat spreader, the thermal solution that is built on top of the module is compatible with all COM Express modules.

9.2.2. Heat Sinks

A heat sink can be used as a thermal solution for a specific COM Express module and can have a fan or be fanless, depending on the thermal requirements.


9.2.3. Installation

Install a heat spreader or heat sink using the following instructions.

Step 1: Before mounting the heatsink, install the required memory modules onto the SODIMM socket(s) on the COM Express module.




Step 2: Remove the protective membranes from the thermal pads.

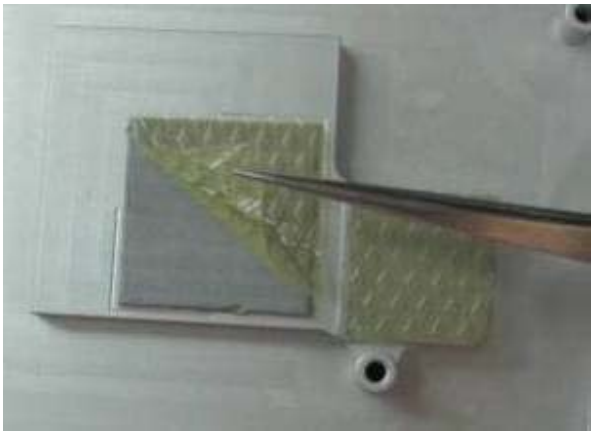

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 3: Assemble the heatsink onto the COM Express module.

Use the three M2.5, L=6mm screws provided to fasten the heatsink to the module.

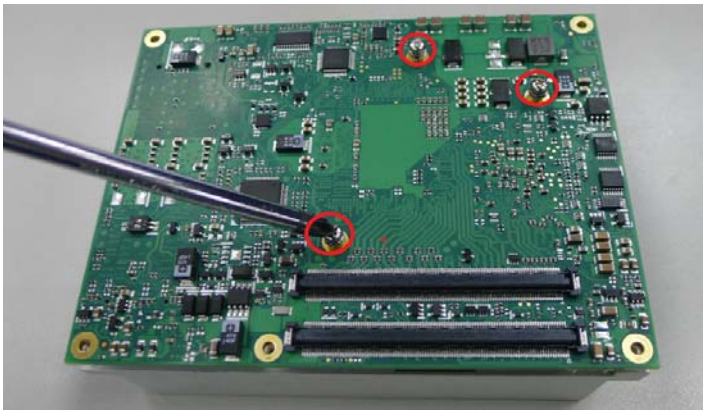




Step 4: Place the COM Express module and heatsink assembly onto the connectors on the carrier board as shown.

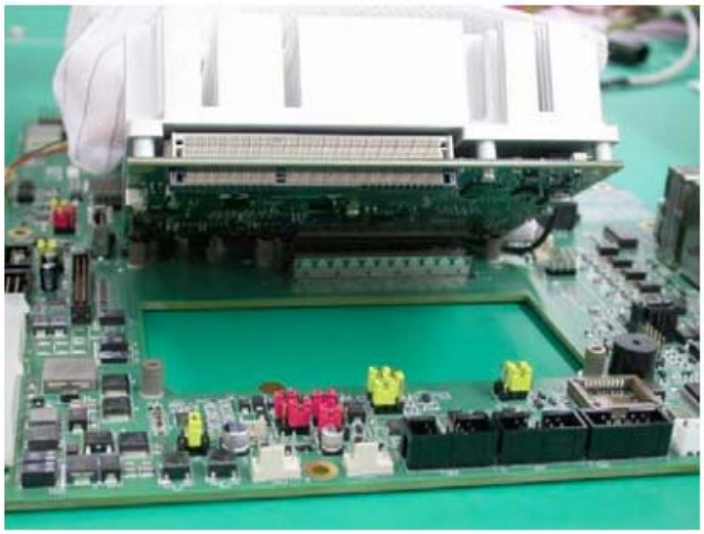

Then press down on the module until it is firmly seated on the carrier board.

Step 5: Use the five M2.5, L=16mm screws provided to secure the COM Express module to the carrier board from the solder side.

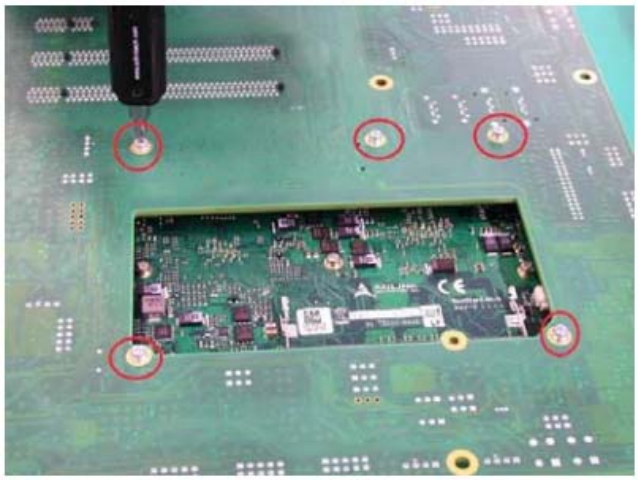



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Step 6: If you are installing a heatsink with a fan, plug the fan connector into the carrier board as shown.



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.3. Mounting Methods

There are several standard ways to mount the COM Express module with a thermal solution onto a carrier board. In addition to the choice of 5 mm or 8mm board-to-board connectors, there is the choice of Top and Bottom mounting. In Top mounting, the threaded standoffs are on the carrier board and the thermal solution is equipped with through-hole standoffs. In Bottom mounting, the threaded standoffs are on the thermal solution and the carrier board has through-hole standoffs.

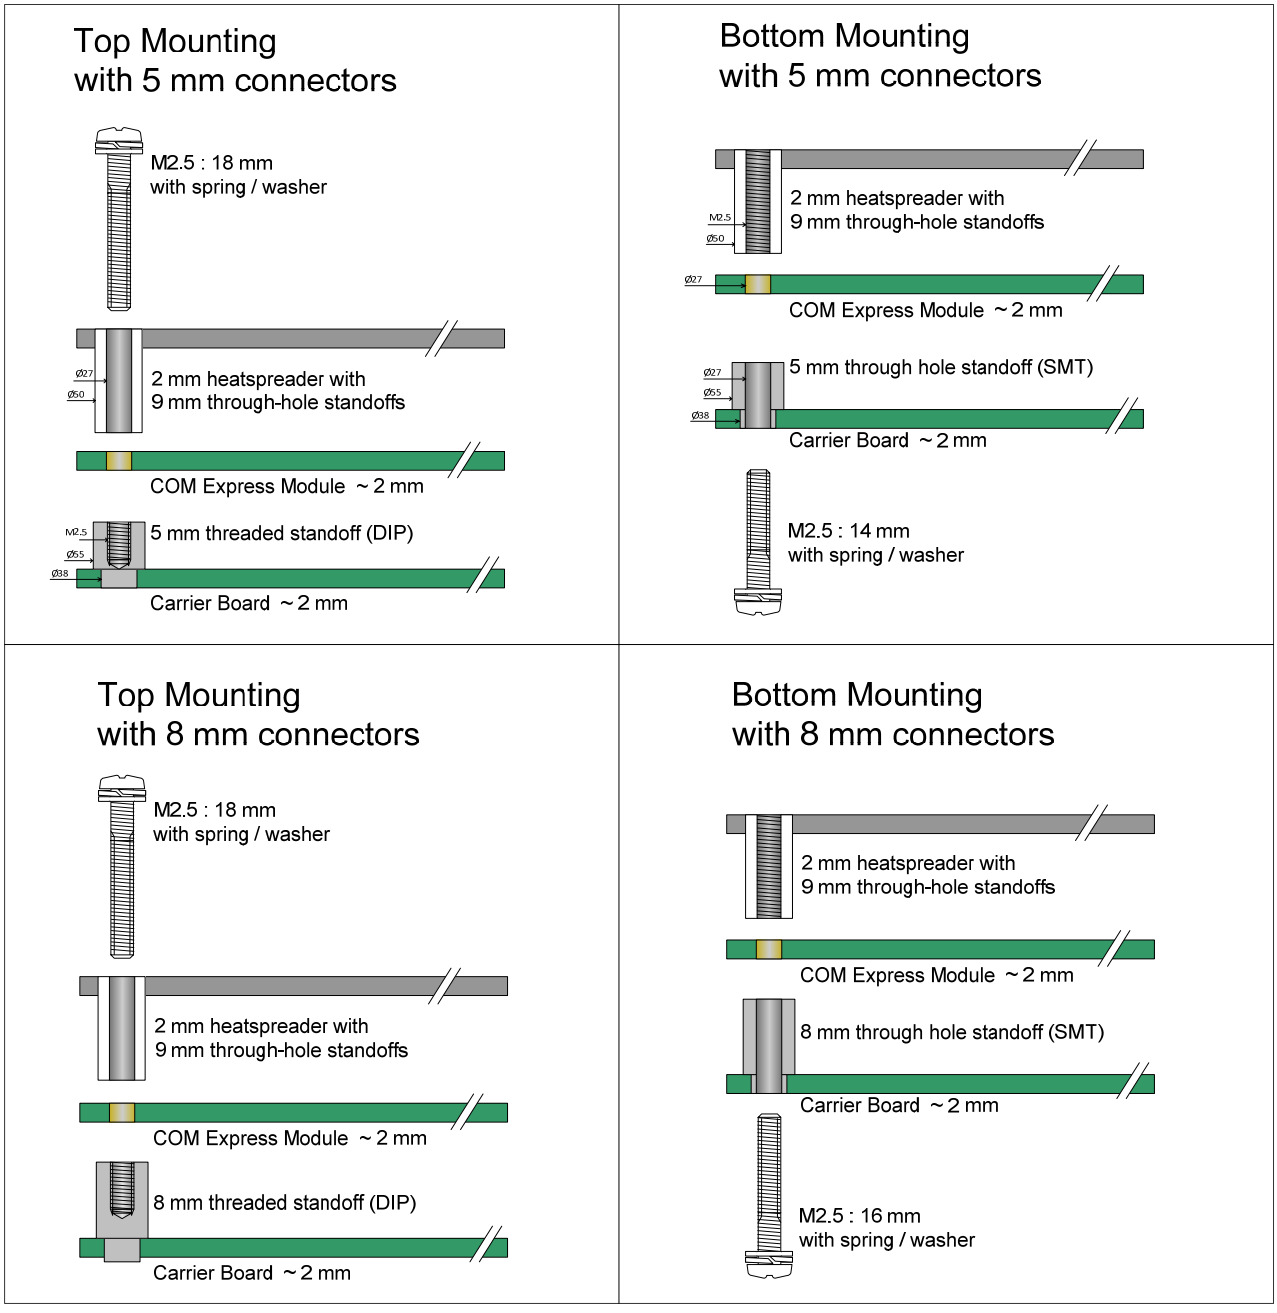


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.4. Standoff Types

The standoffs available for Top and Bottom mounting methods are shown below. Note that threaded standoffs are DIP type and through-hole standoffs are SMT type. Other types not listed are available upon request.


5mm through-hole standoff (SMT type)

P/N: 33-72000-0050

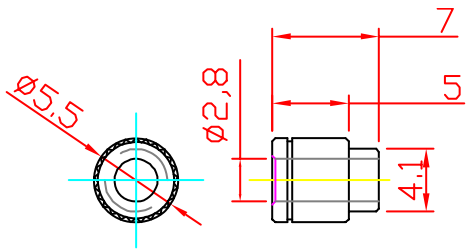


5mm threaded standoff (DIP type)

P/N: 33-72016-0050

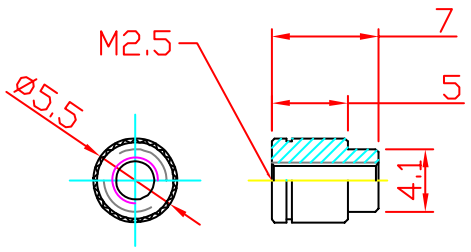


8mm through-hole standoff (SMT type)

P/N: 33-72000-0080

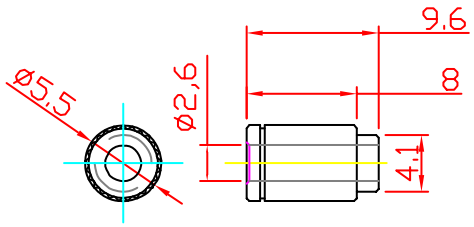

8mm threaded standoff (DIP type)

P/N: 33-72015-0050

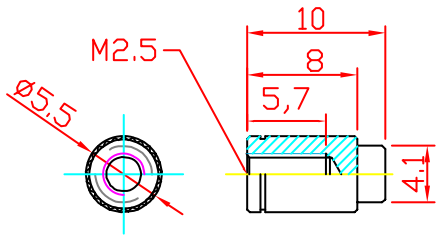

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Safety Instructions

Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.

- Please read these safety instructions carefully.
- Please keep this User‘s Manual for later reference.
- The equipment should be operated only from the type of power source indicated on the rating label. Make sure the voltage of the power source when connect the equipment to the power outlet.
- If your equipment has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- For pluggable equipment, that the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- If the equipment is not use for long time, disconnect the equipment from mains to avoid being damaged by transient overvoltage.
- All cautions and warnings on the equipment should be noted.
- Please keep this equipment from humidity.
- Do not use this equipment near water or a heat source.
- Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
- Never pour any liquid into opening; this could cause fire or electrical shock.
- Openings in the case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space around the system for ventilation when you set up your work area. Never insert objects of any kind into the ventilation openings.
- To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before removing covers.
- Lithium Battery provided (real time clock battery)

“CAUTION – Risk of explosion if battery is replaced with one of an incorrect type. Dispose of used batteries according to the instructions”

- If one of the following situations arises, get the equipment checked by a service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment has not work well or you can not get it work according to user‘s manual.
  - The equipment has dropped and damaged.
  - If the equipment has obvious sign of breakage.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service

Ask an Expert: http://askanexpert.adlinktech.com

ADLINK Technology, Inc.
Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.
Address: 5215 Hellyer Avenue, #110,
San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.
Address: 300 Fang Chun Rd., Zhangjiang Hi-Tech Park, Pudong New Area
Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology GmbH
Address: Hans-Thoma-Strasse 11,
D-68163, Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000