
COM Express®

Express-HL2

User's Manual

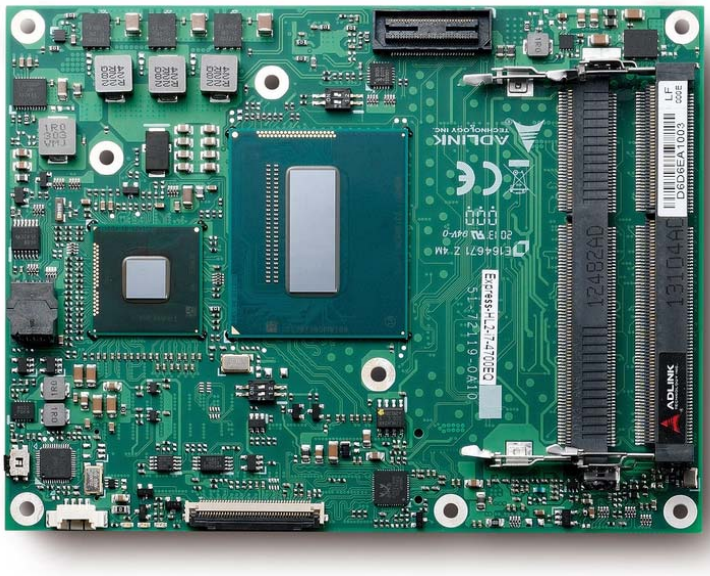

Manual Revision: 1.02

Revision Date: February 7, 2017

Part Number: 50-1J058-1020

ADLINK TECHNOLOGY INC.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Revision History

Revision	Description	Date	By
1.00	Initial release	2014-08-29	JC
1.01	Add BIOS beep codes; correct PCIe Configuration Switch settings	2014-10-22	JC
1.02	Update eDP-to-LVDS IC info	2017-02-07	JC

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Preface

Copyright 2014, 2017 ADLINK Technology, Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Revision History **2**

Preface **3**

1 Introduction **6**

2 Specifications **7**

2.1 Core System 7

2.2 Expansion Busses 7

2.3 Video 7

2.4 Audio 7

2.5 LAN 8

2.6 Multi I/O and Storage 8

2.7 TPM (Trusted Platform Module) 8

2.8 SEMA Board Controller 8

2.9 Debug 8

2.10 Power Specifications 9

2.11 Operating Temperatures 9

2.12 Environmental 9

2.13 Specification Compliance 9

2.14 Operating Systems 9

2.15 Function Diagram 10

2.16 Mechanical Drawing 11

3 Pinouts and Signal Descriptions **12**

3.1 AB / CD Pin Definitions 12

3.2 Signal Description Terminology 15

3.3 AB Signal Descriptions 16

3.4 CD Signal Descriptions 25

4 Connector Pinouts on Module **28**

4.1 40-pin Debug Connector 29

4.2 Status LEDs 31

4.3 XDP Debug header 32

4.4 Fan Connector 33

4.5 BIOS Setup Defaults Reset Button 33

4.6 Express-HL2 Switch Settings 34

4.7 PCIe x16-to-two-x8 Adapter Card 36

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Smart Embedded Management Agent (SEMA) 37
5.1 Board Specific SEMA Functions 38
6 System Resources 40
6.1 System Memory Map 40
6.2 Direct Memory Access Channels 40
6.3 I/O Map 41
6.4 Interrupt Request (IRQ) Lines 43
6.5 PCI Configuration Space Map 45
6.6 PCI Interrupt Routing Map 46
6.7 SMBus Slave Addresses 46
7 BIOS Setup 47
7.1 Menu Structure 47
7.2 Main 48
7.3 Advanced 53
7.4 Boot 69
7.5 Security 70
7.6 Save & Exit 70
8 BIOS Checkpoints, Beep Codes 71
8.1 Status Code Ranges 72
8.2 Standard Status Codes 72
8.3 OEM-Reserved Checkpoint Ranges 78
9 Mechanical Information 79
9.1 Board-to-Board Connectors 79
9.2 Thermal Solution 80
9.3 Mounting Methods 82
9.4 Standoff Types 83
Safety Instructions 84
Getting Service 85

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Introduction

The Express-HL2 is a COM Express® COM.0 R2.1 Type 2 module supporting the 64-bit 4th Generation Intel® Core™ i7/i5/3 processor with mobile Intel® QM87 Chipset or 4th Generation Intel® Celeron® processor with mobile Intel® HM86 Chipset. The Express-HL2 is specifically designed for customers who need high-level processing and graphics performance in a long product life solution.

The Express-HL2 features Intel® Hyper-Threading Technology (up to 4 cores, 8 threads) and non-ECC type DDR3L dual-channel memory at 1333/1600 MHz in dual stacked SODIMM sockets up to 16 GB to provide excellent overall performance. Intel® Flexible Display Interface and Direct Media Interface provide high speed connectivity to the mobile Intel® QM87/HM86 Chipset.

Integrated Intel® Generation 7.5 Graphics includes features such as OpenGL 3.1, DirectX 11, Intel® Clear Video HD Technology, Advanced Scheduler 2.0, 1.0, XPDM support, and DirectX Video Acceleration (DXVA) support for full AVC/VC1/MPEG2 hardware decode. Graphics outputs include VGA and LVDS. The Express-HL2 is specifically designed for customers with high-performance processing graphics requirements who want to outsource the custom core logic of their systems for reduced development time.

The Express-HL2 features a single onboard Gigabit Ethernet port, USB 2.0 ports, PATA port, SATA 6 Gb/s ports, 32-bit PCI bus, rev 2.3, and a multiplexed PCI Express® x16 graphics bus for discrete graphics expansion or general purpose PCI Express® x8 or x4 connectivity. Support is also provided for SMBus and I^2C and the module is equipped with SPI AMI EFI BIOS with CMOS backup, supporting embedded features such as remote console, CMOS backup, hardware monitor, and watchdog timer.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Specifications

2.1 Core System

- CPU: 4th Generation Intel® Core™ and Intel® Celeron® Processors - 22nm (formerly “Haswell”)
  - Intel® Core™ i7-4860EQ 1.8 GHz (3.2 GHz Turbo), 47W (4C/GT3)
  - Intel® Core™ i7-4700EQ 2.4/1.7 GHz (3.4 GHz Turbo), 47/37W (4C/GT2)
  - Intel® Core™ i5-4400E 2.7 GHz (3.3 GHz Turbo), 37W (2C/GT2)
  - Intel® Core™ i5-4402E 1.6 GHz (2.7 GHz Turbo), 25W (2C/GT2)
  - Intel® Core™ i3-4100E 2.4 GHz (no Turbo) 3MB, 37W (2C/GT2)
  - Intel® Core™ i5-4102E 1.6 GHz (no Turbo) 3MB, 25W (2C/GT2)
  - Intel® Celeron 2000E 2.2 GHz (no Turbo) 35W (2C/GT1)
  - Intel® Celeron 2002E 1.5 GHz (no Turbo) 25W (2C/GT1)
- L3 Cache: 6MB for i7-4650U, 3MB for i5-4400E, i5-4402E, i3-4100E and i3-4102E, 2MB for 2000E and 2002E
- Memory: Dual channel non-ECC 1600/1333 MHz DDR3L memory up to 16GB in dual SODIMM socket
- Chipset: Mobile Intel® QM87 Chipset (Intel® Core™ i7/i5/i3)

  Mobile Intel® QM87 Chipset (Intel® Celeron)
- BIOS: AMI EFI with CMOS backup in 8MB SPI BIOS with Intel® AMT 9.0 support (Intel® AMT not supported by HM86)

2.2 Expansion Busses

- PCI Express x16 (Gen3) or PCI Express (2 x8 or 1 x8 with 2 x4)
- 6 PCI Express x1 (AB): Lanes 0/1/2/3/4/5
- PCI: 32-bit PCI bus, rev 2.3
- LPC bus, SMBus (system) , I²C (user)

2.3 Video

- Integrated in Processor: Intel® Generation 7.5 graphics core architecture
- GPU Feature Support:
  - 2 independent and simultaneous display combinations of VGA / LVDS monitors
  - Encode/transcode HD content
  - Playback of high definition content including Blu-ray Disc
  - Superior image quality with sharper, more colorful images
  - Playback of Blu-ray disc S3D content using HDMI (1.4a spec compliant with 3D)
  - DirectX Video Acceleration (DXVA) support for accelerating video processing
  - Full AVC/VC1/MPEG2 HW Decode
  - Advanced Scheduler 2.0, 1.0, XPDM support
  - Windows 8, Windows 7, OSX, Linux OS support
  - DirectX 11, DirectX
- Multi Display Support: 2 independent displays
- Display Types
  - VGA Interface support with 300 MHz DAC Analog monitor support up to QXGA (2048 x 1536)
  - LVDS Interface single/dual channel 18/24-bit LVDS through eDP (two lane) to LVDS Realtek RTD2136R(N)
    Note: RTD2136R has been EOL'd and is replaced by RTD2136N in a running change.

2.4 Audio

- Integrated: Intel® HD Audio integrated in PCH QM87/HM86
- Audio Codec: Realtek ALC886 on Express-BASE

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.5 LAN

- Integrated: LAN MAC integrated in PCH QM87/HM86
- Intel PHY: Intel® Ethernet Controller i217LM
- Interface: 10/100/1000 GbE connection

2.6 Multi I/O and Storage

- Integrated in Intel® QM87/HM86 Express Chipset
- USB ports: 8 ports USB 2.0 (USB 0,1,2,3,4,5,6,7)
- SATA ports: four ports SATA 6Gb/s (SATA0, SATA1, SATA2, SATA3) – QM87
  three ports SATA 6Gb/s (SATA0, SATA2, SATA3, no SATA1) – HM86
- PATA ports: one PATA IDE (through SATA to PATA bridge)
- GPIO: 4 GPO and 4 GPI with interrupt

2.7 TPM (Trusted Platform Module)

- Chipset: ATMEL AT97SC3204
- Type: TPM 1.2

2.8 SEMA Board Controller

- Type: ADLINK Smart Embedded Management Agent (SEMA)
- Supports:
  - Voltage/Current monitoring
  - Power sequence debug support
  - AT/ATX mode control
  - Logistics and forensic information
  - Flat panel control
  - General purpose I2C
  - Failsafe BIOS (dual BIOS)
  - Watchdog timer and fan control

2.9 Debug

- 40-pin flat cable connector to be used with DB-40 debug module
  - Supports: BIOS POST code LEDs, BMC access, SPI BIOS flashing, power testpoints, debug LEDs
- 60-pin XDP header for ICE debug of CPU/chipset

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.10 Power Specifications

- Power Modes: AT and ATX mode (AT mode start controlled by SEMA)
- Standard Voltage Input: ATX = 12V±5% / 5Vsb ±5% or AT = 12V ±5%
- Wide Voltage Input: ATX = 8.5~20 V / 5Vsb ±5% or AT = 8.5 ~20V
- Power Management: ACPI 4.0 compliant, Smart Battery support
- Power States: supports C1-C6, S0, S1, S4, S3, S5, S5 ECO mode (Wake on USB S3/S4, WOL S3/S4/S5)

2.11 Operating Temperatures

- Standard Operating Temperature: 0°C to 60°C (wide voltage input)
- Extreme Rugged Operating Temperature: -40°C to 85°C (standard voltage input)

2.12 Environmental

- Humidity: 5-90% RH operating, non-condensing
  5-95% RH storage (and operating with conformal coating).
- Shock and Vibration: IEC 60068-2-64 and IEC-60068-2-27
  MIL-STD-202F, Method 213B, Table 213-I, Condition A and Method 214A, Table 214-I, Condition D
- Halt: Thermal Stress, Vibration Stress, Thermal Shock and Combined Test

2.13 Specification Compliance


- PICMG COM.0: Rev 2.1 Type 2, basic size 125 x 95 mm

2.14 Operating Systems

- Standard Support: Windows 7/8 32/64-bit, Linux 32/64-bit
- Extended Support (BSP): Windows Embedded Standard 7/8, Linux , VxWorks, QNX


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.15 Function Diagram

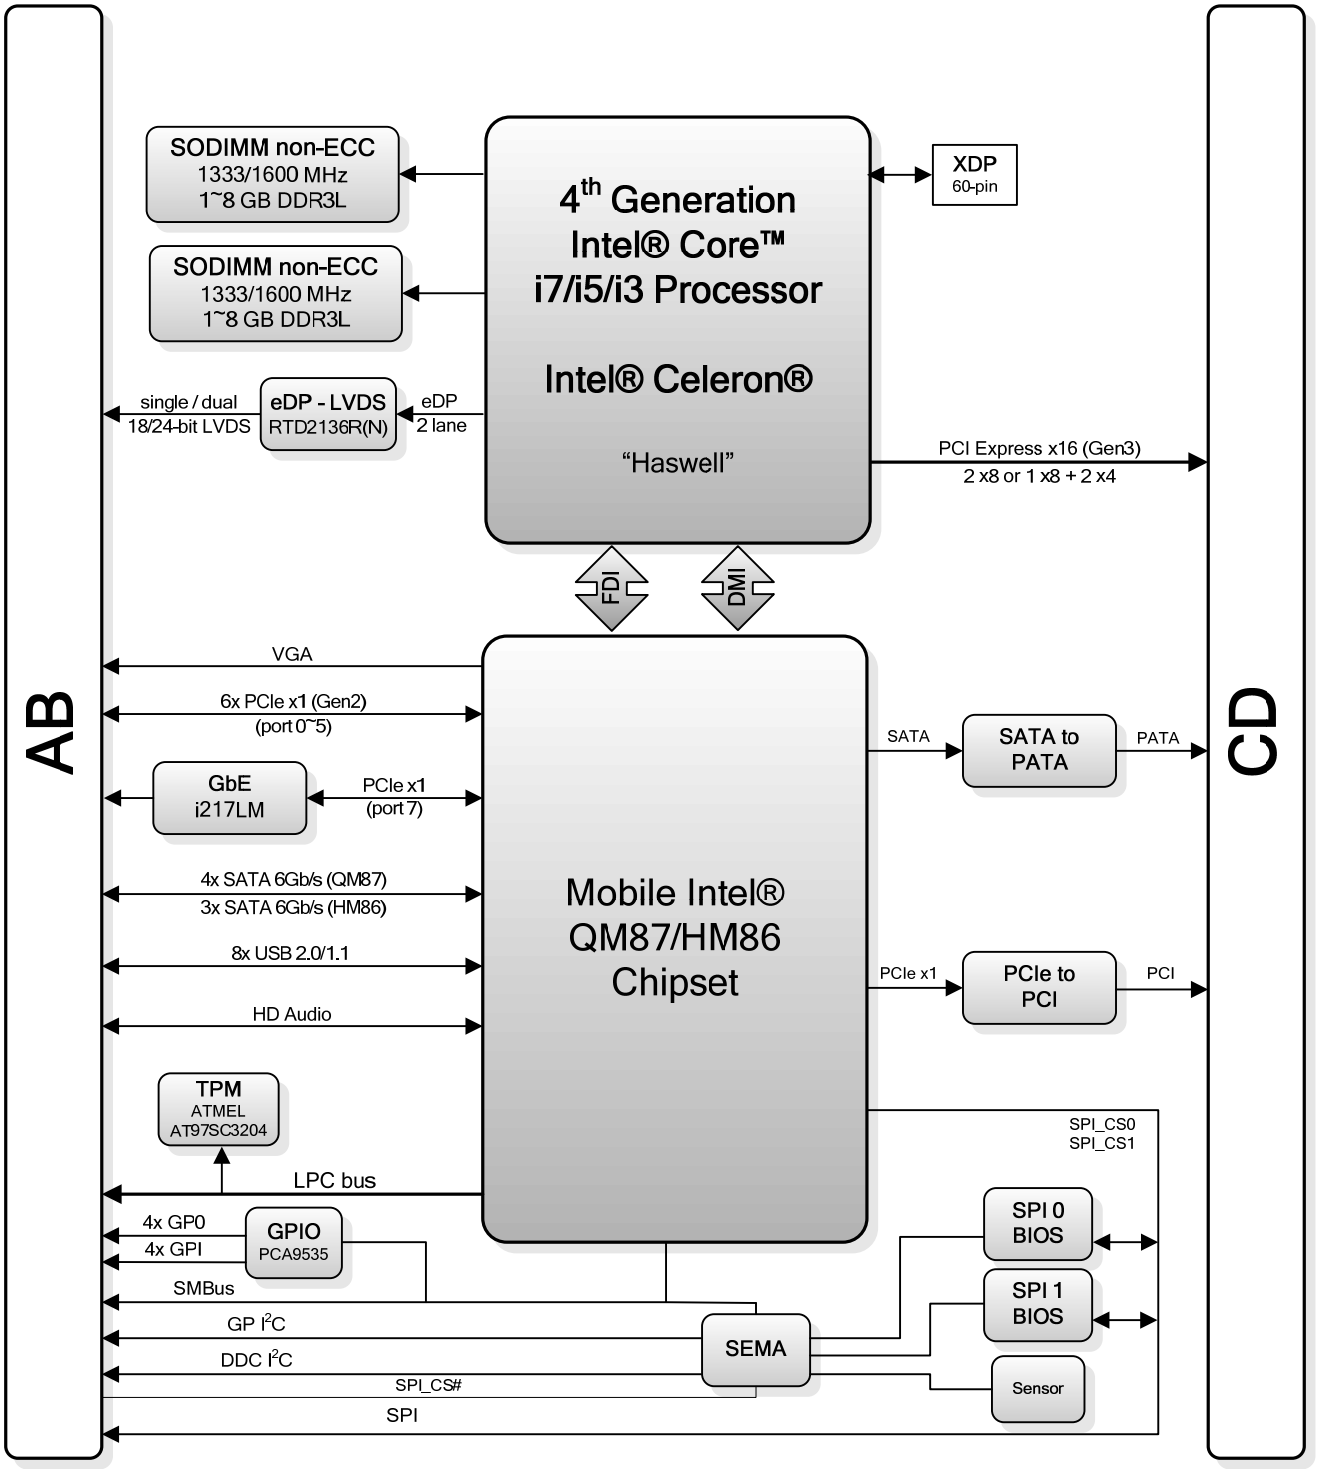

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.16 Mechanical Drawing

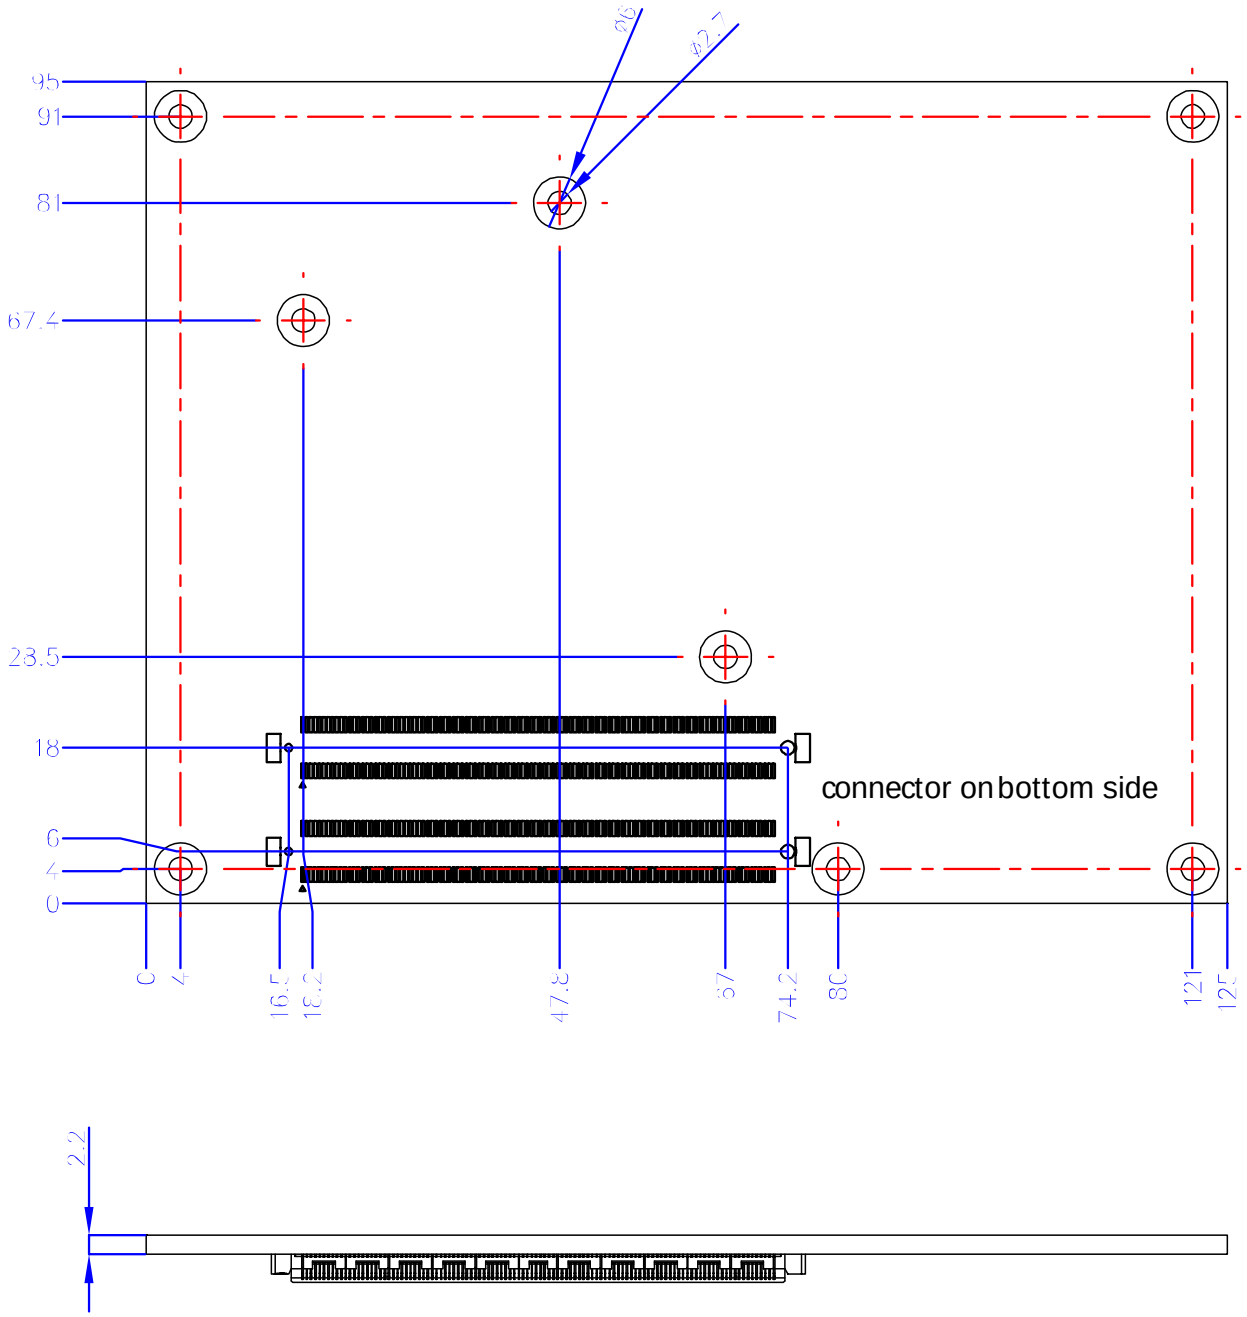

All ∅ tolerances ± 0.05 mm
Other tolerances ± 0.2 mm

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Pinouts and Signal Descriptions

3.1 AB / CD Pin Definitions

The Express-HL2 is a Type 2 module supporting PCI and PATA on the CD connector

All pins in the COM Express specification are described, including those not supported on the Express-HL2. Those not supported on the Express-HL2 module are crossed out

Row A		Row B		Row C		Row D	
Pin No.	Pin Name	Pin No.	Pin Name	Pin No.	Pin Name	Pin No.	Pin Name
A1	GND (FIXED)	B1	GND (FIXED)	C1	GND FIXED)	D1	GND FIXED)
A2	GBE0_MDI3-	B2	GBE0_ACT#	C2	IDE_D7	D2	IDE_D5
A3	GBE0_MDI3+	B3	LPC_FRAME#	C3	IDE_D6	D3	IDE_D10
A4	GBE0_LINK100#	B4	LPC_AD0	C4	IDE_D3	D4	IDE_D11
A5	GBE0_LINK1000#	B5	LPC_AD1	C5	IDE_D15	D5	IDE_D12
A6	GBE0_MDI2-	B6	LPC_AD2	C6	IDE_D8	D6	IDE_D4
A7	GBE0_MDI2+	B7	LPC_AD3	C7	IDE_D9	D7	IDE_D0
A8	GBE0_LINK#	B8	LPC_DRQ0#	C8	IDE_D2	D8	IDE_REQ
A9	GBE0_MDI1-	B9	LPC_DRQ1#	C9	IDE_D13	D9	IDE_IOW#
A10	GBE0_MDI1+	B10	LPC_CLK	C10	IDE_D1	D10	IDE_ACK#
A11	GND (FIXED)	B11	GND (FIXED)	C11	GND (FIXED)	D11	GND (FIXED)
A12	GBE0_MDI0-	B12	PWRBTN#	C12	IDE_D14	D12	IDE_IRQ
A13	GBE0_MDI0+	B13	SMB_CK	C13	IDE_IORDY	D13	IDE_A0
A14	GBE0_CTREF	B14	SMB_DAT	C14	IDE_IOR#	D14	IDE_A1
A15	SUS_S3#	B15	SMB_ALERT#	C15	PCI_PME#	D15	IDE_A2
A16	SATA0_TX+	B16	SATA1_TX+ *	C16	PCI_GNT2#	D16	IDE_CS1#
A17	SATA0_TX-	B17	SATA1_TX- *	C17	PCI_REQ2#	D17	IDE_CS3#
A18	SUS_S4#	B18	SUS_STAT#	C18	PCI_GNT1#	D18	IDE_RESET#
A19	SATA0_RX+	B19	SATA1_RX+ *	C19	PCI_REQ1#	D19	PCI_GNT3#
A20	SATA0_RX-	B20	SATA1_RX- *	C20	PCI_GNT0#	D20	PCI_REQ3#
A21	GND (FIXED)	B21	GND (FIXED)	C21	GND (FIXED)	D21	GND (FIXED)
A22	SATA2_TX+	B22	SATA3_TX+	C22	PCI_REQ0#	D22	PCI_AD1
A23	SATA2_TX-	B23	SATA3_TX-	C23	PCI_RESET#	D23	PCI_AD3
A24	SUS_S5#	B24	PWR_OK	C24	PCI_AD0	D24	PCI_AD5
A25	SATA2_RX+	B25	SATA3_RX+	C25	PCI_AD2	D25	PCI_AD7
A26	SATA2_RX-	B26	SATA3_RX-	C26	PCI_AD4	D26	PCI_C/BE0#
A27	BATLOW#	B27	WDT	C27	PCI_AD6	D27	PCI_AD9
A28	(S)ATA_ACT#	B28	AC/HDA_SDIN2	C28	PCI_AD8	D28	PCI_AD11
A29	AC/HDA_SYNC	B29	AC/HDA_SDIN1	C29	PCI_AD10	D29	PCI_AD13
A30	AC/HDA_RST#	B30	AC/HDA_SDIN0	C30	PCI_AD12	D30	PCI_AD15
A31	GND (FIXED)	B31	GND (FIXED)	C31	GND (FIXED)	D31	GND (FIXED)
A32	AC/HDA_BITCLK	B32	SPKR	C32	PCI_AD14	D32	PCI_PAR
A33	AC/HDA_SDOUT	B33	I2C_CK	C33	PCI_C/BE1#	D33	PCI_SERR#
A34	BIOS_DIS0#	B34	I2C_DAT	C34	PCI_PERR#	D34	PCI_STOP#
A35	THRMTRIP#	B35	THRM#	C35	PCI_LOCK#	D35	PCI_TRDY#
A36	USB6-	B36	USB7-	C36	PCI_DEVSEL#	D36	PCI_FRAME#
A37	USB6+	B37	USB7+	C37	PCI_IRDY#	D37	PCI_AD16
A38	USB_6_7_OC#	B38	USB_4_5_OC#	C38	PCI_C/BE2#	D38	PCI_AD18

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

A39	USB4-		B39	USB5-
A40	USB4+		B40	USB5+
A41	GND (FIXED)		B41	GND (FIXED)
A42	USB2-		B42	USB3-
A43	USB2+		B43	USB3+
A44	USB_2_3_OC#		B44	USB_0_1_OC#
A45	USB0-		B45	USB1-
A46	USB0+		B46	USB1+
A47	VCC_RTC		B47	EXCD1_PERST#
A48	EXCD0_PERST#		B48	EXCD1_CPPE#
A49	EXCD0_CPPE#		B49	SYS_RESET#
A50	LPC_SERIRQ		B50	CB_RESET#
A51	GND (FIXED)		B51	GND (FIXED)
A52	PCIE_TX5+		B52	PCIE_RX5+
A53	PCIE_TX5-		B53	PCIE_RX5-
A54	GPI0		B54	GPO1
A55	PCIE_TX4+		B55	PCIE_RX4+
A56	PCIE_TX4-		B56	PCIE_RX4-
A57	GND		B57	GPO2
A58	PCIE_TX3+		B58	PCIE_RX3+
A59	PCIE_TX3-		B59	PCIE_RX3-
A60	GND (FIXED)		B60	GND (FIXED)
A61	PCIE_TX2+		B61	PCIE_RX2+
A62	PCIE_TX2-		B62	PCIE_RX2-
A63	GPI1		B63	GPO3
A64	PCIE_TX1+		B64	PCIE_RX1+
A65	PCIE_TX1-		B65	PCIE_RX1-
A66	GND		B66	WAKE0#
A67	GPI2		B67	WAKE1#
A68	PCIE_TX0+		B68	PCIE_RX0+
A69	PCIE_TX0-		B69	PCIE_RX0-
A70	GND (FIXED)		B70	GND (FIXED)
A71	LVDS_A0+		B71	LVDS_B0+
A72	LVDS_A0-		B72	LVDS_B0-
A73	LVDS_A1+		B73	LVDS_B1+
A74	LVDS_A1-		B74	LVDS_B1-
A75	LVDS_A2+		B75	LVDS_B2+
A76	LVDS_A2-		B76	LVDS_B2-
A77	LVDS_VDD_EN		B77	LVDS_B3+
A78	LVDS_A3+		B78	LVDS_B3-
A79	LVDS_A3-		B79	LVDS_BKLT_EN
A80	GND (FIXED)		B80	GND (FIXED)
A81	LVDS_A_CK+		B81	LVDS_B_CK+
A82	LVDS_A_CK-		B82	LVDS_B_CK-
A83	LVDS_I2C_CK		B83	LVDS_BKLT_CTRL
A84	LVDS_I2C_DAT		B84	VCC_5V_SBY
A85	GPI3		B85	VCC_5V_SBY
A86	KBD_RST#		B86	VCC_5V_SBY
A87	KBD_A20GATE		B87	VCC_5V_SBY
A88	PCIE0_CK_REF+		B88	BIOS_DIS1#

C39	PCI_AD17		D39	PCI_AD20
C40	PCI_AD19		D40	PCI_AD22
C41	GND (FIXED)		D41	GND (FIXED)
C42	PCI_AD21		D42	PCI_AD24
C43	PCI_AD23		D43	PCI_AD26
C44	PCI_C/BE3#		D44	PCI_AD28
C45	PCI_AD25		D45	PCI_AD30
C46	PCI_AD27		D46	PCI_IRQC#
C47	PCI_AD29		D47	PCI_IRQD#
C48	PCI_AD31		D48	PCI_CLKRUN#
C49	PCI_IRQA#		D49	PCI_M66EN GND)
C50	PCI_IRQB#		D50	PCI_CLK
C51	GND (FIXED)		D51	GND (FIXED)
C52	PEG_RX0+		D52	PEG_TX0+
C53	PEG_RX0-		D53	PEG_TX0-
C54	TYPE0#		D54	PEG_LANE_RV#
C55	PEG_RX1+		D55	PEG_TX1+
C56	PEG_RX1-		D56	PEG_TX1-
C57	TYPE1#		D57	TYPE2#
C58	PEG_RX2+		D58	PEG_TX2+
C59	PEG_RX2-		D59	PEG_TX2-
C60	GND (FIXED)		D60	GND (FIXED)
C61	PEG_RX3+		D61	PEG_TX3+
C62	PEG_RX3-		D62	PEG_TX3-
C63	RSVD		D63	RSVD
C64	RSVD		D64	RSVD
C65	PEG_RX4+		D65	PEG_TX4+
C66	PEG_RX4-		D66	PEG_TX4-
C67	RSVD		D67	GND
C68	PEG_RX5+		D68	PEG_TX5+
C69	PEG_RX5-		D69	PEG_TX5-
C70	GND (FIXED)		D70	GND (FIXED)
C71	PEG_RX6+		D71	PEG_TX6+
C72	PEG_RX6-		D72	PEG_TX6-
C73	~~SDVO_DATA~~		D73	~~SDVO_CLK~~
C74	PEG_RX7+		D74	PEG_TX7+
C75	PEG_RX7-		D75	PEG_TX7-
C76	GND		D76	GND
C77	RSVD		D77	IDE_CBLID#
C78	PEG_RX8+		D78	PEG_TX8+
C79	PEG_RX8-		D79	PEG_TX8-
C80	GND (FIXED)		D80	GND (FIXED)
C81	PEG_RX9+		D81	PEG_TX9+
C82	PEG_RX9-		D82	PEG_TX9-
C83	RSVD		D83	RSVD
C84	GND		D84	GND
C85	PEG_RX10+		D85	PEG_TX10+
C86	PEG_RX10-		D86	PEG_TX10-
C87	GND		D87	GND
C88	PEG_RX11+		D88	PEG_TX11+

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

A89	PCIE0_CK_REF-		B89	VGA_RED
A90	GND (FIXED)		B90	GND (FIXED)
A91	SPI_POWER		B91	VGA_GRN
A92	SPI_MISO		B92	VGA_BLU
A93	GPO0		B93	VGA_HSYNC
A94	SPI_CLK		B94	VGA_VSYNC
A95	SPI_MOSI		B95	VGA_I2C_CK
A96	GND		B96	VGA_I2C_DAT
A97	TYPE10#		B97	SPI_CS#
A98	RSVD		B98	RSVD
A99	RSVD		B99	RSVD
A100	GND (FIXED)		B100	GND (FIXED)
A101	RSVD		B101	RSVD
A102	RSVD		B102	RSVD
A103	RSVD		B103	RSVD
A104	VCC_12V		B104	VCC_12V
A105	VCC_12V		B105	VCC_12V
A106	VCC_12V		B106	VCC_12V
A107	VCC_12V		B107	VCC_12V
A108	VCC_12V		B108	VCC_12V
A109	VCC_12V		B109	VCC_12V
A110	GND (FIXED)		B110	GND (FIXED)

C89	PEG_RX11-		D89	PEG_TX11-
C90	GND (FIXED)		D90	GND (FIXED)
C91	PEG_RX12+		D91	PEG_TX12+
C92	PEG_RX12-		D92	PEG_TX12-
C93	GND		D93	GND
C94	PEG_RX13+		D94	PEG_TX13+
C95	PEG_RX13-		D95	PEG_TX13-
C96	GND		D96	GND
C97	RSVD		D97	PEG_ENABLE#
C98	PEG_RX14+		D98	PEG_TX14+
C99	PEG_RX14-		D99	PEG_TX14-
C100	GND (FIXED)		D100	GND (FIXED)
C101	PEG_RX15+		D101	PEG_TX15+
C102	PEG_RX15-		D102	PEG_TX15-
C103	GND		D103	GND
C104	VCC_12V		D104	VCC_12V
C105	VCC_12V		D105	VCC_12V
C106	VCC_12V		D106	VCC_12V
C107	VCC_12V		D107	VCC_12V
C108	VCC_12V		D108	VCC_12V
C109	VCC_12V		D109	VCC_12V
C110	GND (FIXED)		D110	GND (FIXED)

*Note: SATA1 port not supported by HM86 chipset.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2 Signal Description Terminology

The following terms are used in the COM Express AB/CD Signal Descriptions below.

I	Input to the Module
O	Output from the Module
I/O	Bi-directional input / output signal
OD	Open drain output
I 3.3V	Input 3.3V tolerant
I 5V	Input 5V tolerant
O 3.3V	Output 3.3V signal level
O 5V	Output 5V signal level
I/O 3.3V	Bi-directional signal 3.3V tolerant
I/O 5V	Bi-directional signal 5V tolerant
I/O 3.3Vsb	Input 3.3V tolerant active in standby state
P	Power Input/Output
REF	Reference voltage output that may be sourced from a module power plane.
PDS	Pull-down strap. This is an output pin on the module that is either tied to GND or not connected. The signal is used to indicate the PICMG module type to the Carrier Board.
PU	ADLINK implemented pull-up resistor on module
PD	ADLINK implemented pull-down resistor on module

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3 AB Signal Descriptions

3.3.1 Audio Signals

Signal	Pin #	Description	I/O	PU/PD	Comment
AC_RST# / HDA_RST#	A30	Reset output to codec, active low.	O 3.3VSB		
AC_SYNC / HDA_SYNC	A29	Sample-synchronization signal to the codec(s).	O 3.3V		
AC_BITCLK / HDA_BITCLK	A32	Serial data clock generated by the external codec(s).	I/O 3.3V		
AC _SDOUT / HDA_SDOUT	A33	Serial TDM data output to the codec.	O 3.3V		
AC _SDIN[2:0] HDA_SDIN[2:0]	B28 B30	Serial TDM data inputs from up to 3 codecs.	I/O 3.3V		

3.3.2 Analog VGA

Signal	Pin #	Description	I/O	PU/PD	Comment
VGA_RED	B89	Red for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_GRN	B91	Green for monitor Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_BLU	B92	Blue for monitor. Analog DAC output, designed to drive a 37.5-Ohm equivalent load.	O Analog	PD 150R	Shall also be terminated on the carrier with 150Ω resistor to ground close to VGA connector
VGA_HSYNC	B93	Horizontal sync output to VGA monitor	O 3.3V		
VGA_VSYNC	B94	Vertical sync output to VGA monitor	O 3.3V		
VGA_I2C_CK	B95	DDC clock line (I²C port dedicated to identify VGA monitor capabilities)	I/O OD 3.3V	PU 2k2 3.3V	
VGA_I2C_DAT	B96	DDC data line.	I/O OD 3.3V	PU 2k2 3.3V	

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.3 LVDS

Signal	Pin #	Description	I/O	PU/PD	Comment
LVDS_A0+ LVDS_A0- LVDS_A1+ LVDS_A1- LVDS_A2+ LVDS_A2- LVDS_A3+ LVDS_A3-	A71 A72 A73 A74 A75 A76 A78 A79	LVDS Channel A differential pairs	O LVDS		
LVDS_A_CK+ LVDS_A_CK-	A81 A82	LVDS Channel A differential clock	O LVDS		
LVDS_B0+ LVDS_B0- LVDS_B1+ LVDS_B1- LVDS_B2+ LVDS_B2- LVDS_B3+ LVDS_B3-	B71 B72 B73 B74 B75 B76 B77 B78	LVDS Channel B differential pairs	O LVDS		
LVDS_B_CK+ LVDS_B_CK-	B81 B82	LVDS Channel B differential clock	O LVDS		
LVDS_VDD_EN	A77	LVDS panel power enable	O 3.3V		
LVDS_BKLT_EN	B79	LVDS panel backlight enable	O 3.3V		
LVDS_BKLT_CTRL	B83	LVDS panel backlight brightness control	O 3.3V	PD 100K	Realtek ePD to LVDS requirement
LVDS_I2C_CK	A83	DDC lines used for flat panel detection and control.	O 3.3V	PU 2k2 3.3V	
LVDS_I2C_DAT	A84	DDC lines used for flat panel detection and control.	I/O 3.3V	PU 2k2 3.3V	

3.3.4 Gigabit Ethernet

Gigabit Ethernet	Pin #	Description	I/O	PU/PD	Comment
GBE0_MDI0+ GBE0_MDI0- GBE0_MDI1+ GBE0_MDI1- GBE0_MDI2+ GBE0_MDI2- GBE0_MDI3+ GBE0_MDI3-	A13 A12 A10 A9 A7 A6 A3 A2	Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0, 1, 2, 3. The MDI can operate in 1000, 100, and 10Mbit/sec modes. Some pairs are unused in some modes according to the following: 1000BASE-T / 100BASE-TX / 10BASE-T MDI[0]+/- B1_DA+/- TX+/- TX+/- MDI[1]+/- B1_DB+/- RX+/- RX+/- MDI[2]+/- B1_DC+/- MDI[3]+/- B1_DD+/-	I/O Analog		Twisted pair signals for external transformer.
GBE0_ACT#	B2	Gigabit Ethernet Controller 0 activity indicator, active low.	O 3.3VSB	PU 10k 3.3VSB	
GBE0_LINK#	A8	Gigabit Ethernet Controller 0 link indicator, active low.	O 3.3VSB		
GBE0_LINK100#	A4	Gigabit Ethernet Controller 0 100Mbit/sec link indicator, active low.	O 3.3VSB		
GBE0_LINK1000#	A5	Gigabit Ethernet Controller 0 1000Mbit/sec link indicator, active low.	O 3.3VSB		
GBE0_CTREF	A14	Reference voltage for Carrier Board Ethernet channel 1 and 2 magnetics center tap. The reference voltage is determined by the requirements of the Module PHY and may be as low as 0V and as high as 3.3V. The reference voltage output shall be current limited on the Module. In the case in which the reference is shorted to ground, the current shall be 250 mA or less.	GND min 3.3V max		

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.5 Serial ATA

Signal	Pin #	Description	I/O	PU/PD	Comment
SATA0_TX+ SATA0_TX-	A16 A17	Serial ATA channel 0, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA0_RX+ SATA0_RX-	A19 A20	Serial ATA channel 0, Receive Input differential pair.	I SATA		AC coupled on Module
SATA1_TX+* SATA1_TX-*	B16 B17	Serial ATA channel 1, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA1_RX+* SATA1_RX-*	B19 B20	Serial ATA channel 1, Receive Input differential pair.	I SATA		AC coupled on Module
SATA2_TX+ SATA2_TX-	A22 A23	Serial ATA channel 2, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA2_RX+ SATA2_RX-	A25 A26	Serial ATA channel 2, Receive Input differential pair.	I SATA		AC coupled on Module
SATA3_TX+ SATA3_TX-	B22 B23	Serial ATA channel 3, Transmit Output differential pair.	O SATA		AC coupled on Module
SATA3_RX+ SATA3_RX-	B25 B26	Serial ATA channel 3, Receive Input differential pair.	I SATA		AC coupled on Module
(S)ATA_ACT#	A28	ATA (parallel and serial) or SAS activity indicator, active low.	O 3.3V		

*Note: SATA1 port not supported by HM86 chipset.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.6 PCI Express

Signal	Pin #	Description	I/O	PU/PD	Comment
PCIE_TX0+ PCIE_TX0-	A68 A69	PCI Express channel 0, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX0+ PCIE_RX0-	B68 B69	PCI Express channel 0, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX1+ PCIE_TX1-	A64 A65	PCI Express channel 1, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX1+ PCIE_RX1-	B64 B65	PCI Express channel 1, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX2+ PCIE_TX2-	A61 A62	PCI Express channel 2, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX2+ PCIE_RX2-	B61 B62	PCI Express channel 2, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX3+ PCIE_TX3-	A58 A59	PCI Express channel 3, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX3+ PCIE_RX3-	B58 B59	PCI Express channel 3, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX4+ PCIE_TX4-	A55 A56	PCI Express channel 4, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX4+ PCIE_RX4-	B55 B56	PCI Express channel 4, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_TX5+ PCIE_TX5-	A52 A53	PCI Express channel 5, Transmit Output differential pair.	O PCIE		AC coupled on Module
PCIE_RX5+ PCIE_RX5-	B52 B53	PCI Express channel 5, Receive Input differential pair.	I PCIE		AC coupled off Module
PCIE_CLK_REF+ PCIE_CLK_REF-	A88 A89	PCI Express Reference Clock output for all PCI Express and PCI Express Graphics Lanes.	O PCIE		

3.3.7 Express Card

Signal	Pin #	Description	I/O	PU/PD	Comment
EXCD0_CPPE# EXCD1_CPPE#	A49 B48	PCI ExpressCard: PCI Express capable card request	I 3.3V	PU 10k 3.3V	
EXCD0_PERST# EXCD1_PERST#	A48 B47	PCI ExpressCard: reset	O 3.3V		

3.3.8 LPC Bus

Signal	Pin #	Description	I/O	PU/PD	Comment
LPC_AD[0:3]	B4-B7	LPC multiplexed address, command and data bus	I/O 3.3V		
LPC_FRAME#	B3	LPC frame indicates the start of an LPC cycle	O 3.3V		
LPC_DRQ0# LPC_DRQ1#	B8 B9	LPC serial DMA request	I 3.3V		
LPC_SERIRQ	A50	LPC serial interrupt	I/O OD 3.3V	PU 8k2 3.3V	
LPC_CLK	B10	LPC clock output - 33MHz nominal	O 3.3V		


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.9 USB

Signal	Pin #	Description	I/O	PU/PD	Comment
USB0+ USB0-	A46 A45	USB differential data pairs for Port 0	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB1+ USB1-	B46 B45	USB differential data pairs for Port 1	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB2+ USB2-	A43 A42	USB differential data pairs for Port 1	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB3+ USB3-	B43 B42	USB differential data pairs for Port 2	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB4+ USB4-	A40 A39	USB differential data pairs for Port 3	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB5+ USB5-	B40 B39	USB differential data pairs for Port 4	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB6+ USB6-	A37 A36	USB differential data pairs for Port 5	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB7+ USB7-	B37 B37	USB differential data pairs for Port 6	I/O 3.3VSB		USB 1.1/ 2.0 compliant
USB_0_1_OC#	B44	USB over-current sense, USB ports 0 and 1. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_2_3_OC#	A44	USB over-current sense, USB ports 2 and 3. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low. .	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_4_5_OC#	B38	USB over-current sense, USB ports 4 and 5. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier
USB_6_7_OC#	A38	USB over-current sense, USB ports 6 and 7. A pull-up for this line shall be present on the module. An open drain driver from a USB current monitor on the carrier board may drive this line low.	I 3.3VSB	PU 10k 3.3VSB	Do not pull high on carrier

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.10 USB Root Segmentation

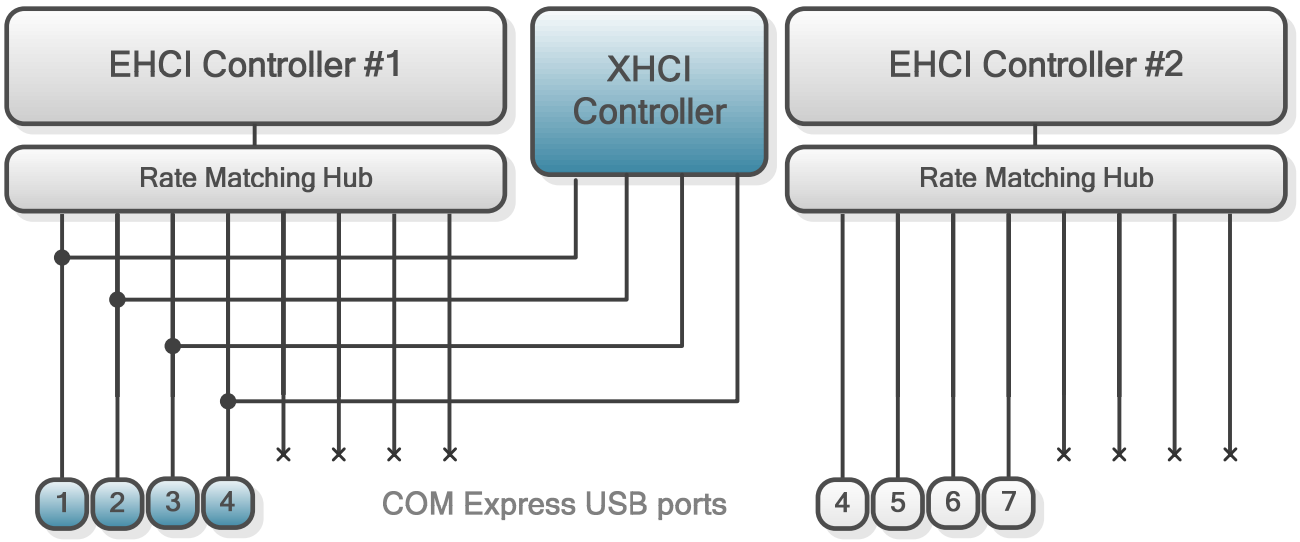

3.3.11 SPI (BIOS only)

Signal	Pin #	Description	I/O	PU/PD	Comment
SPI_CS#	B97	Chip select for Carrier Board SPI BIOS Flash.	O 3.3VSB		
SPI_MISO	A92	Data in to module from carrier board SPI BIOS flash.	I 3.3VSB		
SPI_MOSI	A95	Data out from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_CLK	A94	Clock from module to carrier board SPI BIOS flash.	O 3.3VSB		
SPI_POWER	A91	Power supply for Carrier Board SPI – sourced from Module – nominally 3.3V. The Module shall provide a minimum of 100mA on SPI_POWER. Carriers shall use less than 100mA of SPI_POWER. SPI_POWER shall only be used to power SPI devices on the Carrier	O P 3.3VSB		
BIOS_DIS0#	A34	Selection strap to determine the BIOS boot device.	I	PU 10K 3.3V	Carrier shall pull to GND or leave no- connect.
BIOS_DIS1#	B88	Selection strap to determine the BIOS boot device.	I	PU 10K 3.3V	Carrier shall pull to GND or leave no- connect

3.3.12 Miscellaneous

Signal	Pin #	Description	I/O	PU/PD	Comment
SPKR	B32	Output for audio enunciator, the “speaker” in PC-AT systems	O 3.3V		
WDT	B27	Output indicating that a watchdog time-out event has occurred.	O 3.3V		
THRM#	B35	Input from off-module temp sensor indicating an over-temp situation.	I 3.3V		
THERMTRIP#	A35	Active low output indicating that the CPU has entered thermal shutdown.	O 3.3V	PU 330 3.3V	
FAN_PWMOUT	B101	Fan speed control. Uses the Pulse Width Modulation (PWM) technique to control the fan’s RPM.	O OD 3.3V		
FAN_TACHIN11	B102	Fan tachometer input for a fan with a two pulse output.	I OD 3.3V	PU 10k 3.3V	
TPM_PP11	C83	Trusted Platform Module (TPM) Physical Presence pin. Active high. TPM chip has an internal pull down. This signal is used to indicate Physical Presence to the TPM.	I 3.3V	PD 10k 3.3V	PD is only placed when TPM is installed on module

3.3.13 SMBus

Signal	Pin #	Description	I/O	PU/PD	Comment
SMB_CK	B13	System Management Bus bidirectional clock line. Power sourced through 5V standby rail and main power rails.	I/O OD 3.3VSB	PU 2k2 3.3VSB	
SMB_DAT#	B14	System Management Bus bidirectional data line. Power sourced through 5V standby rail and main power rails.	I/O OD 3.3VSB	PU 2k2 3.3VSB	
SMB_ALERT#	B15	System Management Bus Alert – active low input can be used to generate an SMI# (System Management Interrupt) or to wake the system. Power sourced through 5V standby rail and main power rails.	I 3.3VSB	PU 10k 3.3VSB	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.14 I2C Bus

Signal	Pin #	Description	I/O	PU/PD	Comment
I2C_CK	B33	General purpose I²C port clock output/input	I/O OD 3.3VSB	PU 2k2 3.3VSB	
I2C_DAT	B34	General purpose I²C port data I/O line	I/O OD 3.3VSB	PU 2k2 3.3VSB	

3.3.15 General Purpose I/O (GPIO)

Signal	Pin #	Description	I/O	PU/PD	Comment
GPO[0]	A93	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[1]	B54	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[2]	B57	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPO[3]	B63	General purpose output pins.	O 3.3V	PU 10K 3.3V	After hardware RESET output low
GPI[0]	A54	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[1]	A63	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[2]	A67	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	
GPI[3]	A85	General purpose input pins. Pulled high internally on the module.	I 3.3V	PU 10K 3.3V	

3.3.16 Serial Interface Signals

Signal	Pin #	Description	I/O	PU/PD	Comment
SER0_TX	A98	General purpose serial port transmitter (TTL level output)	O CMOS		Power rail tolerance 5V / 12V
SER0_RX	A99	General purpose serial port receiver (TTL level input)	I CMOS		Power rail tolerance 5V / 12V
SER1_TX	A101	General purpose serial port transmitter (TTL level output)	O CMOS		Power rail tolerance 5V / 12V
SER1_RX	A102	General purpose serial port receiver (TTL level input)	I CMOS		Power rail tolerance 5V / 12V

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.3.17 Power and System Management

Signal	Pin #	Description	I/O	PU/PD	Comment
PWRBTN#	B12	Power button to bring system out of S5 (soft off), active on falling edge.	I 3.3VSB	PU 10k 3.3VSB	
SYS_RESET#	B49	Reset button input. Active low request for module to reset and reboot. May be falling edge sensitive. For situations when SYS_RESET# is not able to reestablish control of the system, PWR_OK or a power cycle may be used.	I 3.3VSB	PU 10k 3.3VSB	
CB_RESET#	B50	Reset output from module to Carrier Board. Active low. Issued by module chipset and may result from a low SYS_RESET# input, a low PWR_OK input, a VCC_12V power input that falls below the minimum specification, a watchdog timeout, or may be initiated by the module software.	O 3.3VSB		
PWR_OK	B24	Power OK from main power supply. A high value indicates that the power is good. This signal can be used to hold off Module startup to allow carrier based FPGAs or other configurable devices time to be programmed.	I 3.3V	PU 100k 3.3VSB	
SUS_STAT#	B18	Indicates imminent suspend operation; used to notify LPC devices.	O 3.3VSB		
SUS_S3#	A15	Indicates system is in Suspend to RAM state. Active-low output. An inverted copy of SUS_S3# on the carrier board (also known as “PS_ON”) may be used to enable the non-standby power on a typical ATX power supply.	O 3.3VSB		
SUS_S4#	A18	Indicates system is in Suspend to Disk state. Active low output.	O 3.3VSB		
SUS_S5#	A24	Indicates system is in Soft Off state.	O 3.3VSB		
WAKE0#	B66	PCI Express wake up signal.	I 3.3VSB	PU 10k 3.3VSB	
WAKE1#	B67	General purpose wake up signal. May be used to implement wake-up on PS/2 keyboard or mouse activity.	I 3.3VSB	PU 10k 3.3VSB	
BATLOW#	A27	Battery low input. This signal may be driven low by external circuitry to signal that the system battery is low, or may be used to signal some other external power-management event.	I 3.3VSB	PU 10k 3.3VSB	
LID#		LID button. Low active signal used by the ACPI operating system for a LID switch.	I OD 3.3VSB	PU 10k 3.3VSB	
SLEEP#		Sleep button. Low active signal used by the ACPI operating system to bring the system to sleep state or to wake it up again.	I OD 3.3VSB	PU 10K 3.3VSB	

3.3.18 Power and Ground

Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	A104-A109 B104-B109	Primary power input: +12V nominal (8.5 ~ 20V wide input). All available VCC_12V pins on the connector(s) shall be used.	P		8.5V ~20V
VCC_5V_SBY	B84-B87	Standby power input: +5.0V nominal. If VCC5_SBY is used, all available VCC_5V_SBY pins on the connector(s) shall be used. Only used for standby and suspend functions. May be left unconnected if these functions are not used in the system design.	P		5Vsb ±5%
VCC_RTC	A47	Real-time clock circuit-power input. Nominally +3.0V.	P		
GND	A1, A11, A21, A31, A41, A51, A57, A66, A80, A90, A96, A100, A110, B1, B11, B21 ,B31, B41, B51, B60, B70, B80, B90, B100, B110	Ground - DC power and signal and AC signal return path.	P		

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.4 CD Signal Descriptions

3.4.1 PATA IDE

Signal	Pin #	Description	I/O	PU/PD	Comment
IDE_D0 IDE_D1 IDE_D2 IDE_D3 IDE_D4 IDE_D5 IDE_D6 IDE_D7 IDE_D8 IDE_D9 IDE_D10 IDE_D11 IDE_D12 IDE_D13 IDE_D14 IDE_D15	D7 C10 C8 C4 D6 D2 C3 C2 C6 C7 D3 D4 D5 C9 C12 C5	Bidirectional data to / from IDE device.	I/O 3.3V		
IDE_A0	D13	Address lines to IDE device.	O 3.3V		
IDE_A1	D14	Address lines to IDE device.	O 3.3V		
IDE_A2	D15	Address lines to IDE device.	O 3.3V		
IDE_IOW#	D9	I/O write line to IDE device. Data latched on trailing (rising) edge.	O 3.3V		
IDE_IOR#	C14	I/O read line to IDE device.	O 3.3V		
IDE_REQ	D8	IDE Device DMA Request. It is asserted by the IDE device to request a data transfer.	I 3.3V		
IDE_ACK#	D10	IDE Device DMA Acknowledge.	O 3.3V		
IDE_CS1#	D16	IDE Device Chip Select for 1F0h to 1FFh range.	O 3.3V		
IDE_CS3#	D17	IDE Device Chip Select for 3F0h to 3FFh range.	O 3.3V		
IDE_IORDY	C13	IDE device I/O ready input. Pulled low by the IDE device to extend the cycle.	I 3.3V	PU 4k7 3.3V	
IDE_RESET#	D18	Reset output to IDE device, active low.	O 3.3V		
IDE_IRQ	D12	Interrupt request from IDE device.	I 3.3V	PD 10k shall	
IDE_CBLID#	D77	Input from off-module hardware indicating the type of IDE cable being used. High indicates a 40-pin cable used for legacy IDE modes. Low indicates that an 80-pin cable with interleaved grounds is used. Such a cable is required for Ultra-DMA 66, 100 and 133 modes.	I 3.3V		

3.4.2 PCI

Signal	Pin #	Description	I/O	PU/PD	Comment
PCI_AD0 PCI_AD1 PCI_AD2 PCI_AD3 PCI_AD4 PCI_AD5 PCI_AD6 PCI_AD7 PCI_AD8 PCI_AD9 PCI_AD10 PCI_AD11 PCI_AD12	C24 D22 C25 D23 C26 D24 C27 D25 C28 D27 C29 D28 C30	PCI bus multiplexed address and data lines	I/O 3.3V		

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Signal	Pin #	Description	I/O	PU/PD	Comment
PCI_AD13 PCI_AD14 PCI_AD15 PCI_AD16 PCI_AD17 PCI_AD18 PCI_AD19 PCI_AD20 PCI_AD21 PCI_AD22 PCI_AD23 PCI_AD24 PCI_AD25 PCI_AD26 PCI_AD27 PCI_AD28 PCI_AD29 PCI_AD30 PCI_AD31	D29 C32 D30 D37 C39 D38 C40 D39 C42 D40 C43 D42 C45 D43 C46 D44 C47 D45 C48				
PCI_C/BE0# PCI_C/BE1# PCI_C/BE2# PCI_C/BE3#	D26 C33 C38 C44	PCI bus byte enable lines, active low	I/O 3.3V		
PCI_DEVSEL#	C36	PCI bus Device Select, active low.	I/O 3.3V	PU 8k2 3.3V	
PCI_FRAME#	D36	PCI bus Frame control line, active low.	I/O 3.3V	PU 8k2 3.3V	
PCI_IRDY#	C37	PCI bus Initiator Ready control line, active low.	I/O 3.3V	PU 8k2 3.3V	
PCI_TRDY#	D35	PCI bus Target Ready control line, active low.	I/O 3.3V	PU 8k2 3.3V	
PCI_STOP#	D34	PCI bus STOP control line, active low, driven by cycle initiator.	I/O 3.3V	PU 8k2 3.3V	
PCI_PAR	D32	PCI bus parity	I/O 3.3V		
PCI_PERR#	C34	Parity Error: An external PCI device drives PERR# when it receives data that has a parity error.	I/O 3.3V	PU 8k2 3.3V	
PCI_REQ0# PCI_REQ1# PCI_REQ2# PCI_REQ3#	C22 C19 C17 D20	PCI bus master request input lines, active low.	I 3.3V	PU 8k2 3.3V	
PCI_GNT0# PCI_GNT1# PCI_GNT2# PCI_GNT3#	C20 C18 C16 D19	PCI bus master grant output lines, active low.	O 3.3V		PCI_GNT[0..3]# are boot strap signals
PCI_RESET#	C23	PCI Reset output, active low.	O 3.3V		
PCI_LOCK#	C35	PCI Lock control line, active low.	I/O 3.3V	PU 8k2 3.3V	
PCI_SERR#	D33	System Error: SERR# may be pulsed active by any PCI device that detects a system error condition.	I/O 3.3V	PU 8k2 3.3V	
PCI_PME#	C15	PCI Power Management Event: PCI peripherals drive PME# to wake system from low-power states S1–S5.	I 3.3VSB		
PCI_CLKRUN#	D48	Bidirectional pin used to support PCI clock run protocol for mobile systems.	I/O 3.3V	PU 10k 3.3V	
PCI_IRQA#	C49	PCI interrupt request lines	I 3.3V	PU 8k2	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Signal	Pin #	Description	I/O	PU/PD	Comment
PCI_IRQB# PCI_IRQC# PCI_IRQD#	C50 D46 D47			3.3V	
PCI_CLK	D50	PCI 33MHz clock output	O 3.3V		

3.4.3 Module Type Definition

Signal	Pin #	Description	I/O	Comment
TYPE0# TYPE1# TYPE2#	C54 C57 D57	The TYPE pins indicate to the Carrier Board the Pin-out Type that is implemented on the module. The pins are tied on the module to either ground (GND) or are no-connects (NC). For Pinout Type 1, these pins are don't care (X). TYPE2# TYPE1# TYPE0# X X X Pinout Type 1 NC NC NC Pinout Type 2 NC NC GND Pinout Type 3 (no IDE) NC GND NC Pinout Type 4 (no PCI) NC GND GND Pinout Type 5 (no IDE, no PCI) GND NC NC Pinout Type 6 (no IDE, no PCI) The Carrier Board should implement combinatorial logic that monitors the module TYPE pins and keeps power off (e.g deactivates the ATX_ON signal for an ATX power supply) if an incompatible module pin-out type is detected. The Carrier Board logic may also implement a fault indicator such as an LED.		Type 2

3.4.4 Power and Ground


Signal	Pin #	Description	I/O	PU/PD	Comment
VCC_12V	C104-C109 D104-D109	Primary power input: +12V nominal (wide range 5 ~ 20V). All available VCC_12V pins on the connector(s) shall be used	P		8.5~20 V
GND	C1, C11, C21, C31, C41, C51, C60, C70, C76, C80, C84, C87, C90, C93, C96, C100, C103, C110, D1, D11, D21, D31, D41, D51, D60, D67, D70, D76, D80, D84, D87, D90, D93, D96, D100, D103, D110	Ground - DC power and signal and AC signal return path. All available GND connector pins shall be used and tied to carrier board GND plane.	P		

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Connector Pinouts on Module

This chapter describes connectors and pinouts, LEDs and switches that are used on the module but are not included in the PICMG standard specification


- Connector and LED Locations

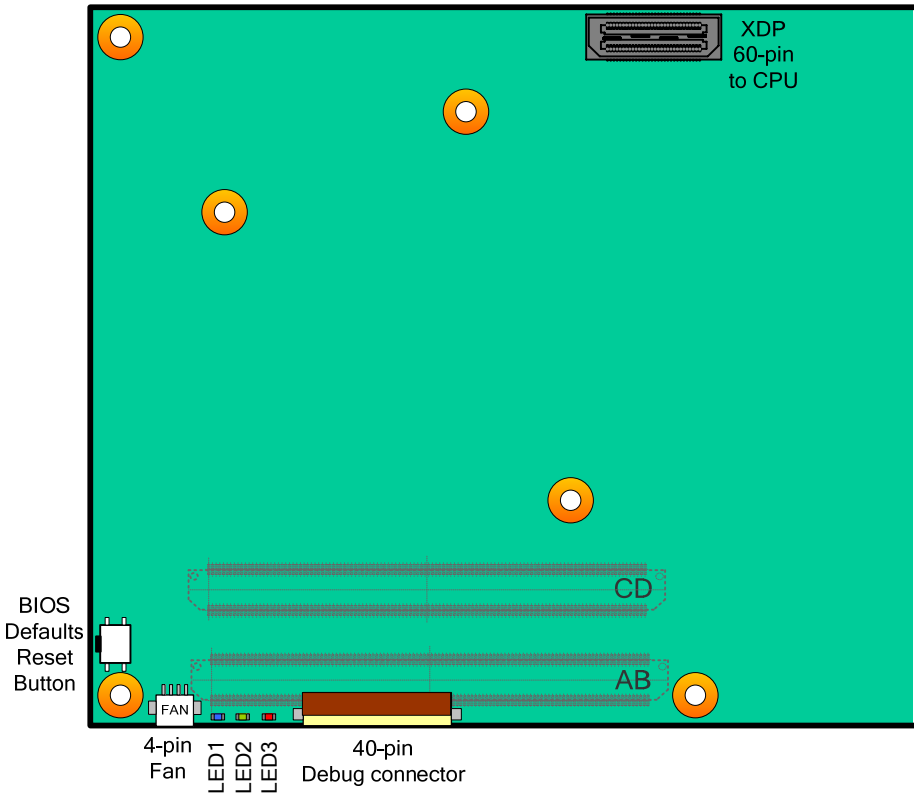


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.1 40-pin Debug Connector

- FPC Connector Type: FCI 59GF Flex 10042867
- Pin Orientation

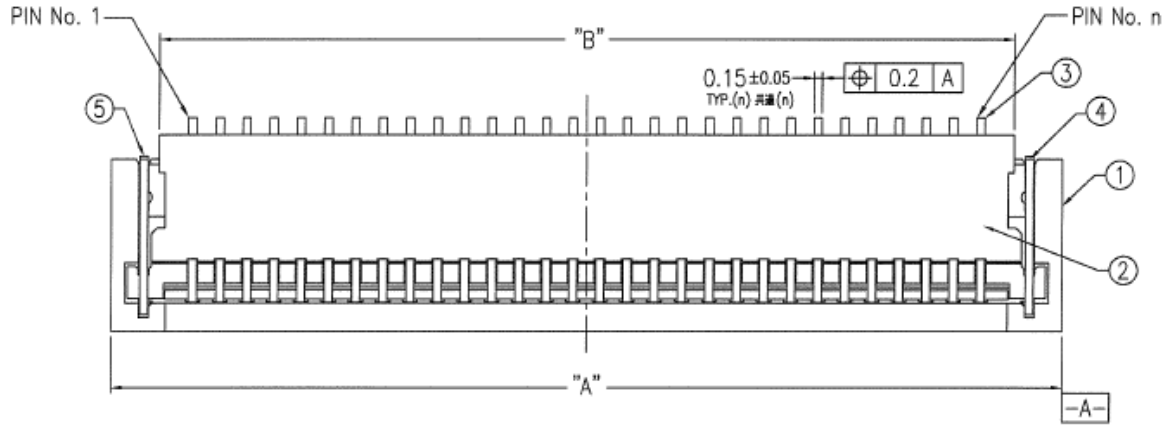

- Express-HL2 and the Debug Module

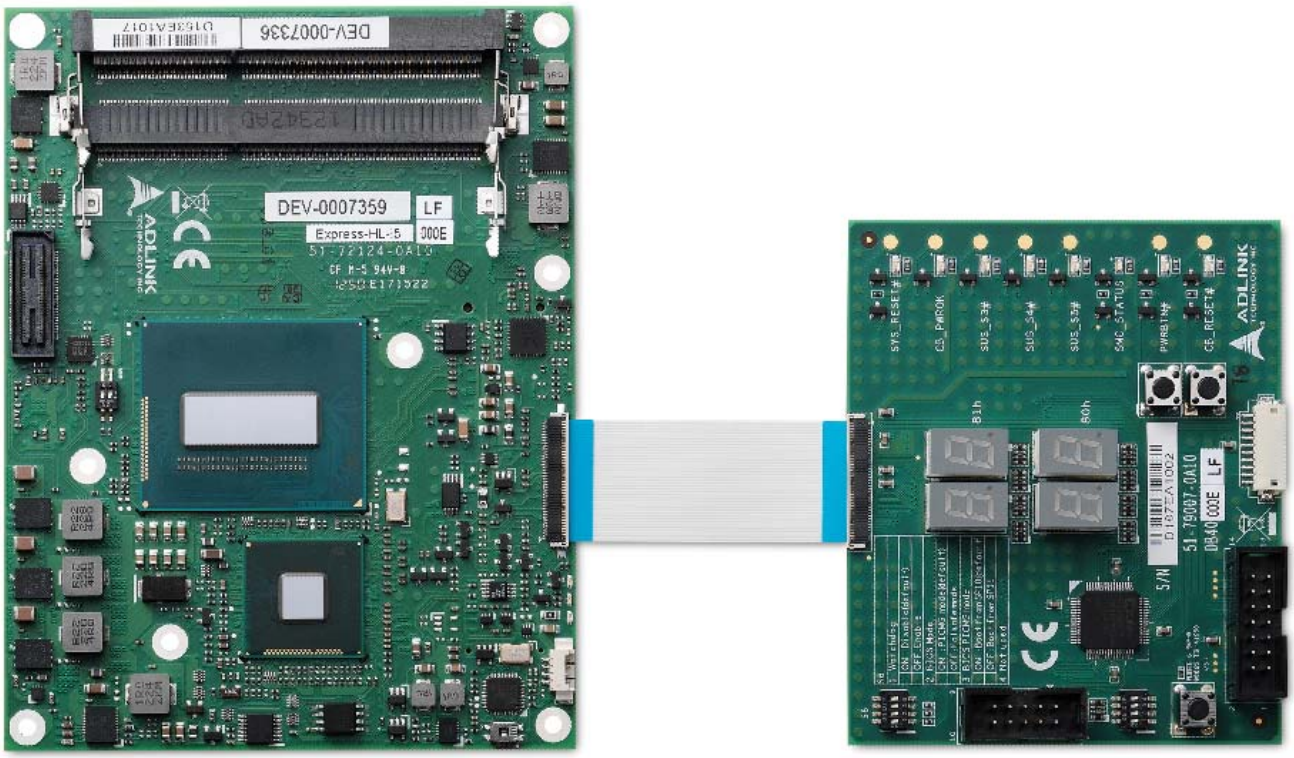

➢ 40-pin Debug Connector Pin Definition on the COM Express Module

Pin	Interface	Signal	Remark
1	SPI Program interface	VCC_SPI_IN	SPI Power Input from flash tool to module. HW need add MOS FET to switch SPI power for SPI ROM
2		GND	
3		SPI_BIOS_CS0#	
4		SPI_BIOS_CS1#	
5		SPI_BIOS_MISO	
6		SPI_BIOS_MOSI	
7		SPI_BIOS_CLK	
8	LPC Bus	3V3_LPC	System power 3.3V provide from COM module
9		GND	
10		BIOS_DIS0	
11		RST#	
12		CLK33_LPC	
13		LPC_FRAME#	
14		LPC_AD3	
15		LPC_AD2	
16		LPC_AD1	always power 3.3V provide from COM module
17		LPC_AD0	
18	BMC Program interface	3.3V_BMC	always power 3.3V provide from COM module
19		3.3V_BMC	always power 3.3V provide from COM module
20		GND	

Pin	Interface	Signal	Remark
21	BMC Program interface (continued)	TXD6	
22		RXD6	
23		FUMD0	
24		RESET_IN#	
25		DATA	
26		CLK	
27		OCD0A	Include a jumper to connect OCD0A via 1K0 pull-up to 3.3V_BMC
28		OCD0B	Include a jumper to connect OCD0A via 1K0 pull-up to 3.3V_BMC
29	Test points	PWRBTN#	
30		SYS_RESET#	
31		CB_RESET#	
32		CB_PWROK	
33		SUS_S3#	
34		SUS_S4#	
35		SUS_S5#	
36	BMC Debug signals	POSTWDT_DIS#	Connect to Jumper for Debug
37		SEL_BIOS	Connect to Jumper for Debug
38		BIOS_MODE	Connect to Jumper for Debug
39		BMC_STATUS	
40	Reserved		

Note: The pin description on the debug module is the inverse of that on the COM Express module.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2 Status LEDs

To facilitate easier maintenance, status LEDs are mounted on the board.

➢ LED Descriptions

Name	Color	Connection	Function
LED1	Blue	BMC output	Power Sequence Status Code (BMC) Power Changes, RESET (see 5.1.4 Exception Codes below)
LED2	Green	Power Source 3Vcc	S0 LED ON S3/S4/S5 LED OFF ECO mode LED OFF
LED3	Red	BMC output and same signal as WDT (B27) on BtB connector	Module power up WD LED = LED OFF Watchdog counting WD LED = LED OFF Watchdog timed out WD LED = LED ON Watchdog RESET WD LED = LED ON Rebooted after WD RESET WD LED = LED ON Rebooted after PWRBTN WD LED = LED ON Rebooted after RESET BTN WD LED = LED OFF Note: only a RESET not initiated by the BMC can clear the WD LED (user action)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.3 XDP Debug header

The debug port is a connection into a target-system environment that provides access to JTAG, run control, system control, and observation resources. The XDP target system connector is a Samtec™ 60-pin BSH-030-01 series connector.

Pin	XDP Signal	Target Signal	I/O	Device
1	GND	GND	NA	
3	OBSFN_A0	PREQ#	I/O	processor
5	OBSFN_A1	PRDY#	I/O	processor
7	GND	GND	NA	
9	OBSDATA_A0	CFG[0][2]	I/O	processor
11	OBSDATA_A1	CFG[1][2]	I/O	processor
13	GND	GND	NA	
15	OBSDATA_A2	CFG[2][2]	I/O	processor
17	OBSDATA_A3	CFG[3][2]	I/O	processor
19	GND	GND	NA	
21	OBSFN_B0	BPM#[0][1]	I/O	processor
23	OBSFN_B1	BPM#[1][1]	I/O	processor
25	GND	GND	NA	
27	OBSDATA_B0	CFG[4][2]	I/O	processor
29	OBSDATA_B1	CFG[5][2]	I/O	processor
31	GND	GND	NA	
33	OBSDATA_B2	CFG[6][2]	I/O	processor
35	OBSDATA_B3	CFG[7][2]	I/O	processor
37	GND	GND	NA	
39	HOOK0	PWRGOOD	I	system
41	HOOK11	BP_PWRGD_RST#	O	system
43	VCC_OBS_AB	VCCIO_OUT	I	system
45	HOOK2	PWR_DEBUG	O	processor
47	HOOK3	PCH_SYS_PWROK	O	system
49	GND	GND	NA	
51	SDA1	SDA	I/O	system
53	SCL1	SCL	I/O	system
55	TCK1	Open	NA	
57	TCK0	TCK	O	processor
59	GND	GND	NA	

Pin	XDP Signal	Target Signal	I/O	Device
2	GND	GND	NA	
4	OBSFN_C0	CFG[17][2]	I	processor
6	OBSFN_C1	CFG[16][2]	I	processor
8	GND	GND	NA	
10	OBSDATA_C0	CFG[8][2]	I/O	processor
12	OBSDATA_C1	CFG[9][2]	I/O	processor
14	GND	GND	NA	
16	OBSDATA_C2	CFG[10]2	I/O	processor
18	OBSDATA_C3	CFG[11][2]	I/O	processor
20	GND	GND	NA	
22	OBSFN_D0	CFG[19][2]	I/O	processor
24	OBSFN_D1	CFG[18][2]	I/O	processor
26	GND	GND	NA	
28	OBSDATA_D0	CFG[12][2]	I	processor
30	OBSDATA_D1	CFG[13][2]	I	processor
32	GND	GND	NA	
34	OBSDATA_D2	CFG[14][2]	I/O	processor
36	OBSDATA_D3	CFG[15][2]	I/O	processor
38	GND	GND	NA	
40	ITPCLK/HOOK4	Open	NA	
42	ITPCLK#/HOOK5	Open	NA	
44	VCC_OBS_CD	VCCIO_OUT	I	system
46	HOOK6/RESET#	PLTRSTIN#	I	system
48	HOOK7/DBR#	DBR#	O	system
50	GND	GND	NA	
52	TDO	TDO	I	processor
54	TRSTn	TRST#	O	processor
56	TDI	TDI	O	processor
58	TMS	TMS	O	processor
60	GND G	ND (or XDP_ PRESENT# if required)	NA	

Notes:

1. These signals are optional, can be left as OPEN/No-Connect if debug by Intel is not needed.
2. These CFG signals can be left as Open/No Connect if not used as a strapping signal and top side probe will be used to debug processor. Refer to the "Shark Bay and Denlow Platforms Debug Port Design Guide (DPDG)", Document Number: 479493, Revision: 1.2

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.4 Fan Connector

- Connector Type: JVE 24W1125A-04M00
- Pin Assignment

Name	Signal	Description
1	BMC_FAN_OUT	FAN_PWMOUT
2	BMC_FAN_PWM_IN	FAN_TACHIN
3	GND	Ground
4	P5V_S	5V

4.5 BIOS Setup Defaults Reset Button

To perform a hardware reset of BIOS default settings, perform the following steps:


1. Shut down the system.
2. Press the BIOS Setup Defaults RESET Button continuously and boot up the system. You can release the button when the BIOS prompt screen appears
3. The BIOS prompt screen will display a confirmation that BIOS defaults have been reset and request that you reboot the system.




Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.6 Express-HL2 Switch Settings

4.6.1 Switch Locations

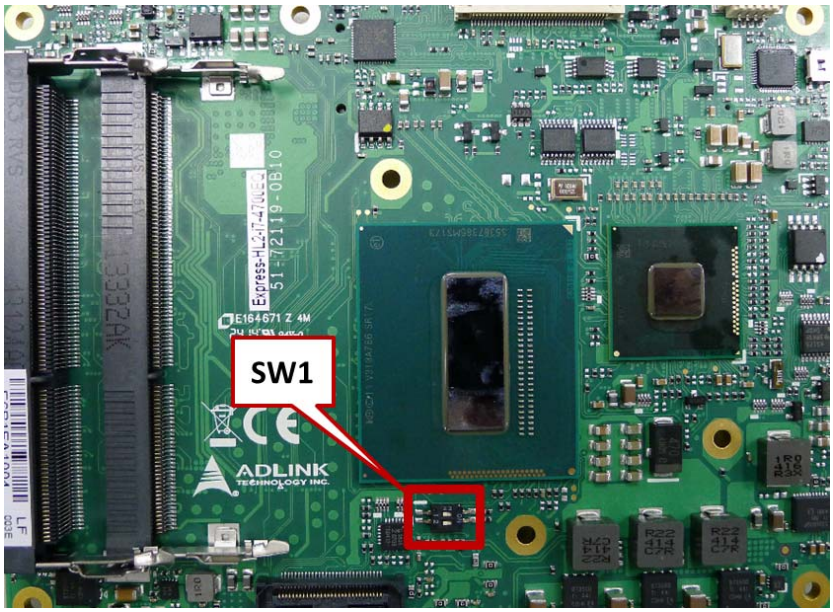

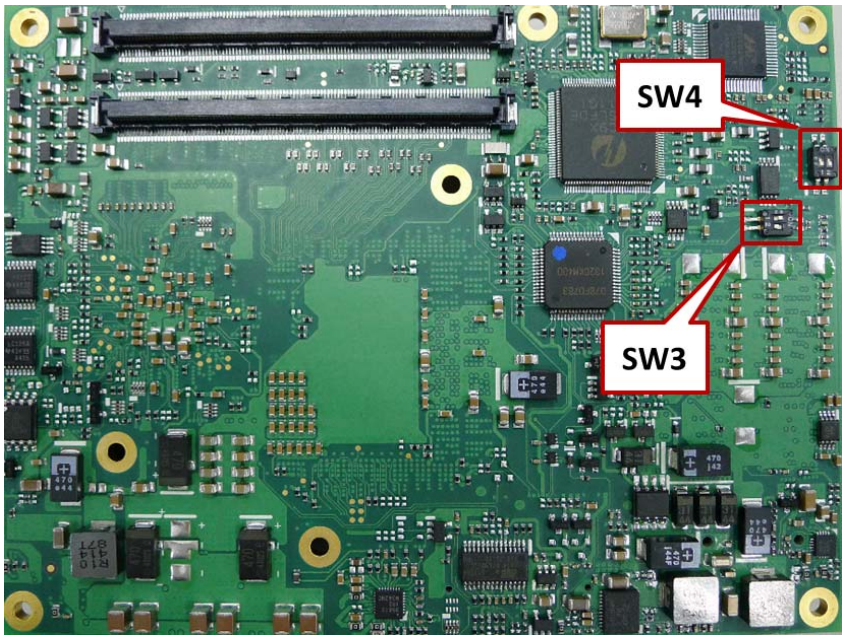

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.6.2 SW1: PCI Express Configuration Switch

Switch SW1 allows you to configure the PCI Express x16 lanes from the CPU as 1 PCIe x16, 2 PCIe x8, or 1 PCIe x8 + 2 PCIe x4.

Mode	Pin 1	Pin 2
1x PCIe x16 (default)	Off	Off
2x PCIe x8	On	Off
1x PCIe x8 + 2x PCIe x4	On	On
Reserved	Off	On

4.6.3 SW4: LVDS Panel Configuration Switch

Switch SW4 allows you to set the LVDS panel mode to 18-bit or 24-bit.

Mode	Pin 2
18 bit LVDS panel mode (default)	Off
24 bit LVDS panel mode	On

4.6.4 SW3: BIOS Select and Mode Configuration Switch

Module has two BIOS chips and BIOS operation can be configured to "PICMG" and "Failsafe" modes using SW3, Pin 2.

Setting the module to PICMG mode will configure the BIOS chips on the module as SPI0 and SPI1. In PICMG mode, a BIOS chip CANNOT be placed in SPI0 on the carrier.

In dual-BIOS Failsafe mode, both BIOS chips on the module are configured as SPI1. Only one of the two is connected to the SPI bus at any given time. In case of BIOS failure of the primary SPI1 BIOS, the system will reboot and switch to the secondary SPI1 BIOS on the module. In Failsafe mode, it is allowed to also have an SPI0 BIOS on the carrier.

In both modes, strapping can select whether to boot from SPI0 or SPI1 (SW3 Pin 1).

Mode	Pin 1	Pin 2
Boot from SPI0 (Default)	On	—
Boot from SPI1	Off	—
Set BIOS to PICMG mode	—	On
Set BIOS to Failsafe BIOS mode (Default)	—	Off

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.7 PCIe x16-to-two-x8 Adapter Card

The Express-HL can be used with the PCIe x16-to-two-x8 Adapter Card on the Express-BASE6 Reference Carrier to support bifurbication of the CPU's PEG interface (PCIe x16). The card reroutes the PCIe x16 to two x8 and allows testing of two independent PCIe add-on cards with x8/x4/x2/x1 width. To use the card, set SW1 to "2 x8 PCI Express" as above.



PCIex16-to-two-x8 Adapter Card
(Model: P16TO28, Part No.: 91-79301-0010)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Smart Embedded Management Agent (SEMA)

The onboard microcontroller (BMC) implements power sequencing and Smart Embedded Management Agent (SEMA) functionality. The microcontroller communicates via the System Management Bus with the CPU/chipset. The following functions are implemented:

- Total operating hours counter. Counts the number of hours the module has been run in minutes.
- On-time minutes counter. Counts the seconds since last system start.
- Temperature monitoring of CPU and board temperature. Minimum and maximum temperature values of CPU and board are stored in flash.
- Power cycles counter
- Boot counter. Counts the number of boot attempts.
- Watchdog Timer (Type-II). Set / Reset / Disable Watchdog Timer. Features auto-reload at power-up.
- System Restart Cause. Power loss / BIOS Fail / Watchdog / Internal Reset / External Reset
- Fail-safe BIOS support. In case of a boot failure, hardware signals tell external logic to boot from fail-safe BIOS.
- Flash area. 1kB Flash area for customer data
- 128 Bytes Protected Flash area. Keys, IDs, etc. can be stored in a write- and clear-protectable region.
- Board Identify. Vendor / Board / Serial number / Production Date
- Main-current & voltage. Monitors drawn current and main voltages

For a detailed description of SEMA features and functionality, please refer to SEMA Technical Manual and SEMA Software Manual, downloadable at: http://www.adlinktech.com/sema/.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1 Board Specific SEMA Functions

5.1.1 Voltages

The BMC of the Express-HL2 implements a voltage monitor and samples several onboard voltages. The voltages can be read by calling the SEMA function “Get Voltages”. The function returns a 16-bit value divided into high-byte (MSB) and low-byte (LSB).

ADC Channel	Voltage Name	Voltage Formula [V]
0	---	---
1	+V3.3S	(MSB<<8 + LSB) x 1.100 x 3.3 / 1024
2	+V1.05S	(MSB<<8 + LSB) x 3.3 / 1024
3	+V3.3A	(MSB<<8 + LSB) x 1.100 x 3.3 / 1024
4	+VDDQ (V1.35 ~ V1.5)	(MSB<<8 + LSB) x 3.3 / 1024
5	+V5A_DUAL	(MSB<<8 + LSB) x 1.833 x 3.3 / 1024
6	+VIN	(MSB<<8 + LSB) x 6.000 x 3.3 / 1024
7	(MAIN CURRENT)	Use Main Current Function

5.1.2 Main Current

The BMC of the Express-HL2 implements a current monitor. The current can be read by calling the SEMA function “Get Main Current”. The function returns four 16-bit values divided in high-byte (MSB) and low-byte (LSB). These 4 values represent the last 4 currents drawn by the board. The values are sampled every 250ms. The order of the 4 values is NOT in chronological order. Access by the BMC may increase the drawn current of the whole system. In this case, there are still 3 samples not influenced by the read access.

$$\text{Main Current} = (\text{MSB_n}<<8 + \text{LSB_n}) \times 8.06\text{mA}$$

5.1.3 BMC Status

This register shows the status of BMC controlled signals on the Express-HL2.

Status Bit	Signal
0	WDT_OUT
1	LVDS_VDDEN
2	LVDS_BKLTEN
3	BIOS_MODE
4	POSTWDT_DISn
5	SEL_BIOS
6	BIOS_DIS0n
7	BIOS_DIS1n

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.1.4 Exception Codes

In case of an error, the BMC drives a blinking code on the blue Status LED (LED1). The same error code is also reported by the BMC Flags register. The Exception Code is not stored in the Flash Storage and is cleared when the power is removed. Therefore, a “Clear Exception Code” command is not needed or supported.

Exception Code	Error Message
0	NOERROR
2	NO_SUSCLK
3	NO_SLP_S5
4	NO_SLP_S4
5	NO_SLP_S3
6	BIOS_FAIL
7	RESET_FAIL
8	POWER_FAIL
9	LOW_VIN
11	VCORE
12	+P1V05_S
13	+P3V3_A
14	+VDDQ
15	+P5V_A
16	+P12V
18	CRITICAL_TEMP
19	NO_CB_PWROK
20	NO_SYS_GD
21	
22	NO_XDP_PIN47

5.1.5 BMC Flags

The BMC Flags register returns the last detected Exception Code since power-up and shows the BIOS in use and the power mode.

Bit	Description
[0 ~ 4]	Exception Code
[6]	0 = AT mode 1 = ATX mode
[7]	0 = Standard BIOS 1 = Fail-safe BIOS.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6 System Resources

6.1 System Memory Map

Address Range (decimal)	Address Range (hex)	Size	Description
(4GB-2MB)	FFE00000 – FFFFFFFF	2 MB	High BIOS Area
(4GB-18MB) – (4GB-17MB-1)	FEE00000 – FEEFFFFF	1 MB	MSI Interrupts
(4GB-20MB) – (4GB-19MB-1)	FEC00000 – FECFFFFF	1 MB	APIC Configuration Space
15MB – 16MB	F00000 – FFFFFF	1 MB	ISA Hole
1MB -15MB	100000 - EFFFFF	14MB	Main Memory
0K –1MB	00000 – FFFFFF	1MB	DOS Compatibility Memory

6.2 Direct Memory Access Channels

Channel Number	Data Width	System Resource
0	8-bits	Generic
1	8-bits	Generic
2	8-bits	Generic
3	8-bits	Generic
4		Reserved - cascade channel
5	16-bits	Generic
6	16-bits	Generic
7	16-bits	Generic

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.3 I/O Map

Hex Range	Device
000-01F	DMA controller 1, 8237A-5 equivalent
020-02D and 030-03F	Interrupt controller 1, 8259 equivalent
02E-02F	LPC SIO () configuration index/data registers
040-05F	Timer, 8254-2 equivalent
060, 062, 064, 066, 068-06F	8742 equivalent (keyboard)
061, 063, 065, 067	NMI control and status
070-07F	Real Time Clock Controller(bit 7 -NMI mask)
080-091	DMA page register
092	Reset (Bit 0)/ Fast Gate A20 (Bit 1)
93-9F	DMA page registers continued
0A0-0B1 and 0B4-0BF	Interrupt controller 2, 8259 equivalent
0B2 and 0B3	APM control and status port respectively
0C0-0DF	DMA controller 2, 8237A-5 equivalent
0E0-0EF	Available
0F0	Co-processor error register
0F1	N/A
0F2-0F3	N/A
0F4	IDE ID port
0F5-0F7	N/A
0F8	IDE Index port
0F9-0FB	N/A
0FC	IDE Data port
0FD-0FF	N/A
100-179	Available
180-181	Default AIM4 SRAM control register (May be remapped)
182-1EF	Available
1F0-1F7	Primary IDE Controller (AT Drive)
1FB-22F	Available
230 -23F	Available
260-2F7	Available
2F8-2FF	Serial Port 2
300-36F	Available
370-377	Available
378-37F	Parallel port
380-3AF	Available
3B0-3BB and 3BF	Mono/VGA mode video

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

I/O Map (cont'd)

Hex Range	Device
3BC-3BE	Reserved for parallel port
3C0-3DF	VGA registers
3E0-3EF	Available
3F0-3F7	Floppy Disk Controller
3F8-3FF	Serial port 1
4D0	Master PIC Edge/Level Trigger register
4D1	Slave PIC Edge/Level Trigger register
CF8-CFB	PCI configuration address register (32 bit I/O only)
CF9	Reset Control register (8 bit I/O)
CFC-CFF	PCI configuration data register
580	Smbus base address for SB.
1C00	GPIO Base Address for SB
1800	PM (ACPI) Base Address for SB
1860	Alias for ICH TCO base address.
0A00~0AFF	Reserved for SIO functions base address (ex: PME /GPIO etc)
200-23Fh	Reserved for ISA.
240-25Fh	Reserved for ISA.
280-28Fh	Reserved for ISA.
2A0-2DFh	Reserved for ISA.
300-33Fh	Reserved for ISA.
380-39Fh	Reserved for ISA.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.4 Interrupt Request (IRQ) Lines

PIC Mode

IRQ#	Typical Intterupt Resource	Connected to Pin	Available
0	Counter 0	N/A	No
1	Keyboard controller	N/A	No
2	Cascade interrupt from slave PIC	N/A	No
3	Serial Port 2 (COM2) / PCI	IRQ3 via SERIRQ / PIRQ	Note (1)
4	Serial Port 1 (COM1) / PCI	IRQ4 via SERIRQ / PIRQ	Note (1)
5	Parallel Port / Generic	IRQ5 via SERIRQ / PIRQ	Note (1)
6	Floppy DIsk	IRQ6 via SERIRQ / PIRQ	No
7	Parallel Port / Generic	IRQ7 via SERIRQ / PIRQ	Note (1)
8	Real-time clock	N/A	No
9	Generic	N/A	Note (1)
10	Generic	N/A	Note (1)
11	Generic	N/A	Note (1)
12	PS/2 Mouse	IRQ12 via SERIRQ / PIRQ	Note (1)
13	Math Processor	N/A	No
14	Primary IDE controller	IRQ14 via SERIRQ / PIRQ	Note (1)
15	Secondary IDE controller	IRQ15 via SERIRQ / PIRQ	Note (1)

Note (1): These IRQs can be used for PCI devices when onboard device is disabled.

APIC Mode

IRQ#	Typical Intterupt Resource	Connected to Pin	Available
0	Counter 0	N/A	No
1	Keyboard controller	N/A	No
2	Cascade interrupt from slave PIC	N/A	No
3	Serial Port 2 (COM2)	IRQ3 via SERIRQ / PIRQ	Note (1)
4	Serial Port 1 (COM1	IRQ4 via SERIRQ / PIRQ	Note (1)
5	N/A	N/A	Note (1)
6	Floppy Disk	IRQ6 via SERIRQ / PIRQ	No
7	N/A	N/A	Note (1)
8	Real-time clock	N/A	No
9	PCI	IRQ9 via SERIRQ / PIRQ	Note (1)
10	Serial Port 3 (COM3)	IRQ10 via SERIRQ / PIRQ	Note (1)
11	Serial Port 4 (COM4)	IRQ11 via SERIRQ / PIRQ	Note (1)
12	PS/2 Mouse	IRQ12 via SERIRQ / PIRQ	Note (1)
13	Math Processor	N/A	Note (1)
14	Primary IDE controller	IRQ14 via SERIRQ / PIRQ	Note (1)
15	Secondary IDE controller	IRQ15 via SERIRQ / PIRQ	Note (1)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

APIC Mode (cont'd)

IRQ#	Typical Intterupt Resource	Connected to Pin	Available
16	N/A	Intel HDA, PCIE Port 0/1/2/3/4/5/6, EHCI Conterller #2 ,P.E.G Root Port, I.G.D	Note (1)
17	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port,	Note (1)
18	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port, SMBus Controller, EHCI Controller #2,PCI Port 0	Note (1)
19	N/A	PCIE Port 0/1/2/3/4/5/6, P.E.G Root Port, PCI Port 1	Note (1)
20	N/A	Gbe Controller	Note (1)
21	N/A		Note (1)
22	N/A	Intel HDA	Note (1)
23	N/A	EHCI Controller #1	Note (1)

Note (1): These IRQs can be used for PCI devices when onboard device is disabled.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.5 PCI Configuration Space Map

Bus Number	Device Number	Function Number	Routing	Description
00h	00h	00h	N/A	Intel host Bridge
00h	02h	00h	Internal	Intel I.G.D
00h	03h	00h	Internal	HD Audio Device
00h	16h	00h	Internal	Intel Management Engine Interfaxe #1
00h	16h	01h	Internal	Intel Management Engine Interfaxe #2
00h	16h	02h	Internal	IDE-R
00h	16h	03h	Internal	KT
00h	19h	00h	Internal	Gigabit Etherent Controller
00h	1Bh	00h	Internal	High Definition Audio controller
00h	1Ch	00h	Internal	Intel ICH Express Root port 1
00h	1Ch	01h	Internal	Intel ICH Express Root port 2
00h	1Ch	02h	Internal	Intel ICH Express Root port 3
00h	1Ch	03h	Internal	Intel ICH Express Root port 4
00h	1Ch	04h	Internal	Intel ICH Express Root port 5
00h	1Ch	05h	Internal	Intel ICH Express Root port 6
00h	1Ch	06h	Internal	Intel ICH Express Root port 7
00h	1Ch	07h	Internal	Intel ICH Express Root port 8
00h	1Dh	00h	Internal	Intel USB EHCI Controller #1
00h	1Ah	00h	Internal	Intel USB EHCI Controller #2
00h	1Fh	00h	N/A	Intel LPC Interface Bridge
00h	1Fh	02h	Internal	SATA Host Controller #1
00h	1Fh	03h	Internal	SMBus Controller
00h	1Fh	05h	Internal	SATA Host Controller #2
00h	1Fh	06h	Internal	Thermal Subsystem

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6.6 PCI Interrupt Routing Map

INT Line	P.E.G Root Port	Audio Controller	ME Controller #1	GbEt Controller	HDA Controller	PCIE Port1	PCIE Port 2	PCIE Port 3
Int0	INTA:16	INTA:16	INTA:16	INTE:20	INTG:22	INTA:16	INTB:17	INTD:19
Int1			INTD:19			INTB:17	INTC:18	INTA:16
Int2			INTC:18			INTC:18	INTD:19	INTB:17
Int3			INTB:17			INTD:19	INTA:16	INTC:18

INT Line	PCIE Port 4	PCIE Port 5	PCIE Port 6	PCIE Port 7	PCIE Port 8	EHIC #1	EHIC #2	LPC Controller
Int0	INTA:16	INTA:16	INTB:17	INTD:19	INTA:16	INTH:23	INTA:16	INTF:21
Int1	INTB:17	INTB:17	INTC:18	INTA:16	INTB:17			INTD:19
Int2	INTC:18	INTC:18	INTD:19	INTB:17	INTC:18			INTC:18
Int3	INTD:19	INTD:19	INTA:16	INTC:18	INTD:19			INTA:16

INT Line	SATA Controller #1	SMBus Controller	SATA Controller #2	Thermal Subsystem
Int0			INTH:23	
Int1	INTD:19			INTD:19
Int2		INTC:18		
Int3				

6.7 SMBus Slave Addresses

Device	Address
DIMM A	A0h
DIMM B	A4h
BMC	50h
Extend GPIO	40h

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7 BIOS Setup

7.1 Menu Structure

This section presents the six primary menus of the BIOS Setup Utility. Use the following table as a quick reference for the contents of the BIOS Setup Utility. The subsections in this section describe the submenus and setting options for each menu item. The default setting options are presented in bold, and the function of each setting is described in the right hand column of the respective table.

Main	Advanced	Boot	Security	Save & Exit
- System Information	- CPU ▶	- Boot Configuration ▶	- Password Description	- Reset Options
- Processor Information	- Memory ▶	- CSM Parameters ▶	- Secure Boot Menu ▶	- Save Options
- PCH Information	- Graphics ▶			
- System Management ▶	- SATA ▶			
- System Date	- USB ▶			
- System Time	- Network ▶			
	- PCI and PCIe ▶			
	- Super IO ▶			
	- ACPI and Power Management ▶			
	- Sound ▶			
	- Serial Port Console ▶			
	- Clock ▶			
	- Thermal ▶			
	- Miscellaneous ▶			

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2 Main

The Main Menu provides read-only information about your system and also allows you to set the System Date and Time. Refer to the tables below the screen shot of this menu for details of the submenus and settings.

7.2.1 System Information

Feature	Options	Description
BIOS Version	Info only	ADLINK BIOS version.
Build Date and Time	Info only	ADLINK date the BIOS was build.

7.2.2 Processor Information

Feature	Options	Description
CPU Brand String	Info only	Display CPU Brand Name.
Frequency	Info only	Display CPU Frequency.
Processor ID	Info only	Display CPU ID.
Stepping	Info only	Display CPU Stepping.
Number of Processors	Info only	Display number of Processors.
GT Info	Info only	Display GT info of Intel Graphics.
IGFX VBIOS Version	Info only	Display VBIOS Version.
Total Memory	Info only	Display installed memory size.

7.2.3 PCH Information

Feature	Options	Description
PCH Name	Info only	Display PCH name
PCH SKU	Info only	Display PCH SKU
Stepping	Info only	Display PCH stepping
ME FW Version	Info only	Display version of ME
ME Firmware SKU	Info only	Display ME Firmware Kit SKU number
System Management	Submenu	

7.2.3.1 PCH Information System Management

Feature	Options	Description
System Management	Info only	
Version	Info only	Display version.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.4 System Management

7.2.4.1 System Management > Board Information

Board Information	Info only	
SMC Firmware	Read only	Display SMC Firmware·
Build Date	Read only	Display SMC firmware build date·
SMC Boot loader	Read only	Display SMC boot loader·
Build Date	Read only	Display SMC boot loader build date·
Hardware Version	Read only	Display SMC hardware Version·
Serial Number	Read only	Display SMC serial Number·
Manufacturing Date	Read only	Display SMC manufacturing date·
Last Repair Date	Read only	Display SMC last repair date·
MAC ID	Read only	Display SMC MAC ID
SEMA Features	Read only	Display SEMA features

7.2.4.2 System Management > Temperatures and Fan Speed

Feature	Options	Description
Temperatures and Fan Speed	Info only	
CPU Temperature	Info only	
Current	Read only	Display CPU current temperature·
Startup	Read only	Display CPU startup temperature·
Min	Read only	Display CPU min temperature·
Max	Read only	Display CPU max temperature·
Board Temperatures	Info only	
Current	Read only	Display board current temperature·
Startup	Read only	Display board startup temperature·
Min	Read only	Display board min temperature·
Max	Read only	Display board max temperature·
CPU Fan Speed	Read only	Display CPU fan speed·
System Fan Speed	Read only	Display system fan speed·

7.2.4.3 System Management > Power Consumption

Feature	Options	Description
Power Consumption	Info only	
Current Input Current	Read only	Display input current·
Current Input Power	Read only	Display input power·

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
AIN0	Read only	Display actual voltage of AIN0
V3.30	Read only	Display actual voltage of 3.30 V
V1.05	Read only	Display actual voltage of 1.05 V
V3.30	Read only	Display actual voltage of 3.30 V
V1.35	Read only	Display actual voltage of 1.35 V
V5.00	Read only	Display actual voltage of 5.00 V
VIN	Read only	Display actual voltage of VIN
AIN7	Read only	Display actual voltage of AIN7

7.2.4.4 System Management > Runtime Statistics

Feature	Options	Description
Runtime Statistics	Info only	
Total Runtime	Read only	The returned value specifies the total time in minutes the system is running in S0 state.
Current Runtime	Read only	The returned value specifies the time in seconds the system is running in S0 state. This counter is cleared when the system is removed from the external power supply.
Power Cycles	Read only	The returned value specifies the number of times the external power supply has been shut down
Boot Cycles	Read only	The Bootcounter is increased after a HW- or SW-Reset or after a successful power-up.
Boot Reason	Read only	The boot reason is the event which causes the reboot of the system.

7.2.4.5 System Management > Flags

Feature	Options	Description
Flags	Info only	
BMC Flags	Read only	
BIOS Select	Read only	Display the selection of current BIOS ROM.
ATX/AT-Mode	Read only	Display ATX/AT-Mode.
Exception Code	Read only	System exception reason.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.4.6 System Management > Power Up

Feature	Options	Description
Power Up	Info only	
Power Up watchdog Attention: F12 disables the Power Up Watchdog.	Enabled Disabled	The Power-Up Watchdog resets the system after a certain amount of time after power-up.
ECO Mode	Disabled Enable	Reduces the power consumption of the system.
Power-up Mode Attention: The Power-Up Mode only has effect, if the module is in ATX-Mode.	Turn on Remain off Last State	Turn On: The machine starts automatically when the power supply is turned on. Remain Off :To start the machine the power button has to be pressed. Last State: when powered on during a power failure the system will automatically power on when power is restored

7.2.4.7 System Management > LVDS Backlight

Feature	Options	Description
LVDS Backlight	Info only	
LVDS Backlight Bright	255	The value range starts by 0 and ends by 255.

7.2.4.8 System Management > Smart Fan

Feature	Options	Description
Smart Fan	Info only	
CPU Smart FanTemperature Source	CPU Sensor System Sensor	Select CPU smart fan source.
CPU Fan Mode	AUTO (Smart Fan) Fan Off Fan On	Select CPU Fan Mode.
CPU Trigger Point 1	Read only	
Trigger Temperature	15	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	30	Select PWM level.
CPU Trigger Point 2	Read only	
Trigger Temperature	60	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	40	Select PWM level.
CPU Trigger Point 3	Read only	
Trigger Temperature	70	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	63	Select PWM level.
CPU Trigger Point 4	Read only	
Trigger Temperature	80	Specifies the temperature threshold at which the BMC turns on CPU fan with specific PWM level.
PWM Level	100	Select PWM level.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.2.5 System Date and Time

Feature	Options	Description
System Date	Weekday, MM/DD/YYYY	Requires the alpha-numeric entry of the day of the week, day of the month, calendar month, and all 4 digits of the year, indicating the century and year (Fri XX/XX/20XX)
System Time	HH/MM/SS	Presented as a 24-hour clock setting in hours, minutes, and seconds

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3 Advanced

This menu contains the settings for most of the user interfaces in the system

7.3.1 CPU

Feature	Options	Description
CPU	Info only	Manufacturer, model, speed
CPU Signature	Info only	Display CPU Signature
Processor Family	Info only	Display Processor Family
Microcode Patch	Info only	Display Microcode Patch
FSB Speed	Info only	Display FSB Speed
Max CPU speed	Info only	Display Max CPU speed
Min CPU speed	Info only	Display Min CPU speed
CPU Speed	Info only	Display CPU Speed
Processor Cores	Info only	Display Processor Cores
Intel HT Technology	Info only	Display Intel HT Technology support or not
Intel VT-x Technology	Info only	Display Intel VT-x Technology support or not
VT-d Capability	Info only	Display VT-d Capability support or not
Intel SMX Technology	Info only	Display Intel SMX Technology support or not
64-bit	Info only	Display 64-bit support or not
L1 Data Cache	Info only	Display cache info
L1 Code Cache	Info only	Display cache info
L2 Cache	Info only	Display cache info
L3 Cache	Inf o only	Display cache info
Limit CPUID Maximum	Disabled Enabled	When Enabled, the processor will limit the maximum CPUID input value to 03h when queried, even if the processor supports a higher CPUID input value. When Disabled, the processor will return the actual maximum CPUID input value
Execute Disable Bit	Disabled Enabled	Enable/Disable the Execute Disable Bit (XD) of the processor. With the XD bit set to enabled certain classes of malicious buffer overflow attacks can be prevented when combined with a supporting OS.
Intel Virtualization Technology	Disabled Enabled	Enable/Disable support for the Intel virtualization technology.
VT-d	Disabled Enabled	Check to enable VT-d function on MCH.
SB CRID	Disabled Enabled	Enable/Disable SB Compatible Revision ID.
CPU Processor Power Managemnt (PPM)	Info only	
EIST	Disabled Enabled	Disabled: No SpeedStep, stick to CPU ratio Enabled: CPU speed is controlled by the operating system.
Turbo Mode	Disabled	Enable/Disable turbo mode.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
	Enabled	
CPU C3 Report	Disabled Enabled	Enable/Disable CPU C3 report to OS.
CPU C6 Report	Disabled Enabled	Enable/Disable CPU C6 report to OS.
CPU C7 Report	Disabled CPU C7 CPU C7S	Enable/Disable CPU C7 report to OS.
ACPI T State	Disabled Enabled	Enable/Disable ACPI T state support.
CPU DTS	Disabled Enabled	Enable/Disable CPU DTS.

7.3.2 Memory

Feature	Options	Description
Memory RC Version	Info only	Display Memory Reference Code Version.
Memory Frequency	Info only	Display Memory Frequency.
Total Memory	Info only	Display Total Memory.
Memory Voltage	Info only	Display Memory Voltage.
DIMM#0/1	Info only	Display DIMM#0/1.
CAS Latency (tCL)	Info only	Display CAS Latency (tCL).
Minimum delay time	Info only	Display Minimum delay time.
CAS to RAS (tRCDmin)	Info only	Display CAS to RAS (tRCDmin).
Row Precharge (tRPmin)	Info only	Display Row Precharge (tRPmin).
Active to Precharge (tRASmin)	Info only	Display Active to Precharge (tRASmin).
XMP Profile 1	Info only	Display XMP Profile 1 support or not.
XMP Profile 2	Info only	Display XMP Profile 2 support or not.
SPD Write Protect	Enabled Disabled	Enable:Writes to SMBus slave addresses A0h - AEh are disabled.
Memory Frequency Limiter	Auto	Maximum Memory Frequency Selections in Mhz.
Max TOLUD	Dynamic	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller.
MRC Fast Boot	Enabled Disabled	Enable/Disable MRC fast boot.
Memory Remap	Enabled Disabled	Enable/Disable e memory remap above 4G.
Channel A DIMM Control	Enabled Disabled	Enable/Disable DIMMs on channel A.
Channel B DIMM Control	Enabled Disabled	Enable/Disable DIMMs on channel B.
Memory Thermal Management	Enabled Disabled	Enable/Disable Memory Thermal Management.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.3 Graphics

Feature	Options	Description
Graphics Configuration	Info only	
IGFX VBIOS Version	Info only	Display VBIOS Version.
IGfx Frequency	Info only	Display IGfx Frequency.
Graphics Turbo IMON Current	Number entry field	Graphics turbo IMON current values supported (14-31).
Primary Display	Auto IGFX PEG PCIE	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.
Primary PEG	Auto PEG1 PEG2	Select PEG0/PEG1/PEG2/PEG3 Graphics device should be Primary PEG.
Primary PCIE	Auto PCIE1 PCIE2 PCIE3 PCIE4 PCIE5 PCIE6 PCIE7	Select PCIE0/PCIE1/PCIE2/PCIE3/PCIE4/PCIE5/PCIE6/PCIE7 Graphics device should be Primary PCIE.
Internal Graphics	Auto Disabled Enable	Keep IGD enabled based on the setup options.
Aperture Size	128MB 256MB 512MB	Select the Aperture Size.
DVMT Pre-Allocated	XXM	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	XXXM	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.
Gfx Low Power Mode	Enabled Disabled	This option is applicable for SFF only.
LVDS Backlight Mode	BMC Mode GTT Mode	Select LVDS Backlight control function.
GTT LVDS Backlight Control	0% 20% 40% 60% 80% 100%	Actual backlight value in percent of the maximum setting.
DDI function choose	Display Port HDMI	Select DDI function choose to display port or HDMI.
Primary IGFX Boot Display	CRT	Select the Video Device which will be activated during POS.
Secondary IGFX Boot Display	Disabled	Select Secondary Display Device.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
LCD Panel Type	VBIOS Default 640X480 800X600 1024X768 1280X1024 1400X1050 1600X1200 1366X768 1680X1050 1920X1200 1440X900 1600X900 1024X768 LVDS2 1280X800 1920X1080 2048X1536	Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.
Active LFP	No LVDS Edp Port-A	Select the Active LFP Configuration.
Panel Color Depth	18 Bit 24 Bit	Select the LFP Panel Color Depth
Panel Scaling	Auto Off Force Scaling	Select the LCD panel scaling option used by the Internal Graphics Device.
GT – Power Management Control	Info only	
GT Info	Info only	Display GT info of Intel Graphics.
RC6 (Render Standby)	Enabled Disabled	Check to enable render standby support.
GT OverClocking Support	Enabled Disabled	Enable/Disable GT OverClocking Support.

7.3.4 SATA

Feature	Options	Description
SATA Controller(s)	Enabled Disabled	Enable/Disable SATA device.
SATA-to-PATA Controller	Enabled Disabled	Enable/Disable SATA to PATA device
SATA Mode Selection	IDE AHCI RAID	Determines how SATA controller(s) operate.
SATA Test Mode	Enabled Disabled	Enable/Disable Test Mode.
Aggressive LPM Support	Enabled Disabled	Enable PCH to aggressively enter link power state.
SATA Controller Speed	Default Gen1 Gen2	Indicates the maximum speed the SATA controller can support.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
	Gen3	
Intel ® Rapid Start Technology	Submenu	
SATA Port Configuration	Submenu	
Software Feature Mask Configuration	Info only	
RAID0	**Enabled** Disabled	Enable/Disable RAID0 feature.
RAID1	**Enabled** Disabled	Enable/Disable RAID1 feature.
RAID10	**Enabled** Disabled	Enable/Disable RAID10 feature.
RAID5	**Enabled** Disabled	Enable/Disable RAID5 feature.
Intel Rapid Recovery Technology	**Enabled** Disabled	Enable/Disable Intel Rapid Recovery Technology.
OROM UI and BANNER	**Enabled** Disabled	If enabled, then the OROM UI is shown. Otherwise, no OROM banner or information will be displayed if all disks and RAID volumes are Normal.
HDD Unlock	**Enabled** Disabled	If enabled, indicates that the HDD password unlock in the OS is enabled.
LED Locate	**Enabled** Disabled	If enabled, indicates that the LED/SGPIO hardware is attached and ping to locate feature is enabled on the OS.
IRRT Only on ESATA	**Enabled** Disabled	If enabled, then only IRRT volumes can span internal and eSATA drives. If disabled, then any RAID volume can span internal and eSATA drives.
Smart Response Technology	**Enabled** Disabled	Enable/Disable Smart Response Technology.
OROM UI Delay	**Enabled** Disabled	If enabled, indicates the delay of the OROM UI Splash Screen in a normal status.

7.3.4.1 SATA > Intel® Rapid Start Technology

Feature	Options	Description
Intel (R) Rapid Start	**Disabled** Enabled	Enable/Disable Intel (R) Rapid Start.
Entry on S3 RTC Wake	Disabled **Enabled**	RapidStart invocation upon S3 RTC wake.
Entry After	10	Enable RTC wake timer at S3 entry. Value range from 0(Immediately) to 120 minutes.
Active Page Threshold	**Disabled** Enabled	Support RST with small partition.
Hybrid Hard Disk Support	**Disabled** Enabled	Hybrid Hard Disk Support.
RapidStart Display Save/Restore	**Disabled** Enabled	RapidStart Display Save/Restore.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.4.2 SATA > SATA Port Configuration (IDE)

Feature	Options	Description
SATA Port Configuration	Info only	
Serial ATA Port x	Info only	SATA Port x information
Software Preserve	Info only	Designates this port as software preserve
SATA-to-PATA	Info only	PATA devices information

7.3.5 USB

Feature	Options	Description
USB Module Version	Info only	
USB Devices	Info only	X Drive, X Keyboards, X Mouse, X Hubs
Legacy USB Support	Enabled Disabled Auto	Enables legacy USB support· Auto option disables legacy support if no USB devices are connected· Disable option will keep USB devices available only for EFI applications and setup·
EHCI Hand-off	Enabled Disabled	This is a workaround for OSes without EHCI hand-off support· The EHCI ownership change should be claimed by the EHCI OS driver·
USB Mass Storage Driver Support	Enabled Disabled	Enable/Disable USB Mass Storage Driver Support·
PCH USB Configuration	Submenu	
USB hardware delays and time-outs:	Info only	
USB transfer time-out	1 sec 5 sec 10 sec 20 sec	The time-out value for Control, Bulk, and Interrupt transfers
Device reset time-out	10 sec 20 sec 30 sec 40 sec	USB mass storage device Start Unit command time-out·
Device power-up delay	Auto Manual	Maximum time the device will take before it properly reports itself to the Host Controller· 'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor·
Mass Storage Devices	Info only	List current USB max stroge device·

7.3.5.1 USB > PCH USB Configuration

Feature	Options	Description
USB Precondition	Disabled Enabled	Precondition work on USB host controller and root ports for faster enumeration·
XHCI Mode	Disabled Enabled	Mode of operation of xHCI controller·
BTCG	Disabled Enable	Enable/Disable trunk clock gating·
USB Precondition	Disabled	Precondition work on USB host controller and root ports for

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
	Enabled	faster enumeration·
USB Port #0~13	Disabled Enabled	Control each of the USB ports (0~13) disabling·
USB30 Port #0~5	Disabled Enabled	Enable or Disable USB 3·0 Port·

7.3.6 Network

Feature	Options	Description
Network Stack	Info only	
Network Stack	Enabled Disabled	Enable/Disable UEFI network stack·
PCH LAN Controller	Enabled Disabled	Enable/Disable onboard NIC·
Wake on LAN	Enabled Disabled	Enable/Disable integrated LAN to wake the system· (The Wake On LAN cannot be disabled if ME is on at Sx state·
AMT Configuration	Info only	
Intel AMT	Enabled Disabled	Enable/Disable Intel (R) Active Management Technology BIOS Extension·
BIOS Hotkey Pressed	Enabled Disabled	Enable/Disable BIOS hotkey press·
MEBx Selection Screen	Enabled Disabled	Enable/Disable MEBx selection screen·
Hide Un-Configure ME Confirmation	Enabled Disabled	Hide Un-Configure ME without password Confirmation Prompt·
MEBx Debug Message Output	Enabled Disabled	Enable MEBx debug message output·
Un-Configure ME	Enabled Disabled	Un-Configure ME without password·
Amt Wait Timer	0	Set timer to wait before sending ASF_GET_BOOT_OPTIONS·
Disable ME	Enabled Disabled	Set ME to Soft Temporary Disabled·
ASF	Enabled Disabled	Enable/Disable Alert Specification Format·
Activate Remote Assistance Process	Enabled Disabled	Trigger CIRA boot·
USB Configure	Enabled Disabled	Enable/Disable USB Configure function·
PET Progress	Enabled Disabled	User can Enable/Disable PET Events progress to recieve PET events or not·
AMT CIRA Timeout	0	OEM defined timeout for MPS connection to be established· 0 - use the default timeout value of 60 seconds· 255 - MEBX waits until the connection succeeds·
Watchdog	Enabled Disabled	Enable/Disable WatchDog Timer·
OS Timer		Set OS watchdog timer·
BIOS Timer		Set BIOS watchdog timer·

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.7 PCI and PCIe

Feature	Options	Description
PCI Common Settings	Info only	
PCI Latency Timer	32 PCI Bus Clocks 64 PCI Bus Clocks 96 PCI Bus Clocks 128 PCI Bus Clocks 160 PCI Bus Clocks 192 PCI Bus Clocks 224 PCI Bus Clocks 248 PCI Bus Clocks	Select the PCI latency defined in PCI Bus clock cycles
VGA Palette Snoop	Disabled Enabled	Allow PCI cards that do not contain their own VGA color palette to access the video core's palette
PERR# Generation	Disabled Enabled	Enables or Disables PCI Device to Generate PERR#.
SERR# Generation	Disabled Enabled	Enables/Disables PCI Device to Generate SERR#.
PCI Express Settings		
Relaxed Ordering	Disabled Enabled	Enables/Disables PCI Express Device Relaxed Ordering.
Extended Tag	Disabled Enabled	If ENABLED allows Device to use 8-bit Tag field as a requester.
No Snoop	Disabled Enabled	Enables/Disables PCI Express Snoop option
Maximum Payload	Auto 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Select Maximum Payload size or let BIOS decide (Auto)
Maximum Read Request	Auto 128 Bytes 256 Bytes 512 Bytes 1024 Bytes 2048 Bytes 4096 Bytes	Set Maximum Read Request Size of PCI Express Device or allow System BIOS to select the value.
ASPM Support Warning: Enabling ASPM may cause some PCI-E devices to fail	Disabled Auto Force L0S	Set the ASPM Level. Disabled - Disables ASPM. Auto - BIOS auto configure Force L0S - Force all links to L0s State
Extended Synch	Enabled Disabled	If enabled the generation of PCI Express synchronization patterns is allowed
Link Training Retry	Disabled 2 3 5	Defines number of Retry Attempts software will take to retrain the link if previous training attempt was unsuccessful.
Link Training Timeout (uS)	100	Defines number of microseconds software will wait before polling 'Link Training' bit in Link Status register. Value range from 10 to 10000 uS.
Unpopulated Links	Keep Link ON Disable	In order to save power, software will disable unpopulated PCI Express links, if this option set to 'Disable Link'.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Restore PCIE Registers	Enabled Disabled	On non-PCI Express aware OS's (Pre Windows Vista) some devices may not be correctly reinitialized after S3. Enabling this restors PCI Express device configurations on S3 resume. Warning: Enabling this may cause issues with other hardware after S3 resume.
PEG Configuration (System Agent)	Submenu	
PCH-PCIe Configuration	Submenu	

7.3.7.1 PCI and PCIe > PEG Configuration (System Agent)

Feature	Options	Description
PEG Configuration (System Agen)	Info only	
PEG0	Not Present	Display PEG0 present or not.
PEG0 – Gen X	Auto Gen1 Gen2 Gen3	Configure PEG0 B0:D1:F0 Gen1-Gen3
PEG0 ASPM	Disabled Auto ASPM L0S ASPM L1 ASPM L0SL1	Control ASPM support for the PEG Device. This has no effect if PEG is not the currently active device.
Enable PEG	Disabled Enabled Auto	Enable/Disable the PEG.
Detect Non-compliance Device	Disabled Enable	Detect Non-Compliance PCI Express Device in PEG.
PEG Sampler Calibrate	Auto Enabled Disable	Enable/Disable PEG Sampler Calibrate\nAuto means Disabled for SNB MB/DT, Enabled for IVB A0 B0.
Swing Control	Half Full	Perform PEG Swing Control, on IVB C0 and Later.
PEG Gen3 Equalization	Enabled Disable	Perform PEG Gen3 Equalization steps.
Gen3 Eq Phase 2	Auto Enabled Disable	Perform PEG Gen3 Equalization Phase 2.
Gen3 Eq Preset Search	Enabled Disable	Perform PEG Gen3 Preset Search algorithm, on IVB C0 and Later.
PEG RxCEM LoopBack Mode	Disabled Enable	Enabled/Disabled PEG RxCEM Loopback Mode.
PCIe Gen3 RxCTLEp Setting 0~7	8	The range of the setting is (0~15) This setting has to be specified basing on platform design and following the guideline.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.7.2 PCI and PCIe > PCH-PCIe Configuration

Feature	Options	Description
PCH-PCIe Configuration	Info only	
PCI Express Clock Gating	Disabled Enable	Enable/Disable PCI Express Clock Gating for each root port.
DMI Link ASPM Control	Disabled Enable	The control of Active State Power Management on both NB side and SB side of the DMI Link.
DMI Link Extended Synch Control	Disabled Enable	The control of Extended Synch on SB side of the DMI Link.
PCIe-USB Glitch W/A	Disabled Enable	PCIe-USB Glitch W/A for bad USB device(s) connected behind PCIE/PEG Port.
PCIE Root Port Function Swapping	Disabled Enable	Enable/Disable PCI Express PCI Express Root Port Function Swapping.
Subtractive Decode	Disabled Enable	Enable/Disable PCI Express Subtractive Decode.
PCIE Ports 1-4 Configuration	4x1 Port 1X2 2X1 Port 2X2 Port 1X4 Port	To configure PCI-E Port 1-4 of PCH. [4X1]: Port 1-4 (x1) and Port 8 (x1) [1x2 2x1]: Port 1 (x2), Port 2 (disabled), Ports 3 and Port 4 (x1) [2x2]: Port 1-2 (x2) and Port 3-4 (x2)/[1x4]:Port 1 (x4), Ports 2-4 (disable)
PCIE Ports 5-8 Configuration	4x1 Port 1X2 2X1 Port	To configure PCI-E Port 5-7 of PCH. [4X1] : Port 5-8 (x1) and Port 8 (x1) [1x2 2x1]: Port 5 (x2), Port 6 (disabled), Ports 7 and Port 8 (x1)
PCI Express Root Port 1~7	Submenu	Configure PCI Express Root Port 1~7 setting.

PCI and PCIe > PCH-PCIe Configuration > PCI Express Root Port

Feature	Options	Description
PCI Express Root Port	Disabled Enable	Control the PCI Express Root Port.
ASPM Support	Disabled Enable	Set the ASPM Level: Force L0s - Force all links to L0s State: AUTO - BIOS auto configure: DISABLE - Disables ASPM
L1 Substates	Disabled Enable	PCI Express L1 Substates settings.
URR	Disabled Enable	Enable/Disable PCI Express Unsupported Request Reporting.
FER	Disabled Enable	Enable/Disable PCI Express Device Fatal Error Reporting.
NFER	Disabled Enable	Enable/Disable PCI Express Device Non-Fatal Error Reporting.
CER	Disabled Enable	Enable/Disable PCI Express Device Correctable Error Reporting.
CTO	Disabled Enable	Enable/Disable PCI Express Completion Timer TO.
SEFE	Disabled Enable	Enable/Disable Root PCI Express System Error on Fatal Error.
SENFE	Disabled Enable	Enable/Disable Root PCI Express System Error on Non-Fatal Error.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
SECE	Disabled Enable	Enable/Disable Root PCI Express System Error on Correctable Error.
PME SCI	Disabled Enable	Enable/Disable PCI Express PME SCI.
Hot Plug	Disabled Enable	Enable/Disable PCI Express Hot Plug.
PCIe Speed	Auto Gen1 Gen2	Select PCI Express port speed.
Detect Non-Compiance	Disabled Enable	Detect Non-Compliance PCI Express Device. If enabled, it will take more time at POST time.
Extra Bus Reserved	0	Extra Bus Reserved (0-7) for bridges behind this Root Bridge.
Reseved Memory	10	Reserved Memory Range for this Root Bridge.
Prefetchable Memory	10	Prefetchable Memory Range for this Root Bridge.
Reserved I/O	4	Reserved I/O (4K/8K/12K/16K/…/48K) Range for this Root Bridge.
PCIE LTR	Disabled Enable	PCIE Latency Reporting Enable/Disable.
PCIE LTR Lock	Disabled Enable	PCIE LTR Configuration Lock.
Snoop Latency Ocerrid	Disabled Manual Auto	Snoop Latency Ocerride for PCH PCIE.
Non Snoop Latency Ocerrid	Disabled Manual Auto	Non Snoop Latency Ocerride for PCH PCIE.

7.3.8 Super IO

Feature	Options	Description
Super IO Chip	Info only	
W83627DHG Super IO Configuration	Info only	
Serial Port 1 Configuration Serial Port	Enabled Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=3F8h; IRQ=4	Fixed configuration of serial port.
Change Settings	Auto IO=3F8h; IRQ=4 IO=3F8h; IRQ=3,4,5,6,7,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,10,11,12	Select an optimal setting for Super IO device.
Serial Port 2 Configuration Serial Port	Enabled Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=2F8h; IRQ=4	Fixed configuration of serial port.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Change Settings	Auto IO=2F8h; IRQ=3 IO=3F8h; IRQ=3,4,5,6,7,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,10,11,12	Select an optimal setting for Super IO device.
N5104D Super IO Configuration	Info only	
Serial Port 1 Configuration Serial Port	Enabled Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=240h; IRQ=10	Fixed configuration of serial port.
Change Settings	Auto IO=240h; IRQ=10 IO=240h; IRQ=10,11,12 IO=248h; IRQ=10,11,12 IO=250h; IRQ=10,11,12 IO=258h; IRQ=10,11,12	Select an optimal setting for Super IO device.
Serial Port 2 Configuration Serial Port	Enabled Disabled	Enable/Disable Serial Port (COM).
Device Settings	IO=248h; IRQ=11	Fixed configuration of serial port.
Change Settings	Auto IO=248h; IRQ=11 IO=240h; IRQ=10,11,12 IO=248h; IRQ=10,11,12 IO=250h; IRQ=10,11,12 IO=258h; IRQ=10,11,12	Select an optimal setting for Super IO device.

7.3.9 ACPI and Power Management

Feature	Options	Description
ACPI and Power Management	Info only	
Enable ACPI Auto Configuration	Enabled Disabled	Enables or Disables BIOS ACPI Auto Configuration.
Enable Hibernation	Enabled Disabled	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
ACPI Sleep State	S3 only	Select ACPI sleep state the system will enter when the SUSPEND button is pressed.
Emulation AT/ATX	Emulation AT ATX	Select Emulation AT or ATX function. If this option set to [Emulation AT], BIOS will report no suspend functions to ACPI OS. In windows XP, it will make OS show shutdown message during system shutdown.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.10 Sound

Feature	Options	Description
Sound	Info only	
Azalia	Disabled Enabled Auto	Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally enabled. Auto = Azalia will be enabled if present, disabled other.
Azalia Docking Support	Enabled Disabled	Enable/Disable Azalia Docking Support of Audio Controller.
Azalia PME	Enabled Disabled	Enable/Disable Power Management capability of Audio Controller.

7.3.11 Serial Port Console

Feature	Options	Description
Serial Port Console	Info only	
COM0	Info only	
Console Redirection	Enabled Disabled	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM1	Info only	
Console Redirection	Enabled Disabled	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM3	Info only	
Console Redirection	Enabled Disabled	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	
COM4	Info only	
Console Redirection	Enabled Disabled	Console Redirection Enable or Disable.
Console Redirection Settings	Submenu	

7.3.11.1 Serial Port Console > Console Redirection Settings

Feature	Options	Description
Console Redirection Settings	Info only	
Terminal Type	VT100 VT100+ VT-UTF8 ANSI	Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Bits per second	9600 19200 38400 57600 115200	Selects serial port transmission speed.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
Data Bits	7 8	Select Data Bits.
Parity	None Even Odd Mark Space	Select Parity.
Stop Bits	1 2	Select number of stop bits.
Flow Control	None Hardware RTS/CTS	Select flow control.
VT-UTF8 Combo Key Support	Disabled Enable	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.
Recorder Mode	Disabled Enable	With this mode enabled only text will be sent. This is to capture Terminal data.
Resolution 100x31	Disabled Enable	Enables or disables extended terminal resolution
Legacy OS Redirection	80x24 80x25	On Legacy OS, the Number of Rows and Columns supported redirection
Putty KeyPad	VT100 LINUX XTERMR6 SCO ESCN VT400	Select FunctionKey and KeyPad on Putty.
Redirection After BIOS Post	Always Enabled BootLoader	The Settings specify if BootLoader is selected than Legacy console redirection is disabled before booting to Legacy OS. Default value is Always Enable which means Legaacy console Redirection is enabled for Legacy OS.

7.3.12 Clock

Feature	Options	Description
Clock	Info only	
Use Watchdog Timer for ICC	Enabled Disabled	Enable Watchdog Timer operation for ICC. If enabled, Watchdog Timer will be started after ICC-related changes. This timer detects platform instability caused by wrong clock settings.
Turn off unused PCI/PCIe clocks	Disabled Enable	Disabled: all clocks turned on. Enabled: clocks for empty PCI/PCIe slots will be turned off to save power. Platform must be powered off for changes to take effect.
ICC Locks After EOP	Default All Locked All UnLocked	Lock ICC register after EOP.
Clock Manipulation	Info only	
ICC Overclocking Lib	Info only	
CLKRUN# Logic	Enabled Disabled	Enable the CLKRUN# logic to stop the PCI clock.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.13 Thermal

Feature	Options	Description
Thermal	Info only	
Automatic Thermal Reporting	Enabled Disabled	Configure _CRT, _PSV and _AC0 automatically based on values recommended in BWG's Thermal Reporting for Thermal Management settings. Set to Disabled for manual conmfiguration.
Critical Trip Point	Disabled 85 C 95 C	This value controls the temperature of the ACPI Critical Trip Point - the point in which the OS will shut the system off. NOTE: 100C is the Plan Of Record (POR) for all Intel mobile processors.
Active Trip Point	Disabled 40 C 50 C 60 C 70 C BMC Default	This value controls the temperature of the ACPI Active Trip Point - the point in which the OS will turn the processor fan on Active Trip Point Fan Speed.
Passive Trip Point	Disabled 80 C 90 C	This value controls the temperature of the ACPI Passive Trip Point - the point in which the OS will begin throttling the processor.
Passive TC1 Value	1	This value sets the TC1 value for the ACPI Passive Cooling Formula. Range 1 – 16.
Passive TC2 Value	5	This value value sets the TC2 value for the ACPI Passive Cooling Formula. Range 1 - 16
Passive TSP Value	10	This item sets the TSP value for the ACPI Passive Cooling Formula. It represents in tenths of a second how often the OS will read the temperature when passive cooling is enabled. Range 2 – 32.
Watchdog ACPI Even Shutdown	Disabled Enable	Enable/Disable Watchdog ACPI Even Shutdown.

7.3.14 Miscellaneous

Feature	Options	Description
High Precision Timer	Enabled Disabled	Enable/Disable the High Precision Event Timer.
Security		
BIOS Security Configuration	Submenu	
Trusted Computing	Submenu	
Intel TXT(LT) Configuration	Enabled Disabled	Enables or Disables the High Precision Event Timer.

7.3.14.1 Miscellaneous > BIOS Security Configuration

Feature	Options	Description
SMI Lock	Enabled Disabled	Enable or Disable the SMI Lock
BIOS Lock	Enabled Disabled	Enable or Disable the BIOS lock enable (BLE) bit

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Feature	Options	Description
GPIO Lock	Enabled **Disabled**	Enable or Disable the GPIO lockdown
BIOS Interface Lock	**Enabled** Disabled	Enable or Disable the BIOS interface lockdown
RTC RAM Lock	Enabled **Disabled**	Enable or Disable bytes 38h-2Fh in the upper and lower 128-byte bank of the RTC RAM lockdown

7.3.14.2 Miscellaneous > Trusted Computing

Feature	Options	Description
Security Device Support	Enabled **Disabled**	Enables or Disables BIOS support for security device· When disabled OS wil not show Security Device· TCG EFI protocol and INT1A interface will not be available

7.4 Boot

7.4.1 Boot Configuration

Feature	Options	Description
Boot Configuration	Info only	
Setup Prompt Timeout	1	Enable/Disable the onboard SATA controllers.
Bootup NumLock State	On	Select SATA controller mode.
Quiet Boot	Disabled Enabled	Enable/Disable the PATA port. In fact this enables or disables the SATA channel on which the onboard SATA to PATA converter is attached. When set to enabled the system boot will be delayed for the time specified in PATA Port Detection Timeout if no PATA device is connected. Auto: Scan for PATA device and enable per default.
Fast Boot	Disabled Enabled	Define the maximum time to wait for drive detection on PATA port.
Boot Option Priorities	Info only	
CSM16 Parameters	Submenu	
CSM16 Module Version	Info only	
GateA20 Active	Upon Request Always	UPON REQUEST - GA20 can be disabled using BIOS services. ALWAYS - do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.
Option ROM Messages	Force BIOS Keep Current	Set display mode for Option ROM.
INT19 Trap Response	Immediate Postponed	BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE - execute the trap right away; POSTPONED - execute the trap during legacy boot.
CSM parameters	Submenu	

7.4.2 CSM parameters

Feature	Options	Description
Launch CSM	Enabled Disable	This option controls if CSM will be launched.
Boot Option filter	UEFI and Legacy Legacy only UEFI only	This option controls what devices system can to boot.
Launch PXE OpROM policy	Do not launch Legacy only UEFI only	Controls the execution of UEFI and Legacy PXE OpROM.
Launch Storage OpROM policy	Do not launch UEFI only Legacy only	Controls the execution of UEFI and Legacy Storage OpROM.
Launch Video OpROM policy	Do not launch UEFI only Legacy only	Controls the execution of UEFI and Legacy Video OpROM.
Other PCI device ROM priority	UEFI OpROM Legacy OpROM	For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.5 Security

7.5.1 Password Description

Feature	Options	Description
Administrator Password	Enter password	
User Password	Enter password	
Secure Boot menu	Submenu	

7.5.2 Secure Boot Menu

Feature	Options	Description
System Mode	Setup	
Secure Boot	Info only	
Secure Boot Support	Disabled Enabled	Secure Boot can be enabled if 1·System running in User mode with enrolled Platform Key(PK) 2·CSM function is disabled·
Secure Boot Mode	Standard Custom	Secure Boot mode selector· 'Custom' Mode enables users to change Image Execution policy and manage Secure Boot Keys·

7.6 Save & Exit

7.6.1 Reset Options

Feature	Options	Description
Save Changes and Reset	Save changes and reset the system·	Save Changes and Reset
Discard Changes and Reset	Reset the system without saving any changes·	Discard Changes and Reset

7.6.2 Save Options

Feature	Options	Description
Save Changes		Save Changes done so far to any of the setup options·
Discard Changes		Discard Changes done so far to any of the setup options·
Restore Defaults		Restore/Load Default values for all the setup options·
Save as User Defaults		Save the changes done so far as User Defaults·
Restore User Defaults		Restore the User Defaults to all the setup options·

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8 BIOS Checkpoints, Beep Codes

This section of this document lists checkpoints and beep codes generated by AMI Aptio BIOS. The checkpoints defined in this document are inherent to the AMIBIOS generic core, and do not include any chipset or board specific checkpoint definitions.

Checkpoints and Beep Codes Definition

A checkpoint is either a byte or word value output to I/O port 80h. The BIOS outputs checkpoints throughout bootblock and Power-On Self Test (POST) to indicate the task the system is currently executing. Checkpoints are very useful for debugging problems that occur during the preboot process.

Beep codes are used by the BIOS to indicate a serious or fatal error. They are used when an error occurs before the system video has been initialized, and generated by the system board speaker.

Aptio Boot Flow

While performing the functions of the traditional BIOS, Aptio 5.x core follows the firmware model described by the Intel Platform Innovation Framework for EFI ("the Framework"). The Framework refers the following "boot phases", which may apply to various status code & checkpoint descriptions:

- Security (SEC) – initial low-level initialization
- Pre-EFI Initialization (PEI) – memory initialization[1]
- Driver Execution Environment (DXE) – main hardware initialization[2]
- Boot Device Selection (BDS) – system setup, pre-OS user interface & selecting a bootable device (CD/DVD, HDD, USB, Network, Shell, …)

Viewing BIOS Checkpoints

Viewing all checkpoints generated by the BIOS requires a checkpoint card, also referred to as a POST Card or POST Diagnostic Card. These are PCI add-in cards that show the value of I/O port 80h on a LED display.

Some computers display checkpoints in the bottom right corner of the screen during POST. This display method is limited, since it only displays checkpoints that occur after the video card has been activated.

Keep in mind that not all computers using AMI Aptio BIOS enable this feature. In most cases, a checkpoint card is the best tool for viewing AMI Aptio BIOS checkpoints.

[1]Analogous to "bootblock" functionality of legacy BIOS
[2]Analogous to "POST" functionality in legacy BIOS

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.1 Status Code Ranges

Status Code Range	Description
0x01 – 0x0F	SEC Status Codes & Errors
0x10 – 0x2F	PEI execution up to and including memory detection
0x30 – 0x4F	PEI execution after memory detection
0x50 – 0x5F	PEI errors
0x60 – 0xCF	DXE execution up to BDS
0xD0 – 0xDF	DXE errors
0xE0 – 0xE8	S3 Resume (PEI)
0xE9 – 0xEF	S3 Resume errors (PEI)
0xF0 – 0xF8	Recovery (PEI)
0xF9 – 0xFF	Recovery errors (PEI)

8.2 Standard Status Codes

8.2.1 SEC Status Codes

Status Code	Description
0x0	Not used
Progress Codes	
0x1	Power on. Reset type detection (soft/hard).
0x2	AP initialization before microcode loading
0x3	North Bridge initialization before microcode loading
0x4	South Bridge initialization before microcode loading
0x5	OEM initialization before microcode loading
0x6	Microcode loading
0x7	AP initialization after microcode loading
0x8	North Bridge initialization after microcode loading
0x9	South Bridge initialization after microcode loading
0xA	OEM initialization after microcode loading
0xB	Cache initialization
SEC Error Codes	
0xC – 0xD	Reserved for future AMI SEC error codes
0xE	Microcode not found
0xF	Microcode not loaded

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.2 SEC Beep Codes

None

8.2.3 PEI Status Codes

Status Code	Description
Progress Codes	
0x10	PEI Core is started
0x11	Pre-memory CPU initialization is started
0x12	Pre-memory CPU initialization (CPU module specific)
0x13	Pre-memory CPU initialization (CPU module specific)
0x14	Pre-memory CPU initialization (CPU module specific)
0x15	Pre-memory North Bridge initialization is started
0x16	Pre-Memory North Bridge initialization (North Bridge module specific)
0x17	Pre-Memory North Bridge initialization (North Bridge module specific)
0x18	Pre-Memory North Bridge initialization (North Bridge module specific)
0x19	Pre-memory South Bridge initialization is started
0x1A	Pre-memory South Bridge initialization (South Bridge module specific)
0x1B	Pre-memory South Bridge initialization (South Bridge module specific)
0x1C	Pre-memory South Bridge initialization (South Bridge module specific)
0x1D – 0x2A	OEM pre-memory initialization codes
0x2B	Memory initialization. Serial Presence Detect (SPD) data reading
0x2C	Memory initialization. Memory presence detection
0x2D	Memory initialization. Programming memory timing information
0x2E	Memory initialization. Configuring memory
0x2F	Memory initialization (other).
0x30	Reserved for ASL (see ASL Status Codes section below)
0x31	Memory Installed
0x32	CPU post-memory initialization is started
0x33	CPU post-memory initialization. Cache initialization
0x34	CPU post-memory initialization. Application Processor(s) (AP) initialization
0x35	CPU post-memory initialization. Boot Strap Processor (BSP) selection
0x36	CPU post-memory initialization. System Management Mode (SMM) initialization
0x37	Post-Memory North Bridge initialization is started
0x38	Post-Memory North Bridge initialization (North Bridge module specific)
0x39	Post-Memory North Bridge initialization (North Bridge module specific)
0x3A	Post-Memory North Bridge initialization (North Bridge module specific)
0x3B	Post-Memory South Bridge initialization is started
0x3C	Post-Memory South Bridge initialization (South Bridge module specific)
0x3D	Post-Memory South Bridge initialization (South Bridge module specific)
0x3E	Post-Memory South Bridge initialization (South Bridge module specific)
0x3F-0x4E	OEM post memory initialization codes

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0x4F	DXE IPL is started
PEI Error Codes	
0x50	Memory initialization error. Invalid memory type or incompatible memory speed
0x51	Memory initialization error. SPD reading has failed
0x52	Memory initialization error. Invalid memory size or memory modules do not match.
0x53	Memory initialization error. No usable memory detected
0x54	Unspecified memory initialization error.
0x55	Memory not installed
0x56	Invalid CPU type or Speed
0x57	CPU mismatch
0x58	CPU self test failed or possible CPU cache error
0x59	CPU micro-code is not found or micro-code update is failed
0x5A	Internal CPU error
0x5B	reset PPI is not available
0x5C-0x5F	Reserved for future AMI error codes
S3 Resume Progress Codes	
0xE0	S3 Resume is stared (S3 Resume PPI is called by the DXE IPL)
0xE1	S3 Boot Script execution
0xE2	Video repost
0xE3	OS S3 wake vector call
0xE4-0xE7	Reserved for future AMI progress codes
0xE0	S3 Resume is stared (S3 Resume PPI is called by the DXE IPL)
S3 Resume Error Codes	
0xE8	S3 Resume Failed in PEI
0xE9	S3 Resume PPI not Found
0xEA	S3 Resume Boot Script Error
0xEB	S3 OS Wake Error
0xEC-0xEF	Reserved for future AMI error codes
Recovery Progress Codes	
0xF0	Recovery condition triggered by firmware (Auto recovery)
0xF1	Recovery condition triggered by user (Forced recovery)
0xF2	Recovery process started
0xF3	Recovery firmware image is found
0xF4	Recovery firmware image is loaded
0xF5-0xF7	Reserved for future AMI progress codes
Recovery Error Codes	
0xF8	Recovery PPI is not available
0xF9	Recovery capsule is not found
0xFA	Invalid recovery capsule
0xFB – 0xFF	Reserved for future AMI error codes

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.4 PEI Beep Codes

# of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXEIPL was not found
3	DXE Core Firmware Volume was not found
7	Reset PPI is not available
4	Recovery failed
4	S3 Resume failed

8.2.5 DXE Status Codes

Status Code	Description
0x60	DXE Core is started
0x61	NVRAM initialization
0x62	Installation of the South Bridge Runtime Services
0x63	CPU DXE initialization is started
0x64	CPU DXE initialization (CPU module specific)
0x65	CPU DXE initialization (CPU module specific)
0x66	CPU DXE initialization (CPU module specific)
0x67	CPU DXE initialization (CPU module specific)
0x68	PCI host bridge initialization
0x69	North Bridge DXE initialization is started
0x6A	North Bridge DXE SMM initialization is started
0x6B	North Bridge DXE initialization (North Bridge module specific)
0x6C	North Bridge DXE initialization (North Bridge module specific)
0x6D	North Bridge DXE initialization (North Bridge module specific)
0x6E	North Bridge DXE initialization (North Bridge module specific)
0x6F	North Bridge DXE initialization (North Bridge module specific)
0x70	South Bridge DXE initialization is started
0x71	South Bridge DXE SMM initialization is started
0x72	South Bridge devices initialization
0x73	South Bridge DXE Initialization (South Bridge module specific)
0x74	South Bridge DXE Initialization (South Bridge module specific)
0x75	South Bridge DXE Initialization (South Bridge module specific)
0x76	South Bridge DXE Initialization (South Bridge module specific)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0x77	South Bridge DXE Initialization (South Bridge module specific)
0x78	ACPI module initialization
0x79	CSM initialization
0x7A – 0x7F	Reserved for future AMI DXE codes
0x80 – 0x8F	OEM DXE initialization codes
0x90	Boot Device Selection (BDS) phase is started
0x91	Driver connecting is started
0x92	PCI Bus initialization is started
0x93	PCI Bus Hot Plug Controller Initialization
0x94	PCI Bus Enumeration
0x95	PCI Bus Request Resources
0x96	PCI Bus Assign Resources
0x97	Console Output devices connect
0x98	Console input devices connect
0x99	Super IO Initialization
0x9A	USB initialization is started
0x9B	USB Reset
0x9C	USB Detect
0x9D	USB Enable
0x9E – 0x9F	Reserved for future AMI codes
0xA0	IDE initialization is started
0xA1	IDE Reset
0xA2	IDE Detect
0xA3	IDE Enable
0xA4	SCSI initialization is started
0xA5	SCSI Reset
0xA6	SCSI Detect
0xA7	SCSI Enable
0xA8	Setup Verifying Password
0xA9	Start of Setup
0xAA	Reserved for ASL (see ASL Status Codes section below)
0xAB	Setup Input Wait
0xAC	Reserved for ASL (see ASL Status Codes section below)
0xAD	Ready To Boot event
0xAE	Legacy Boot event

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Status Code	Description
0xAF	Exit Boot Services event
0xB0	Runtime Set Virtual Address MAP Begin
0xB1	Runtime Set Virtual Address MAP End
0xB2	Legacy Option ROM Initialization
0xB3	System Reset
0xB4	USB hot plug
0xB5	PCI bus hot plug
0xB6	Clean-up of NVRAM
0xB7	Configuration Reset (reset of NVRAM settings)
0xB8 – 0xBF	Reserved for future AMI codes
0xC0 – 0xCF	OEM BDS initialization codes
DXE Error Codes	
0xD0	CPU initialization error
0xD1	North Bridge initialization error
0xD2	South Bridge initialization error
0xD3	Some of the Architectural Protocols are not available
0xD4	PCI resource allocation error. Out of Resources
0xD5	No Space for Legacy Option ROM
0xD6	No Console Output Devices are found
0xD7	No Console Input Devices are found
0xD8	Invalid password
0xD9	Error loading Boot Option (LoadImage returned error)
0xDA	Boot Option is failed (StartImage returned error)
0xDB	Flash update is failed
0xDC	Reset protocol is not available

8.2.6 DXE Beep Codes

# of Beeps	Description
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
1	Invalid password
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2.7 ACPI/ASL Checkpoint

Status Code	Description
0x01	System is entering S1 sleep state
0x02	System is entering S2 sleep state
0x03	System is entering S3 sleep state
0x04	System is entering S4 sleep state
0x05	System is entering S5 sleep state
0x10	System is waking up from the S1 sleep state
0x20	System is waking up from the S2 sleep state
0x30	System is waking up from the S3 sleep state
0x40	System is waking up from the S4 sleep state
0xAC	System has transitioned into ACPI mode. Interrupt controller is in PIC mode.
0xAA	System has transitioned into ACPI mode. Interrupt controller is in APIC mode.

8.3 OEM-Reserved Checkpoint Ranges

Status Code	Description
0x05	OEM SEC initialization before microcode loading
0x0A	OEM SEC initialization after microcode loading
0x1D – 0x2A	OEM pre-memory initialization codes
0x3F – 0x4E	OEM PEI post memory initialization codes
0x80 – 0x8F	OEM DXE initialization codes
0xC0 – 0xCF	OEM BDS initialization codes

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9 Mechanical Information

9.1 Board-to-Board Connectors

To allow for different stacking heights, the receptacles for COM Express carrier boards are available in two heights: 5 mm and 8 mm. When 5 mm receptacles are chosen, the carrier board should be free of components.

Tyco 3-1827253-6

Foxconn QT002206-2131-3H

- 220-pin board-to-board connector with 0.5mm for a stacking height of 5 mm.
- This connector can be used with 5 mm through-hole standoffs (SMT type).



Tyco 3-6318491-6

Foxconn QT002206-4141-3H

- 220-pin board-to-board connector with 0.5mm for a stacking height of 8 mm.
- This connector can be used with 8 mm through-hole standoffs (SMT type).



Common Specifications

- Current capacity: 0.5A per pin
- Rated voltage: 50 VAC
- Insulation resistance: 100M or greater @ 500 VDC
- Temperature rating: -40°C ~ 85°C
- UL certification (ECBT2.E28476)
- Copper alloy (contacts)
- Housing: thermo-plastic molded compound (L.C.P.)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.2 Thermal Solution

9.2.1 Heat Spreaders

The function of the heat spreader is to ensure an identical mechanical profile for all COM Express modules. By using a heat spreader, the thermal solution that is built on top of the module is compatible with all COM Express modules.

9.2.2 Heat Sinks

A heat sink can be used as a thermal solution for a specific COM Express module and can have a fan or be fanless, depending on the thermal requirements.


9.2.3 Installation

Install a heat spreader or heat sink using the following instructions.

Step 1: Before mounting the heatsink, install the required memory modules onto the SODIMM socket(s) on the COM Express module.




Step 2: Remove the protective membranes from the thermal pads.

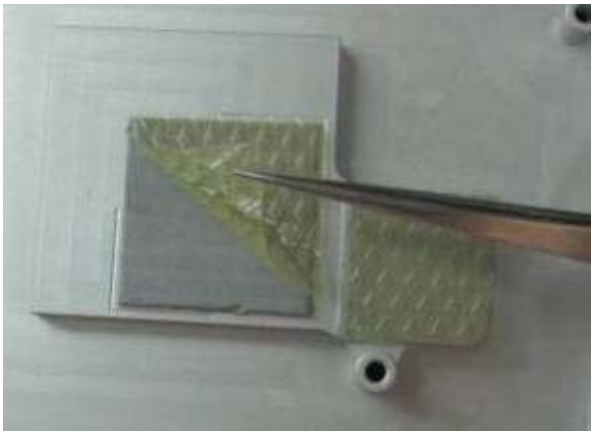

Step 3: Assemble the heatsink onto the COM Express module.


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Step 4: Use the four M2.5, L=6mm screws provided to fasten the heatsink to the module.

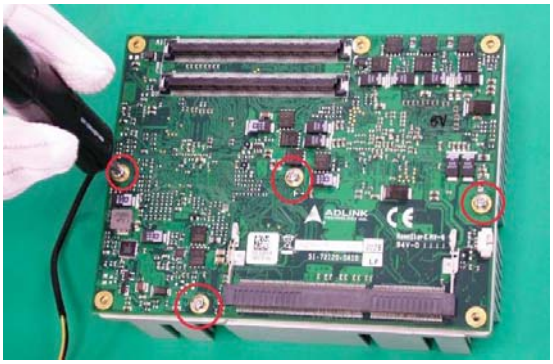




Step 5: Place the COM Express module and heatsink assembly onto the connectors on the carrier board as shown.

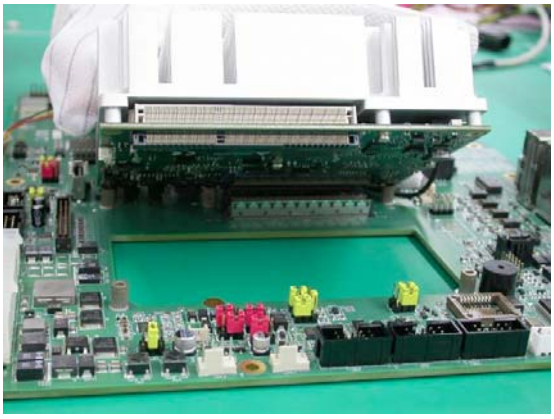

Then press down on the module until it is firmly seated on the carrier board.

Step 6: Use the five M2.5, L=16mm screws provided to secure the COM Express module to the carrier board from the solder side.

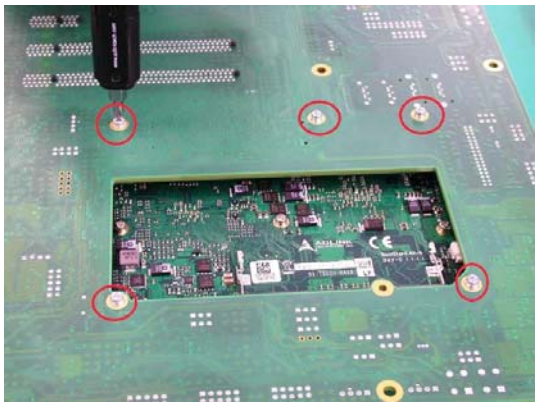




Step 7: If you are installing a heatsink with a fan, plug the fan connector into the carrier board as shown.



LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.3 Mounting Methods

There are several standard ways to mount the COM Express module with a thermal solution onto a carrier board. In addition to the choice of 5 mm or 8mm board-to-board connectors, there is the choice of Top and Bottom mounting. In Top mounting, the threaded standoffs are on the carrier board and the thermal solution is equipped with through-hole standoffs. In Bottom mounting, the threaded standoffs are on the thermal solution and the carrier board has through-hole standoffs.

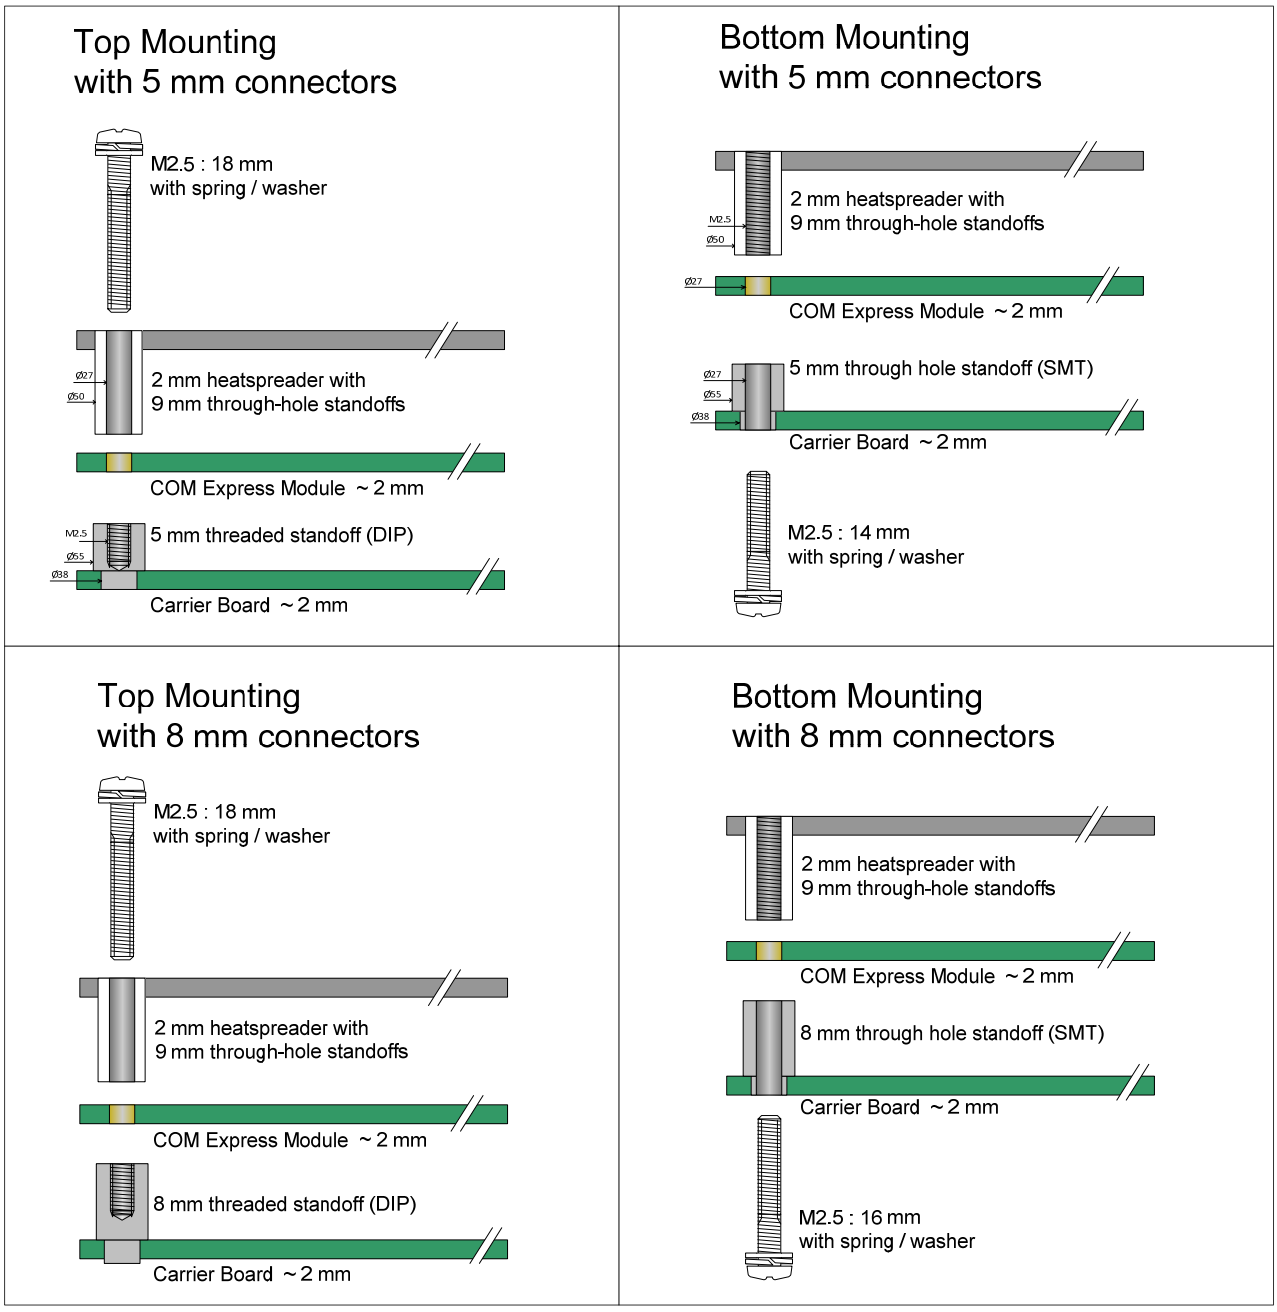


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9.4 Standoff Types

The standoffs available for Top and Bottom mounting methods are shown below. Note that threaded standoffs are DIP type and through-hole standoffs are SMT type. Other types not listed are available upon request.


5mm through-hole standoff (SMT type)

P/N: 33-72000-0050

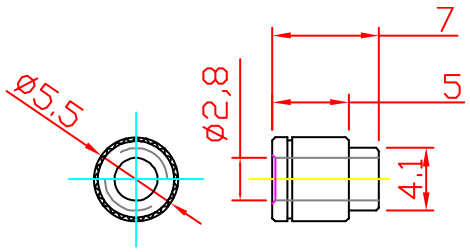


5mm threaded standoff (DIP type)

P/N: 33-72016-0050

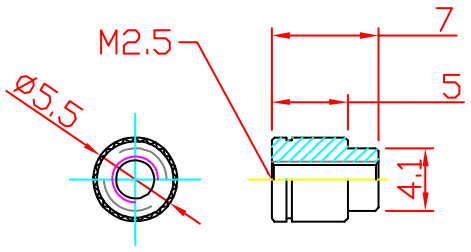


8mm through-hole standoff (SMT type)

P/N: 33-72000-0080

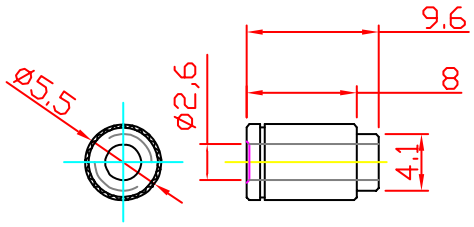

8mm threaded standoff (DIP type)

P/N: 33-72015-0050

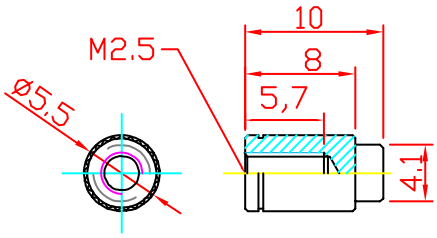

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Safety Instructions

Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.

- Please read these safety instructions carefully.
- Please keep this User's Manual for later reference.
- Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- When installing/mounting or uninstalling/removing equipment, turn off the power and unplug any power cords/cables.
- To avoid electrical shock and/or damage to equipment:
  - Keep equipment away from water or liquid sources.
  - Keep equipment away from high heat or high humidity.
  - Keep equipment properly ventilated (do not block or cover ventilation openings).
  - Make sure to use recommended voltage and power source settings.
  - Always install and operate equipment near an easily accessible electrical socket-outlet.
  - Secure the power cord (do not place any object on/over the power cord).
  - Only install/attach and operate equipment on stable surfaces and/or recommended mountings.
  - If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.
- Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service

Ask an Expert: http://askanexpert.adlinktech.com

ADLINK Technology, Inc.
Address: 9F, No.166 Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.
Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.
Address: 300 Fang Chun Rd., Zhangjiang Hi-Tech Park, Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology GmbH
Mannheim: Hans-Thoma-Strasse 11, D-68163, Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

Please visit the Contact page at www.adlinktech.com for information on how to contact the ADLINK regional office nearest you.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000