NuPRO-760

Full-Size Socket 370 PICMG SBC

User's Guide



Recycled Paper

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

©Copyright 2002 ADLINK Technology Inc.

Manual Rev. 1.11, October 16, 2003

Part NO: 50-13023-101

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

NuPRO is a registered trademark of ADLINK Technology Inc.,

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK TECHNOLOGY INC. If you need any help or service, please contact us.

ADLINK TECHNOLOGY INC.			
Web Site	http://www.adlinktech.com		
Sales & Service	Service@adlinktech.com		
TEL	+886-2-82265877	FAX	+886-2-82265717
Address	9F, No. 166, Jian Yi Road, Chungho City, Taipei, 235 Taiwan		

Please email or FAX your detailed information for prompt, satisfactory, and consistent service.

Detailed Company Information			
Company/Organization			
Contact Person			
E-mail Address			
Address			
Country			
TEL		FAX	
Web Site			
Questions			
Product Model			
Environment	OS: Computer Brand: M/B: CPU: Chipset: BIOS: Video Card: NIC: Other:		
Detail Description			
Suggestions for ADLINK			

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Chapter 1 Introduction 1

1.1 Checklist 2
1.2 Description 2
1.3 Features 3
1.4 Specifications 4
1.5 Intelligence 7
1.6 PCB Layout Drawing 8
1.7 Mechanical Drawing 8

Chapter 2 Jumpers and Connectors 9

2.1 Connectors on the NuPRO-760 10
2.1.1 CN1,CN4 : IDE Pin Headers 11
2.1.2 CN2 : FDD Pin Header 12
2.1.3 CN3 : Parallel Port Connector 12
2.1.4 CN5 : AC'97 Link PIN Header 13
2.1.5 CN6,CN7 : COM1,2 Serial Ports pin headers 13
2.1.6 CN8 : VGA Connector 13
2.1.7 CN9 : USB pin header 14
2.1.8 CN10 : Ethernet (RJ-45) Connector 14
2.1.9 CN11 : IrDA interface Connector 14
2.1.10 CN12 : PS/2 Mouse Connector 14
2.1.11 CN13 : General Purpose System Signals 15
2.1.12 CN15 : External keyboard connector 16
2.1.13 CN16 : PS/2 Keyboard Connector 16
2.1.14 FAN1,FAN2 : CPU fan connector 16
2.1.15 LED1 : LAN Activity Indicators 17
2.1.16 CN17 : Case Open Connector 17
2.1.17 CN18 : External LAN LED Pin-Header 17
2.1.18 CN19 : SMBus connector 17
2.2 Jumpers on NuPRO-760 18
2.2.1 JP1 : DiskOnChip (MD2200) address select 19
2.2.2 JP2,3 : CPU host BUS frequency setting (FSB) 20
2.2.3 JP4 : Clear CMOS RTC (real time clock) RAM 21

Chapter 3 Watchdog Programming Guide 23

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Chapter 4 VIA PLE133T Chipset Hardware and VGA Driver . 25

4.1 Hardware Configuration File Installation 26
4.2 VGA Driver Installation 29

Chapter 5 Realtek RTL8139C LAN Driver Installation 31

5.1 Software and Drivers Support 31
5.2 Driver Installation on Windows 2000 32
5.3 Driver Installation on Windows 98 33
5.4 Driver Installation on Windows NT 34

Product Warranty/Service 35

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

How to Use This Guide

This manual is designed to help you to use the NuPRO-760 series.

Chapter 1, **"Introduction"** gives an overview of the product features and specifications.

Chapter 2, **"Jumpers and Connectors"** describes how to install the SBC. The PCB layout, jumper setting and connector pin assignments are shown.

Chapter 3 **"Watchdog Programming"** shows the functionality of the watchdog timer.

Chapter 4, **"VIA PLE133T Hardware and VGA Driver"** describes how to install the VGA and Hardware drivers of the VIA PLE133T chipset.

Chapter 5, **"Realtek RTL8139C LAN driver installation"** describes how to install the LAN driver for NuPRO-760 SBC.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1

Introduction

This manual is designed to give you information on the NuPRO-760 series CPU card. The information inside this user's manual can be applied to NuPRO-760 series if without specified.

The topics covered in this chapter are as follows:

- Checklist
- Description
- Features
- Specifications
- Intelligence
- PCB Layout Drawing
- Mechanical Drawing

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.1 Checklist

Please check that your package is complete and contains the items below. If you discover damaged or missing items, please contact your dealer.

- The NuPRO-760 Industrial Computer Main Board
- This User's Manual
- 1 IDE Ribbon Cable (ATA-100)
- 1 Floppy Ribbon Connector
- 1 Serial Port Ribbon Cable and 1 Parallel Port Cable with bracket
- 1 Serial Port Ribbon Cable with bracket
- 1 CD Containing hardware configuration file, VGA Driver and LAN Driver

1.2 Description

The NuPRO-760 is a single-CPU PICMG form factor, industrial computer mainboard. The NuPRO-760 is based on the Intel PGA370 socket processor with the VIA APOLLO PLE133T and VT82C686B chipset. It accommodates single Intel Pentium III (Coppermine/Tualatin), Celeron and VIA C3 processor. This board supports three DIMM sockets and can accommodates up to 1.5GB SDRAM configuration.

The VIA VT82C686B south bridge is embedded with hardware monitoring device that monitors system and CPU temperature, system voltages, and CPU, chassis fan speeds to prevent system crashes by warning the user of adverse conditions. NuPRO-760 also has a case-open indicator for security.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3 Features

- Single Pentium III (Coppermine/Tualatin) / Celeron (FC-PGA, FC-PGA2) / VIA C3 processor with auto-selection of core voltages. The Front Side Bus (FSB) frequency can be 66/100/133MHz
- VIA Apollo PLE133T (VT8601T) North Bridge Controller
- VIA VT82C686B super South Bridge Controller
- Up to 1.5GB PC-133 SDRAM system memory (3 x 168-pin DIMM sockets)
- EIDE support up to Ultra/DMA100
- Two RS-232 interface
- One High speed bi-directional SPP/ECP/EPP parallel port
- Two USB ports
- One PS/2 Keyboard port and one PS/2 Mouse port
- Programmable watchdog timer
- Hardware Monitoring
- Single 10/100 Base-T Ethernet interface with external LAN status LED connectors
- AC'97 Link interface support DB-AC97S board for audio input & output
- ISA High Drive 64mA
- Standard ATX power connector on board
- The mounting holes around it to fit the board into chassis without Backplane (When using standard ATX power connector as power source)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4 Specifications

- **Processor Socket:** Socket-370 connector
- **Processor:** Intel Celeron and Pentium III (FC-PGA & FC-PGA2), VIA C3 CPU
- **Secondary Cache:** built in CPU
- **Bus Speed:** 66/100/133MHz
- **Chipset: VIA PLE133T (VT8601T + VT82C686B)**
- **Memory Sockets:**
  - Three 168-pin DIMM sockets
  - Max. 1.5GB SDRAM
  - Memory type: PC-133 un-buffered SDRAM
- **Integrated Graphics Controller:**
  - VIA 8601T built-in Trident 3D AGP 2D/3D graphics engine
  - Video memory share with system memory up to 8MB
  - AGP 4X, ACPI and VESA compliant
  - Embedded 230MHz RAMDAC in chipset
  - DDC2B compliant
  - Support up to 1600x1200 resolution
- **BIOS: Award BIOS, support PnP**
  - DMI BIOS Support: Desktop Management Interface (DMI) allows users to download system hardware-level information such as CPU type, CPU speed, internal/external frequencies and memory size
  - Green Function: Power management via BIOS, activated through mouse/keyboard movement
- **PCI Compliance:** Compliant to PCI rev. 2.2 standards, 32bit/33Mhz interface.
- **PCI Bus Ethernet Interface:**
  - On-board Realtek RTL8139C high performance IEEE 802.3 10/100-BaseTX Ethernet controller
  - Supports IEEE 802.3µ auto-negotiation for 10Base-T/100Base-TX

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Supports IEEE 802.3x 100Base-TX flow control
- Reserved with pin-header for Ethernet's LED for user's applications
- Support Wake-On-LAN function and remote wake-up

♦ **Enhanced IDE:** Bus Master IDE controller, two EIDE interfaces support up to four IDE devices, including HDD, LS-120 and ATAPI CD-ROM drives. Support PIO Mode 3/4 and Ultra DMA/33/66/100 IDE devices. Onboard primary and secondary 40-pin IDE port.

♦ **Super I/O Chipset:** Built-in VIA 82C686B chipset

♦ **Parallel Port:**

- One high-speed parallel port, SPP/EPP/ECP mode

♦ **Serial Port:**

- Two 16C550 UART compatible ports with RS-232 interface

♦ **FDD Interface:** Two floppy drives (360KB, 720KB, 1.2MB, 1.44MB, 2.88MB)

♦ **USB Interface:** Two USB pin-header connectors, compliant with USB Specification Rev. 1.1, Individual over-current protection

♦ **AC'97 Link:**

- One 10 pin connector for DB-AC97S audio board

♦ **Watchdog Timer:**

- Programmable I/O port 440h and 443h to configure watchdog timer
- Time-out timing select 0~255 seconds

♦ **Hardware Monitoring:**

- Built-in VIA 82C686B, monitoring CPU temperature, CPU fan, system temperature and DC Voltages

♦ **Keyboard and Mouse Connectors:**

- One PS/2 Keyboard port and one PS/2 Mouse port
- One external 5-pin keyboard connector

♦ **Flash Disk Supporting:**

- Support flash module DOM2000 (4MB~256MB) or 2.5" flash disk Flash2000 (8MB~2GB) on IDE port

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Support DiskOnChip (DOC) up to 288MB

♦ **ISA High-drive:** ISA bus high driving capability up to 64mA on all address and control lines

♦ **Power supply:** AT/ATX

♦ **Environmental:**

- Storage Temperature: -20°C to 80°C
- Operation Temperature: 0°C to 60°C
- Humidity: 5% to 95%

♦ **Power Requirement:**

Power Type	Value (MAX)	Unit	Note
+5V	7400	mA	
+12V	240	mA	1
–12V	100	mA	
$+5V_{SB}$	50	mA	2

1. Without FAN current.
2. When power-off and using ATX power supply


System configuration : NuPRO-760, Intel Pentium III/1GB (133MHz FSB), 1.5GB SDRAM (256MB PC-133 SDRAM x 3).

Note: The above values are the maximum power requirement for SBC with CPU and RAM only, the CPU is running under full loading. The power for all the other peripheral devices such as keyboard, mouse, add-on cards, HDD, or CD ROM is not included.

♦ **Dimension:** 338mm x 122mm(13.3” x 4.8”). Full-sized


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.5 Intelligence

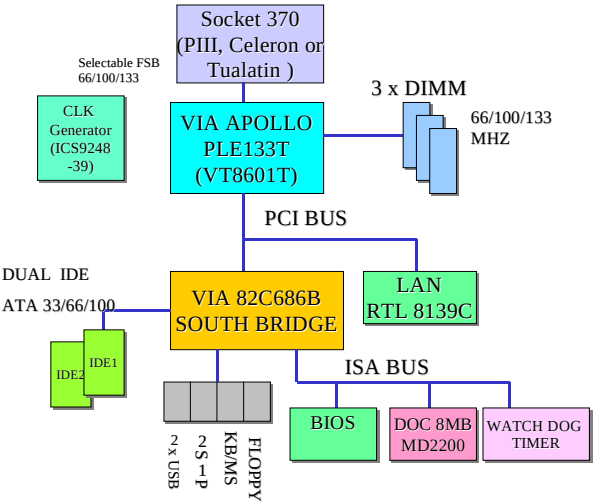


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.6 PCB Layout Drawing

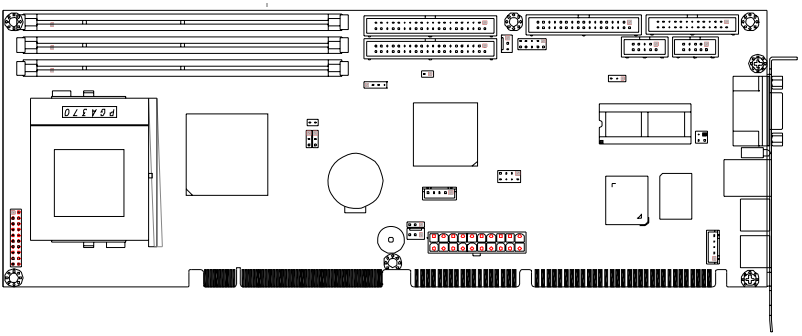

1.7 Mechanical Drawing

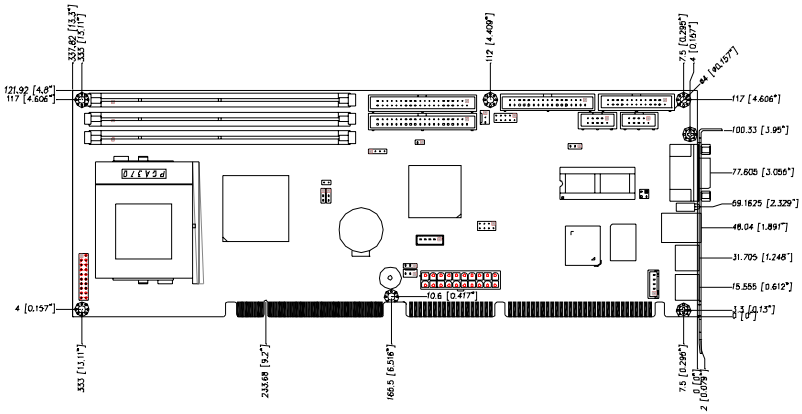

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2

Jumpers and Connectors

The connectors on the NuPRO-760 allow you to connect external devices such as keyboard, floppy disk drives, hard disk drives, printers, etc.


The following subsections specify the pin assignments for the connectors and jumper blocks on NuPRO-760.

- CN1, CN4: EIDE Connectors (CN1: primary)
- CN2: Floppy Drive Connector
- CN3: Parallel Port Connector
- CN5: AC'97 Connector
- CN6, CN7: Serial Port (CN7: COM1, CN6: COM2)
- CN8: VGA CRT Connector
- CN9: USB Connector
- CN10: Ethernet RJ45 Connector
- CN11: IrDA interface connector
- CN12: PS/2 Mouse Connector
- CN13: General Purpose System Signals
- CN14: ATX Power Connector
- CN15: External keyboard connector
- CN16: PS/2 Keyboard Connector
- CN17: Case Open connector
- CN18: External LAN LED pin-header

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- CN19: SMBus connector
- FN1,FN2: CPU fan connector
- LED1: LAN Activity Indicators


2.1 Connectors on the NuPRO-760

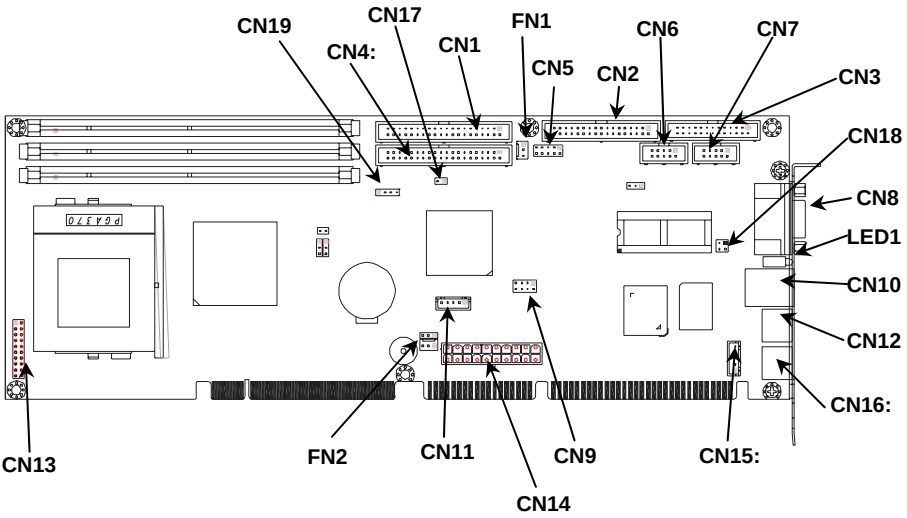

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.1 CN1,CN4 : IDE Pin Headers

CN1: Primary IDE Connector, CN4: Secondary IDE Connector



Signal Name	Pin #	Pin #	Signal Name
Reset IDE	1	2	Ground
Host data 7	3	4	Host data 8
Host data 6	5	6	Host data 9
Host data 5	7	8	Host data 10
Host data 4	9	10	Host data 11
Host data 3	11	12	Host data 12
Host data 2	13	14	Host data 13
Host data 1	15	16	Host data 14
Host data 0	17	18	Host data 15
Ground	19	20	+5V (2)
DRQ0 / DRQ1 (1)	21	22	Ground
Host IOW	23	24	Ground
Host IOR	25	26	Ground
IOCHRDY	27	28	Host ALE
DACK0 / DACK1 (1)	29	30	Ground
IRQ14 / IRQ 15 (1)	31	32	No connect
Address 1	33	34	No connect
Address 0	35	36	Address 2
Chip select 0	37	38	Chip select 1
Activity	39	40	Ground


Note :

(1) The signals are with different definitions for primary or secondary IDE

(2) The pin #20 provide +5V power, which is used to support the direct plug-in Disk On Module (DOM: IDE flash disk).


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.2 CN2 : FDD Pin Header



Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	Drive density selection
Ground	3	4	No connect
Ground	5	6	Drive density selection
Ground	7	8	Index
Ground	9	10	Motor enable 0
Ground	11	12	Drive select 1
Ground	13	14	Drive select 0
Ground	15	16	Motor enable 1
Ground	17	18	Direction
Ground	19	20	Step
Ground	21	22	Write data
Ground	23	24	Write gate
Ground	25	26	Track 00
Ground	27	28	Write protect
Ground	29	30	Read data
Ground	31	32	Side 1 select
Ground	33	34	Diskette change


2.1.3 CN3 : Parallel Port Connector



Signal Name	Pin #	Pin #	Signal Name
Line printer strobe	1	14	AutoFeed
PD0, parallel data 0	2	15	Error
PD1, parallel data 1	3	16	Initialize
PD2, parallel data 2	4	17	Select
PD3, parallel data 3	5	18	Ground
PD4, parallel data 4	6	19	Ground
PD5, parallel data 5	7	20	Ground
PD6, parallel data 6	8	21	Ground
PD7, parallel data 7	9	22	Ground
ACK, acknowledge	10	23	Ground
Busy	11	24	Ground
Paper empty	12	25	Ground
Select	13	N/A	N/A

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


2.1.4 CN5 : AC'97 Link PIN Header



Signal Name	Pin#	Pin#	Signal Name
GND	1	2	AC_CLK
GND	3	4	AC_SDIN0
+5V	5	6	AC_SDOUT
+5V	7	8	AC_SDIN1
AC_SYNC	9	10	AC_RSTJ


2.1.5 CN6,CN7 : COM1,2 Serial Ports pin headers

CN7: COM1 Connector, CN6: COM2 Connector



Pin #	RS-232
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator
10	NC


2.1.6 CN8 : VGA Connector



Signal Name	Pin#	Pin#	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
N.C.	9	10	GND
N.C.	11	12	N.C.
HSYNC	13	14	VSYNC
NC	15		


LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.7 CN9 : USB pin header




Pin #	Pin #	Signal Name
1	2	VCC
3	4	USB0- / USB1-
5	6	USB0+ / USB1+
7	8	Ground

2.1.8 CN10 : Ethernet (RJ-45) Connector

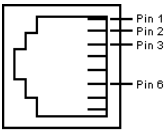


Pin #	Signal Name
1	TD+
2	TD-
3	RD+
6	RD-

2.1.9 CN11 : IrDA interface Connector

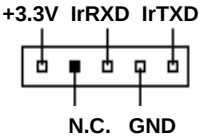

Pin #	Signal Name
1	+3.3V
2	No connect
3	IrRXD
4	Ground
5	IrTXD


2.1.10 CN12 : PS/2 Mouse Connector

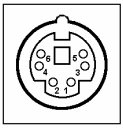

Pin #	Signal Name
1	Mouse data
2	N.C.
3	GND
4	5V
5	Mouse Clock
6	N.C.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.11 CN13 : General Purpose System Signals

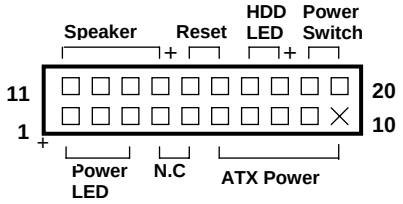

Pin #	ATX Power Interface Signals
6	GND
7	X
8	PS_ON
9	5V SB (standby +5V)
10	N.C

- **Power LED: Pins 1 - 3**

  The power LED indicates the status of the main power switch.

- **ATX Power Interface: Pins 6 -10**

  The +5V standby power input from pin #9 and #10. The PS_ON# signal is connected to the ATX power supply to control the power On/Off.

- **Speaker: Pins 11 - 14**

  This connector provides an interface to a speaker for audio tone generation. An 8-ohm speaker is recommended.

- **Reset Switch: Pins 15 and 16**

  The reset switch allows the user to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.

- **Hard Disk LED Connector: Pins 17 and 18**

  This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

- **ATX Power ON Switch: Pins19 and 20**

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


This 2-pin connector is an “ATX Power Supply On/Off Switch” on the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed it for 4 seconds, it will force the system to power off.

2.1.12 CN15 : External keyboard connector



Pin #	Signal Name
1	Keyboard clock
2	Keyboard data
3	NC
4	GND
5	Vcc


2.1.13 CN16 : PS/2 Keyboard Connector

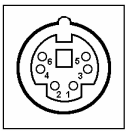

Pin #	Signal Name
1	Keyboard data
2	N.C.
3	GND
4	5V
5	Keyboard clock
6	N.C.

2.1.14 FAN1,FAN2 : CPU fan connector


FAN1 & 2 are 3-pin header for the CPU and system fan respectively .The fan must be a 12V fan.



Pin #	Signal Name
1	Fan speed
2	+12V
3	GND

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.1.15 LED1 : LAN Activity Indicators

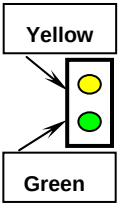

Location	LED Status	Description
Yellow LED Speed Status	ON	100 Mbps
	OFF	10 Mbps
Green LED: Link Status	ON	Link
	OFF	Off line
	Blinking	Data transfer in progress

2.1.16 CN17 : Case Open Connector



Shorted	Open
Case Closed	Case Open

The signal is connected to the limit switch sensor of the chassis to detect the case open or closed.

2.1.17 CN18 : External LAN LED Pin-Header




1-2 : LAN Link/Active LED



3-4 : Speed : 100Mbps LED


2.1.18 CN19 : SMBus connector



Pin #	Signal Name
1	+5V
2	SMBus Clock
3	SMBus Data
4	Ground

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Jumpers on NuPRO-760

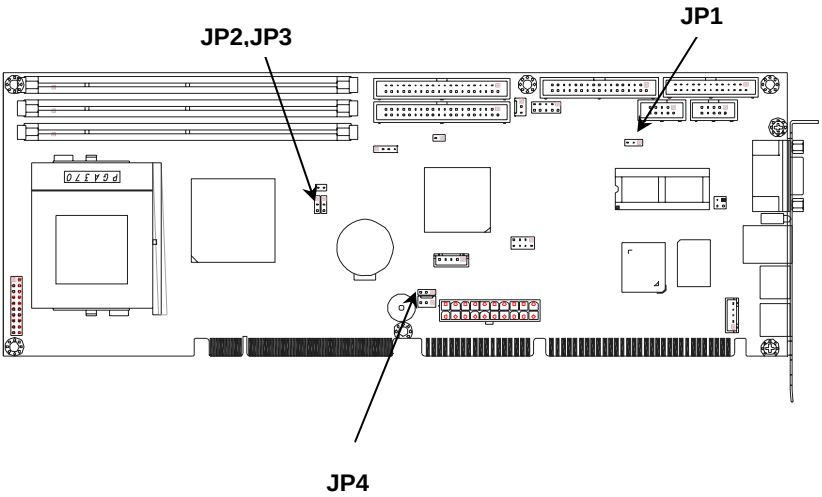

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2.1 JP1 : DiskOnChip (MD2200) address select





The flash memory within DiskOnChip 2000 is accessed through a 8KB window in the CPU's memory. The Disk On Chip MD2200 can be mapped to any free 8KB memory space. When used in a PC-compatible architecture, the DiskOnChip 2000 is allocated an 8KB memory window in the BIOS expansion memory range, D8000H~DFFFFH or D0000H~D7FFFH.

JP1 is used to select the memory range location

Address range	JP1
D8000H~DFFFFH 1-2	
D0000H~D7FFFH 2-3	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2.2 JP2,3 : CPU host BUS frequency setting (FSB)

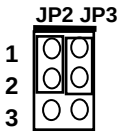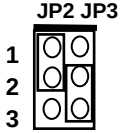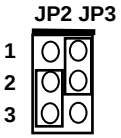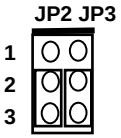CPU Frequency	JP2	JP3	Jumper Setting
66 MHz	1-2	1-2	
100 MHz (Default)	1-2	2-3	
Reserved	2-3	1-2	
133MHz	2-3	2-3	


The default sets CPU Speed as 100MHz FSB. SDRAM frequency can set slower, equal, or faster than CPU FSB than 33MHz in BIOS setting.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2.3 JP4 : Clear CMOS RTC (real time clock) RAM

The RTC RAM data containing the date / time and password information, is powered by the onboard button cell battery.

To erase the RTC data: (1)unplug the NuPRO-760 (2)short the JP4 Pin 2,3 instead of Pin 1,2 about 5 seconds (3) Re-plug the cap to pin 1,2.

RTC status	JP4
Normal operation (Default)	
Clear RTC	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3

Watchdog Programming Guide

The NuPRO-760 implements a watchdog timer by the use of PLD, EPM7032. It contains a one-second resolution down counter. Once setup a value to WDT, the timer begins to count down. The Watchdog output is connected to “reset” button. When the system hangs up without software re-trigger, the system will be reset.

The watchdog timer would reset the system automatically if the system program did not refresh the watchdog timer during the watchdog time out interval. It is set at I/O port 440h and 443h to enable/disable the watchdog time out function. Its clock source 1Hz, and then is divided into 1Hz base to counter a 8 bits counter such that the timer range is from 1 sec to 256 sec with resolution 1 sec.

Regarding to the watchdog function, users must have a program to set the watchdog time out value, and refresh the watchdog timer cycle. If the system programs goes into a dead loop or goes into an abnormal cycle, the watchdog timer cannot be refreshed immediately. Meanwhile, the watchdog timer will reset the system automatically. The watchdog timer will be refreshed by “ disable watchdog output” then “enable watchdog output”.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Watchdog Time Out Table

Timer Value	Time Out
0	None
1	1sec.
2	2sec.
3	3sec.
4	4sec.
5	5sec.
6	6sec.
7	7sec.

Time Value	Time Out
8	8sec.
9	9sec.
A	10sec.
B	11sec.
C	12sec.
D	13sec.
E	14sec.
F	15sec.

Time Value	Time Out
.	.
.	.
.	.
.	.
.	.
.	.
.	.
FF	255 sec.

Example :

<Enable Watchdog Timer :>

mov dx , 440h

mov al, <0~255>

out dx,al

<Disable Watchdog Timer :>

Write any Value to I/O port 443h

mov dx, 443h

mov al, <0~255>

out dx, al

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4

VIA PLE133T Chipset Hardware and VGA Driver

This chapter describes the installation procedure of VIA Apollo PLE 133T (VIA 8601T) chipset Device Driver for Windows 95/98/2000.

Before installing Windows 95/98/ME onto NuPRO-760, an important issue must be taken care when using maximum size of memory. If a system that is running Windows 95/98/ME contains more than 512 megabytes (for example, 768 megabytes) of physical memory (RAM), you may experience one or more of the following symptoms:

- You may not be able to open an MS-DOS session (or command prompt) while Windows is running. Attempts to do so may generate the following error message:

  "There is not enough memory available to run this program.
  Quit one or more programs, and then try again."
- The computer may stop responding (hang) while Windows is starting, or halt and display the following error message:

  "Insufficient memory to initialize windows. Quit one or more memory-resident programs or remove unnecessary utilities from your Config.sys and Autoexec.bat files, and restart your computer."

☞Installing the safe amount (512MB) of memory in your system (95/98/ME) to avoid the unexpected situation is highly recommended. More detailed information about memory issue, you can refer to the following Microsoft web sites:

http://support.microsoft.com/default.aspx?scid=kb;EN-US;q184447
http://support.microsoft.com/support/kb/articles/Q253/9/12.asp

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.1 Hardware Configuration File Installation

This section describes system requirements of VIA Apollo PLE 133T (VIA 8601T) chipset Device Driver. This driver has been designed for and tested with Windows 98/95.

The system must contain a supported Intel Socket 370 processor and chipset configuration. Ensure that a mouse is connected to the system. One of the following versions of Windows 95/98/2000 must be installed on the system prior to running utility program.

- Windows 2000 : 5.00.2195 (Original release)
- Windows 98 : Second Edition 4.10.2222 A (Original Release)
- Windows 98 : 4.10.1998 (Original Release)
- Windows 95 : 4.00.950c (OSR 2.5 with or without USB Supplement)
- Windows 95 : 4.00.950b (OSR 2.1 with USB Supplement)
- Windows 95 : 4.00.950b (OSR 2.1 with USB Supplement)
- Windows 95 : 4.00.950a (OSR1)
- Windows 95 : 4.00.950 (Original Release)

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Installing Hardware Configuration File

This subsection describes how to install the hardware configuration file on a system where Windows 98/95 is installed.

Note: Record the location of the Windows 95/98/2000 directory before installing the driver.

1. Check the System Requirements. Windows 95/98/2000 must be fully installed and running on the system prior to running this software.

2. Close any running applications.

3. The files are stored in an integrated application setup program. This program is designed for a Windows 95/98/2000 program that allows the INF files to be installed.

4. Run the SETUP.EXE program In **X:\CHIPDRV\Chipset\VIA_Chip**

5. welcome , Click Cancel to quit Setup and then close any programs you have running, Click Next to continue with the Setup program , Click "**Next**".

6. VIA Service Pack 1 README, Click Yes means you have read and agreed with the license agreement and README ,Click No to decline and Exit , Click "**Yes**".

7. 4in1 Setup Mode Option , Click to enable Normally or Quickly install , Click "**Next**".

8. Setup Components , This setup program will install the following drivers , If you don't want to install them , you can uncheck the associated check box , Click "**Next**".

9. VIA PCI IDE Bus Driver 1.20 , install/Uninstall VIA PCI IDE Bus Driver , Click "**Next**".

10. VIA_GART AGP Driver 4.05 , Setup program will install/uninstall AGP driver for you , Click "**Next**".

11. Setup Complete , Setup has finished copying files to your computer , Before you can use the program , you must restart windows or your computer , Click " **Finish**" to restart the system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

12. Follow the screen instructions and use default settings to complete the setup when Windows 95/98/2000 is re-started. Upon re-start, Windows 95/98/2000 will display that it has found many hardware and is installing driver for them. If one **New Hardware Found** dialog box is displayed requesting the location of the drivers, use the mouse to click on the scrollbar and click on the <Windows 95/98/2000 directory>.

13. Select ***Yes***, when prompted to re-start Windows 95/98/2000.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2 VGA Driver Installation

This section provides information on how to install the VGA driver that come in the Compact Disk with the package. Please follow the instructions set forth in this section carefully. Please note that there must be relevant software installed in your system before you could proceed to install the VGA driver.

Installing the Drivers for Windows 98/95 and Win 2000

The following section describes the normal display driver installation procedures for Windows 95/98/2000. Use the following procedures when installing the display drivers for Windows 98/95.

1. The driver is included in the ADLINK CD. Run the **SETUP.exe** under the following directory: **X:\CHIPDRV\VGA\VT8601T\win 9x** (or **Win 2K** folder for Win 2000 installation).

2. Click **Next** on **Welcome Screen** to read and agree to the license agreement.

3. Click **Yes** if you agree to continue. NOTE: If you click **No**, the program will terminate.

4. Click **Yes** to restart your computer and for the new settings to take effect.

5. Follow the screen instructions and use default settings to complete the setup when Windows 95/98/2000 is re-started.

Installing the Drivers for Windows NT 4.0

[IMPORTANT]: You should install the Windows NT 4.0 with at least Service Pack 4 (version number: 4.00.1381) first before installing the VGA driver. If you don't have the Windows NT 4.0 Service Pack 4, please contact your software vendor or download it from Microsoft's web site.

The procedures below show you how to install the VGA driver for Windows NT 4.0.

1. Boot Windows NT 4.0.

2. The driver is included in the ADLINK CD. Run the **SETUP.exe** under the following directory: **X:\CHIPDRV\VGA\VT8601T\win nt4**

3. Click **Next** on **Welcome Screen** to read and agree to the license agreement.

4. Click **Yes** if you agree to continue. NOTE: If you click **No**, the program will terminate.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5. Windows NT 4.0 will prompt you to restart computer. Click **Yes** for the new settings to take effect.

6. Follow the screen instructions and use default settings to complete the setup when Windows NT 4.0 is re-started.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5

Realtek RTL8139C LAN Driver Installation

This chapter describes LAN driver installation for the onboard Ethernet controller **RTL8139C**. The relative drivers are under the following ADLINK CD directory: **X:\CHIPDRV\LAN\RTL8139c**, where X: is the location of the CD-ROM drive.

5.1 Software and Drivers Support

The RTL8139C drivers support the following OS or platforms: Windows 98, Windows ME, Windows 2000, Windows NT.

All the above drivers are included in the ADLINK CD. In the following section, we will describe the driver installation for Windows 98, Windows 2000, and Windows NT. For the driver installation of the other OS, please refer the readme.txt file inside the CD.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.2 Driver Installation on Windows 2000

The Windows 2000 may install the LAN driver. We recommend you to manually installed the most updated LAN driver, which shipped with ADLINK CD to guarantee the compatibility. After installing the Windows 2000, please update the new drivers by the following procedures.

1. Boot Windows 2000, Click **Start**. Select **Settings** then double-click the **Control Panel**.

2. Double-click ***System*** icon, click **Hardware** tab, click **Device Manager** button.

3. Double-click Network Adapters entry, Double-click the Realtek RTL 8139 PCI Fast Ethernet Adapter entry.

4. Click **Driver** tab, then click **Update Driver…** button.

5. An Upgrade Device Driver Wizard windows, click **Next>**.

6. Select **Display a list of ...** and click **Next>**. The next window may show a list of hardware models.

7. Insert the CD and click **Have Disk**.

8. Browse the RTL-8139C driver in the following path: ***X:*\ CHIPDRV\LAN\RTL8139c\WINDOWS\Win2k**, highlight **Netrts5.inf**, click **Open**, then click **OK**.

9. Highlight the model: **Realtek RTL8139 PCI Fast Ethernet Adapter,** then click **NEXT>**. An Update Driver Warning window may pop up, click Yes to continue.

10. Click **NEXT>** button, then the Wizard summary window appears.

11. Click **Finish** button, then click **CLOSE** button.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.3 Driver Installation on Windows 98

The Windows 98 will install the LAN driver automatically. We recommend you to manually updated the LAN, which on the ADLINK CD to guarantee the compatibility. After installing Windows 98, please update the new drivers by the following procedures.

1. Boot Windows 98, Click **Start**. Select **Settings** then double-click the **Control Panel**.

2. Double-click on the **System** icon, click on the **Device Manager** tab.

3. Double-click on the **Network Adapters** entry,. Click the **Properties**.

4. Click on the **Driver** button, then click **Update Driver…** button.

5. Update Device Driver Wizard starts, click **NEXT.**

6. Select **Display a list of ...** and click **NEXT**. The next window allows the user to specify a specific path. Insert the CD and click **Have Disk**.

7. **Browse** the RTL-8139 driver in the following path:

   X:*\ CHIPDRV\LAN\RTL8139c\WINDOWS\Win9*8 highlight **NETRTS5.INF**, click **OK**. The Update Wizard displays the message that it has found the driver. Click **OK** again to update the driver.

Note: Windows 98 may ask you to insert the original Windows 98 CD to install the LAN protocols.

8. Click **NEXT** button, then the Wizard summary window appears.

9. Click **Finish** button, then restart the computer to active the new driver.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5.4 Driver Installation on Windows NT

Before install the LAN driver on Windows NT, please copy the LAN driver in the CD to a floppy diskette. You have to put a new disk into drive A, then type the following batch command under DOS environment to copy the relative NT drivers.

X: \CHIPDRV\LAN\RTL8139c\WINDOWS\NT4.0

where X is the CD-ROM drive.

Windows NT may ask to installs a LAN driver from its own library of drivers. We recommend you to manually update the LAN, which on the ADLINK CD to guarantee the compatibility. After installing Windows NT, please update the new driver by the following procedures.

1. From the **Control Panel**, double-click the **Network** icon, a Network Configuration window pop up, click **Yes**.
2. In Network Setup Wizard, click **Next>**, click **Select From List…** button.
3. Copy all files in the directory: **X:\CHIPDRV\LAN\RTL8139c\WINDOWS\NT4.0** to floppy diskette.
4. Insert LAN driver floppy diskette into A drive and click **Have Disk**.
5. In the dialog box of Insert Disk window, type in **A:**, Click **OK**.
6. A Select OEM Option window pop up, click **OK**, then click **Next>**.
7. Select necessary Network Protocols, click **Next>**.
8. Select necessary Network Services, click **Next>**.
9. Click **Next>** until Window NT Setup dialog box pop up. Type in **X:\i386** in the dialog box, then insert the original Windows NT CD, and click **Continue**.
10. Then click **OK** until the setup completed.
11. Restart the computer to reboot.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: http://rma.adlinktech.com/policy/.
2. All ADLINK products come with a limited two-year warranty, one year for products bought in China.
    - The warranty period starts on the day the product is shipped from ADLINK's factory.
    - Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
    - For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for any loss of data.
    - Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
    - For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.
3. Our repair service is not covered by ADLINK's guarantee in the following situations:
    - Damage caused by not following instructions in the User's Manual.
    - Damage caused by carelessness on the user's part during product transportation.
    - Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
    - Damage caused by inappropriate storage environments such as with high temperatures, high humidity, or volatile chemicals.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
- Damage from improper repair by unauthorized ADLINK technicians.
- Products with altered and/or damaged serial numbers are not entitled to our service.
- This warranty is not transferable or extendible.
- Other categories not protected under our warranty.

4. Customers are responsible for all fees necessary to transport damaged products to ADLINK.

For further questions, please e-mail our FAE staff: service@adlinktech.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000