XMC-E540

Dual-port 10GBASE-T Ethernet XMC module
with Intel® Ethernet Controller X540

User's Manual



Manual Rev.:	2.00
Revision Date:	August 7, 2013
Part No:	50-1Z124-1000

Recycled Paper

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
2.00	2013/08/07	Initial release

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Preface

Copyright 2013 ADLINK Technology, Inc.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Using this Manual

Audience and Scope

The XMC-E540 User's Manual is intended for hardware technicians and systems operators with knowledge of installing, configuring and operating industrial grade computer systems.

Manual Organization

This manual is organized as follows:

Chapter 1, Introduction: Introduces the XMC-E540, its features, block diagrams, and package contents.

Chapter 2, Specifications: Presents detailed specification information.

Chapter 3, Board Interfaces: Describes the XMC-E540 connectors and switches.

Chapter 4, Getting Started: Describes the installation of the XMC-E540 to the carrier and driver installation.

Important Safety Instructions: Presents safety instructions all users must follow for the proper setup, installation and usage of equipment and/or software.

Getting Service: Contact information for ADLINK's worldwide offices.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



CAUTION:

Information to prevent ***minor*** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



WARNING:

Information to prevent ***serious*** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of Contents

Revision History ..... **ii**

Preface ..... **iii**

List of Figures ..... **ix**

List of Tables ..... **xi**

1 Introduction **1**

1.1 Overview 1
1.2 Features 1
1.3 Block Diagram 2
1.4 Package Contents 3

2 Specifications **5**

2.1 XMC-E540 Module 5
2.2 Intel® Ethernet Controller X540-AT2 6
2.3 Power Consumption 7

3 Board Interfaces **9**

3.1 XMC-E540 Board Layout 9
3.2 Connector Pin Assignments 10

4 Getting Started **13**

4.1 Installing the Module 13
4.2 Driver Installation 14

Important Safety Instructions **15**

Getting Service **17**

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Figures

Figure 1-1: XMC-E540 Functional Block Diagram 2
Figure 3-1: XMC-E540 Board Layout..... 9

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

List of Tables

Table 2-1: XMC-E540 Power Consumption 7
Table 3-1: RJ-45 10GbE Connector Pin Definitions 10
Table 3-2: XMC Connector Pin Definition 11

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1 Introduction

1.1 Overview

The XMC-E540 is a dual-port 10GBASE-T Ethernet XMC module with equipped with an Inte® Ethernet Controller X540. Featured are dual RJ-45 copper ports supporting 10G/1000/100BASE-T with auto-negotiation, jumbo frames up to 15.5KB, TCP/UDP segmentation, IPv6 IP/TCP, IP/UDP receive checksum offload, FCoE Tx/Rx CRC offload, and 256KB FCoE transmit segmentation. The XMC-E540 is compliant with the VITA 42.3-2006 XMC PCI Express Protocol Layer Standard.

1.2 Features

- Compliant with VITA 42.3 XMC standard with XMC.3 connector
- Dual-port Intel® 10Gigabit Ethernet Controller X540-AT2
- 10G/1G/100Mbps copper PHYs integrated on-chip
- Jumbo frames up to 15.5KB
- TCP/UDP segmentation, IPv6 IP/TCP, IP/UDP receive checksum offload
- FCoE Tx/Rx CRC offload, 256KB FCoE transmit segmentation
- Compliant with PCI Express Base Specification Rev. 2.1 (5GT/s)
- Compatible with PCIe x1, x2, x4, x8 lanes
- Dual RJ-45 copper ports
- Backward compatible with 1000BASE-T by auto-negotiation
- Preboot Execution Environment (PXE) support

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.3 Block Diagram

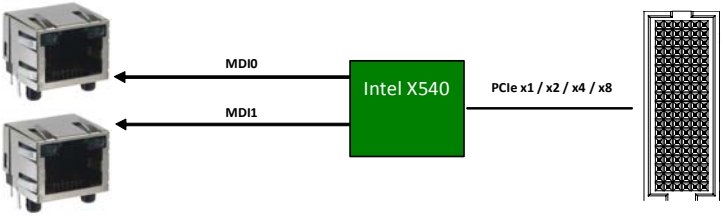


Figure 1-1: XMC-E540 Functional Block Diagram

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.4 Package Contents

The XMC-E540 is packaged with the following components. If any of the items on the contents list are missing or damaged, retain the shipping carton and packing material and contact the dealer for inspection. Please obtain authorization before returning any product to ADLINK. The packing contents of the XMC-E540 are non-standard configurations and may vary depending on customer requests.

- XMC-E540 module
- ADLINK All-in-One DVD
- User's manual



This product must be protected from static discharge and physical shock. Never remove any of the components except at a static-free workstation. Use the anti-static bag shipped with the product when putting the board on a surface. Wear an anti-static wrist strap properly grounded on one of the system's ESD ground jacks when installing or servicing system components.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Specifications

2.1 XMC-E540 Module

Standards	VITA 42.3-2006 XMC PCI Express Protocol Layer Standard
Form Factor	• IEEE P1386, Standard XMC.3 • 74 mm x 149 mm x 8.2 mm (single width)
Controller	Intel® Ethernet Controller X540-AT2 • Dual port 100Mb/1000Mb/10Gb data rate • Intel® Virtualization Technology for Connectivity (VMDq, SR-IOV) • Fiber Channel over Ethernet • MACsec IEEE 802.1 AE • IEEE 1588 • Intel® Data Direct I/O Technology • Intelligent Offloads • Storage Over Ethernet (iSCSI, FCoE, NFS)
Interface	• PCI Express base specification 2.1 (2.5GT/s or 5GT/s) • Supports PCI Express x1, x4, x8 lanes • 64-bit address support for systems using more than 4 GB of physical memory
I/O	• Two RJ-45 10G/1000/100BASE-T ports • Auto-negotiation of 10 Gb/s, 1 Gb/s, 100Mb/s mode
OS Compatibility	• Microsoft Windows 7 64-bit • Microsoft® Windows® Server 2003 R2 (32-bit x86) • Microsoft® Windows® Server 2008 64-bit • Red Hat Enterprise Linux 6 x86 • Other OS support upon request
Environmental	• Operating Temperature: 0°C to 60°C (with forced air flow) • Storage Temperature: -40°C to 85°C • Humidity: 95%@60°C non-condensing • Vibration: Operating 2Grms, 5-500Hz
EMI	• CE EN55022 • FCC Class A



Specifications are subject to change without prior notice.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Intel® Ethernet Controller X540-AT2

The following section describes the features and functions of Intel® Ethernet Controller X540-AT2

- 10 GbE/1 GbE/100 Mb/s copper PHYs integrated on-chip
- Support for jumbo frames of up to 15.5 KB
- Flow control support: send/receive pause frames and receive
- FIFO thresholds
- Statistics for management and RMON
- 802.1q VLAN support
- TCP segmentation offload: up to 256 KB
- IPv6 support for IP/TCP and IP/UDP receive checksum offload
- Fragmented UDP checksum offload for packet reassembly
- Message Signaled Interrupts (MSI)
- Message Signaled Interrupts (MSI-X)
- Interrupt throttling control to limit maximum interrupt rate and improve CPU usage
- Flow Director (16 x 8 and 32 x 4)
- 128 transmit queues
- Receive packet split header
- Receive header replication
- Dynamic interrupt moderation
- DCA support
- TCP timer interrupts
- No snoop
- Relaxed ordering
- Support for 64 virtual machines per port (64 VMs x 2 queues)
- Support for Data Center Bridging (DCB);(802.1Qaz,
- 802.1Qbb, 802.1p)
- PCIe base specification 2.1 (2.5GT/s or 5GT/s)
- Bus width - x1, x2, x4, x8

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3 Power Consumption

The power consumption data of the XMC-E540 was measured installed in an ADLINK cPCI-6510 carrier blade using a Spirent SmartBits network performance analysis system.

Power Consumption		
Engine Clock	**Current @ 5V**	**Power (W)**
Idle Load	0.44 A	2.2 W
Max. Load	1.50 A	7.5 W

Table 2-1: XMC-E540 Power Consumption

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


This page intentionally left blank.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Board Interfaces

This chapter illustrates the board layout, connector pin assignments, and switch settings to familiarize users with the XMC-E540.

3.1 XMC-E540 Board Layout

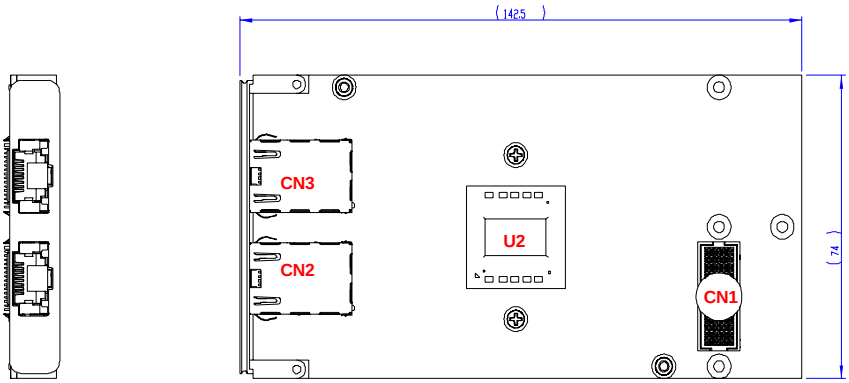

U2	Intel X540
CN1	XMC connector
CN2/3	RJ-45 10GbE connectors

Figure 3-1: XMC-E540 Board Layout

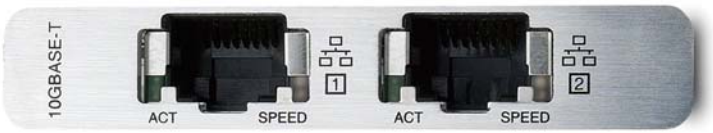


Figure 3-2: XMC-E540 Front Panel

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2 Connector Pin Assignments

RJ-45 10G Ethernet Connectors (CN2/3)

Pin #	100BASE-TX	10G/1000BASE-T
1	TX+	LAN_TX0+
2	TX-	LAN_TX0-
3	RX+	LAN_TX1+
4	--	LAN_TX2+
5	--	LAN_TX2-
6	RX-	LAN_TX1-
7	--	LAN_TX3+
8	--	LAN_TX3+


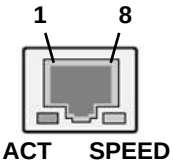


Table 3-1: RJ-45 10GbE Connector Pin Definitions

Status		ACT	SPEED
Network link is not established or system powered off		Off	Off
100 Mbps (100BASE-T)	Link	On (Green)	Off
	Active	Blinking	
1000 Mbps (1000BASE-TX)	Link	On (Green)	Yellow
	Active	Blinking	
10 Gbps (10GBASE-T)	Link	On (Green)	Blue
	Active	Blinking	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

XMC Connector (CN1)

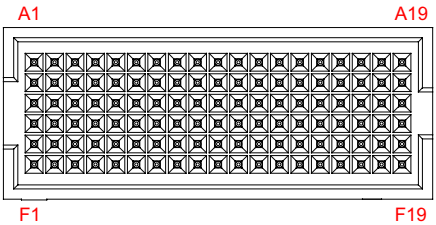

Pin#	A	B	C	D	E	F
1	PET0p0	PET0n0	3.3V	PET0p1	PET0n1	VPWR
2	GND	GND	Reserved	GND	GND	MRSTI#
3	PET0p2	PET0n2	3.3V	PET0p3	PET0n3	VPWR
4	GND	GND	Reserved	GND	GND	Reserved
5	PET0p4	PET0n4	3.3V	PET0p5	PET0n5	VPWR
6	GND	GND	Reserved	GND	GND	NC
7	PET0p6	PET0n6	3.3V	PET0p7	PET0n7	VPWR
8	GND	GND	NC	GND	GND	NC
9	NC	NC	NC	NC	NC	VPWR
10	GND	GND	NC	GND	GND	Reserved
11	PER0p0	PER0n0	Reserved	PER0p1	PER0n1	VPWR
12	GND	GND	Reserved	GND	GND	MPRESENT#
13	PER0p2	PER0n2	Reserved	PER0p3	PER0n3	VPWR
14	GND	GND	Reserved	GND	GND	Reserved
15	PER0p4	PER0n4	N.C.	PER0p5	PER0n5	VPWR
16	GND	GND	Reserved	GND	GND	Reserved
17	PER0p6	PER0n6	N.C.	PER0p7	PER0n7	N.C.
18	GND	GND	N.C.	GND	GND	N.C.
19	REFCLK+0	REFCLK-0	N.C.	N.C.	N.C.	N.C.

Table 3-2: XMC Connector Pin Definition

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

This page intentionally left blank.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Getting Started

4.1 Installing the Module

1. Remove the XMC slot filler faceplate from the front panel of the host board.
2. Insert the faceplate of the XMC module into the XMC slot in the front panel of the host board.
3. Carefully align the male connectors of the XMC module (component-side down) to the female connectors of the host board and firmly press down.
4. Secure the XMC module with the four screws provided from the bottom side of the host board.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4.2 Driver Installation

The XMC-E540 drivers can be found on the ADLINK All-In-One DVD at **X:\XMC\XMC-E540\LAN**, or at the ADLINK website (**http://www.adlinktech.com**). Driver installation procedures for Windows 7 are described below.

1. Install the Windows operating system before installing any driver. Most standard I/O device drivers are installed during Windows installation.
2. Install the LAN drivers by extracting and running the executable file in **...\LAN\Intel_Network_Adapter_AllOS_v16.6.zip**

We recommend using the drivers provided on the ADLINK All-in-One DVD or downloaded from the ADLINK website to ensure compatibility.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS,** and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- Read these safety instructions carefully.
- Keep this user's manual for future reference.
- Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- When installing/mounting or uninstalling/removing equipment:
  - Turn off power and unplug any power cords/cables.
- To avoid electrical shock and/or damage to equipment:
  - Keep equipment away from water or liquid sources;
  - Keep equipment away from high heat or high humidity;
  - Keep equipment properly ventilated (do not block or cover ventilation openings);
  - Make sure to use recommended voltage and power source settings;
  - Always install and operate equipment near an easily accessible electrical socket-outlet;
  - Secure the power cord (do not place any object on/over the power cord);
  - Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
  - If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.

A Lithium-type battery may be provided for uninterrupted, backup or emergency power.



Risk of explosion if battery is replaced with one of an incorrect type. Dispose of used batteries appropriately.

- Equipment must be serviced by authorized technicians when:
  - The power cord or plug is damaged;
  - Liquid has penetrated the equipment;
  - It has been exposed to high humidity/moisture;
  - It is not functioning or does not function according to the user's manual;
  - It has been dropped and/or damaged; and/or,
  - It has an obvious sign of breakage.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.
Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓
Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.
Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.
Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park,
Pudong New Area, Shanghai, 201203 China
Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing
Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1, B/D
Shang Di East Rd., Beijing, 100085 China
Tel: +86-10-5885-8666
Fax: +86-10-5885-8626
Email: market@adlinktech.com

ADLINK Technology Shenzhen
Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7,
High-Tech Industrial Park S., Shenzhen, 518054 China
Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

LiPPERT ADLINK Technology GmbH
Address: Hans-Thoma-Strasse 11, D-68163, Mannheim, Germany
Tel: +49-621-43214-0
Fax: +49-621 43214-30
Email: emea@adlinktech.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

ADLINK Technology, Inc. (French Liaison Office)
Address: 15 rue Emile Baudot, 91300 Massy CEDEX, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation
Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)
Address: 서울시 서초구 서초동 1675-12 모인터빌딩 8 층
8F Mointer B/D,1675-12, Seocho-Dong, Seocho-Gu,
Seoul 137-070, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.
Address: 84 Genting Lane #07-02A, Cityneon Design Centre,
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)
Address: 1st Floor, #50-56 (Between 16th/17th Cross) Margosa Plaza,
Margosa Main Road, Malleswaram, Bangalore-560055, India
Tel: +91-80-65605817, +91-80-42246107
Fax: +91-80-23464606
Email: india@adlinktech.com

ADLINK Technology, Inc. (Israeli Liaison Office)
Address: 6 Hasadna St., Kfar Saba 44424, Israel
Tel: +972-9-7446541
Fax: +972-9-7446542
Email: israel@adlinktech.com

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000