NuIPC®

PMC-8631

Ultra320 SCSI Interface

PMC Module

User's Guide



Recycled Paper

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Copyright 2003 ADLINK TECHNOLOGY INC.

All Rights Reserved.

Manual Rev. 1.01: October 1, 2004

Part No: 50-13041-100

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

NuIPC and PMC-8631 are registered trademarks of ADLINK TECHNOLOGY INC.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK TECHNOLOGY INC. If you need any help or service, please contact us.

ADLINK TECHNOLOGY INC.			
Web Site	http://www.adlinktech.com		
Sales & Service	service@adlinktech.com		
TEL	+886-2-82265877	FAX	+886-2-8226-5717
Address	9F, No. 166, Jian Yi Road, Chungho City, Taipei, 235 Taiwan		

Please email or FAX your detailed information for prompt, satisfactory, and consistent service.

Detailed Company Information			
Company/Organization			
Contact Person			
E-mail Address			
Address			
Country			
TEL		FAX	
Web Site			
Questions			
Product Model			
Environment	OS: Computer Brand: M/B: CPU: Chipset: BIOS: Video Card: NIC: Other:		
Detail Description			
Suggestions for ADLINK			

Table of Contents

1 Introduction 1

1.1 Features and Specifications 2

2 Getting Started 3

2.1 What's Included 3
2.2 Unpacking 4
2.3 PMC-8631 Layout 5
2.4 Functional Block Diagram 6
2.5 Connectors and Pinouts 7

3 Installation 13

3.1 PMC Board Installation 13
3.2 Device Driver Installation 15

Warranty Policy 17

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

How to Use This Guide

This manual is designed to assist users in understanding the PMC-8631.

Chapter 1 **Introduction**
Overview of product features, applications, and specifications.

Chapter 2 **Getting Started**
Describes unpacking and illustrates connector pin assignments.

Chapter 3 **Installation**
Describes installation and setup.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1

Introduction

The PMC-8631 single-channel Ultra320 SCSI PMC card offers data transfer rates up to 320MB/s and achieves maximum transfer rates on a Wide SCSI bus (16-bit) with both Single-Ended (SE) and Low Voltage Differential (LVD) devices. The PMC-8631 is PCI Local Bus Specification, Revision 2.3; SCSI Parallel Interface-4 (SP1-4), Revision 10; and SCSI-3 standard compliant in addition to supporting multimode.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.1 Features and Specifications

PCI Interface Features

- Supports 66-MHz, 64-bit interface down to PCI-33MHz, 32-bit interface
- Performance-enhanced 32-bit operating mode allows 32-bit data transactions with 32- and 64-bit addressing (SAC/DAC)
- Supports 3.3V power supply, 5V tolerance

SCSI Features

- SCSI data transfers up to 320 MB/sec
- 8- or 16-bit SCSI data path
- SCSI data offsets to 254 transfers
- Supports rear SCSI by JP1 jumper setting
- Advanced multimode I/O cell is compatible with LVD or SE devices
- Extensive hardware support for disconnect/reconnect and scatter/gather
- Full support for initiator operation
- Full support for domain validation, which provides two levels (basic and enhanced) of SCSI bus configuration testing to help ensure Ultra320 and Ultra160 SCSI topologies operate at optimum speed
- Multiple target ID enables responses to multiple IDs as a SCSI target
- Full support for Cyclic Redundancy Check (CRC) for 16-bit SCSI synchronous data transfers. CRC detects data integrity errors that would not be detected by simple parity checking used by previous SCSI generations. The higher data rates achieved on existing LVD cable configurations mandated this improved data integrity feature.
- Supports Quick Arbitration and Selection (QAS) and SCSI arbitration fairness. QAS reduces overhead when bus control is transferred between devices. Arbitration fairness prevents devices from hogging the bus by guaranteeing each device a chance to win arbitration.
- Supports Seamless Streaming technology, which allows full implementation of SCSI packet protocol for sending multiple commands, receiving multiple statuses, and transferring data for multiple commands during one SCSI connection. There is virtually no delay between packets for different commands.

SCSI Device Support:

- Using LVD devices, each channel supports up to 15 devices on a 12-meter cable. In a point-to-point arrangement, cabling can extend to 25 meters.
- Support for a combination of 16-bit Ultra320, Ultra160 (Ultra3), Ultra2, Ultra, and standard SCSI devices including disk drives, disk arrays, tape drives, CDROM and CD-R drives, jukeboxes, removable drives, scanners, and printers.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2

Getting Started

This chapter describes how to prepare the PMC-8631 for installation. Please carefully review the unpacking information before removing the product. The optional settings are also specified below.

2.1 What's Included

In addition to this *User's Manual*, the package includes the following item:

- PMC-8631 Ultra320 SCSI Interface PMC Module

If anything is missing or damaged, contact the dealer the product was purchased. Save the shipping materials and carton to ship or store the product in the future.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.2 Unpacking

The PMC-8631 card contains sensitive electronic components that can be easily damaged by static electricity.

Prepare a grounded anti-static mat. The operator should be wearing an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card module carton for obvious damage. Shipping and handling may cause damage to the module. Be sure there is no obvious damage due to shipping and handing by examining the shipping box.

After opening the card module carton, extract the system module and place it only on a grounded anti-static surface, component side up.

Note: DO NOT APPLY POWER TO THE CARD IF IT HAS BEEN DAMAGED.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.3 PMC-8631 Layout

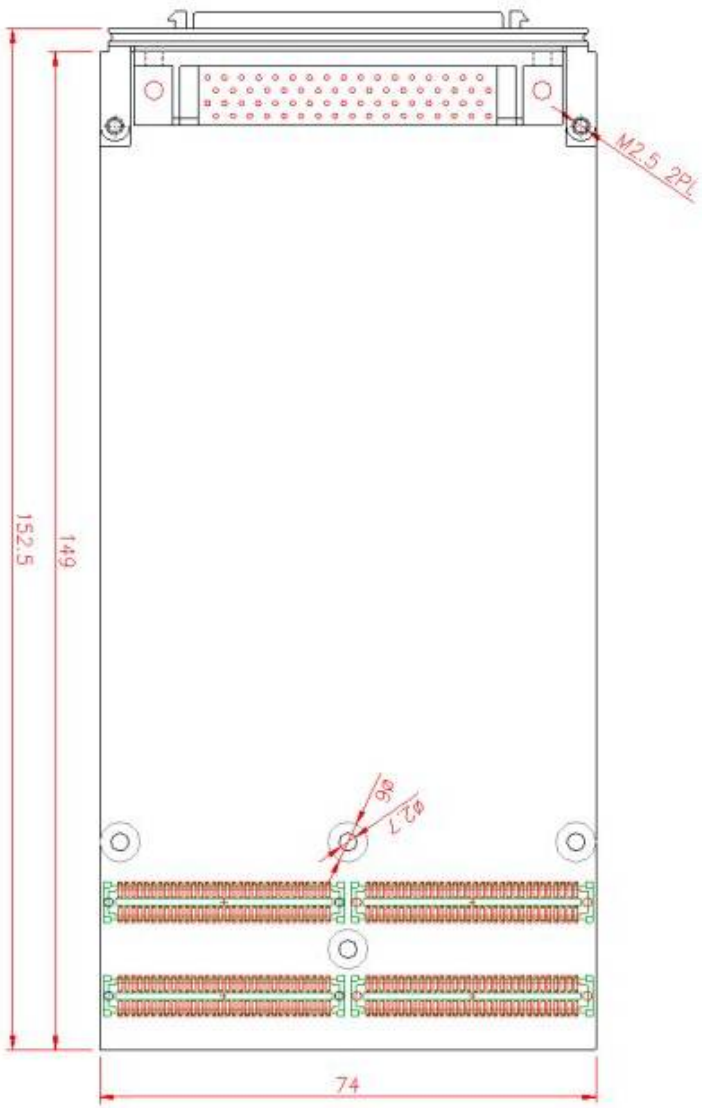


Figure 2.1 PMC-8631 Layout

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.4 Functional Block Diagram

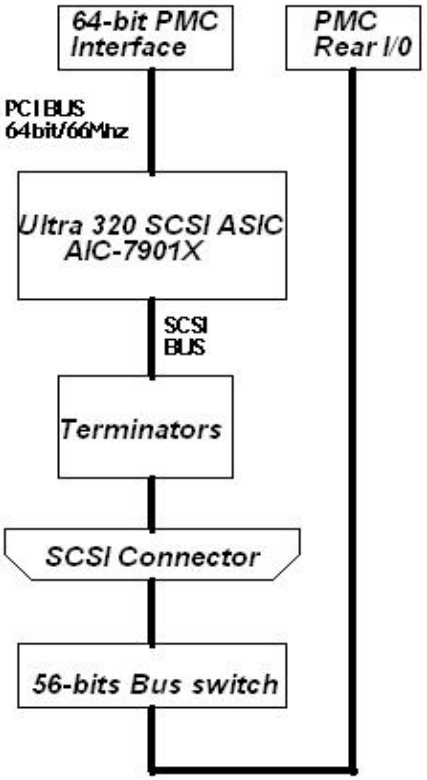


Figure 2.2 PMC-8631 Functional Layout

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.5 Connectors and Pinouts

PMC CONNECTOR: PN1

PN1 Pin Assignment			
SIGNAL	**PIN**	**PIN**	**SIGNAL**
RESERVED	1	2	RESERVED
GND	3	4	INTA#
RESERVED	5	6	RESERVED
RESERVED	7	8	5V
RESERVED	9	10	RESERVED
GND	11	12	RESERVED
SCSI_PCICLK	13	14	GND
GND	15	16	GNT#
REQ#	17	18	5V
VIO	19	20	AD[31]
AD[28]	21	22	AD[27]
AD[25]	23	24	GND
GND	25	26	CBE[3]#
AD[22]	27	28	AD[21]
AD[19]	29	30	5V
VIO	31	32	AD[17]
FRAME#	33	34	GND
GND	35	36	IRDY#
DEVSEL#	37	38	5V
RESERVED	39	40	RESERVED
RESERVED	41	42	RESERVED
PAR	43	44	GND
VIO	45	46	AD[15]
AD[12]	47	48	AD[11]
AD[9]	49	50	5V
GND	51	52	CBE[0]#
AD[6]	53	54	AD[5]
AD[4]	55	56	GND
VIO	57	58	AD[3]
AD[2]	59	60	AD[1]
AD[0]	61	62	5V
GND	63	64	REQ64#

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

PMC CONNECTOR: PN2

PN2 Pin Assignment			
SIGNAL	**PIN**	**PIN**	**SIGNAL**
RESERVED	1	2	RESERVED
RESERVED	3	4	RESERVED
RESERVED	5	6	GND
GND	7	8	RESERVED
RESERVED	9	10	RESERVED
RESERVED	11	12	3.3V
PCIRST#	13	14	RESERVED
3.3V	15	16	RESERVED
RESERVED	17	18	GND
AD[30]	19	20	AD[29]
GND	21	22	AD[26]
AD[24]	23	24	3.3V
IDSEL	25	26	AD[23]
3.3V	27	28	AD[20]
AD[18]	29	30	GND
AD[16]	31	32	CBE[2]#
GND	33	34	RESERVED
TRDY#	35	36	3.3V
GND	37	38	STOP#
PERR#	39	40	GND
3.3V	41	42	SERR#
CBE[1]#	43	44	GND
AD[14]	45	46	AD[13]
RESERVED	47	48	AD[10]
AD[8]	49	50	3.3V
AD[7]	51	52	RESERVED
3.3V	53	54	RESERVED
RESERVED	55	56	GND
RESERVED	57	58	RESERVED
GND	59	60	RESERVED
ACK64#	61	62	3.3V
GND	63	64	RESERVED

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

PMC CONNECTOR: PN3

PN3 Pin Assignment			
SIGNAL	**PIN**	**PIN**	**SIGNAL**
RESERVED	1	2	GND
GND	3	4	CBE7#
CEB6#	5	6	CBE5#
CEB4#	7	8	GND
VIO	9	10	PAR64
AD63	11	12	AD62
AD61	13	14	GND
GND	15	16	AD60
AD59	17	18	AD58
AD57	19	20	GND
VIO	21	22	AD56
AD55	23	24	AD54
AD53	25	26	GND
GND	27	28	AD52
AD51	29	30	AD50
AD49	31	32	GND
GND	33	34	AD48
AD47	35	36	AD46
AD45	37	38	GND
VIO	39	40	AD44
AD43	41	42	AD42
AD41	43	44	GND
GND	45	46	AD40
AD39	47	48	AD38
AD37	49	50	GND
GND	51	52	AD36
AD35	53	54	AD34
AD33	55	56	GND
VIO	57	58	AD32
RESERVED	59	60	RESERVED
RESERVED	61	62	GND
GND	63	64	RESERVED80

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

PMC CONNECTOR: PN4

PN4 Pin Assignment			
SIGNAL	**PIN**	**PIN**	**SIGNAL**
RSD0+	1	2	RSD0-
RSD1+	3	4	RSD1-
RSD2+	5	6	RSD3+
RSD3-	7	8	RSD4+
RSD4-	9	10	RSD2-
RSD5+	11	12	RSD5-
RSD6+	13	14	RSD6-
RSD7+	15	16	RSD8+
RSD8-	17	18	RSD9+
RSD9-	19	20	RSD7-
RSD10+	21	22	RSD10-
RSD11+	23	24	RSD11-
RSD12+	25	26	RSD13+
RSD13-	27	28	RSD14+
RSD14-	29	30	RSD12-
RSD15+	31	32	RSD15-
RSDP0+	33	34	RSDP0-
RSDP1+	35	36	RSBSY+
RSBSY-	37	38	RSACK+
RSACK-	39	40	RSDP1-
RSRST+	41	42	RSRST-
RSMSG+	43	44	RSMSG-
RSSEL+	45	46	RSCD+
RSCD-	47	48	RSREQ+
RSREQ-	49	50	RSSEL-
RSIO+	51	52	RSIO-
RESERVED	53	54	RESERVED
RESERVED	55	56	RSATN+
RESERVED	57	58	RSATN-
RESERVED	59	60	RESERVED
RESERVED	61	62	RDIFFSEN
RESERVED	63	64	RTERMEN

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

REAR SCSI JUMPER SETTING

Rear SCSI Jumper Setting		
JP1	2,3 Short	1,2 Short
REAR SCSI	OFF	ON
Termination		
JP2	2,3 Short	1,2 Short
Termination	OFF	ON

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3

Installation

3.1 PMC Board Installation

Insert the face of the PMC module into the front of the cPCI carrier board. Carefully align the PMC connector to the carrier board and firmly place it in the slot. Secure the module to the carrier board with the screws provided (see Figure 3.1 below).

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

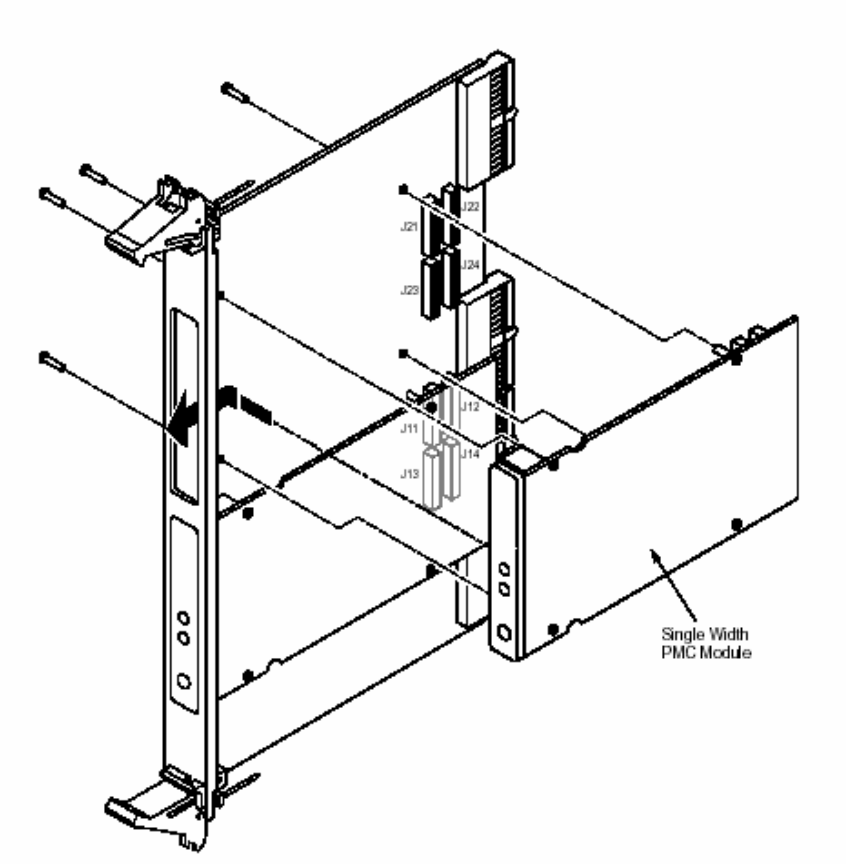


Figure 3.1 PMC Module Installation

Note: Ensure that the PMC module(s) are properly installed before connecting the cPCI carrier board to the system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3.2 Device Driver Installation

This section describes the installation procedure for the Adaptec AIC-7901X chipset device driver under Linux Redhat and Windows 2000, XP, and Server 2003.

The drivers are provided on the ADLINK All-in-One CD. Start your system and place the disk into the CD-ROM drive. The drivers are located in the X:\PMC\PMC-8631\ folder (where X:\ is the drive letter assigned to the CD-ROM drive). The operating system will detect new hardware and the Found New Hardware Wizard will appear. Navigate to the appropriate folder on the CD for your operating system and install the driver.

Fedora Core 1 and Core 2 are not officially supported for the PMC-8631. We have provided the Linux driver source code on the ADLINK All-in-One CD so customers can integrate it into their Fedora operating system.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: http://rma.adlinktech.com/policy/.
2. All ADLINK products come with a two-year guarantee
   - The warranty period starts from the product's shipment date from ADLINK's factory.
   - Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
   - For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for loss of data.
   - Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
   - For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.
3. Our repair service is not covered by ADLINK's two-year guarantee in the following situations:
   - Damage caused by not following instructions in the user's manual.
   - Damage caused by carelessness on the user's part during product transportation.
   - Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
   - Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
   - Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
   - Damage from improper repair by unauthorized technicians.
   - Products with altered and/or damaged serial numbers are not entitled to our service.
   - Other categories not protected under our warranty.
4. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: http://rma.adlinktech.com/policy/. Damaged products with attached RMA forms receive priority.

If you have any further questions, please email our FAE staff: service@adlinktech.com.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000